



USE & CARE GUIDE

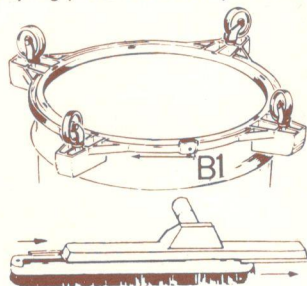
HEAVY DUTY SADIE VACUUM CLEANER



Congratulations on being the owner of a G.E. "Sadie" Heavy Duty Dry Vacuum Cleaner. To obtain the best and most versatile use of this cleaner be sure to read the following instructions carefully.

UNPACKING & SETTING UP

1. Remove the machine from the carton and unpack the accessories (some accessories are packed inside the drum). Make sure that the cloth filter is securely in place over the motor housing to protect the motor from harmful dust.
2. You will find four swivel castors in a plastic bag. Insert these into castor block of the trolley by placing their shafts into the four holes and applying pressure until you feel the castors snap in.
3. To attach the plastic snap-on trolley remove the lid and invert the drum so that its bottom is facing upwards. Place the trolley on top of the inverted drum. Starting at the small protrusion (B1) slowly press onto the lip of the bottom tank, working from left to right.
4. Connect the hose to the cleaner by inserting one end into the intake on the side of the drum. Insert the other end into the required wand and the wand into the desired accessory.



If the 25 cm master nozzle is chosen to be used, then slide the required shoe attachment fully into the master nozzle until they are felt to lock together. (see above)

5. Plug the cord into any 240 volt A.C. 50 Hz earthed power point and switch on.

HOW TO RENEW THE PAPER FILTER BAG

1. Remove excess surface dust from old paper filter bag.
2. Move the rubber band towards the drum lid and remove the old filter bag.
3. Brush any dust from the cloth filter and check that it is securely in position.
4. Open your new paper filter bag and slide it over the cloth filter.
5. Secure the paper filter bag by re-adjusting the rubber retaining ring.

Note: Always use General Electric genuine replacement paper filter bags.

BLOWER FEATURE

The "Sadie" Cleaner can be used as a powerful blower by inserting the hose into the top exhaust port after removing the noise muffler.

Typical applications are:

1. Blowing leaves, dust, etc., from inaccessible places.
2. Starting incinerators and barbecues but do not allow nozzles or hoses to be too near to the heat source.

LUBRICATION

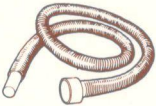
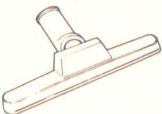
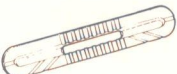





It is not necessary to lubricate the motor as its bearings are packed with a special lubricant and will run for many years in normal service without attention.

SERVICE

Should you have any questions regarding these instructions or have any reason to doubt the performance of the product due to dropping, accidental immersion, damaged cord, etc., return the complete appliance to your nearest General Electric Service Centre (listed on the back of this book) or to your nearest General Electric Service Agent (listed on Warranty Leaflet) for checking, adjustment or repair.

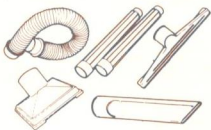

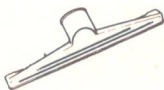


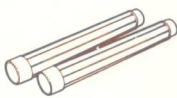
THE ACCESSORIES AND THEIR USES

The following accessories are supplied with your "Sadie" Dry Vacuum Cleaner. These 30 mm (1¼") diam. accessories are intended for general cleaning of smaller heavier debris such as sand, small stones and general household cleaning. Light, high bulk debris such as shavings and some garden leaves are best picked up by the 60 mm (2½") diameter hose and accessories listed on the next page.


ACCESSORY	DESCRIPTION	USE OF THE ACCESSORY
	1.8 metre (6 ft.) x 30 mm (1¼") Diam. Flexible Hose	Connects Cleaner to all extensions and nozzles provided with the Cleaner
	25 cm (10") Master Nozzle	For use with Rug and Brush Shoes below
	25 cm (10") Rug Shoe	For rug and carpet vacuuming. Attaches to Master Nozzle.
	25 cm (10") Brush Shoe	For smooth dry surfaces and wood, tiles, cement, etc. Attaches to Master Nozzle.
	Round Dusting Brush	For vacuum dusting furniture, pelmets, bins, etc.
	Crevice Tool	Cleans corners and hard to reach areas. Also used for high velocity blowing of inaccessible dust, etc. for subsequent pick-up.
	Curved Extension Wand	With wands and nozzle, gives correct angle for easier use.
	Two 50 cm (20") Extension Wands	For greater reach and control of the attachments.

OPTIONAL ACCESSORIES TO "CUSTOMIZE" YOUR SADIE TO YOUR SPECIAL NEEDS

These optional accessories are available from your local Department Store or electrical retailer. Should you experience difficulty in obtaining any of these items please contact your nearest General Electric Service Centre (listed on back) or authorised Service Agent. These 60 mm (2½") diameter accessories below are specifically designed for pick-up of high bulk, lightweight debris such as shavings, small leaves, etc.

ACCESSORY	DESCRIPTION	SOME USES OF THE ACCESSORY
	VXA4 Accessory Kit	Consists of the five items listed below. Will extend the cleaning versatility of your Vacuum Cleaner.
	60 mm (2½") Diameter Hose	Connects Cleaner to all extensions and nozzles provided with the Cleaner
	34 cm (14") Nozzle with Brush	Long cleaning head for smooth dry surfaces, tiles, cement, etc.
	15 cm (6") Nozzle with Brush	General purpose brush for picking up of shavings, sawdust, lawn clippings, small leaves, etc.
	Crevice Tool	Cleans corners and hard to reach areas. Ideal for sand and sawdust in hard to reach corners.
	Two 50 cm (20") Extension Wands	For greater reach and control of the attachments.

REPLACEMENT DISPOSABLE PAPER FILTER BAGS

	Genuine replacement paper filter bags	Covers cloth filter bag and improves dust removal.
---	---	---

It is important that General Electric genuine disposable bags are used in your Sadie Vacuum Cleaner and, to avoid possible damage, that the fitting instructions are correctly followed.

Use of other disposable bags may restrict the airflow through the bag and cause the motor to overheat or burn out, and the warranty to become void.

IMPORTANT SAFEGUARDS

- It is important to read all instructions even if you feel you are familiar with the product.
- As with all electrical appliances basic safety precautions should be followed including the following.
- All electrical outlets should be checked by a qualified electrician to ensure proper earthing.
- Do not abuse the cable. Keep it away from heat, oil, sharp edges and do not drag it over rough ground.
- Do not pull the cleaner along by the cord.
- Do not use if any damage to the cord or plug is apparent. Have these checked by a General Electric Service Centre or Authorised Service Agent.
- If an extension cord is necessary, ensure that a correctly wired earthed 3 core cord of at least 7.5 amps rating is used. Please also observe items of 3 previous special precautions.
- Do not use this cleaner to pick up water or any other liquids. These could short circuit the motor and prove electrically dangerous to the user/operator.
- The hose and attachments should not be placed near radiators or other heat emitting sources as they can be deformed by heat.
- Be certain to remove all wood shavings, sawdust and other combustible material from drum before using near a grinder or other machines which could cause sparks and before using on items such as steel shavings, otherwise a spark may cause a fire.
- When cleaning fire places, etc., make sure that **NO LIVE SPARKS OR EMBERS** are contained in the ashes as serious damage could result to the machine.
- Make certain that lid clamps are tightly locked and that hoses and accessories are fitted tightly in place.
- Disconnect Cleaner plug from power source when changing bags, emptying or not in use.
- To avoid risk of electrical shock do not expose the machine to rain or hose sprinklers. Store indoors at all times.

SAVE THESE INSTRUCTIONS



Australia Wide

Should you require additional information contact the nearest State Service Centre:

NEW SOUTH WALES

AUSTRALIAN GENERAL ELECTRIC (APPLIANCES) PTY. LIMITED

BANKSTOWN: 14 Arkley Street, Bankstown 2200 Phone: 707 2222

ENFIELD: 6 Gould Street, Enfield 2136 Phone: 642 6055

SYDNEY: Suite 15, 1st Floor Dymock's Arcade, 424 George Street, Sydney 2000 Phone: 25 4640

PARRAMATTA: Suite 7, 370-376 Church Street, Parramatta 2150

Phone: 630 2447

NEWCASTLE: 16 Bull Street, Newcastle 2300 Phone: 26 2055

VICTORIA

AUSTRALIAN GENERAL ELECTRIC (APPLIANCES) PTY. LIMITED

MOUNT WAVERLEY: 14 Hardner Road, Mount Waverley 3149

Phone: 543 2555

MELBOURNE: 20 Embank Arcade (Off 325 Collins Street), Melbourne 3000

Phone: 62 6326

QUEENSLAND

AUSTRALIAN GENERAL ELECTRIC (APPLIANCES) PTY. LIMITED

MILTON. Cnr. Park Road & Douglas Street, Milton 4064 Phone: 36 1327

TOWNSVILLE: 18-22 Yeatman Street, Hyde Park 4810 Phone: 72 2555

WESTERN AUSTRALIA

AUSTRALIAN GENERAL ELECTRIC (APPLIANCES) PTY. LIMITED

VICTORIA PARK: 121 Burswood Road, Victoria Park 6100 Phone: 61 7277

SOUTH AUSTRALIA

AUSTRALIAN GENERAL ELECTRIC (APPLIANCES) PTY. LIMITED

FLINDERS PARK: 302-304 Grange Road, Cnr. Findon Road, Flinders

Park 5025 Phone: 352 1288

ADELAIDE: 304 Gilbert Street, Adelaide 5000 Phone: 51 4219

TASMANIA

AUSTRALIAN GENERAL ELECTRIC (APPLIANCES) PTY. LIMITED

HOBART: 388 Elizabeth Street, North Hobart 7000 Phone: 34 2257

GENERAL  ELECTRIC*

*Trademark General Electric Company, U.S.A.

Australian General Electric Distribution Pty. Limited

Australian General Electric (Appliances) Pty. Limited

296 Ferntree Gully Road, Notting Hill, Victoria, Australia 3168