

j. To remove the field coil and brush housing, remove the two nuts inside the motor casing.

k. In reassembly, the red lead wire on the field coil is lined up with the staked terminal on the brush housing.

