

GUARANTY AND OPERATING INSTRUCTIONS FOR YOUR NO-FROST COMBINATION REFRIGERATOR-FREEZER

YOUR GUARANTY

This is an important document for your protection—keep it safe.

GUARANTY PERIOD (5 YEARS)	KELVINATOR AUSTRALIA LIMITED OR ITS RETAILER WILL.	YOU WILL PAY FOR:
For the first year after installation.	Pay all costs for repairing or replacing all parts Kelvinator or its retailer finds defective.	All costs of transport of the appliance required because of service outside areas normally serviced by Kelvinator Australia Limited or its retailer.
For the next four years.	Supply replacements for or at Kelvinator's option, repair all parts it finds defective in the sealed refrigeration system (compressor, condenser, evaporator, dryer and tubing).	All costs of labour and transport for replacing defective parts, including those in the sealed refrigeration system. All costs of transport of the appliance required because of service. All costs of parts or repairs other than those included in the sealed refrigeration system.

This guaranty applies only in mainland Australia (including Tasmania). You will be charged for any service resulting from failure to follow the instructions in this card and for service consequent upon accident, alterations, misuse, fire, flood or acts of God.

This guaranty is valid only for a normal private household installation made in accordance with the instructions given in this card.

This is the only guaranty given by Kelvinator Australia Limited and sets out its full obligations and liabilities. No person has authority to change or add to these obligations and liabilities.

The guaranty shall not apply to any loss suffered through or resulting from the non-operation or the ineffective operation of the refrigerator or freezer or any part of the refrigerator or freezer.

This guaranty is given to the original purchaser only.

The original purchaser must ensure that the data below is completed.


THE DATA BELOW IS FOR YOUR FUTURE REFERENCE

Model: N380 FFK Serial No. 13575 Purchased from: WALTONS
 Installed by: KELVINATOR Date 10/12/79 For Service Ring: 51-0411
 Original Purchasers Name: A.H. ADAMS
 Address: 53 TAVISTOCK ROAD, SOUTH HURSTVILLE, 2221

To get the most out of every feature of your Refrigerator-Freezer read this card carefully. Pay special attention to the "Customer Responsibility List".

BEFORE STARTING YOUR REFRIGERATOR

It is important that your refrigerator-freezer is solidly positioned on the floor.

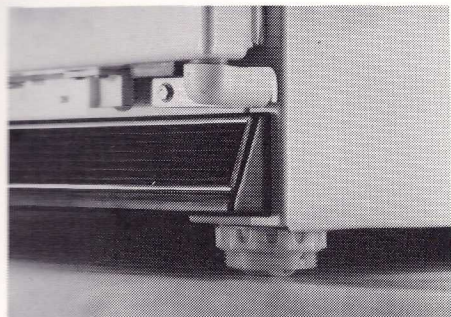

The front rollers may be raised or lowered to adjust the level of the refrigerator which may be tilted slightly to the rear to assist in proper door closing.

For recessed applications allow 90 mm clearance above refrigerator and 90 mm spacing between back panel and wall.


OPERATING INSTRUCTIONS

Plug into properly earthed 240 volt 50 hertz power outlet and switch on.

Adjusting temperatures


Freezer control—

The freezer control knob is located on the rear wall of the freezer. Start with the knob set at No. 5.

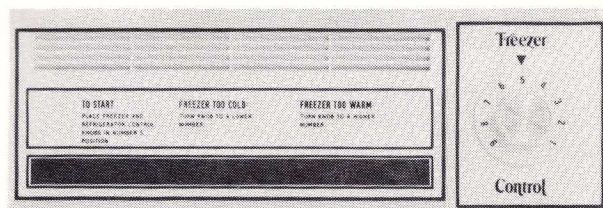


Refrigerator control—

The refrigerator control is at the rear of the refrigerator section. Start with the knob set at No. 5.

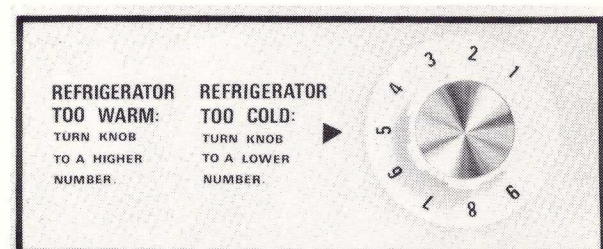

These are average settings and should be adjusted to suit individual preference or climatic conditions.

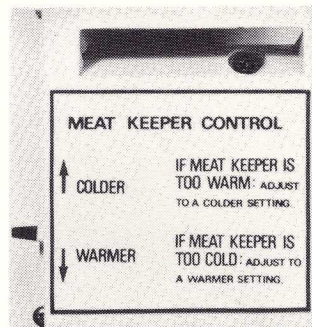

Meat Keeper Control

The meat keeper control is situated above the meat keeper. Start with the lever in the middle position, raise for a colder temperature.

Butter Conditioner

If your refrigerator has a butter conditioner, select the spreadability you require with the three position switch.

General Information

NOTE: The front edge of the cabinet will be warm to touch.

During vacation leave your refrigerator-freezer operating in the normal manner. However, if you desire to switch the refrigerator-freezer off for an extended period, leave the doors open. Odours will develop inside any refrigerator if this is not done.

Very cold air enters the refrigerator section at the rear, just above the meat-keeper. Be sure not to place items that should not be frozen too close to this area.

Two or three times each day a distinct change in operating noise level will be heard for a few minutes, sometimes accompanied by the sound of ice cracking as it melts. This is quite normal and is due to the highly efficient hot gas defrost system coming into operation.

STORING FOOD

Store your food wherever it is most convenient to your needs.

The following suggestions may help you: Fresh meat, depending on its condition when purchased, can be kept for about a week in the meat keeper, which is kept colder than the rest of the refrigerator section.

Freeze meat which you intend to keep for longer periods. Cured meats are perishable

and need the same care as fresh meat. Butcher's wrapping should be removed from fresh meat before placing meat in the meat keeper.

Perishable meats, liver, kidneys, sweetbreads, brains and mince should either be cooked and served soon after purchase or wrapped and stored in the freezer.

Store perishable fruits (apricots, nectarines, peaches) and perishable salad greens in the crisper. The booklet supplied shows how to best use the freezer section.

Hot foods should be allowed to cool before placing them in the refrigerator. To avoid excessive drying out and flavour transfer, foods should be kept covered. Cheese should be kept in the original wrap or tightly sealed in foil or plastic. Foods with distinctive odours should be wrapped to prevent flavour transfer to other produce. Frozen foods, including ice-cream, should always be kept in their original containers or sealed in bags, as dry cold air for fast freezing removes moisture even from hard frozen foods.

In an emergency

If the operation of the refrigerator-freezer is interrupted, most foods in the freezer will remain frozen up to 24 hours if the door is kept closed. If the interruption is for a longer period, place dry ice around the food until normal operation is resumed. This is usually available from emergency services in capital cities and most large country centres.

CLEANING

Since the main purpose of your refrigerator-freezer is to preserve food, it should be kept spotlessly clean at all times. All refrigerator-freezers need to be cleaned regularly. No staining will occur on interior surfaces if spilled foods are wiped up promptly.

WARNING — Avoid scouring pads and powders, metal polishes, aerosol cleaners, solvents and strong alkaline solutions as they could damage the easy-to-clean glossy surfaces.

Freezer Section

The freezer defrosts automatically but should be cleaned every 3-6 months. Proceed as follows:

Switch off at power point.


Remove frozen food and store in refrigerator section, leaving the freezer door open.

Remove shelves and ice trays, and wash

in warm water with a mild liquid detergent or in a solution of bicarbonate of soda (one tablespoon dissolved in one litre of warm water). Rinse well and wipe with a dry cloth. Wipe freezer out with a damp cloth, then dry. Replace shelves and frozen food. Switch on at power point.


Refrigerator Section

Clean by wiping with warm water and mild liquid detergent or a solution of bicarbonate of soda (one tablespoon dissolved in one litre of warm water). Wipe over with a damp cloth, then dry. If you desire to remove the top shelf slightly depress the plastic clip which is located under the rear of the shelf, and slide the shelf forward as shown in the photograph below.

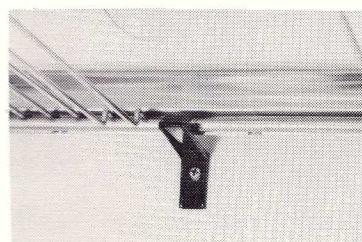

Defrost Pan

It is important to clean the defrost pan regularly. Lint and dust may settle in the pan which is located behind the front trim at the bottom of the refrigerator. The front trim can be removed by pulling forward firmly at each end. When replacing the pan make certain it is properly positioned in the supports and pushed all the way to the rear of its opening.

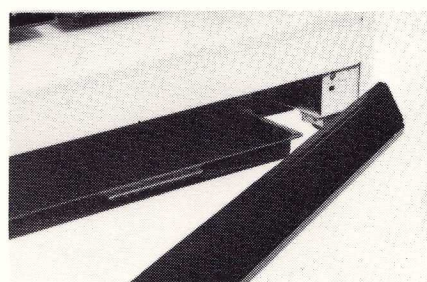

WHAT DID YOU DO WITH YOUR OLD REFRIGERATOR?

An empty or discarded refrigerator or freezer is a very dangerous attraction to children. Remove latches, lids and doors from unused appliances and take other action that will guarantee them harmless.

DO NOT WAIT—DO IT NOW!

Your new refrigerator-freezer has a safety door which opens as easily from the inside as it does from the outside.

CUSTOMER RESPONSIBILITY LIST

Before you call for service check the following points which are your responsibility.

A service charge will be made for service as a result of:

1. POWER POINT NOT SWITCHED ON OR PLUG NOT PUSHED IN.
2. NO POWER AT POWER POINT. CHECK WITH SMALL APPLIANCE.
3. CONTROLS NOT PROPERLY SET.

Service headquarters in each State are located at:—

SOUTH AUSTRALIA
29 Anzac Highway,
KESWICK
S.A. 5035

VICTORIA
487 Williamstown Rd.,
PORT MELBOURNE
Vic. 3207

WESTERN AUSTRALIA
39 Abernethy Road,
BELMONT
W.A. 6104

NEW SOUTH WALES
138 Euston Road,
ALEXANDRIA
N.S.W. 2015

QUEENSLAND
1-3 Florence Street,
TENERIFFE
Q'land 4005

NORTHERN TERRITORY
Coonawarra Road,
(P.O. Box 39563)
WINNELLIE
N.T. 5789

KA59961