

Welcome to VIDCAM's SHARP VCR Faults

Models from VC200 through to VC9300.
See [Others](#)

Search for

Search

[Get a Free Search Engine for Your Web Site](#)

VCR	SHARP	GENERAL	Drum Won't Spin	Rubber "o"ring Loose Inside Remove Head Drum Assy And Remove Don't Force....
VCR	SHARP	VC200	Mode Cogs Go Out Of Alignment.	Pin Missing In Brake Slide.
VCR	SHARP	VC2300	Drum Rotates Very Fast At All Times Operate Is On.	Suspect Ic706, M51724p, On Servo Pcb.
VCR	SHARP	VC2300	Machine Dead With Tape In Laced Up Position.	Check Q914 (2sa770) On Servo Board O/c.
VCR	SHARP	VC2300	No Capstan Drive	L701 O/c Servo Pcb Rtrnz0012gezz
VCR	SHARP	VC2300	No Capstan Drive.	L701 O/c On Servo Pcb. Pt No: Rtnz0012gezz.
VCR	SHARP	VC2300	No Power Ac Adaptor Fails	Q3 Q4 2sc2826
VCR	SHARP	VC2300	No Power, Ac Adaptor Fails.	Q3 And Q4. 2sc2826 Use Original Parts.
VCR	SHARP	VC2300	Pause, Stop & Record Leds All Lit. With No Deck Functions.	Check Ic807 By Replacement. Check Loading Motor Chip Ic808 And Loading Motor Should Draw 100ma.
VCR	SHARP	VC2300	Problems With Rewind	Change Reel Motor.
VCR	SHARP	VC2300	Sound Fluctuating	Check Capstan Motor Faulty.
VCR	SHARP	VC330	Poor Wind And Rewind Playback Ok.	Check Aux. Brake Not Releasing Because Ic901 Faulty.
VCR	SHARP	VC330	Reel And Capstan Motors Going Backwards.	Change Ic711
VCR	SHARP	VC3300	No Channel Indicator, No	No 12v At Tp901. Check Q904, Q902, Q903, On Pwb-p.

			Go.	
VCR	SHARP	VC3300	No Tuner Function And Channel Indicators Not Functioning.	Replaced Transistor Q904 And C903 On Pwb-p.
VCR	SHARP	VC3300	Reel Motor Too Fast Causing Tape Speed To Increase.	Q863 Shorted, Also Replace Reel Motor If "02" Type.
VCR	SHARP	VC3300	Tuner Faulty, Wont Tune In Stations.	Check For 31.5v On Pin 5 Of Plug Ic. If Faulty Check Function Of Zener Ic201, Ix0037ce, On Pwb-1.
VCR	SHARP	VC3300	Won't Tune Stations.	Ic201 (31v Zener) Rhix0037cezz.
VCR	SHARP	VC381	Audio Low Volume.	Change D606 Leaky Is119.
VCR	SHARP	VC381	Cassette Door Opens Only Half Way On Eject.	Lid Lever Angle Assembly Bent. Rebend To Work.
VCR	SHARP	VC381	Clock Will Not Reset.	Change Mp2812 Under Display Panel.
VCR	SHARP	VC381	Dew Sensor Problems	Change R801 47k Ohms With 470k
VCR	SHARP	VC381	Drum Servo Faulty On Record	Q702,q703 Buffer Osl 2sa945
VCR	SHARP	VC381	F901 Or F902 Blows, Int Failure To Rewind Int Tape Spillage	Check Worn Idler If Ok Reel Motor Suspect.
VCR	SHARP	VC381	Intermittent Or No Eject.	Ic803 (m54532p)
VCR	SHARP	VC381	Intermittently Stopping On Play Or Rec., Chewing Tapes.	Change Reel Idler Or Reel Motor (commonly Intermittent In Operation).
VCR	SHARP	VC381	Low Audio	D606 Leaky Iss119
VCR	SHARP	VC381	No Capstan Drive In Record Mode.	D612 On Audio Board Pwb-b Measures Ok But Is Leaky. Is119.
VCR	SHARP	VC381	No Chroma In Rec Or Pb	Fl501 Rmptd0131gezz
			No Colour On	

VCR	SHARP	VC381	Play Or Record.	FI501 (rmptdo131gezz). Also Check FI503
VCR	SHARP	VC381	No Eject.	Change Ic803 (vhim54532p/-1)
VCR	SHARP	VC381	No Functions 4 Amp Fuse Blown.	Check 12 Volt Supply If High (18v) Reg Transistor S/c. make Sure Replacement Is Mounted Correctly On Heatsink (original Is Not).
VCR	SHARP	VC381	No Go - 2.5 Amp. Powerfuse Blown.	Check/ Replace Reel Motor - Always Change Reel Motors With Type Numbers Ending In 02.
VCR	SHARP	VC381	No Replay Audio Ee Audio Ok	C621 S/cct (100uf 25v)
VCR	SHARP	VC381	No Video On E-r Mode.	Check Ic309 For O/c - Or C206 For S/c.
VCR	SHARP	VC381	No Video On Playback	Change Ic308.
VCR	SHARP	VC381	Not Erasing Previous Audio Track.	Audio Cable Shorted Under Plastic Tie Near Audio/ctl Head.
VCR	SHARP	VC381	Picture Rolling On E-e And Record.	Change C438 47 Mfd, C439 (nearly O/c). If Ok Check Around Ic201 And Ic402.
VCR	SHARP	VC381	Playback In Colour Will Not Record In Colour.	Check FI503. The Down Converted Signal Should Be 500 millivolt P-p On Pin 1 Of Colour I.C. The Carrier Signal Should Be 500 Millivolt P-p At Pin 28.
VCR	SHARP	VC381	Remote Erratic.	C811 (.01 Uf) Leaky.
VCR	SHARP	VC381	When Play Is Selected Squeaking From Head Drum, Then Stops.	Change Reel Idler
VCR	SHARP	VC381	When Record Is Selected Machine Fails To Stay In Record.	Check T/u Reel Not Turning In Record Mode. Playback Ok. Change Ic7754.
VCR	SHARP	VC381	When Replacing Cass Lamp, To Check Correct One Is Fitted. .	Check Voltage R872-5. Check Voltage On Point Where Ic802 And R872-5 Connect, Should Be 8 Volts If Lower Wrong Cass Bulb Has Been Used.
VCR	SHARP	VC381	Will Inject And Eject Tapes Ok, Tuner Ok, No Functions.	Check Cass Lamp, Should Be On At All Times. If Not, Check Cass Down Switch Bent Or Faulty, Repair Or Replace.
			No Record	

VCR	SHARP	VC381X	Colour.	Replaced Filter Fl503.
VCR	SHARP	VC381X	Take Up Spool Not Rotating In Record. Ok In Playback.	Change Ic7754.
VCR	SHARP	VC381X	When Pic. Search Is Selec. Mach. F/f Or Rew.	Check For 9.9v On Pin 32 Of Ic801. Change Ic801, D7758 If Still Present Check Ic805 And Ic806 If Ok Check Pins 1,4,5 Of 17754 Go High In Search Mode And Pins 12, 13, 16 Go Low. If D7753 Cathode Is Not High At This Time, Change Q7751 If Pin 59 Of Ic801 Dosent Go High In Search Mode Isolate And Check Again If It Now Goes High Pin 59 Is Being Loaded Down In Surrounding Cct.
VCR	SHARP	VC383	Intermittently Stopping On Play Or Rec., Chewing Tapes.	Change Reel Idler Or Reel Motor (commonly Intermittent In Operation).
VCR	SHARP	VC383	Low T/u Torque.	Adjust R7765 "tu Torque".
VCR	SHARP	VC383	No Video On E-r Mode.	Check Ic309 For O/c - Or C206 For S/c.
VCR	SHARP	VC383	No Video On Playback	Change Ic308.
VCR	SHARP	VC383	Refer Vc381	
VCR	SHARP	VC383	Self Rec. Tapes, Band Few Lines Deep,third Way Down.	Check Record Switching Monostable Faulty, Check C714 And Reel Motor And Idler.
VCR	SHARP	VC383	Will Inject And Eject Tapes Ok, Tuner Ok, No Functions.	Check Cass Lamp, Should Be On At All Times. If Not, Check Cass Down Switch Bent Or Faulty, Repair Or Replace.
VCR	SHARP	VC386	Audio Click In P/back. Usually Only 1 Channel.	Rh-1z0038ge. Need Switch Ic Audio.
VCR	SHARP	VC386	Audio Low On One Channel	Replace Ic651 Rh1z0038gezz
VCR	SHARP	VC386	Audio Low On One Channel Of Own Record.	Change Ic Rh120038gezz.
VCR	SHARP	VC386	Audio Low On One Channel.	Replace Ic651 (rh1z0038gezz).
VCR	SHARP	VC386	Blank Screen On Play And Tuner.	L 409 (220 Uh) On Video Pcb.

VCR	SHARP	VC386	Blank Screen On Play Or E-e.	No 12v On Pin5 Of Ic402. Check L407, L409 On Video Pcb.
VCR	SHARP	VC386	Capstan Fails To Start	D6605
VCR	SHARP	VC386	Clock Flashes & Returns To Ch1, As If Power Was Interrupted	Replace All Electro's In Psu.
VCR	SHARP	VC386	Clock Flashes And Resets To Ch1 As If Lost Power	Replace All Electros In Psu, Specifically C16 (10uf 50v)
VCR	SHARP	VC386	Drum Rotating Too Fast.	Chek C710 S/c.
VCR	SHARP	VC386	Flickering Colour	Fl503 Rmptd0052gezz
VCR	SHARP	VC386	Flickering Colour.	Change Filter Fl503. Rmpdt0052gezz.
VCR	SHARP	VC386	Flickering Colour.	Fl503 (rmptd0052gezz).
VCR	SHARP	VC386	Int No Function Of Channel Change.	Check For D/j On Socket Ta On Pwb.
VCR	SHARP	VC386	Interm. Colour In P/back Or Rec. No Colour In P/back Rec.	Replace Fl503.
VCR	SHARP	VC386	Intermittently Stopping On Play Or Rec., Chewing Tapes.	Change Reel Idler Or Reel Motor (commonly Intermittent In Operation).
VCR	SHARP	VC386	Low Sound	Q6601 (bc337) Pin 3 Bi 8.5 Volts.
VCR	SHARP	VC386	No Colour In Record	Ic501 Ha11781nt, Fl503 Rmptd0052gezz
VCR	SHARP	VC386	No Colour On Record.	Ic501 (ha11781nt) Or Fl503 (rmptdoo52gezz)
VCR	SHARP	VC386	No Picture In Pb Or Ee	L409 220æh ,l407 On Video Pcb.Check 12v Pin 5 Ic402
VCR	SHARP	VC386	No Power And Audio Pcb	Check C/protector On M/board Near Traking Controll (12v)
VCR	SHARP	VC386	No Video On E-r Mode.	Check Ic309 For O/c - Or C206 For S/c.
VCR	SHARP	VC386	No Video On Playback	Change Ic308.

VCR	SHARP	VC386	Poor Colour Saturation On Still Of Pre-recorded Tapes.	Change R429 To 1k Ohm On Y/c Pcb.
VCR	SHARP	VC386	Traking Control No Effect.	Traking Control O/c.
VCR	SHARP	VC386	Tuning Drift All Channels.	Check D1430 On Tuning Board Leaky. Also D1425 - 1444.
VCR	SHARP	VC386	Tuning Drift.	Check Pr01 Regulator Also Ic1403 Or Int Tuning Pots.
VCR	SHARP	VC386	Will Inject And Eject Tapes Ok, Tuner Ok, No Functions.	Check Cass Lamp, Should Be On At All Times. If Not, Check Cass Down Switch Bent Or Faulty, Repair Or Replace.
VCR	SHARP	VC386..	No/int Reel Drive.	Ic705 Ta7267p.
VCR	SHARP	VC387	Faulty Audio	Protector Ic619 On Audio Pcb O/c Icp-n10
VCR	SHARP	VC387	Faulty Audio.	Protector Ic619 On Audio Pcb O/c. Icp-n10.
VCR	SHARP	VC387	Intermittently Stopping On Play Or Rec., Chewing Tapes.	Change Reel Idler Or Reel Motor (commonly Intermittent In Operation).
VCR	SHARP	VC387	No Drum Rotation.	14 Volt Supply Fuse O/c Not Shown On Cct.
VCR	SHARP	VC387	No Power On, Clock Ok.	Check For 9 Volt On Pin 64 Of Ic801, If Not, Look For O/c Semiconductor Fuse Not Shown On Cct.
VCR	SHARP	VC387	No Tuner, Blank Screen.	Check R954 (2.2 Ohm) And Check Q953, Q954, And Electro's In Psu.
VCR	SHARP	VC387	No Tuner. Blank Screen	Check R954 2.2 Ω Q953 Q956, Q955 & Electros In Psu
VCR	SHARP	VC387	No Video On E-r Mode.	Check Ic309 For O/c - Or C206 For S/c.
VCR	SHARP	VC387	No Video On Playback	Change Ic308.
VCR	SHARP	VC387	Will Inject And Eject Tapes Ok, Tuner Ok, No Functions.	Check Cass Lamp, Should Be On At All Times. If Not, Check Cass Down Switch Bent Or Faulty, Repair Or Replace.
VCR	SHARP	VC387	Won't Operate.	Protector Ic815 On Mecha Cont Pcb. Icp-n5.
VCR	SHARP	VC387	Wont Operate	Proctector Ic815 Icpn10 Mecha Pcb
VCR	SHARP	VC388	Intermittently Stopping On Play Or Rec., Chewing Tapes.	Change Reel Idler Or Reel Motor (commonly Intermittent In Operation).

VCR	SHARP	VC388	No Colour In Play	Replace X502 4.433 Mhz Adjust
VCR	SHARP	VC388	No Colour On Play.	Replace 4.433 Xtal. (x502) - Adjust Frequency.
VCR	SHARP	VC388	No Functions.	Check Q5002 S/c Because Ic15002 S/c.
VCR	SHARP	VC388	No Go	Q1 2sc2625, Ic1 Pc511n
VCR	SHARP	VC388	No Power. No Clock. No Functions	Q5002 O/c No +5v Rail. Aprox Load Current 90-100 Ma
VCR	SHARP	VC388	No Video On E-r Mode.	Check Ic309 For O/c - Or C206 For S/c.
VCR	SHARP	VC388	No Video On Playback	Change Ic308.
VCR	SHARP	VC388	Power No Go.	Q1 (2sc2625) And Ic1 (pc511n).
VCR	SHARP	VC388	Power Supply Faulty After Fitting A New Capstan Motor.	Check: Q1 (2sc2625) Chopper Ic1 Pc511n. Also Change C7022 To (1 Mfd 50v) R7040 To (27k Ohms)
VCR	SHARP	VC388	Power Supply Wont Start Reliably	Reduce Value Of R32/r57 To 27r Instead Of 54r
VCR	SHARP	VC388	Snowy Or Flyscreen Effect On Own Reccording.	Reduce Chroma Record Current.
VCR	SHARP	VC388	Will Inject And Eject Tapes Ok, Tuner Ok, No Functions.	Check Cass Lamp, Should Be On At All Times. If Not, Check Cass Down Switch Bent Or Faulty, Repair Or Replace.
VCR	SHARP	VC388	Won't Load Tape.	I 806 (s16900a).
VCR	SHARP	VC388	Wont Load	Ic806 Si6900a
VCR	SHARP	VC390	Black Streaks In Playback	Heads Ok, Check 3.8 Mhz Oscillator Is Not Running At 5 Mhz.. C227 Intermitant Replace. Readjusting Will Not Repair The Fault
VCR	SHARP	VC390	Int Wont Record Picture	Q204, Q205 2sa733
VCR	SHARP	VC390	Intermittently Stopping On Play Or Rec., Chewing Tapes.	Change Reel Idler Or Reel Motor (commonly Intermittent In Operation).
VCR	SHARP	VC390	Locked In Lp Or Sp Frontpanel Ctrl Won't Affect.	Check Sw8001 And Sw8002 Are Inthe Mid Position.
			Looks Like	Replacing Heads Didnt Fix . The Problem Was The 3.8 Mhz Fm Oscillator Was Running Naer 5mhz. Trimmer Cap C227

VCR	SHARP	VC390	Video Heads, Black Streaky Lines In Playback	Intermittent. Readjusting It Worked, But It Has To Be Replaced. to Adjust The Free-run Freq, Put Vcr In Line In Mode And Place A Frequency Counter On The Osl Output And Trim The Cap For 3.8mhz
VCR	SHARP	VC390	No Picture In Play	Ic308 Protector Icp N10
VCR	SHARP	VC390	No Video On E-e Mode.	Check Ic309 For O/c - Or C206 For S/c.
VCR	SHARP	VC390	No Video On Playback.	Change Ic308.
VCR	SHARP	VC390	Poor Record Looks Like Stuffed Heads.	C227 Possibly Faulty(Fm Freq) Adjust And Return To Previous Setting To Check.
VCR	SHARP	VC390	Poor Recording	Ry301 Contacts Dirty - Clean And Replace.
VCR	SHARP	VC390	Shuts Down After 30 Mins.	Replace C12 In Power Supply 220uf 16v
VCR	SHARP	VC390	White Lines/dots In Play	C17 220µf/16v In Psu
VCR	SHARP	VC390	Will Inject And Eject Tapes Ok, Tuner Ok, No Functions.	Check Cass Lamp, Should Be On At All Times. If Not, Check Cass Down Switch Bent Or Faulty, Repair Or Replace.
VCR	SHARP	VC390	Will Not Eject Tape.	Check Lever On Rhs Of Eject Mechanism Activates Micro Switch Clean And Service.
VCR	SHARP	VC468	Int Picture Rolling On Playback.	Check R743 Has No Effect If So C725 Gone O/c.
VCR	SHARP	VC481	Capstan Fails To Start	Mode Switch
VCR	SHARP	VC481	Capstan Fails To Start.	Mode Switch. Qsw-r0010gezz.
VCR	SHARP	VC481	Capstan Slow In Play/rec	D742 Servo Pcb
VCR	SHARP	VC481	Capstan Slow In Play/rec.	D742 On Servo Pcb.
VCR	SHARP	VC481	Capstan Unlocked.	Check Tracking Control For Dry Joints.
VCR	SHARP	VC481	Capstan Won't Lock Even After Replacing, Motor, Bearing, And Doing A Lock Adjustment.	Check For Spikes On Control Track Signal. If So Replace Capstan Servo Chip(ic702)
VCR	SHARP	VC481	Cassette Inject	Won't Open Door Of Cassette. Change Slider Assembly.

			Faulty.	Lhldx3016gezz.
VCR	SHARP	VC481	Chews Tapes No Rewind	Q8022 Phot Transistor Px0053gezz
VCR	SHARP	VC481	Chews Tapes, No Rewind.	D734 Leaky, Off Pin 10 Of Ic 708 On Pwb-a.
VCR	SHARP	VC481	Goes Into Rewind.	Q8022 Photo Transistor. Px0053gezz.
VCR	SHARP	VC481	Interm Reel Motor Drive.	Check For Dry Joints On Q713.
VCR	SHARP	VC481	Interm. Capstan Motor Drive.	Check For Dry Joints On Q708.
VCR	SHARP	VC481	No Capstan Lock.	R794 (4.7k). Put Another 4.7k In Parallel. On Capstan Servo Pcb
VCR	SHARP	VC481	No Or Flickering E-e Pic. In Stop Mode Pb. 9v Is 3v S/b 0v.	Ic802 (ir2403 Or Td62105) Faulty.
VCR	SHARP	VC481	No Reel Drive	Ic708 Faulty Placing 3v Dc On Reel Drive Switch Input (ic705,p2)
VCR	SHARP	VC481	Operation Light Not On.	Change Protector Pr801 Qfs - P1021gezz. Change Q813 2sc945 On Mechanon Board Pwb-e. C452 S/c On Y/c Board, Also Check Pr-eb Protector On Pwb-e.
VCR	SHARP	VC481	Picture Flickering In Ee	Pb9v Rail Is 3volts. Ic802 Ir2403/td62105
VCR	SHARP	VC481	Won't Accept Tape.	Cassette Switch On Cassette Carriage O/c. Qsw-f0010gezz.
VCR	SHARP	VC481	Won't Accept Tape.	Slider Assy. Lhldx3016gezz.
VCR	SHARP	VC481	Won't Tune Stations.	Ic951 On Power Supply Pcb.
VCR	SHARP	VC481	Wont Accept Tapes	Slider Asy Lhldx3016gezz
VCR	SHARP	VC481	Wont Accept Tapes	Carrige Switches Qsw F0010gezz
VCR	SHARP	VC481	Wont Tune Channels	Ic951 In Psu
VCR	SHARP	VC482	Play Selec. Goes Into F.F Search. Own Rec. Ok On Other Mach	Check Pin 5 Of Ic802, If Not Zero Volts Change Ic802.
VCR	SHARP	VC482	Refer Vc481.	
VCR	SHARP	VC482	See Sharp Vc481	

VCR	SHARP	VC482	Wont Record Or Erase Sound.	Check If Q603 (2sc2001) Leaky.
VCR	SHARP	VC483	Power Supply O.K. But No Display Or Functions.	Pr801 Fuseable Resistor Faulty.
VCR	SHARP	VC483	See Sharp Vc481	
VCR	SHARP	VC483	Tape Counter Not Working	Check For Obstructions To Auxillary Pulse Generator Wheel.
VCR	SHARP	VC486	Clock Gains 10mins/day. C5007 Wont Adjust Tp2 To 131.072khz	C5006 (10pf) In Parallel With Trimmer O/c.
VCR	SHARP	VC486	Clock Runs Fast	Adjust Tp2 For 131.072khz If Not C5006 O/c
VCR	SHARP	VC486	Counter Erratic	Photo Sensors Faulty Or Need Clean
VCR	SHARP	VC486	Counter Numbers Erratic.	Q8004 And Q8005 Photo Interrupters Faulty.
VCR	SHARP	VC486	Counter Problems.	Change 2x Photo Interrupters.
VCR	SHARP	VC486	Cyclic Noise Bar On Play	Check C743 100uf 16v Cap. (bias Bypass For Control Track Pulse Amp.
VCR	SHARP	VC486	Erratic Behaviour Of Deck.	Check Faulty Mode Switch.
VCR	SHARP	VC486	Faulty Load/unload In P/back & Rec. Interm.Changes Mode.	Change Mechanism Position Switch. Qsw-r0008gezz.
VCR	SHARP	VC486	Goes To Stop Just As It Fully Loads.	Drum Pg Coil O/c. On Lower Drum Under Rotary Tx.
VCR	SHARP	VC486	Int Changes Mode, Chews Tapes	Mode Switch Qsw R0008gezz
VCR	SHARP	VC486	Int Changes Mode, Chews.	Mode Switch. Qsw-r0008gezz.
VCR	SHARP	VC486	Int Cuts Out In Pb	Replace Reel Sensors
VCR	SHARP	VC486	Int Cuts Out In Play/record After 1 Hour.	Replace Reel Sensors.
			Int Picture	

VCR	SHARP	VC486	Rolling On Playback.	Check C725 On Servo Board.
VCR	SHARP	VC486	Interm. Cuts Off On P/back Or Rec After 1 Hour Approx.	Change Reel Sensors - Photo Interrupters Rh-px0042gezz.
VCR	SHARP	VC486	Method Of Adjusting Capstan Servo Lock.	Short Ends Of D763. Adjust R777 To Give 3.6v At Pin 5 Of T.P.B. When Short Is Removed Voltage May Change Though Should Remain Stable.
VCR	SHARP	VC486	Mod. To Prev. Overheating Ic714 In Servo Circuit.	On Track Side Of Servo Pcb Place A 100 Ohm .5w And A 10 Mfd 16v Electro In Series From Emitter Of Q717 To Pin 8 Of Ic714.
VCR	SHARP	VC486	No Clock, No Functions. Tuning Stuck On Ch O.	X5001 Faulty Or Ceramic Caps On Track Side Of Pcb Causing Shorts.
VCR	SHARP	VC486	No Clock, No Go, Wont Change Channels	X5001 Or Cermac Caps Shorting On Pcb Side.
VCR	SHARP	VC486	No Colour In Pb Or Rec	Q501 2sc2308
VCR	SHARP	VC486	No Colour On Play/record.	Q501 (2sc2308) Faulty.
VCR	SHARP	VC486	No Functions.	Microprocessor, Capstan Drive Ic Shorted, Suspect Capstan Motor.
VCR	SHARP	VC486	No Functions.	Capstan Mtr Ic And Micropocessor Ic .Suspect Capstan Mtr.
VCR	SHARP	VC486	No Load/eject	Ic808 Ta7267
VCR	SHARP	VC486	No Reel Drive	Ic810 Ta7267 Q826,q827,q828
VCR	SHARP	VC486	No Reel Drive.	Ic810 (ta7267p/-1) And Check Q826, Q827, Q828.
VCR	SHARP	VC486	No Reel Motor Drive.	Change Ic810 (ta7267p/-1). Check Q826, Q827, Q828.
VCR	SHARP	VC486	No Remote Control.	Check Ic812 (lr3711m/-1). Check Possible Faulty Mode Switch.
VCR	SHARP	VC486	Operation Light Not On	See Same Fault Vc481 Above.
VCR	SHARP	VC486	Reel Motor Wont Turn When Laced Up And Playing. Tape Stuck	Change Ic715 On Pwb-a Vhiba6209//-1.
VCR	SHARP	VC486	Rf Inter. On P/back. Could Be Vcr To Close To Tv	1. On Pwb-x Head Amp. Board Cut Tracks On Pins 6 & 8 Of Ic3301. Place A Ferrite Bead Of 4 Turns Across Each Track. 2. Add 180 Pf Capacitors From The Audio In And Out RCA Sockets To Earth. Hardwire Input Board Gnd. To Power

			Transmitter	Supply Gnd.
VCR	SHARP	VC486	Tape Counter Counting Faulty.	1. Check The Lower Reflective Surface On The Counter Relay Pulley On Top Deck Of Mechanism. If The Reflective Surface Is Not Perfect - Replace. P.No. Nplyv0088gezz. 2. Check And Clean Photo Interruptor Sensors. P.No. Rhpx0042gezz.
VCR	SHARP	VC486	Vert Jitter Etc On Own Recordings.	Q711 Heat Sensitive. Head Switching Varies.
VCR	SHARP	VC486	Vert Jitter In Self Rec	Q711 Head Switch Varies
VCR	SHARP	VC486	Won't Accept Cassette. Operation Faulty.	Refere Same Fault Sharp Vc8482. Replace C826, 10µf 16v, On Mecha Control Pcb.
VCR	SHARP	VC486	Won't Record Or Play Colour Intermittently.	Fl505 5.2mhz Filter Faulty.
VCR	SHARP	VC486	Wont Load Or Eject Tapes.	Ic808 (ta7267p).
VCR	SHARP	VC486	Wont Turn On	C532 Shorted On Pwb-c
VCR	SHARP	VC486	Wont Turn On.	Check C532 Shorted On Pwb-c.
VCR	SHARP	VC488	Colour Dashes All Over Screen On Play.	Earth Capstan Drive Ic Heatsink, And Add .01uf From Pin 9 To Earth.
VCR	SHARP	VC488	Colour Dashes In Pb	Earth Capstan Drive Ic H/sink, Add .01µf B/t Pin 9 & Earth
VCR	SHARP	VC488	Goes Into Ff, Rew, Stop Etc By Itself.	Q805 On Pwb-e (2sc174) In Syscon.
VCR	SHARP	VC488	Goes To Stop Just As It Fully Loads Up	Drum Pg Coil On Lower Drum O/c (under Rotary Transformer)
VCR	SHARP	VC488	Hifi Light Flickers & Goes Out When Hot Or No Hifi On Play.	Audio 9v Goes Low, Ic953 95kucz0072gezz. M5230 L Ic On Power Supply Board, Its A Bitch To Get At
VCR	SHARP	VC488	Int Changes Mode, Chews Tapes Etc.	Mode Switch. Qsw-r0008gezz.
VCR	SHARP	VC488	Int Goes Into Any Mode By Itself	C805 Syscon 2sc174
VCR	SHARP	VC488	Laces Up Then Unlaces, Drum Turns For Sec.	Drum Motor Rmotp1071gezz.

			Or Pic Shakes.	
VCR	SHARP	VC488	Lines In Pb. Tracking Not Working	Pots In Drawer O/c Repace
VCR	SHARP	VC488	Looks Like Heads Faulty.	Electros In Psu. C956(1uf), C962(1uf), C957(.047uf).
VCR	SHARP	VC488	No Audio No Functions	Ic5006 Rhix0014gezz Microproccer
VCR	SHARP	VC488	No Capstan Lock, No Ctl.	C776 (100æf/16v).
VCR	SHARP	VC488	No Chroma On Play.	Mn6163 Chroma Ic.
VCR	SHARP	VC488	No Reel Drive In Any Mode.	Suspect Ic715, Ba6209 On Servo Pcb.
VCR	SHARP	VC488	No Sound, No Clock Or Channel Display, Ch Buttons Dont Work	Ic5006 Rhix0014gezz Microprocessor.
VCR	SHARP	VC488	Picture Rolls Like Loss Of Capstan Lock. Capstan Servo Adjust Helps But Not Good Enough.	Replace C776(100uf 16v) Electrolytic Capacitor, On Servo Pcb. (top Left Board). It Was Short Circuit.
VCR	SHARP	VC488	Picture Shakes Or Wont Play.	Drum Motor Rmotp1071gezz
VCR	SHARP	VC488	Reel Wont Turn When Fully Loaded Wont Eject.	Ic715 On Pwb-a. Vhiba6209//-1
VCR	SHARP	VC488	See Vc486	
VCR	SHARP	VC488	Static In Pb. (looks Like Heads)	Electros In Psu C956, C962 , C963 = 1æf & C957 .047æf c956 In Particular
VCR	SHARP	VC488	Stopped In Laced Position.	Mode Switch. Qswr0008gezz.
VCR	SHARP	VC488	Switches On, Switches Off, Laces Up Weird Problems.	Pcb Behind Timer/clock Display Full Of Dj's Where Leads Connect To Pcb.
VCR	SHARP	VC488	Tape Remain Indicator Erratic.	Reflective Stripes On T/u Reel U/s Or Q903 In Psu.
VCR	SHARP	VC488	Tracking Bars	C776 100æf In Control Amp

			On Screen	
VCR	SHARP	VC488	Traking Not Working.	Check 3 Pots In Drawer, One Or All May Be O/c.
VCR	SHARP	VC581	Black Screen In Ee	Cracked Pcb Near Rf Booster
VCR	SHARP	VC581	Black Screen On E-e.	Craked Pcb Around Rf Booster.
VCR	SHARP	VC581	Buzz In Sound.	Change T1501 Pif.-det. Transformer. New Types 0029.
VCR	SHARP	VC581	C/stan Rotates B/wards When Stop Pressed. Stops When Played	Check Shorting Links J20/j25 Shorting Out On R/h Side Of Mother Board.
VCR	SHARP	VC581	Capstan On At All Times. No Reel Motor Drive.	Check Operation Of Ic706, Bu4011b.
VCR	SHARP	VC581	Capstan Speed Varies On Play And Record.	Replace Ic704. Rh-1x0107gezz.
VCR	SHARP	VC581	E-e Picture Distorted.	Ic1501. (x0275ce).
VCR	SHARP	VC581	Ee Picture Is Distorted	Ic1501 X0275ce
VCR	SHARP	VC581	Functions Faulty, No Motor Drives.	No 14v At Pin 7 Of Plug Pa On Power Supply. Check For Circuit Protector Ip901 In Power Circuit. P.No. 95kpjc285zz.
VCR	SHARP	VC581	Goes Into Any Mode As Soon As Operation On.	Change Q812 Vsdt124es/-1. Should Have 4.5v At Pin 43 Of Ic801.
VCR	SHARP	VC581	Intermittent Functions.	Q812 (dta124).
VCR	SHARP	VC581	Looses Drum And Capstan Lock In Play	Dry Joint On Xtal X501 In Chroma Section
VCR	SHARP	VC581	No Colour On Play Or Record.	Fl501 (rmptdo131gezz). Also Check Fl503
VCR	SHARP	VC581	No Go Clock Ok	Ip901 2.5 Amp O.C In Psu
VCR	SHARP	VC581	No Go, Clock Ok.	Ip901 2.5a O/c In Psu.
VCR	SHARP	VC581	No Operate Led	No Pcon 12 V Check Ic902 M5236l
VCR	SHARP	VC581	No Operation Light. Laces Up Then	Check Ic902 In Power Supply.

			Unlaces.	
VCR	SHARP	VC581	No Reel Drive	Ic702 Ta7267p
VCR	SHARP	VC581	No Reel Motor Drive.	Change Ic702, (ta7267p).
VCR	SHARP	VC581	No Tape Functions, No Operate Led.	Fuse On Psu, P901 2.5 Amp
VCR	SHARP	VC581	Operation Faulty.	Check P.Con. 9v Switch, Q909, 2sc3518 In Power Supply. if Faulty Or Overheating, Check For Short Circuit To Ground On P.Con. 9v Line, Pins 14-15 Of Plug Pa. If Short To Ground, Check For Faulty C219, 100µf 16v, Near The Edge Of Main Pcb, Near Ic 402.
VCR	SHARP	VC581	Pause/still Indicator On But Cont. To Play Or Record.	Remove C8001 (47 Mfd 16v) Pwb-w Across Loading Motor.
VCR	SHARP	VC581	When Tuning To Station - Goes To Blank Screen Agc Faulty.	Change Ic1501
VCR	SHARP	VC581X	Wont Play Or F.F. Supply Brake Stuck On.	Replace Microcomputer Ic801.
VCR	SHARP	VC584	Clock On, Won't Operation On.	Check For Open Circuit Ip902 In Power Supply. P. No. 95kpic0284zz. Check For Short Circuit Or Faulty C1589, 1000µf 16v, On Tuner Pcb.
VCR	SHARP	VC585	E-e Picture Distorted.	C211 (10 Uf/16v) Inside If Module.
VCR	SHARP	VC585	Ee Picture Distorted	C211 10µf/16v In If Module
VCR	SHARP	VC585	Hum And Pattern Interference In Ee And Play. High Freq. Oscillations On +12 & +9v Rails	Replace C913,917,918,919 And C916 In Power Supply.
VCR	SHARP	VC6300	Sound Wowing.	Check Capstan Motor Speed By Selecting Record And Adjust R794 For Zero Volts On Tp713, If Tp721 Exceed 500 Millivolt P-p Ripple, Change Motor.
VCR	SHARP	VC6300	Turns Off While Recording Or Switches Off After 6 Inches.	Check For Take-up Reel Rotation, Or The Machine Thinks So. Check That The Reel Isn't Stopping - If It Does Clean Belts And Tyres And Replace The Clutch. If The Reel Isn't Stopping Check The Output From The Sensor Af4: It Should Be 5-10v P-p, If Not Replace The Opto Unit Under The Take-up Reel.

VCR	SHARP	VC651	Capstan Goes To Half Speed	Clean Ctrl Track Head With Pcb Cleaner. Low Control Track Forces Capstan Servo To Half Speed Mode.
VCR	SHARP	VC651	Capstan Runs Fast In Record	Diode In Syscon Faulty(leaky) D814
VCR	SHARP	VC651	Capstan Too Fast	Check Fg Pulse Dj's Plug A1
VCR	SHARP	VC651	Capstan Too Fast.	Check Fg Pulse, Dj's Around Plug A1.
VCR	SHARP	VC651	Chews Tapes, Intermittent No Take Up Torque.	Reel Brake Not Releasing, Mode Switch Faulty.
VCR	SHARP	VC651	Chews Tapes, Poor T/u Torque.	Reel Brake Not Releasing. Mode Switch?
VCR	SHARP	VC651	Int Capstan Lock	Cracks Around Screws Holding Pcb-a
VCR	SHARP	VC651	Int Capstan Lock.	Craks Around Screws Holding Pcb-a.
VCR	SHARP	VC651	See Vc685	
VCR	SHARP	VC651	Slow Capstan Speed	Pinch Roller In Engaging. Lubricate Pivot.
VCR	SHARP	VC681	Cassette Loads Up & Down At Power On By Itself ?	R822 Dj's Or O/c On Mother Pcb
VCR	SHARP	VC681	Cassette Loads Up And Down At Power On By Itself.	R822 Dj's Or O/c On Mother Pcb.
VCR	SHARP	VC681	Chews Tapes	Loading Belt
VCR	SHARP	VC681	Chews Tapes.	Loading Belt Faulty.
VCR	SHARP	VC681	Loads Or Eject But No Functions	End Sensor O/c
VCR	SHARP	VC681	No Chroma In Record	Chroma Delay Line.
VCR	SHARP	VC681	No Chroma On Record.	Chroma Delay Line.
VCR	SHARP	VC681	Records Ok ,ee Ok But Mutes Video And Audio	No Pb 5v. C413 On Luminance/chroma Sub Board S/cct.
VCR	SHARP	VC681	See Vc685	
VCR	SHARP	VC681	Will Load And Eject But No Other	End Sensor O/c.

			Functions.	
VCR	SHARP	VC681	Wont Load Or Eject. Intern Doing Either.	Reposition The Mode Control Switch.
VCR	SHARP	VC682	Capstan And Reel Go Forward In Rewind Mode	Plug A1 Pin 8 Dj'd
VCR	SHARP	VC682	Capstan And Reels Go Forward In Rewind.	Plug A1 Pin 8 Dj'd.
VCR	SHARP	VC682	Capstan Slows Down	Isolate Pin 13 Of Ic703 And Connect To Earth.
VCR	SHARP	VC682	Capstan Slows Down.	Isolate Pin 13 Of Ic703 And Connect To Earth.
VCR	SHARP	VC682	No Functions	R916 27 In Psu
VCR	SHARP	VC682	No Functions.	R916 (.27 Ohm) In Psu.
VCR	SHARP	VC682	No Load Motor	Ic802 Ta7288
VCR	SHARP	VC682	No Load Motor Drive.	Ic802 (ta7288).
VCR	SHARP	VC682	No Play Functions	Ic801
VCR	SHARP	VC682	No Play Functions.	Ic801 (rh-ix0151gezz).
VCR	SHARP	VC682	Won't Load/eject.	R907 (.27 Ohm) In Psu O/c.
VCR	SHARP	VC682	Wont Load/eject	R907 27 In Psu
VCR	SHARP	VC682X	When In Rec. Pause Mode, Wont Rec.	Replace Mode Select Switch.
VCR	SHARP	VC685	Brakes Don't Lock Hubs On Eject,	Pin From Underneath Slider Panel Has Fallen Out.
VCR	SHARP	VC685	Looks Like Worn Idler	Brake Solenoid Underneath Plugs Into Reel Sensor Pcb Not Working
VCR	SHARP	VC685	No Clock Display	Ic5001 Pwb-i
VCR	SHARP	VC685	No Clock Display.	Ic5001. (rh-ix0164gezz) On Pwb-1.
VCR	SHARP	VC685	No Picture In Playback	Missing Pb 5v Q808 Replace C413 (100µf/10v) On Y/c Module Board (rhs).
VCR	SHARP	VC685	Reel And Capstan Run Backward	Clock Xtal For Ic801 R/s
			Reel And	

VCR	SHARP	VC685	Capstan Run Backwards, Vcr Won't Turn Off.	Clock Xtal For Ic801 Faulty.
VCR	SHARP	VC685	Similar Symptoms To Worn Reel Idler.	Brake Solenoid Underneath Plugs Into Reel Sensor Pcb Not Working.
VCR	SHARP	VC685	Vcr Wont Turn Off	Clock Xtal Faulty For Ic801
VCR	SHARP	VC685X	Wont Eject Tapes Chews Tapes.	Replaced Filter Fl801.
VCR	SHARP	VC7300	Capstan Motor Will Not Operate.	Replaced Q809.
VCR	SHARP	VC7300	Capstan Won't Operate.	Q809 (2sd687).
VCR	SHARP	VC7300	Capstan Wont Operate.	Q809 (2sd687).
VCR	SHARP	VC7300	Capstan Wont Work	Q809 2sd687
VCR	SHARP	VC7300	Cassette Loading Motor On At All Times.	Check Q8811 2sd687
VCR	SHARP	VC7300	Cassette Motor On All Time	Q809 2sd687
VCR	SHARP	VC7300	Cassette Motor On At All Time.	Q809 (2sd687)
VCR	SHARP	VC7300	Cassette Motor On At All Time.	Q809 (2sd687).
VCR	SHARP	VC7300	Chopper Tranformer Squealing	Change C920 (10mfd 50v)
VCR	SHARP	VC7300	Dew Sensor On	Q805 Q806 2sc1815
VCR	SHARP	VC7300	Dew Sensor On All The Time.	Q805, Q806 (2sc1815).
VCR	SHARP	VC7300	Dew Sensor Operating With No Moisture Present.	Replace Q805 And Q806.
VCR	SHARP	VC7300	Dew Sensor Problems.	Check Q805 And Q806, 2sc1815.

VCR	SHARP	VC7300	Drum Rotates At All Times, No Functions.	Check Loading Ring Position And Reset If Necessary.
VCR	SHARP	VC7300	Drum Rotates At All Times, No Inject Or Eject.	Check Mechanical Loading Ring Position.
VCR	SHARP	VC7300	Drum Rotates No Functions	Check Loading Ring Position & Reset If Necc
VCR	SHARP	VC7300	Functions Ok But No Eject	Lever #23 Rhs Eject Mech Lubricate
VCR	SHARP	VC7300	Functions Ok But Won't Eject Tape.	Lever (no 33 On Parts List) On Rhs Of Front Loader Sticking, Lubricate.
VCR	SHARP	VC7300	Ghosting Picture Appears After A Few Hrs. Operation On E-e	Freeze Sf1501 Filter On Tuner I.F. Board If Picture Comes Good Replace Filter.
VCR	SHARP	VC7300	Int B/w Picture On Playback. Audio Ok.	Check If Main Solenoid Releases When Stop Is Pressed. If Not Solenoid Could Need Lubrication.
VCR	SHARP	VC7300	Int Pulsing Of Aux. Motors.	Change Regulator Trans 2sc1212a To A Bd139 With Moderate Heat Sink.
VCR	SHARP	VC7300	Int Recording.	Check Ic1301 Pin 8 For Int Loss Opf Signals.
VCR	SHARP	VC7300	Loading Motor Weak.	Change Q8091.
VCR	SHARP	VC7300	Loading Motor Won't Rotate.	Look For Thermal Output To Main Solenoid O/c.
VCR	SHARP	VC7300	Loss Of Colour On Pre-rec. Playback Of Own Rec. Ok.	Fit 270 Pf In Parallel With C540. Fit 1.8k Ohms 1/4w In Parallel With R522.
VCR	SHARP	VC7300	No 12 V Rail	R903 ê27 Fuse
VCR	SHARP	VC7300	No 12 Volts At Tp901.	Replaced R903.
VCR	SHARP	VC7300	No 12v At T.P. 901.	On Vc7300 Check R903 0.27 Ohms. On Vc7700 Check R912 0.27 Ohms Q904 2sd1128.
VCR	SHARP	VC7300	No 12v From Power Supply.	Check R903 (.27 Ohm Fusible).
VCR	SHARP	VC7300	No Capstan Motor Drive.	Check Q809, 2sd687.
VCR	SHARP	VC7300	No Func.Only Eject/load, Head Drum Running Continuously.	Check Faulty Unload Or Afterload Switch. Sw01 And Sw02 On The Deck.

VCR	SHARP	VC7300	No Power Indication, No Clock Fuse F902 O/c.	Change Q908 With 2sc1826 Q920 10 Mfd 50v Q942 10 Mfd 16v
VCR	SHARP	VC7300	No Power No Clock	Q908 2sc1212 C916 10æf
VCR	SHARP	VC7300	No Power, No Clock.	Q908 (2sc1212) Also Replace C916 (10 Uf).
VCR	SHARP	VC7300	No Power. Clock Inoperative.	Replaced Q908, C920 And C942.
VCR	SHARP	VC7300	No Servo Lock In Play	X502 Rcrsa0011 Or Ic504 An6342
VCR	SHARP	VC7300	No Servo Lock On Play.	X502 (rcrsa0011) Or I504 (an6342n).
VCR	SHARP	VC7300	Picture Rolling On E-e And Record.	Check I.F. Package Cct's Output If Ok Check C438 (47 Mfd) Gone Low.
VCR	SHARP	VC7300	Poor Or No Colour When Tapes Rec. On Other Mach. Own Rec Ok	Fit A 270pfd In Parallel With C540 And Fit 1.8 Kohm In Parallel With R522 Then Check Chroma Oscillator Frequency.
VCR	SHARP	VC7300	Suddenly Turns Off.Play/rec. Restores Normal Functions.	Check Take-up Spool Is Stopping. If It Is, Check The Play Idler May Need Replacement. If The Spool Doesn't Stop, The Cassette Lamp Could Just Be Responsible (intermittently O/c) Or Take-up Rotation Sensor Opocoupler Assembly Is Faulty.
VCR	SHARP	VC7300	Tangles Or Chews Tapes When Ejected. Prevalent After Rew.	Replaced Load Belt.
VCR	SHARP	VC7300	Tape Looping After Rewind.	Replace T/u Turntable, Main Brake And Idlers And Check Main Brake Torque As Per Service Manual.
VCR	SHARP	VC7300	Tape Wont Load. Head Drum Rotates When Play Is Selected.	Put Loading Ring Assy In Correct Position And Sequence.
VCR	SHARP	VC7300	Won't Accept Or Inject Cassette.	Check Q8811 Or D313.
VCR	SHARP	VC7300	Won't Accept Tape.	Switch On Front Loading Mechanisim Pt No: Qswt0001gezz.
VCR	SHARP	VC7300	Wont Accept Tapes	Switch On Front Loading Mech P# Qswt0001gezz
			Cassette	

VCR	SHARP	VC7700	Loading Motor On At All Times.	Check Q8811 2sd687
VCR	SHARP	VC7700	Chopper Tranformer Squealing	Change C920 (10mfd 50v)
VCR	SHARP	VC7700	Dew Sensor Problems.	Check Q805 And Q806, 2sc1815.
VCR	SHARP	VC7700	Drum Rotates At All Times, No Inject Or Eject.	Check Mechanical Loading Ring Position.
VCR	SHARP	VC7700	Int Ejects Tapes, Flap Opening Int. Without A Tape In.	555 Timer Ics On Mechanon Board Faulty.
VCR	SHARP	VC7700	Int Recording.	Check Ic1301 Pin 8 For Int Loss Opf Signals.
VCR	SHARP	VC7700	Laces Up Then Unlaces.	Change Slack Sensor On Pinch Roller Bracket.
VCR	SHARP	VC7700	Loading Motor Weak.	Change Q8091.
VCR	SHARP	VC7700	Loading Motor Won't Rotate.	Look For Thermal Output To Main Solenoid O/c.
VCR	SHARP	VC7700	Loss Of Colour On Pre-rec. Playback Of Own Rec. Ok.	Fit 270 Pf In Parrallel With C540. Fit 1.8k Ohms 1/4w In Parallel With R522.
VCR	SHARP	VC7700	No 12v At T.P. 901.	On Vc7300 Check R903 0.27 Ohms. On Vc7700 Check R912 0.27 Ohms Q904 2sd1128.
VCR	SHARP	VC7700	No Capstan Motor Drive.	Check Q809, 2sd687.
VCR	SHARP	VC7700	No Play F.F. Rew. Or Rec.	Replaced Capstan Motor.
VCR	SHARP	VC7700	No Power Indication, No Clock Fuse F902 O/c.	Change Q908 With 2sc1826 Q920 10 Mfd 50v Q942 10 Mfd 16v
VCR	SHARP	VC7700	Refer Vc7300	
VCR	SHARP	VC7700	See Vc7300	
VCR	SHARP	VC7700	Tangles Or Chews When Ejected. Prevalent After Rew.	Replaced Load Belt.
VCR	SHARP	VC7700	Won't Accept Or Inject Cassette.	Check Q8811 Or D313.

VCR	SHARP	VC7700	Won't Turn Off. Cass. Lamp On, head Drum Rotates.	Check Failure Of Unload End Switch Sw 1. If The Tape Guides Have Not Retracted Fully, Check The Loading Mechanics Starting With The Loading Motor Belt.
VCR	SHARP	VC7750	Cassette Loading Motor On At All Times.	Check Q8811 2sd687
VCR	SHARP	VC7750	Chopper Tranformer Squealing	Change C920 (10mfd 50v)
VCR	SHARP	VC7750	Dew Sensor Problems.	Check Q805 And Q806, 2sc1815.
VCR	SHARP	VC7750	Drum Rotates At All Times, No Inject Or Eject.	Check Mechanical Loading Ring Position.
VCR	SHARP	VC7750	Int Recording.	Check Ic1301 Pin 8 For Int Loss Opf Signals.
VCR	SHARP	VC7750	Loading Motor Weak.	Change Q8091.
VCR	SHARP	VC7750	Loading Motor Won't Rotate.	Look For Thermal Output To Main Solenoid O/c.
VCR	SHARP	VC7750	Loss Of Colour On Pre-rec. Playback Of Own Rec. Ok.	Fit 270 Pf In Parrallel With C540. Fit 1.8k Ohms 1/4w In Parallel With R522.
VCR	SHARP	VC7750	No 12v At T.P. 901.	On Vc7300 Check R903 0.27 Ohms. On Vc7700 Check R912 0.27 Ohms Q904 2sd1128.
VCR	SHARP	VC7750	No Capstan Motor Drive.	Check Q809, 2sd687.
VCR	SHARP	VC7750	No Power Indication, No Clock Fuse F902 O/c.	Change Q908 With 2sc1826 Q920 10 Mfd 50v Q942 10 Mfd 16v
VCR	SHARP	VC7750	Refer Vc7300	
VCR	SHARP	VC7750	See Vc7300	
VCR	SHARP	VC7750	Won't Accept Or Inject Cassette.	Check Q8811 Or D313.
VCR	SHARP	VC781	Int Stops In Rew/ff.	Earth Cassette Slider By Fitting Spring (mspro113gefj)
VCR	SHARP	VC782	Fails Recording After Pause.	Replace Load Belt.
VCR	SHARP	VC782	Hum On Ee Audio.	Ic601 In Audio Board
			Supply Guide Comes Back	

VCR	SHARP	VC782	And Gets Caught On Back Tension Arm.	Replace Loading Gear Under Supply Guide
VCR	SHARP	VC787	Operate Light Goes Out After 8 Seconds	Check F902 Ur15v Rail
VCR	SHARP	VC8300	Agc On Monitor Only Ok In Playback.	Q1507 No Base Voltage Due To R1540 Being O/c Or High.
VCR	SHARP	VC8300	Agc Or Negative Picture.	Fl4401 S/c.
VCR	SHARP	VC8300	Blowing Fuse F803. Wont Accept Or Eject Tape.	Replace Eject Motor.
VCR	SHARP	VC8300	Cap. Speed Varying. Wow In Sound. Servo Phase Signal Faulty	Remove Bridge 1704 On P.W.B.-a. Change It With 680k Ohms And O.O22 Mfd In Parallel.
VCR	SHARP	VC8300	Capstan Running Fast.	Q718, Q719 S/c.
VCR	SHARP	VC8300	Capstan Slows When Hot Noise Band In Pb	C729 10æf
VCR	SHARP	VC8300	Capstan Slows When Hot, Noise Band Thru Picture.	C729 (1ouf Tan).
VCR	SHARP	VC8300	Capstan Speed Varies, Wow In Sound.	Check Bridge I704 On Pwb A.
VCR	SHARP	VC8300	Capstan Varies Speed Wow In Audio	Check Bridge I704 On Pwb-a
VCR	SHARP	VC8300	Cassette Loads But Not Threading.	Q714, Q716, Q717 S/c.
VCR	SHARP	VC8300	Cassette Will Not Load Or Unload Or Eject.	1. Check For 25v Present On Loading Motor. 2. Check For Faulty Ry801 Load/unload Switch.
VCR	SHARP	VC8300	Cassette Will Not Load.	Cassette Down Switch S2 Broken.
			Chews Or	

VCR	SHARP	VC8300	Tangles Tape When Ejected.	Replace Rubber Boot On Take Up Brake Arm.
VCR	SHARP	VC8300	Drum Fails To Start.	Drum Motor Int. Rmotp101pgezz.
VCR	SHARP	VC8300	Drum Wont Start	Drum Motor Int P# Rmotp1019gezz
VCR	SHARP	VC8300	Ejects After Loading Up.	Change Loading Belt.
VCR	SHARP	VC8300	Horizontal Noise Bars.	1. Capstan Running Slow - Ic1703 2. Dry Joint Thick-film Cr503. 3. Reset D Lock (r711)
VCR	SHARP	VC8300	Int Blows F903 When Unlacing.	Faulty Drum Motor Or Forward/reverse Switch Int. Shorting. (p.No. Qsw-10002ge).
VCR	SHARP	VC8300	Int Colour Or Lum In Record	Ic301 Sa8063
VCR	SHARP	VC8300	Int Loss Of Playback Picture (blank Screen)	Look For D/j's On Plug/socket Converter Cd On Pwb-c.
VCR	SHARP	VC8300	Int Stops In Play After Lace Up	Main Solenoid Sticking. Lub Or Replace
VCR	SHARP	VC8300	Int Stops In Play/record	Slack Sensor Faulty
VCR	SHARP	VC8300	Int Stops On Play After Lace-up.	Main Solenoid Sticking - Lubricate Or Replace.
VCR	SHARP	VC8300	Inter. Blows Fuse F903. Blows When Tape Unthreading.	Check Faulty Drum Motor. Check Intermittent Short In The Forward/reverse Switch (part No. Qswf0002ge). Mounted Near The Solenoids.
VCR	SHARP	VC8300	Interm. Colour Flashing Of Self Rec.	Replaced Ic301.
VCR	SHARP	VC8300	Intermittent Colour Flashing On Playback Of Own Recording.	Change Ic301 Rec. Amp. Vhisa 8063/-1.
VCR	SHARP	VC8300	Intermittently Drum Fails To Start In P/back Or Record.	Change Int. Drum Rmotp1019gezz.
VCR	SHARP	VC8300	Intermittently Stops In Play And Record.	Slack Sensor Faulty.

VCR	SHARP	VC8300	Intermittently Stops On P/back Or Rec. After Lace Up.	Change Main Solenoid Plunger Rplu0046gezz.
VCR	SHARP	VC8300	Lines Across Pict. And Sound Wavering.	Capstan Motor Faulty.
VCR	SHARP	VC8300	Loads Up And Ejects Tape.	Check For Craks In Connector Panel Below Solenoids (at Front Of Deck).
VCR	SHARP	VC8300	Machine Stops In Laced Up Position.	Solenoid Sticking Need Lubricating.
VCR	SHARP	VC8300	No "fast Forward"	Spring (49) Fallen Off.
VCR	SHARP	VC8300	No Audio In Ee	I1502 Ix0043
VCR	SHARP	VC8300	No Capstan Drive	Q718,q719,q720,q721,q723
VCR	SHARP	VC8300	No Capstan Drive.	Q721 (2sd880) In Capstan Brake.
VCR	SHARP	VC8300	No Capstan Lock	Tracking Pot Or Track To Pot O/c
VCR	SHARP	VC8300	No Capstan Lock.	Tracking Pot Or Pc Board To Pot Open Circuit.
VCR	SHARP	VC8300	No Capstan Motor Drive.	Replace All Q718, Q719, Q720, Q721, Q723.
VCR	SHARP	VC8300	No Capstan Motor Drive.	Check Q718. If Faulty Also Check Q719, Q720 Q723 And D711. Transistor Substitutes: Q714, 715 And Q 718, 719 Were 2sc2021. Use 2sc945aq. Q716 And Q720, 723 Were 2sa933. Use 2sa733 Or 2sa950y.
VCR	SHARP	VC8300	No Colour.	1. Ic1505. 2. Cr501. 3. Check Pin 3 Of Pugcb, Adjust Chroma Current Control On Head Amp.
VCR	SHARP	VC8300	No Drum Motor Drive	Replaced Q714,q715,q716,q717
VCR	SHARP	VC8300	No Drum Motor Drive.	Replace Q714, Q715, Q716, Q717.
VCR	SHARP	VC8300	No Drum Motor Drive.	Check Q714. If Faulty Also Check Q715 And Q716. transistor Substitutes: Q714, 715 And Q718, 719 Were 2sc2021. Use 2sc945aq. Q716 And Q720, 723 Were 2sa933. Use 2sa733 Or 2sa950y.
VCR	SHARP	VC8300	No Pic On Record/play.	L405 Faulty Or Ic1402 (ha11703).
VCR	SHARP	VC8300	No Picture In Play/record	L405 Or Ic1402 Ha11703
VCR	SHARP	VC8300	No Picture In Playback.	Change C439 If Fault Still Present Change Ic402.

VCR	SHARP	VC8300	No Sound On E-e	I1502 (ix0043).
VCR	SHARP	VC8300	No Sound On Own Recordings Pre-recorded Tapes Ok.	Ic601 Faulty.
VCR	SHARP	VC8300	Noisy Picture After Playing A Pre-recorded Tape Sev. Times.	Check Erase Osc If Partly Operating On Playback, If So Ic601 Faulty.
VCR	SHARP	VC8300	On Playback Looks Like A Capstan And A Drum Servo Fault.	Check C731 10 Mfd Tant For Leakage Ic702, Ic703 Etc.
VCR	SHARP	VC8300	Overshoot On Black To White Transitions On Own Recordings.	Check Deviation Level Adjustment.
VCR	SHARP	VC8300	Patterning On Ch4 Or Snowy On Ch3 Output Of Rf Converter.	Faulty Rf Converter.
VCR	SHARP	VC8300	Ripple In Sound.	1. Faulty Capstan Motor. 2. Worn/corrugated Pinch Roller.
VCR	SHARP	VC8300	Smeary Picture.	C4413 Or Video-board Dry Joint.
VCR	SHARP	VC8300	Snowy Pic On Tuner And Play.	Q1201 (2sc2570) In Rf Booster.
VCR	SHARP	VC8300	Snowy Picture In All Modes	Q1201 2sc2570 In Rf Booster
VCR	SHARP	VC8300	Snowy Picture On Tuner And/or Playback.	Q1201 In Rf Booster Unit. Use Toshiba 2sc2753.
VCR	SHARP	VC8300	Snowy Picture.	Q1201 In Modulator S/c.
VCR	SHARP	VC8300	Stops Int	Reel Motor Or/and Q6006 2sd687
VCR	SHARP	VC8300	Stops Intermittently.	Check Reel Motor And Q6006 (2sd687).
VCR	SHARP	VC8300	Tangles Tape On Eject.	Change Brake Rubber On Take-up Side Reel. Pgumm0012gezz.
VCR	SHARP	VC8300	Tape Stops In Play	Pinch Solenoid Not Operating. Check Fuse Under Insulation On Solenoid

VCR	SHARP	VC8300	Tape Stops In Play Mode.	Pinch Solenoid Not Operating, Check Fuse Under Insulation On Solenoid.
VCR	SHARP	VC8300	Tapes Getting Chewed.	Worn Out Brushes In Reel Motor - Change Reel Motor. intermediate Drive Wheel For Supply And Take Up Spools Seized. Rough Edges On Guide Slots For Intermediate Drive Wheel - Smooth Off Roughness Very Carefully Without Enlarging Slots. This Fault Usually Occurs When E120/180 Tape Has Been In Play Or Record Mode For About Half Of The Tape Length.
VCR	SHARP	VC8300	Tapes Tangle On Eject	Replace Brke Rubber On T/u Reel
VCR	SHARP	VC8300	Tapes Tangle On Eject.	Replace Brake Rubber On T/u Reel.
VCR	SHARP	VC8300	To Operate Mechanism With Top Servo Pcb Up.	Remove Plug Ao On Servo Pcb.
VCR	SHARP	VC8300	Tracking Drifting Over A Couple Of Weeks.	Change Capstan Motor.
VCR	SHARP	VC8300	Will Not Eject From Carriage,wont Allow Carr.To Drop Correc	Check Lock Off Lever (for Releasing Cassette Flap Broken), Or Has Been Forced Out Of Position. Change Lock Off Lever.
VCR	SHARP	VC8300	Will Not Rewind	Gear Fallen Off Vs Reel-motor.
VCR	SHARP	VC8300	Won't Load Or Unload.	Change Loading Motor Ic1805 Sta401 Motor Changeover Switch (p.No. Qsw-10002ge).
VCR	SHARP	VC8300	Won't Play "c" Size Cassette Adaptor.	Adjust Slack Sensor (vr844) On On Pwb-a.
VCR	SHARP	VC8300	Won't Switch Off.	Check Q902 S/c.
VCR	SHARP	VC8300	Wont Play Vhsc Tape In Adaptor	Adjust Slack Sensor Vr844 On Pwb-a
VCR	SHARP	VC8300	Wont Tune To Stations.	Check Aux/tuner Switch Faulty.
VCR	SHARP	VC8300	Wow And Flutter. No Capstan Servo.	Check Bridge On Pwb A And Or Replace With Original Part.
VCR	SHARP	VC8300	Wow In Audio	Capstan Belt Or Dry Bearings
VCR	SHARP	VC8300	Wow In Sound.	Capstan Belt, Or Dry Bearings In Motor.
VCR	SHARP	VC8300	Z Paid	
			No Or Intermittent	

VCR	SHARP	VC8452	Reel Drive In All Modes.	Change Ic705, (ta7267p)
VCR	SHARP	VC8482	No High Band On Tuner.	R958 (2.7k0 In Psu.
VCR	SHARP	VC8482	No High Band Tunner	R958 2.7k In Psu
VCR	SHARP	VC8482	No Picture In Cue/rewind	Ic704 Td62104
VCR	SHARP	VC8482	No/int Reel Drive	Ic705 Ta7647
VCR	SHARP	VC8482	Won't Accept Cassette.	Check Operation Of Cass. Down Switch. Pin 1 Of Plug Aa, Cass. Down (l) Should Be (h) With No Cassette In.
VCR	SHARP	VC8482	Won't Accept Cassette. Operation Faulty.	If The Main Cam Gear On The Underside Of Mechanisim Is Wound Fully Clockwise Then Rotate, By Use Of The Loading Motor Worm, 180 Deg Counter Clockwise. A. If Then All Operations Perform Without Faulty Replace Suspect C818, 10æf 16v, On Main Pcb. B. If Operations Still Faulty Check Alignment Of Mode Switch. Check Underside Of Mode Switch For Craks In Plastic.
VCR	SHARP	VC8581	Intermittent Recording.	Check Ic401 (ha11744nt1) Video Processor For Luminance At Pin 20 And Fm Out. Osc Signal At Pin 12 To Video Heads.
VCR	SHARP	VC9100	Interm. Chewing, Cuts Off On P/back And Record.	Check If Reel Idler Ok, Replace Int. Reel Motor. Rmotv1008gezz.
VCR	SHARP	VC9100	Interm. White Lines Break Up Of Pic. On E-e And P/back.	Only On Rf Out Not Video Out. Replace Ic403 On Y/c Pcb.
VCR	SHARP	VC9100	Loses Colour On Recordings	Change Filter Fl504 Rmptdoo52gezz.
VCR	SHARP	VC9100	No Picture In Ee Or Playback.	Replaced Ic403 On Video Pcb.
VCR	SHARP	VC9100	No Power, No Clock.	No 240v To Mains Transformer? Check R901, Change C901 (.1 Mfd). If Voltage To Power Supply Change C9009 (10 Mfd 63v).
VCR	SHARP	VC9100	No Reel Motor Voltage.	Change Q8001 (2sd880).
VCR	SHARP	VC9100	No Reel Torque On Playback Or Record.	Change Q7754 2sd882 And Add 27 Ohm Collector To Emitter.
VCR	SHARP	VC9100	No Reg. 12v Pin 2 Ae.	Check R9019 (15 Ohms). Check Q9006 Use (2sc1826).
VCR	SHARP	VC9100	No Video On E-e Mode.	Change C204 (220mfd 10v).

VCR	SHARP	VC9100	Picture Un Stable On Some Channels.	Replace Zener Ic, 11401, Rhix0037gezz.
VCR	SHARP	VC9100	Poor Or No Luminance	Change Ic403
VCR	SHARP	VC9100	Refer Vc9300	
VCR	SHARP	VC9100	Rf Interf. On Low Ch. Under Weak Signal Conditions.	Remove R9004 And C9006.
VCR	SHARP	VC9100	See Vc9300	
VCR	SHARP	VC9300	Blows 2.5 A Sb Fuse On Rear Of Vcr	Q9002 In Psu Or Reel Motor If '02' Type
VCR	SHARP	VC9300	Blows 2.5a Sb Fuse At Rear Of Vcr.	Q9002 In Psu.
VCR	SHARP	VC9300	Blows Fuse On P/supply 12v Rail Goes 25v.	Replace R16 In P/supply And Remove Glue From Pcb.
VCR	SHARP	VC9300	Cass. Will Not Eject, Won't Allow Carriage To Drop Corre.	Check Lock Off Lever (for Releasing Cassette Flap Broken), Or Has Been Forced Out Of Position. Change Lock Off Lever.
VCR	SHARP	VC9300	Cassette Will Not Eject.	Door Flap Not Opening Fully Due To Bent Lever Angle Assembly.
VCR	SHARP	VC9300	Chewing Tapes.	Cassette Down-end (csd) Switch Broken, Or Reel Motor.
VCR	SHARP	VC9300	Chews Tapes Int , Stops In Play	Reel Motor Rmotv1008gezz
VCR	SHARP	VC9300	Clock Display Shows Two Days	Ic5001
VCR	SHARP	VC9300	Distorted Or No Pic On E-e.	Q721 (2sb4568) On Pwb-a.
VCR	SHARP	VC9300	Distorted Picture In Ee	Q721 2sd468 Pwb-a
VCR	SHARP	VC9300	Drum Moor On All The Time.	Remove Glue On Q717 And Q718.
VCR	SHARP	VC9300	Drum Speed Int	X502
VCR	SHARP	VC9300	Drum Spins All Time	Remove Glue On Q717, Q718 Or Q718 Faulty.
VCR	SHARP	VC9300	Drum Turns All The Time.	Q717 (2sc945)

VCR	SHARP	VC9300	For Low Reel Torque In All Modes.	Check For D/j's On Q8001, Located At Rear Of Chassis, By The Head Drum.
VCR	SHARP	VC9300	Goes To Stop As Soon As It Is Fully Loaded.	Ic2002 On Pwc "d". Head Switching Pulses Low In Amplitude.
VCR	SHARP	VC9300	Grey Washed Out Pic In Play	Ic401
VCR	SHARP	VC9300	Int Blows 2.5a Fuse At Rear Of Vcr.	Change Reel Motor If "02" Type.
VCR	SHARP	VC9300	Int Capstan Speed	Ic703
VCR	SHARP	VC9300	Int Capstan Speed After 1-2 Hours	Ic703
VCR	SHARP	VC9300	Int Chews Tapes Or Cuts Out In Play/record.	Reel Motor Int (rmtv1008gezz).
VCR	SHARP	VC9300	Int Colour	Ic503
VCR	SHARP	VC9300	Int Colour And Drum Speed	Ic504
VCR	SHARP	VC9300	Int Colour On Recordings.	Fl504 (doo52ge).
VCR	SHARP	VC9300	Int Erratic Behavior	Ic801 Cpu
VCR	SHARP	VC9300	Int No Power/ Stops	Q808
VCR	SHARP	VC9300	Int Play Or Record.	Change Idler Assembly And Check For Lazy Drum Motor.
VCR	SHARP	VC9300	Int Play Pic	Fl401
VCR	SHARP	VC9300	Int Reel Motor Slows	R7733
VCR	SHARP	VC9300	Int Stops	C719 Leaky
VCR	SHARP	VC9300	Interm. Chewing, Cuts Off On P/back And Record.	Check If Reel Idler Ok, Replace Int. Reel Motor. Rmtv1008gezz.
VCR	SHARP	VC9300	Interm. White Lines Break Up Of Pic. On E-e And P/back.	Only On Rf Out Not Video Out. Replace Ic403 On Y/c Pcb.
VCR	SHARP	VC9300	Intermittent Colour On Playback.	1. D/j On C534. 2. Craked P.C. Board Near Centre Retaining Screw Around R538.

VCR	SHARP	VC9300	Intermittent No Power.	D/j Mains I/p Board.
VCR	SHARP	VC9300	Intermittent Wow On Sound.	Change R745. Check Also For D/j's Around Ic7753 And C788 (leaky).
VCR	SHARP	VC9300	Intermittently Shuts Down. No Functions No Display	C903 Low Capacitance. (47uf 16v Servo/sys Con Pcb)
VCR	SHARP	VC9300	Loses Colour On Recordings	Change Filter Fl504 Rmptdoo52gezz.
VCR	SHARP	VC9300	Low Reel Motor Torque	Q7754 2sd882
VCR	SHARP	VC9300	Low Reel Motor Torque On Play And Record.	Q7754 (2sd882).
VCR	SHARP	VC9300	Low Reel Torque In All Modes.	Look For D/j's On Q8001 Located At Rear Of Chassis Along Side Head Drum.
VCR	SHARP	VC9300	Mains Fuse Blown (f9001 2.5a)	Check Q7754 For O/c And R7758 (27 Ohm), Change Q903 And D901 On Mechanon Board.
VCR	SHARP	VC9300	No "stop" Function.	Poor Connection Plug Ha.
VCR	SHARP	VC9300	No 12v Reg From Psu	R9019 15ê , Q9006 2sc1983
VCR	SHARP	VC9300	No Capstan Drive	Plug Ad Crimped
VCR	SHARP	VC9300	No Colour Int In Record	Fl504 D0052ge
VCR	SHARP	VC9300	No E.E. Picture.	Check Q721 O/c In Tuner, Use Bc337.
VCR	SHARP	VC9300	No Eject	Ic801
VCR	SHARP	VC9300	No Output From Modulator.	Check L2 O/c (12 Volt Supply).
VCR	SHARP	VC9300	No Picture - No Sound.	Tuner/aux. Switch In Aux./position.
VCR	SHARP	VC9300	No Picture In Ee Mode.	Replaced C204 (220 Mfd 10v).
VCR	SHARP	VC9300	No Picture In Ee Or Pb	Fl202
VCR	SHARP	VC9300	No Picture In Ee Or Playback.	Replaced Ic403 On Video Pcb.
VCR	SHARP	VC9300	No Picture In	Change C439 If Fault Still Present Change Ic402.

			Playback.	
VCR	SHARP	VC9300	No Power	F9001 O/c Q9001 Shorted
VCR	SHARP	VC9300	No Power, No Clock.	No 240v To Mains Transformer? Check R901, Change C901 (.1 Mfd). If Voltage To Power Supply Change C9009 (10 Mfd 63v).
VCR	SHARP	VC9300	No Reel Drive	Q8001 2sd880
VCR	SHARP	VC9300	No Reel Drive In Pb/rec But Ff/fr Ok	Q7754
VCR	SHARP	VC9300	No Reel Motor Drive.	Q8001 (2sd880).
VCR	SHARP	VC9300	No Reel Torque On Playback Or Record.	Change Q7754 2sd882 And Add 27 Ohm Collector To Emitter.
VCR	SHARP	VC9300	No Reg 12v From Power Supply.	R9019 (15 Ohm) Q9006 (2sc1983).
VCR	SHARP	VC9300	No Reg. 12v Pin 2 Ae.	Check R9019 (15 Ohms). Check Q9006 Use (2sc1826).
VCR	SHARP	VC9300	No Reverse Search With Tape Inserted.	Change Reel Motor.
VCR	SHARP	VC9300	No Rew., F.F Ok. Pressing Rewind Again Produces F.F. & Rew.	Check R7751 Relay Sticking.
VCR	SHARP	VC9300	No Rewind	Ry7751
VCR	SHARP	VC9300	No Sound. In E.E. And Playback.	Faulty Rf Converter - Replace.
VCR	SHARP	VC9300	No Video On E-e Mode.	Change C204 (220mfd 10v).
VCR	SHARP	VC9300	Noise Bars Floating Through Picture - No Colour On Play.	X502 (4.43 Mhz) Xtal Faulty. Divided Down For 50 Hz Reference In Capstan Servo, Phase Lock Etc. Can Also Be Failure Of Ic504 (an6342n).
VCR	SHARP	VC9300	Noise Bars Move Slowly Through The Pic. Sound Dosen't Wow.	Check The Capstan Lock Voltage At Tp3 When The Flywheel Is Slowed By Hand, It Doesn't Alter. Usually Waveform Tp1 Is Missing, Due Either To D707 Being Leaky Or R475 (82 K Ohm) O/c. If The Drum And Capstan Servos Are Both Wowing, Check That The Pb 50hz Signal Is Steady.
VCR	SHARP	VC9300	Noise On Cue	Lub Roller Asy #17 In Parts List
VCR	SHARP	VC9300	Noisy Picture On Own	Mono Multi Q702/q703 Out Of Adjustment. Adjust R709.

			Recording.	
VCR	SHARP	VC9300	Not Erasing On Record	C611 C512
VCR	SHARP	VC9300	On Rec. Noise Bars Floating Through Pic.	Not Recording Control Pulses On Tape When Recording C717 (.33 Mfd Tant) Faulty. Also Can Be Failure Of I.C. 701 (an6344).
VCR	SHARP	VC9300	Pic And Audio Muted On Pause	Q817
VCR	SHARP	VC9300	Pic Unstable In Ee	Zener I1401 Ix0037ge
VCR	SHARP	VC9300	Pic Unstable On E-e	Zener Ic I1401 (ix0037ge).
VCR	SHARP	VC9300	Picture Un Stable On Some Channels.	Replace Zener Ic, 11401, Rhix0037gezz.
VCR	SHARP	VC9300	Plays For Three Sec. Then Motors Stop.	Int After Load Switch.
VCR	SHARP	VC9300	Poor Or No Drum Rotation	Ic704 M51724p Drum Current Driver
VCR	SHARP	VC9300	Poor Or No Luminance	Change Ic403
VCR	SHARP	VC9300	Poor Picture In Ee & Play	Ic403 Iz0008ge
VCR	SHARP	VC9300	Poor Picture No Luminance.	Replaced Ic403.
VCR	SHARP	VC9300	Poor Picture On E-e And Play.	Ic403 (iz0008ge).
VCR	SHARP	VC9300	Poor Recorded Picture.	C204 (22ouf)
VCR	SHARP	VC9300	Recorded Picture Poor	C204 220 æf
VCR	SHARP	VC9300	Rf Interf. On Low Ch. Under Weak Signal Conditions.	Remove R9004 And C9006.
VCR	SHARP	VC9300	Stops After 30 Minutes On Playback	If Fault Occurs In Play Or Record But Not Fast Wind,check Drum Pick Up Head.
VCR	SHARP	VC9300	Stops As Soon As Laced Up	Ic2002 Pcw-d Head Sw Pulswe Low
VCR	SHARP	VC9300	Stops For No Reason And /or Chewing	Capstan Bearing Is Binding. Remove, Clean And Lubricate Capstan Flywheel Bearing.

			Tapes.	
VCR	SHARP	VC9300	Tape Jammed.	Cassette Cover Release Spring (4) Fig. 35 Is Bent - Replace.
VCR	SHARP	VC9300	Tape Speed Varies.	S/h O/p (9) Ic703 Permanently Around 10v. Replace Ic703.
VCR	SHARP	VC9300	Tape Spills Out From The Supply Reel: Wont Rew. At End.	Check Reel Motor Faulty And Will Not Work Under Full Load, Or Reel Idler Wheel Binding On Shaft Or Chassis And/or Clutch Binding, Faulty Slide Switch.
VCR	SHARP	VC9300	Tapes Getting Chewed.	Worn Out Brushes In Reel Motor - Change Reel Motor. intermediate Drive Wheel For Supply And Take Up Spools Seized. Rough Edges On Guide Slots For Intermediate Drive Wheel - Smooth Off Roughness Very Carefully Without Enlarging Slots. This Fault Usually Occurs When E120/180 Tape Has Been In Play Or Record Mode For About Half Of The Tape Length.
VCR	SHARP	VC9300	The Cassette Housing Stops Half Way.	Check Eject Finish Switch On The Cassette Housing For O/c.
VCR	SHARP	VC9300	Unit Dead.	1. Fuse F901 Loose - Adjust Holder For Firm Grip Of Fuse. 2. Q9003, Q9002 S/c.
VCR	SHARP	VC9300	Very Poor Playback Picture.	No Signal From One Head, Look For D/j On Rotating Transformer.
VCR	SHARP	VC9300	White Out On Ee	R239 Dj'd
VCR	SHARP	VC9300	Won't Play, Rew Or F.F. Record Ok.	Check Output At Ad4, If So D/j Under Plug Ha13 Or Crack In Cct Board.
VCR	SHARP	VC9300	Won't Take Up.	Remove T/u Spools, Clean And Grease. Replace Idler, Greas Underneath.
VCR	SHARP	VC9300	Wont Tune To Stations.	Check Aux/tuner Switch Faulty.
VCR	SHARP	VC9500	Sound Warble.	Reel Motor Faulty.
VCR	SHARP	VC9700	11v And 13v Rails Down.	Check D9008 In P/s. Also Check For Corrosion Of Component Legs Caused By Holding Glue.
VCR	SHARP	VC9700	After Several Hrs Picture Pulling At Top.	Check For Rubbing Sound From Drum Bearing.
VCR	SHARP	VC9700	Chews Tapes.	Q708 S/c
VCR	SHARP	VC9700	Clock Display Too Bright.	Check D6603 S/c If Clock Ic15002 Faulty. Remove C5007 Before Changing Ic15002.
VCR	SHARP	VC9700	Clock Dist./flash. Capstan/drum Motors Interm. Start. -	Replace Ic5002.
			Display Goes	

VCR	SHARP	VC9700	Dim After 1 Hour.	Check Pr6601 On Audio Board.
VCR	SHARP	VC9700	Drum No Go.	L701 On Servo Pcb Or Remove Glue From Q718 And Q719.
VCR	SHARP	VC9700	Failure To Accept Tape.	Check Casss In Switch If Ok Q810.
VCR	SHARP	VC9700	Head Drum To Go.	Check L701 On Servo Pcb.
VCR	SHARP	VC9700	Int Failure To Play.	Check Drum Doesn't Rotate When Faulty Present, E52 Low 1 Volt. Drum Muting Trans Q719 Leaky.
VCR	SHARP	VC9700	Int Failure To Record Sound.	Change Relays, Change C648 To .1 Mfd, R693 To 10 K Ohm .25w. Or .01.
VCR	SHARP	VC9700	Int Loss Of Colour.	Check Ic301 (sa8063) Overheating. Replace.
VCR	SHARP	VC9700	Int Reel Drive.	Dj On Pin 18 Of Ic704.
VCR	SHARP	VC9700	Int Wowing In Play.	Check Q710 O/c.
VCR	SHARP	VC9700	Intermittently Dead With No Clock Display.	Check Chopper Regulator Chip 19001 (stk722b) Also Q9001.
VCR	SHARP	VC9700	Loss Of Field Sync In Record.	Check C542 On Y/c Board Should Be .1 Mfd Not .33 Mfd.
VCR	SHARP	VC9700	No Display	4ê7 Ptc Ht Feed To -30 Volt And Heater Line
VCR	SHARP	VC9700	No Go No Clock	Q5002 Or Circuit Board O/c
VCR	SHARP	VC9700	No Line Sync In Visual Search.	Replace Idler And Reel Motor.
VCR	SHARP	VC9700	No Operate, No Clock.	Q5002 U/s Or Print To Collector O/c.
VCR	SHARP	VC9700	No Pic On Play Or E-e Pic Is On Play.	Glue On Q809 (rec 11v Switch).
VCR	SHARP	VC9700	Rf Interference On Low Channels.	1. Unsolder "mgnd". Green Wire At K9005. 2. Unsolder "gnd" Brown Wire At K9003 And Resolder At C9006 "-".

[BACK](#)

Last site update: 03/09/2004 23:42:11