


PU 10 POWER UNIT

For Models No. 10, 11 and 12

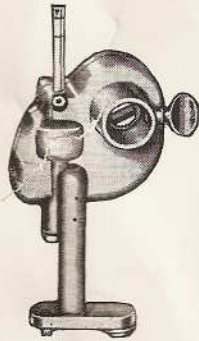

Sunbeam MIXMASTER
MIXER

CARE OF POWER UNIT

Clean Power Unit with damp cloth. DO NOT SUBMERGE POWER UNIT IN WATER. Under heavy usage, oil lightly once a month—put three drops of oil in hole on top of housing. About once a year remove grease plug in the back near top—fill with Sunbeam Power Unit Lubricant, then replace plug. Do not take Power Unit apart.

HOW TO ATTACH PU 10 POWER UNIT TO SUNBEAM MIXMASTER MIXER FOOD CHOPPER

First, assemble the Food Chopper as explained on the instruction sheet packed with chopper. Then connect the assembled food chopper to the Mixer to which a Power Unit has been attached (see illustration above). To do this, follow these instructions:

1. Tilt the motor back and remove both beaters from the Mixer.
2. Slip the drive shaft of the Power Unit into beater socket directly below juicer bowl support. It is easier to do this if you plug in the Mixer and turn the dial to lowest speed.
3. Tilt the motor forward so that the feet on the bottom of the Power Unit fit into the holes on the base of the Mixer. (First remove revolving platform from base of Mixer.)
4. Slip hub of assembled hopper into Power Unit.
5. Turn back and forth until hub of hopper is all the way into the Power Unit.
6. With the hopper upright, tighten the screw on the outside of the Power Unit so it fits into the small hole in the side of the hub of hopper. The Food Chopper is now ready to use.
7. To use Food Chopper, turn Mixer dial to HIGH SPEED.

**When Ordering Lubricant for Power Unit,
Specify 29A and Part No. 02-3228**

Sunbeam CORPORATION

5400 ROOSEVELT ROAD, CHICAGO, ILL. 60650

Over Half a Century Making Quality Products.

©SUNBEAM, MIXMASTER

Printed in U.S.A.

F023-0167