

FRIGIDAIRE

FLAIR RANGES
PARTS CATALOG

1960 through 1968 Models

All parts and part numbers for models: RCDB-630, RCDB-640, RCIB-635, RCIB-645 RCDB-630-1, RCDB-640-1, RCDB-630-2, RCOB-640-2, RCIB-635-2, RCIB-645-2, RDF-630, RCDH-630, RCIH-635, RCDH-640, RCIH-645, RCD-630J, RCI-635J, RCI-645J, RCD-630K, RCI-635K, RCI-645K, RCD-630N, RCD-630VN, RCI-635N, RCI-635VN, RCI-645N, RCI-645VN

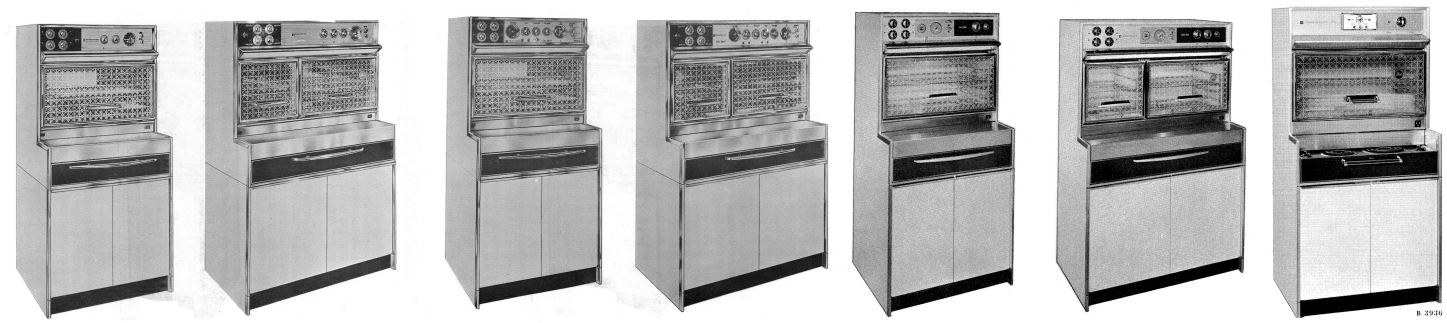

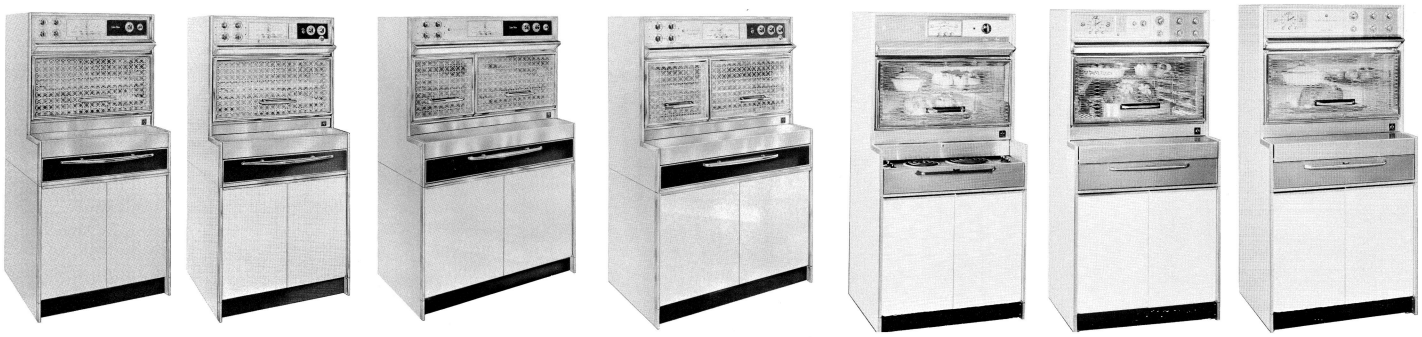





CATALOG USAGE GUIDE

Recommended Steps For Finding A Part

1. The model code must be known. Use Product Views, in front of catalog, to help identify model.

2. Using Illustrations to find Part Numbers:

   A. Check the illustration index and obtain the page number of the required illustration. (Associated parts are grouped together).

   B. Turn to the illustration and obtain the part code of the item or items required.

   C. Locate the page of copy that lists the part code and find the part number. The beginning and ending parts codes are shown at the bottom of each page.

   EXAMPLE: To find the Control Panel Glass for a 1966 model RCI-645K Flair Range:

   Step 1. Illustration index lists the illustration of the Control Panel, Meal Minder, Switches And Parts on page 2.

   Step 2. Turning to page 2 the illustration shows that it is for model RCI-645K and that the Control Panel Glass is part code 1.103.

   Step 3. Part code 1.103 is listed on page 11 and shows part number 7537981 being used on model RCI-645K.

3. Using the Alphabetical Index to find Part Numbers:

   A. Look in the alphabetical listing for the name of the part and its application. This will refer to a part code.

   B. Locate the page of copy that lists the part code and find the part number.

   EXAMPLE: To find the Control Panel Glass for a 1966 model RCI-645K Flair Range:

   Step 1. Look in the alphabetical listing for Glass - Control Panel. This refers to part code 1.103.

   Step 2. Part code 1.103 is listed on page 11 and shows part number 7537981 being used on model RCI-645K.

ABBREVIATIONS

ADJ.....Adjusting
AFT.....After
ALUM....Aluminum
AMP.....Ampere
APPL....Appliance
AR......As Required
ASSY....Assembly

B.......Black
BE......Beige
BEF.....Before
BELOS...Bellows
BET.....Between
BK......Bake
BLK.....Block
BLWR....Blower
BR......Brass
BRG.....Bearing
BRKT....Bracket
BRL.....Broiler
BSHG....Bushing
BT......Butter
BTL.....Bottle
BTM.....Bottom
BTN.....Button

CABT....Cabinet
CAP.....Capacitor
CH......Chrome
CHN.....Chain
CHNL....Channel
CHSE....Cheese
CL......Charcoal
CLR.....Collar
CLTG....Circulating
CM......Cook-Master
COLG....Cooling
COMP....Compressor
COMPT...Compartment
COND....Condenser
CONDTR..Conditioner
CONN....Connector
CONT....Container
COR.....Corner
CP......Copper
CPLG....Coupling
CTR.....Center
CTRL....Control
CVR.....Cover
CYC.....Cycle

DC......Direct Current
DEFL....Deflector
DEFR....Defrost
DIA.....Diameter
DISCHG..Discharge
DISP....Dispenser
DISPL...Disposal
DISTR...Distributor
DN......Down
DR......Door

EJTR....Ejector
ELEC....Electric
ELMT....Element
ESCTN...Escutcheon
EVAP....Evaporator
EXCHGR..Exchanger
EXH.....Exhaust
EXT.....External
EXTN....Extension

FBC.....Fabric
FBR.....Fibre
FD......Food
FL......Flare
FLG.....Flange
FLUOR...Fluorescent
FPT.....Female Pipe Thread
FRT.....Front
FRTN....Friction
FT......Feet
FTG.....Fitting
FZR.....Freezer

GN......Green
GND.....Ground
GSKT....Gasket
GST.....Gusset
GY......Gray

HD......Head
HDL.....Handle
HDR.....Holder
HG......Hinge
HORIZ...Horizontal
HP......Horsepower
HSG.....Housing
HT......Heat
HTR.....Heater
HYD.....Hydrator

I.......Inside
ILMG....Illuminating
IN......Inch
INCL....Includes
IND.....Indicator
INDG....Indicating
INFIN...Infinite
INR.....Inner
INS.....Insulation
INT.....Internal

L.......Left
LA......Latch
LDG.....Loading
LG......Long
LGT.....Length
LH......Left Hand
LIQ.....Liquid
LK......Lock
LNK.....Link
LOC.....Locating
LT......Light
LVLG....Leveling
LWR.....Lower

MDL.....Middle
MECH....Mechanism
MIN.....Minute
MLDG....Moulding
MT......Meat
MTD.....Mounted
MTG.....Mounting
MTR.....Motor

NM......Name

O.......Outside
OPG.....Opening
OPRG....Operating
OPT.....Optional
OUT.....Outer
OZ......Ounce

PK......Pink
PKG.....Package
PLN.....Plain
PLSTR...Pulsator
PLT.....Plate
PLTC....Plastic
PNL.....Panel
PNT.....Paint
PORC....Porcelain
PROD....Product
PROT....Protector
PUR.....Purchase

R.......Right
RBR.....Rubber
RCLTG...Recirculating
RECPTL..Receptacle
REFL....Reflector
REFRIG..Refrigerant
REINF...Reinforcement
REQD....Required
RET.....Return
RH......Right Hand
RK......Rack
RLG.....Rolling
RLR.....Roller
RMBL....Removable
ROTISS..Rotisserie
RTNR....Retainer
RR......Rear

SCR.....Screw
SCRN....Screen
SEL.....Selector
SERV....Service
SH......Shelf
SHL.....Shell
SKT.....Socket
SM......Sheet Metal
SOL.....Solenoid
SPEC....Special
SPG.....Spring
SPKLR...Sprinkler
SPKT....Sprocket
SS......Stainless Steel
STOR....Storage
STR.....Straight
SUCT....Suction
SUPT....Support
SURF....Surface
SW......Switch

T.......Top
TAP.....Tapping
TEMP....Temperature
TER.....Terminal
THERMO..Thermostat
THKNS...Thickness
TQ......Turquoise
TR......Tray

UPR.....Upper
UT......Utility

V.......Volt
VERT....Vertical
VLV.....Valve
VT......Vent

WD......Woodtone
WG......Wing
WHL.....Wheel
WSR.....Washer
WTR.....Water

YL......Yellow (Stratford)
YW......Yellow (Sunny)

INDEX

FLAIR RANGES

1960
1961

Section I ... 1960 & 1961 Models

Models RCDB-630, RCDB-640, RCIB-635, RCIB-645, RCDB-630-1, RCDB-640-1..... Page A

Base Cabinets B-30 and B-40..... Page A

Vent Hoods EH-30 and EH-40..... Page A

1962
1963

Section II ... 1962 & 1963 Models

1964

Models RCDB-630-2, RCDB-640-2, RCIB-635-2, RCIB-645-2, RDF-630.... Page A

Base Cabinets B-30 and B-40..... Page A

Vent Hoods EH-30, EH-35, EH-40 and EH-45..... Page A

1965

Section III ... 1964 Models

1966
1967

Models RDH-630, RCDH-630, RCIH-635, RCDH-640, RCIH-645..... Page A

Base Cabinets B-30 and B-40..... Page A

Vent Hoods EH-30H, EH-35H, EH-40H and EH-45H..... Page A

Section IV ... 1965 Models

1968

Models RCD-630J, RCI-635J, RCI-645J..... Page A

Base Cabinets B-30 and B-40..... Page A

Vent Hoods EH-30J, EH-35J, EH-40J and EH-45J..... Page A

Section V ... 1966 & 1967 Models

Models RCD-630K, RCI-635K, RCI-645K..... Page A

Base Cabinets B-30 and B-40..... Page A

Vent Hoods EH-30J, EH-35J, EH-40J and EH-45J..... Page A

Additional Colors for the 1966 Models..... Page 31

INDEX

FLAIR RANGES

Section VI ... 1968 Models

Models RCD-630N, RCD-630VN, RCI-635N, RCI-635VN, RCI-645N, RCI-645VN..... Page A

Base Cabinets B-30 and B-40..... Page A

1960/1961

FRIGIDAIRE FLAIR RANGES PARTS CATALOG

1960 & 1961 MODELS

INDEX

ILLUSTRATIONS

DESCRIPTION	PAGE
PRODUCT VIEWS	1 and 2
CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS	3
COOKING TOP, SURFACE UNITS AND PARTS	4
OVEN DOORS AND ACTUATING PARTS	5
OVEN LINERS AND INTERIOR PARTS	6
PANELS, TRIMS AND PARTS	7
BASE CABINETS AND PARTS	8
VENT HOOD - ACCESSORY	9
ROTISSERIE - ACCESSORY	9
ELECTRICAL TERMINALS AND CONNECTORS	10
LEAD WIRE CHART	10

PARTS GROUPS

GROUP	DESCRIPTION	PAGE
1	CONTROL PANELS AND PARTS	11
2	COOK-MASTERS AND PARTS	13
3	SWITCHES AND PARTS	14
4	SURFACE UNITS AND PARTS	17
6	TOPS AND PARTS	18
7	FRAMES, PANELS AND PARTS	25
8	OVEN DOORS AND PARTS	28
9	OVEN LINERS AND PARTS	34
10	OVEN INTERIOR PARTS	34
13	ELECTRICAL PARTS	35
14	ACCESSORIES AND PARTS	42
15	INSULATION	45
16	BASE CABINETS AND PARTS	46

ALPHABETICAL INDEX

DESCRIPTION	CODE
ADAPTER - Electrical	13.001
ANGLE - Oven	7.319
ARM, CONTROL - Cooking Top Latch	6.366
ARM, CONTROL - Switch Operating	3.366
ARM, LOWER - Oven Door	8.366
ARM, RELEASE - Oven Door	8.3662
ARM, UPPER - Oven Door	8.3661
BAFFLE - Bake Element	13.0071
BAFFLE - Broil Element	13.007
BALLAST - Fluorescent Lamp	13.371
BASE, HANDLE - Oven Door	8.009
BASE - Starter	13.009
BEARING, NYLON - Torque Shaft	8.011
BEARING - Sprocket Shaft	6.011
BLADE, TERMINAL - Bake Receptacle	13.015
BLOCK - Connector	13.3302
BLOCK, FEMALE - Surface Unit Connector	4.330
BLOCK, MALE - Surface Unit Connector	4.3301
BLOCK - Terminal	13.330
BLOCK, TERMINAL - Neutral Connector	13.3301
BLOCK - Top Trim	7.330
BOX - Junction	14.023
BRACKET - Cable Roller	8.0261
BRACKET - Chain	6.0261
BRACKET - Cookmaster And Thermostat	2.026
BRACKET - Door Spring Retainer	8.026
BRACKET - Door Stop	8.0264
BRACKET - Hinge Pivot	16.026
BRACKET - Lampholder	13.026
BRACKET - Lamp Selector Switch	3.026
BRACKET - Latch Spring Retainer	6.0263
BRACKET - Lower Arm	8.0263
BRACKET - Oven Door Latch	8.0262
BRACKET, RETAINER - Sensor	4.0261
BRACKET - Side Trim	7.026
BRACKET - Speed Heat Unit Fuse	13.0261
BRACKET, STOP - Cooking Top	6.026
BRACKET - Surface Unit Hinge	4.026
BRACKET - Switch	3.0261
BRACKET - Thermostat	3.0262
BRACKET - Top Cover Slide	6.0262
BULB, LAMP - Oven Illuminating	13.358
BUMPER, CAP - Cover Adjusting	6.0291
BUMPER - Door	16.029
BUMPER - Front Panel	14.029
BUMPER - Pulley Channel	6.0292
BUMPER - Shelf	16.0291
BUMPER, SLEEVE - Shelf	16.0292
BUMPER - Sprocket Channel	6.029
BUSHING - Carriage Pivot	8.316
BUSHING - Center Bearing	8.3161
BUSHING - Cooking Top Cover Adjusting	6.316
BUSHING - Door Spring	8.3162
BUSHING - Door Spring Swivel	8.3163
BUSHING - Hinge Pivot	16.316
BUTTON - Broil Stop	8.3801
BUTTON - Cooking Top Cover	6.380
BUTTON, GLIDER - Cabinet	16.380
BUTTON, PLUG - Control Housing	1.380
BUTTON, PLUG - Door	16.3801
BUTTON, PLUG - Rotisserie	9.380
BUTTON, RELEASE - Oven Door	8.380
BUTTON - Switch Arm Glide	3.380
CABLE - Cooking Top	6.436
CABLE - Left Oven Door	8.4362
CABLE, OUTER - Oven Door	8.436
CABLE - Right Oven Door	8.4361
CAP - Lower Trim	16.376
CAP - Oven Liner Corner	9.376
CAP - Screw Cover Adjusting	6.376
CATCH, ROLLER - Broil Stop	8.328
CATCH, SPRING - Door	16.328
CHAIN - Drive	14.351
CHAIN - Roller	6.351
CHANNEL - Cooking Top Stop	6.0371
CHANNEL, GUIDE - Oven Door Spring	8.037
CHANNEL - Lead Cover	13.037
CHANNEL - Pulley	6.0372
CHANNEL - Sprocket	6.037
CLAMP - Blower Housing	14.327
CLAMP, BROIL ELEMENT RETAINER - Oven	13.327
CLAMP - Surface Unit Hinge	4.327
CLAMP - Thermostat Capillary Tube	3.327
CLIP - Chain Link	6.039
CLIP - Filter	14.039
CLIP - Lead Wire	13.039
COIL, SOLENOID - Cookmaster & Time Signal	2.389
CONNECTOR, FEMALE - Electrical	13.0485
CONNECTOR, FEMALE - Lead Wire Splice	13.0483
CONNECTOR - Line Terminal	13.048
CONNECTOR, LINE - Terminal Recptl Jumper	13.0481
CONNECTOR, MALE - Electrical	13.0484
CONNECTOR, MALE - Lead Wire Splice	13.0482
CONNECTOR, MARR	13.0486
CONNECTOR, SLEEVE	13.0487
CONTACT - Bake Terminal	13.049
CONTACT - Ground Terminal Blade	13.0491
COOKMASTER AND TIME SIGNAL	2.374
COVER - Cooking Top	6.378
COVER - Junction Box	14.3781
COVER - Meat Temperature Probe Receptl	13.3781
COVER - Rear Access	16.378
COVER - Rotisserie	14.378
COVER - Rotisserie Opening	7.378
COVER - Terminal Block	13.378
DEFLECTOR, PLASTIC - Control Panel Supt	1.063
DIAL - Broiler Control	3.3813
DIAL - Lamp Selector Switch	3.3815
DIAL - Meat Temperature Indicator	3.3814
DIAL, SWITCH - Heat Minder	3.3811
DIAL, SWITCH - Infinite Heat Surf Unit	3.381
DIAL - Thermostat	3.3812
DIASTAT - Oven Thermostat	3.067
DOOR - Base Cabinet LH	16.070
DOOR - Base Cabinet RH	16.0701
DUCT, AIR	14.311
ELEMENT, HEATING - Bake	13.0801
ELEMENT, HEATING - Broil	13.080
END - Lamp Housing	1.395
ESCUTCHEON - Cooking Top	8.081
ESCUTCHEON - Cookmaster And Thermostat	1.081
FILTER, AIR	14.088
FORK, TURNING - Rotisserie	14.431
FRAME - Base Cabinet	16.096
FRAME - Carriage	8.0962
FRAME, INSIDE - Oven Door	8.0961
FRAME, OUTSIDE - Oven Door	8.096
FUSE	13.098
GASKET - Oven Door Handle	8.099
GASKET - Surface Unit Ter Block Seal	4.099
GEAR - Sprocket	14.101
GLASS - Control Panel	1.103
GLASS, INNER - Oven Door	8.1031
GLASS - Lamp Housing	1.1031
GLASS, OUTER - Oven Door	8.103
GLASS - Oven Light	10.103
GRIDDLE, KANT SLIDE	14.485
GRILL - Broiler Pan	10.108
GUIDE - Latch Channel	6.323
GUIDE - Shelf (Base Cabinet)	16.323
GUIDE - Shelf LH	10.3231
GUIDE - Shelf RH	10.323
HANDLE - Broiler Pan	10.110
HANDLE - Cooking Top	6.110
HANDLE, DOOR - Base Cabinet	16.110
HANDLE, DOOR - Oven	8.110

ALPHABETICAL INDEX - Continued

DESCRIPTION	CODE
HARNESS, ELECTRICAL	13.438
HINGE, BOTTOM - Cooking Top Latch	6.346
HINGE, DOOR - LH Top And RH Bottom	16.3461
HINGE, DOOR - RH Top And LH Bottom	16.346
HINGE, TOP - Cooking Top Latch	6.3461
HOLDER, LAMP - Fluorescent	13.363
HOOD, VENT	14.113
HOOK - Door Spring Retainer	8.114
HOUSING - Blower	14.116
HOUSING - Control	1.116
HOUSING - Cooking Top	6.116
HOUSING - Terminal Block	13.116
INDICATOR - Meat Temperature	3.248
INSULATION, ASBESTOS - Cooking Top Cover	15.1245
INSULATION, BULK	15.124
INSULATOR, ELECTRICAL - Broil Receptacle	13.126
INSULATOR, SLEEVE	13.1262
KNOB, CONTROL - Broiler Control	3.1304
KNOB, CONTROL - Cookmaster & Time Signal	2.130
KNOB, CONTROL - Lamp Selector Switch	3.130
KNOB, CONTROL - Meat Tender	3.1301
KNOB, CONTROL - Oven Thermostat	3.1303
KNOB, CONTROL - Surface Units	3.1302
KNOB - Latch Operating	6.350
LAMP, FLUORESCENT	13.132
LATCH - Cooking Top	6.347
LEVER - Latch Operating	6.356
LIGHT, PILOT - Oven	13.4891
LIGHT, PILOT - Surface Unit	13.489
LINER - Oven	9.136
LINK - Actuating Arm To Plate	14.3481
LINK, CHAIN - Cooking Top	6.348
LINK - Trigger To Spring	14.348
MOTOR - Blower	14.431
MOTOR - Rotisserie	14.143
NUT - Bake Receptacle Terminal Blade	13.1491
NUT - Cable Roller Bracket	8.1491
NUT - Connector Block Terminal	13.1494
NUT - Cooking Top Cable	6.1494
NUT - Cooking Top Front Panel	6.149
NUT - Cooking Top Housing	6.1492
NUT - Cooking Top Shipping	6.1491
NUT - Door Spring To Hook	8.149
NUT - Door Strike	16.149
NUT - Lamp Housing Shield	1.149
NUT - Lamp Housing Top Trim	1.1491
NUT - Latch Channel Guide	6.1493
NUT - Line Terminal Connector	13.1497
NUT - Meat Temperature Indicator	13.1495
NUT - Oven Bake Element Baffle	13.1498
NUT - Oven Liner	9.149
NUT - Rear Access Cover	16.1492
NUT - Shelf Guide	16.1493
NUT - Temperature Probe Receptacle	13.149
NUT - Terminal Block	13.1492
NUT - Terminal Block Housing	13.1496
NUT - Terminal Block Terminal	13.1493
NUT - Trim - Vent Hood	14.149
PAD - Control Panel Glass	1.153
PAD - Oven Liner	9.153
PAN - Broiler	14.336
PAN, LARGE - Surface Unit Drip	4.3361
PAN, SMALL - Surface Unit Drip	4.336
PANEL, BACK	7.310
PANEL, BACK - Base Cabinet	16.310
PANEL, FRONT - Cooking Top	6.156
PANEL, FRONT - Hood Trim	14.1561
PANEL, FRONT - Vent Hood	14.156
PANEL, SIDE - Range	7.159
PANEL, TOE PLATE	16.455
PANEL, TOP - Range	7.160
PIN - Broil Stop Roller	8.3641
PIN - Cooking Top Latch	6.3641
PIN, COTTER - Cooking Top Latch Arm	6.163
PIN, COTTER - Switch Operating Arm	3.163
PIN - Gear	14.364
PIN - Oven Door Spring	8.364
PIN - Sprocket	6.364
PIVOT - Oven Door Carriage	8.421
PLATE - Condensate Trim	7.390
PLATE - Cooking Top Drip	6.390
PLATE, NAME - Hood	14.170
PROBE - Meat Temperature	13.458
PULLEY - Cable	8.177
PULLEY, CABLE - Cooking Top	6.177
RACK - Roaster Side	10.182
RACK - Rotisserie	14.182
RECEPTACLE - Appliance	13.1851
RECEPTACLE - Broil Element Terminal	13.185
RECEPTACLE, ELECTRICAL	14.185
RECEPTACLE, FRONT - Bake Element Ter	13.1854
RECEPTACLE, FUSE	13.1856
RECEPTACLE, LAMP - Oven	13.1855
RECEPTACLE, REAR - Bake Element Terminal	13.1853
RECEPTACLE - Termperature Probe	13.1852
RETAINER - Broil Receptacle	13.192
RETAINER - Cable Bracket	6.192
RETAINER - Cable Pulley	8.1923
RETAINER - Chain Bracket	6.1921
RETAINER - Conduit	13.1922
RETAINER - Door Spring	8.1921
RETAINER - Fuse Receptacle	13.1923
RETAINER - Insulation	7.192
RETAINER - Oven Door Glass	8.192
RETAINER - Oven Lamp Cover	13.1921
RETAINER, SPRING - Cable Pulley	6.1922
RETAINER, SPRING - Control Knob	3.192
RETAINER - Thermostat Bulb	10.192
RETAINER, TOP - Control Panel Glass	1.192
RING, RETAINER - Broil Stop Roller Pin	8.3932
RING, RETAINER - Cable Roller	8.3931
RING, RETAINER - Cooking Top Latch Pin	6.3932
RING, RETAINER - Door Cable	8.3933
RING, RETAINER - Lower Arm Bracket	8.3934
RING, RETAINER - Oven Door Spring Pin	8.393
RING, RETAINER - Sprocket	6.393
RING, RETAINER - Top Cover Roller	6.3931
RIVET - Oven Lamp Cover Retainer	13.194
ROD, RELEASE - Oven Door	8.197
ROLLER - Cable	8.199
ROLLER - Cooking Top	6.199
ROLLER - Top Cover	6.1991
ROTISSERIE KIT	14.428
ROTOR - Cookmaster And Time Signal	2.200
SCREW - Bake Terminal Contact To Blade	13.2089
SCREW - Bottom Trim	7.2083
SCREW - Broil Element	13.2082
SCREW - Broil Receptacle Retainer	13.2084
SCREW - Broil Stop	8.20817
SCREW - Broil Stop Spring	8.20821
SCREW - Broiler Control Switch	3.2086
SCREW - Cabinet Rear Panel-Base Cabinet	16.2084
SCREW - Cable Roller Bracket	8.20811
SCREW - Center Carriage Support	8.20815
SCREW - Chain Bracket Retainer	6.2087
SCREW - Condensate Trim Plate	7.2086
SCREW - Condensation Trim	7.2084
SCREW - Conduit Retainer	13.20818
SCREW - Control Housing	1.2086
SCREW - Control Panel Glass Support	1.2087
SCREW - Control Panel Terminal Shield	13.20827
SCREW - Cooking Top Bracket	6.2088
SCREW - Cooking Top Cable	6.20819
SCREW - Cooking Top Cover Slide Bracket	6.20822

ALPHABETICAL INDEX - Continued

DESCRIPTION	CODE
SCREW - Cooking Top Drip Plate	6.2081
SCREW - Cooking Top Front Panel - Lower	6.2082
SCREW - Cooking Top Front Panel - Upper	6.2089
SCREW - Cooking Top Handle	6.20811
SCREW - Cooking Top Latch Arm Support	6.20813
SCREW - Cooking Top Latch Hinge	6.20812
SCREW - Cooking Top Stop Bracket	6.208
SCREW - Cooking Top Stop Channel	6.20814
SCREW - Cookmaster Bracket	2.208
SCREW - Cookmaster And Thermostat Brkt	2.208
SCREW - Cookmaster And Thermostat Esctn	1.2081
SCREW - Cookmaster And Time Signal	2.2081
SCREW - Cover Adjusting	6.2083
SCREW - Cover Adjusting Screw Stop	6.2085
SCREW - Cover - Vent Hood	14.2087
SCREW - Disconnect Switch	3.20811
SCREW - Disconnect Switch Shield	3.2088
SCREW - Door Arm Stop	8.20813
SCREW - Door Handle	8.208
SCREW - Door Handle - Base Cabinets	16.2082
SCREW - Dooe Hinge - Base Cabinets	16.2081
SCREW - Door Spring Retainer	8.20819
SCREW - Flair Range	16.2086
SCREW - Fluorescent Lamp Ballast	13.20826
SCREW - Fluorescent Lamp Holder	13.20815
SCREW - Fluorescent Lamp Holder Bracket	13.20814
SCREW - Front Bake Unit Receptacle	13.20812
SCREW - Gears And Motor - Rotisserie	14.2083
SCREW - Ground Strap	13.20819
SCREW - Ground Terminal Contact	13.20811
SCREW - Handle - Broiler Pan	10.2081
SCREW - Hinge Pivot Bracket-Base Cabinet	16.208
SCREW - Infinite Heat Surface Unit Sw	3.2084
SCREW - Inner Carriage Pivot	8.20816
SCREW - Inside Oven Door Frame	8.2083
SCREW - Insulation Retainer	7.2089
SCREW - Lamp Housing End	1.208
SCREW - Lamp Housing Lower Trim	1.2082
SCREW - Lamp Housing Top Trim	1.2083
SCREW - Lamp Selector Switch Bracket	3.208
SCREW - Lamp Switch	3.2085
SCREW - Latch Channel Guide	6.20818
SCREW - Latch Knob	6.20817
SCREW - Latch Operating Lever	6.20815
SCREW - Latch Spring Retainer Bracket	6.20816
SCREW - Lead Cover Channel	13.2081
SCREW - Lead Wire Clip	13.2083
SCREW - Light Diffusion Support	1.2084
SCREW - Lower Arm	8.2089
SCREW - Lower Arm Bracket	8.2086
SCREW - Lower Side Trim - Base Cabinets	16.2089
SCREW - Lower Trim Cap - Base Cabinets	16.20811
SCREW - Meat Temperature Indicator	3.2087
SCREW - Meat Temperature Probe Receptacle Cover	13.2086
SCREW - Meat Temperature Signal	13.2088
SCREW - Neutral Connector Block	13.20821
SCREW - Outer Carriage Pivot	8.20812
SCREW - Oven Angle	7.2085
SCREW - Oven Bake Element Baffle	13.2085
SCREW - Oven Door Latch Bracket	8.2082
SCREW - Oven Door Release Arm	8.2088
SCREW - Oven Door Release Button	8.2081
SCREW - Oven Door Spring Adjusting	8.20822
SCREW - Oven Door Torque Shaft	8.2087
SCREW - Oven Lamp Receptacle	13.20813
SCREW - Oven Liner	9.208
SCREW - Oven Thermostat	3.2081
SCREW - Pulley Channel	6.20821
SCREW - Range Back Panel	7.2087
SCREW - Range Top Trim	7.2081
SCREW - Rear Access Cover-Base Cabinets	16.20812
SCREW - Rotisserie	14.2081
SCREW - Rotisserie Opening Cover	7.208
SCREW - Sensor Retainer Bracket	4.2084
SCREW - Sensor Support	4.2081
SCREW - Shelf Guide	10.208
SCREW - Shelf Guide - Base Cabinets	16.2085
SCREW - Side Panel	7.2088
SCREW - Speed Heat Switch	3.2083
SCREW - Speed Heat Unit Fuse Bracket	13.20829
SCREW - Spring Guide Channel	8.20814
SCREW - Sprocket Channel	6.2086
SCREW - Starter Base	13.20816
SCREW - Surface Unit Bracket	4.2082
SCREW - Surface Unit Clamp To Bracket	4.208
SCREW - Surface Unit Terminal Block	4.2083
SCREW - Switch Bracket	3.2082
SCREW - Switch Insulator - Rotisserie	14.2084
SCREW - Rotisserie	14.2085
SCREW - Terminal	13.208
SCREW - Terminal Block	13.20817
SCREW - Terminal Block Cover	13.20825
SCREW - Terminal Block Housing	13.20822
SCREW - Terminal Connector Block	13.20823
SCREW - Thermostat Bracket	3.2089
SCREW - Thumb - Rotisserie Fork	14.208
SCREW - Toe Space Panel - Base Cabinets	16.2083
SCREW - Top Spacer Washer	1.2085
SCREW - Torque Shaft Bearing	8.20818
SCREW - Torque Shaft Lower Bearing	8.2084
SCREW - Torque Shaft Upper Bearing	8.2085
SCREW - Transformer	13.2087
SCREW - Trim	7.2082
SCREW - Trim Support - Base Cabinets	16.2088
SCREW - Trim - Vent Hood	14.2086
SCREW - Upper Side Trim - Base Cabinets	16.2087
SCREW - Vent Hood	14.2082
SEAL, DOOR - Bottom	8.203
SEAL, DOOR - Side	8.2031
SEAL, RUBBER - Lamp Housing Top Trim	1.204
SENSOR - Heat Minder	4.490
SHAFT - Sprocket	6.210
SHAFT - Torque	8.210
SHELF - Cabinet	16.213
SHELF - Oven	10.213
SHIELD - Disconnect Switch	3.216
SHIELD - Lamp Housing	1.216
SHIELD, TERMINAL - Control Panel	13.216
SIGNAL - Meat Temperature	13.457
SLIDE - Cooking Top Cover	6.120
SPACER - Latch Channel Guide	6.222
SPIT - Rotisserie	14.430
SPLICE, MALE - Electrical	13.394
SPRING - Broil Stop	8.2263
SPRING - Broil Stop Roller Catch	8.2262
SPRING - Cooking Top Arm	6.2261
SPRING - Latch Pin Operating	6.2262
SPRING - Link Wire	14.226
SPRING - Oven Door Counterbalance	8.2261
SPRING - Oven Door Latch	8.226
SPRING - Switch	14.2261
SPRING - Top Cover	6.226
SPROCKET - Cover Operating	6.342
STARTER - Fluorescent Lamp	13.230
STOP - Cover Adjusting Screw	6.235
STOP - Door Arm	8.235
STRAP, GROUND	13.386
STRIKE - Door	16.349
SUPPORT - Bake Element Unit	13.321
SUPPORT - Center Carriage	8.3211
SUPPORT - Control Panel Glass	1.3211
SUPPORT - Cooking Top	6.321
SUPPORT - Cooking Top Latch Arm	6.3212
SUPPORT, HANDLE - Cooking Top	6.3211
SUPPORT, HANDLE - Oven Door	8.321
SUPPORT - Heat Minder Sensor	4.321
SUPPORT - Light Diffusion	1.321
SUPPORT - Surface Unit Large	4.3212
SUPPORT - Surface Unit Small	4.321
SUPPORT - Trim	16.321
SWITCH - Blower Operating	14.396
SWITCH, CONTROL - Broiler	3.396
SWITCH, DISCONNECT - Surface Units	3.3961
SWITCH - Rotisserie	14.3961
SWITCH, SELECTOR - Lamp	3.403
SWITCH, SURFACE UNIT - Heat Minder	3.285
SWITCH, SURFACE UNIT - Infinite Heat	3.2852
SWITCH, SURFACE UNIT - Speed Heat	3.2851


ALPHABETICAL INDEX - Continued

DESCRIPTION	CODE
TERMINAL, ELECTRIC	13.329
THERMOSTAT - Oven	3.242
TOP - Cooking	6.258
TRANSFORMER	13.251
TRIM, BOTTOM - Range	7.2532
TRIM - Condensation	7.2534
TRIM - Cooking Top Housing	6.253
TRIM, FRONT - Hood	14.2531
TRIM - Glass Control Panel End	1.2532
TRIM - Hood Housing	14.253
TRIM, LOWER - Lamp Housing	1.253
TRIM, SIDE - Lower	7.2531
TRIM, SIDE - Lower - Base Cabinet	16.2531
TRIM, SIDE - Upper	7.253
TRIM, SIDE - Upper - Base Cabinet	16.253
TRIM, TOP - Lamp Housing	1.2531
TRIM, TOP - Range	7.2533
UNIT, SURFACE - 6 Inch	4.266
UNIT, SURFACE - 8 Inch	4.2661


DESCRIPTION	CODE
WASHER - Broil Stop Catch	8.2796
WASHER - Cable Pulley	8.2793
WASHER - Conduit Retainer	13.2793
WASHER - Control Knob Spacer	3.279
WASHER - Cooking Top Cable Pulley	6.2792
WASHER - Cooking Top Support	6.279
WASHER - Door Strike	16.279
WASHER - Flair Range	16.2791
WASHER - Gears And Motor - Rotisserie	14.279
WASHER - Lower Arm Bracket	8.2791
WASHER - Lower Torque Shaft Bearing	8.279
WASHER - Oven Door Handle	8.2797
WASHER - Oven Door Release Arm	8.2794
WASHER - Oven Door Spring Adjusting	8.2795
WASHER - Roller	6.2791
WASHER - Shelf Guide	10.279
WASHER - Terminal	13.2792
WASHER - Temperature Probe Receptacle	13.279
WASHER - Top Spacer	1.279
WASHER - Trim - Vent Hood	14.2791
WHEEL, BLOWER	14.341
WRENCH - Glider Button Adjusting	16.282


GM
MARK OF EXCELLENCE


1960 PRODUCT VIEWS

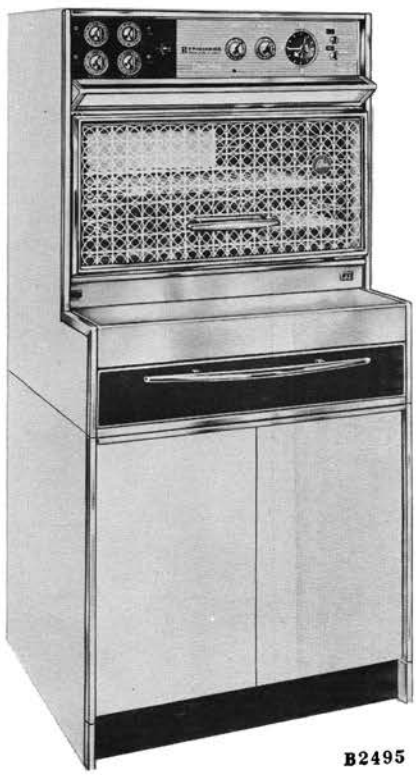


Model RCDB-630 with B-30 Base Cabinet.

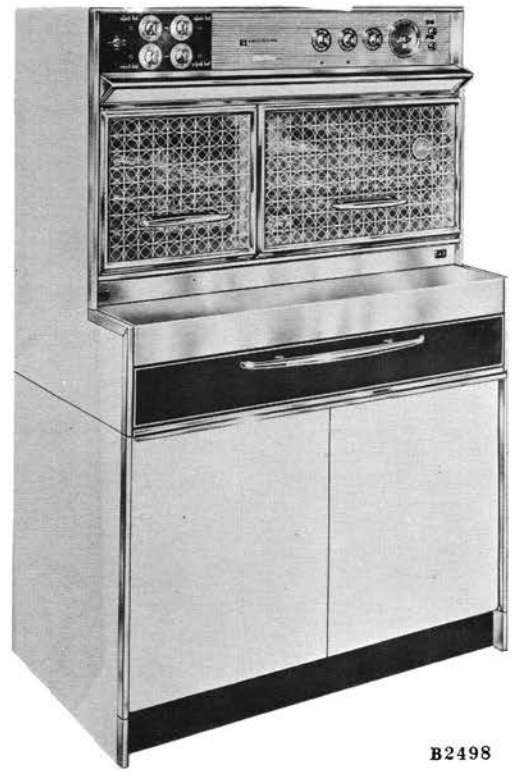

Model RCDB-640 with B-40 Base Cabinet.

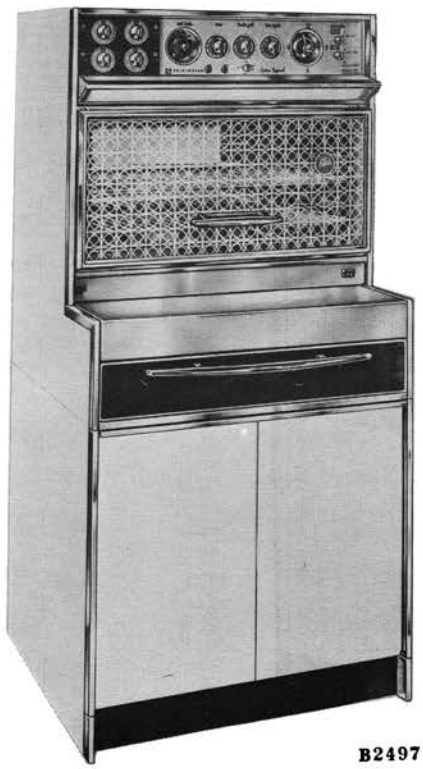


Model RCIB-635 with B-30 Base Cabinet.

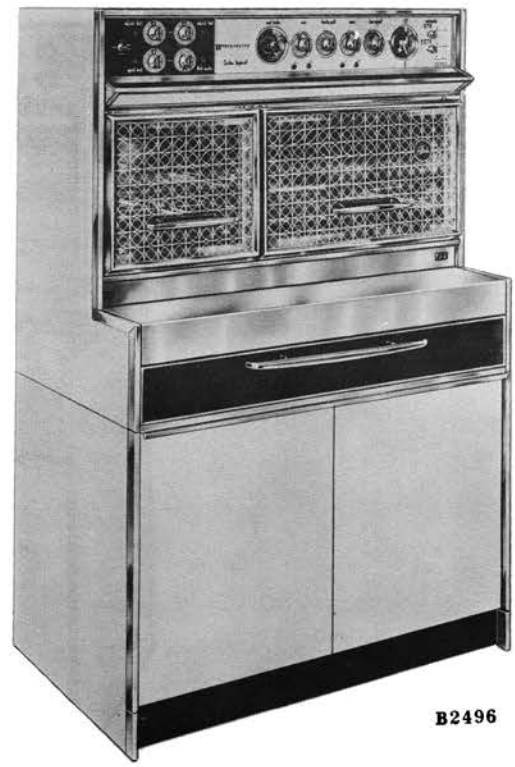


Model RCIB-645 with B-40 Base Cabinet.

1961 PRODUCT VIEWS

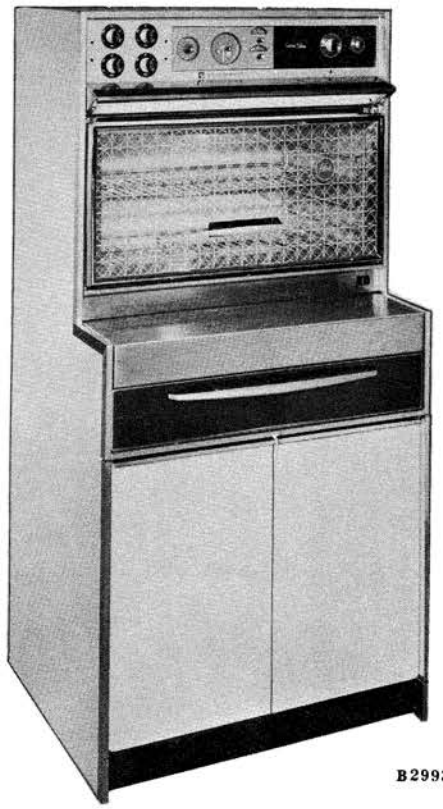


Model RCDB-630-1 with B-30 Base Cabinet.

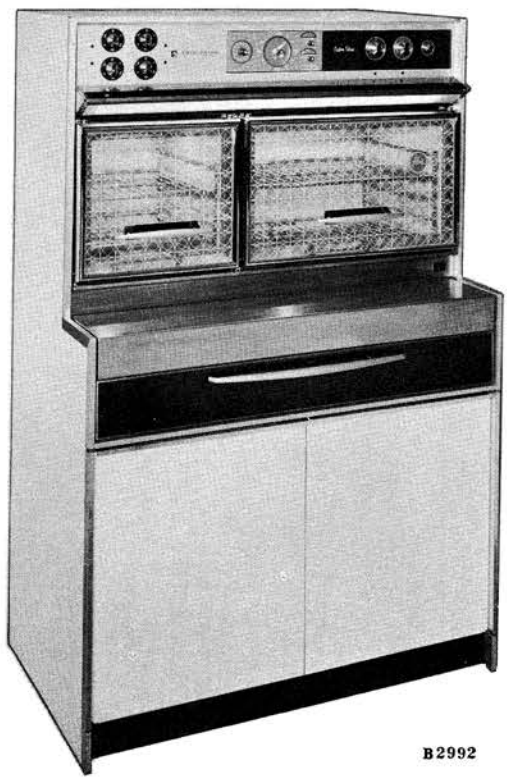

Model RCDB-640-1 with B-40 Base Cabinet.

CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS

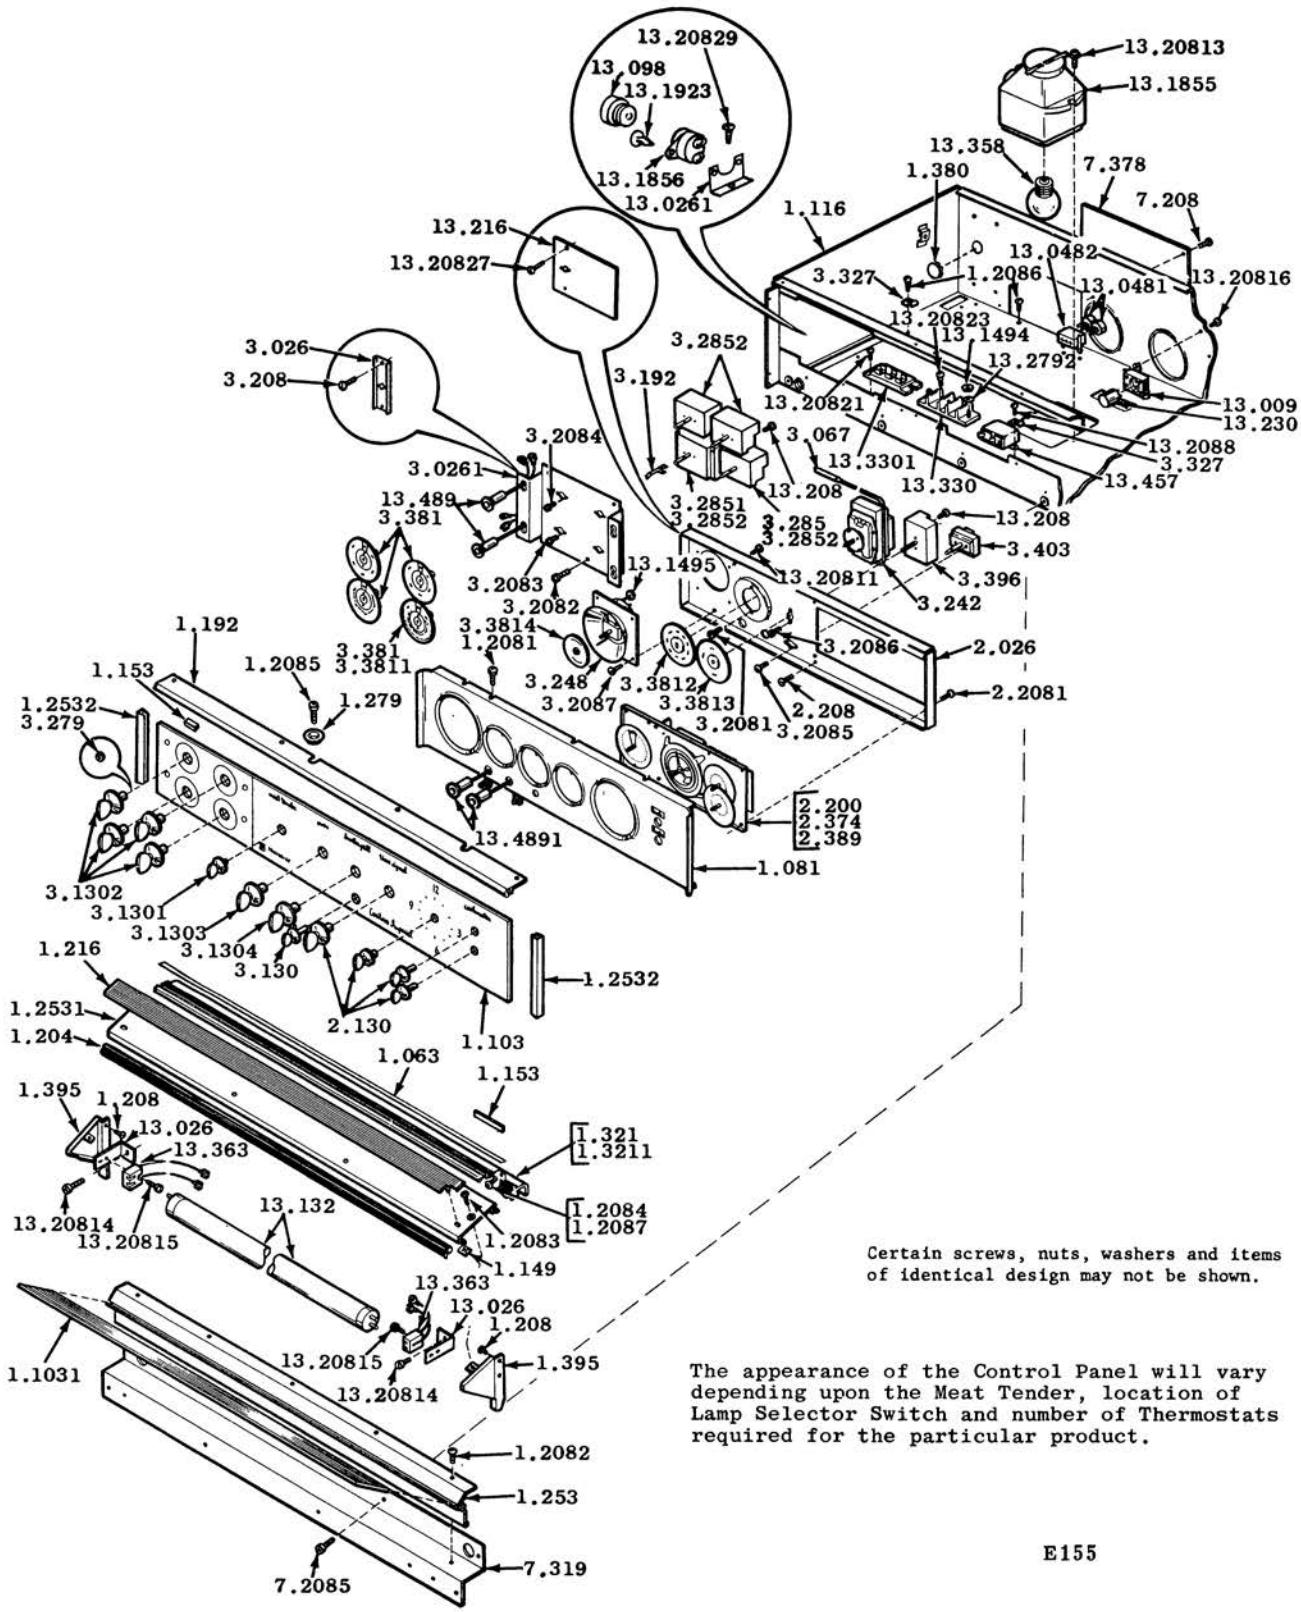

Certain screws, nuts, washers and items of identical design may not be shown.


The appearance of the Control Panel will vary depending upon the Meat Tender, location of Lamp Selector Switch and number of Thermostats required for the particular product.

E155

Model RCIB-635.

This illustration may also be used for the selection of parts for Models RCDB-630, RCDB-630-1, RCDB-640, RCDB-640-1 and RCIB-645, but all parts shown are not used on these models.

COOKING TOP, SURFACE UNITS AND PARTS

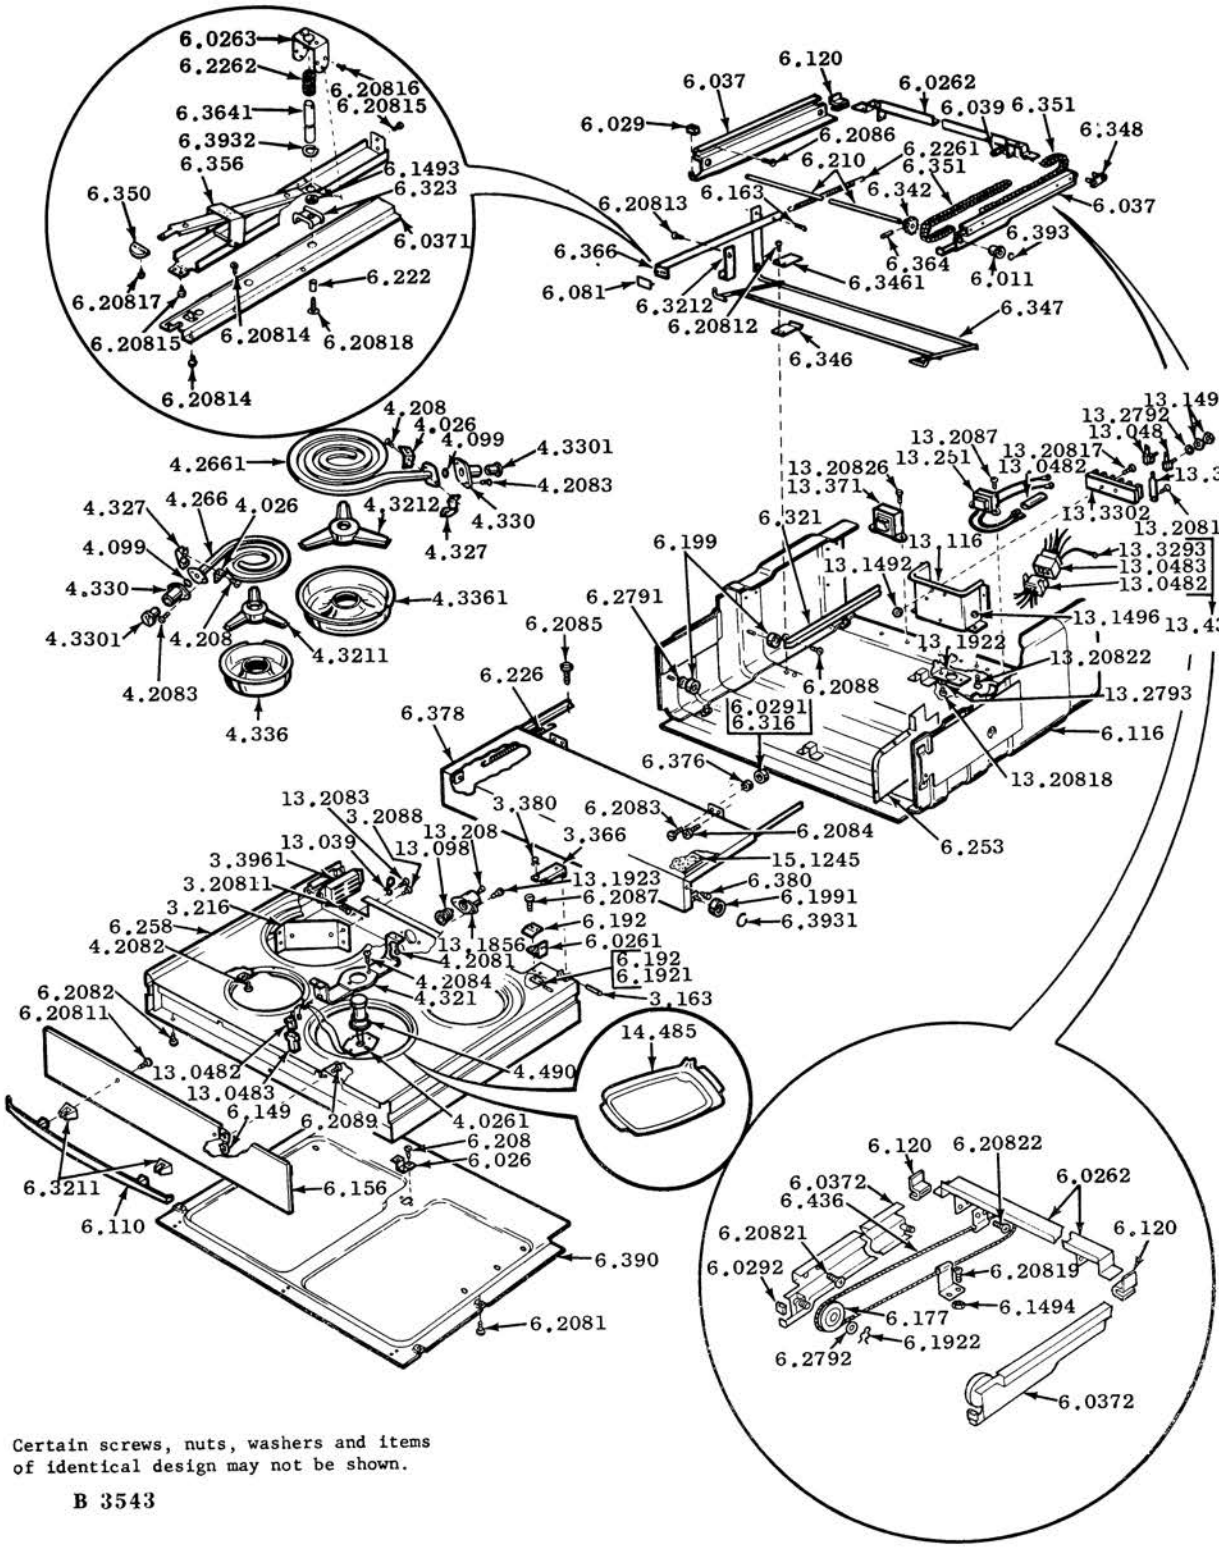

Certain screws, nuts, washers and items of identical design may not be shown.


B 3543

Model RCIB-635.

This illustration may also be used for the selection of parts for models RCDB-630, RCDB-630-1, RCDB-640, RCDB-640-1 and RCIB-645, but all parts shown are not used on these models.

Models RCDB-630, RCDB-630-1, RCDB-640 and RCDB-640-1 appear the same as models RCIB-635 and RCIB-645, except that they have no speed heat or heat minder unit.

OVEN DOORS AND ACTUATING PARTS

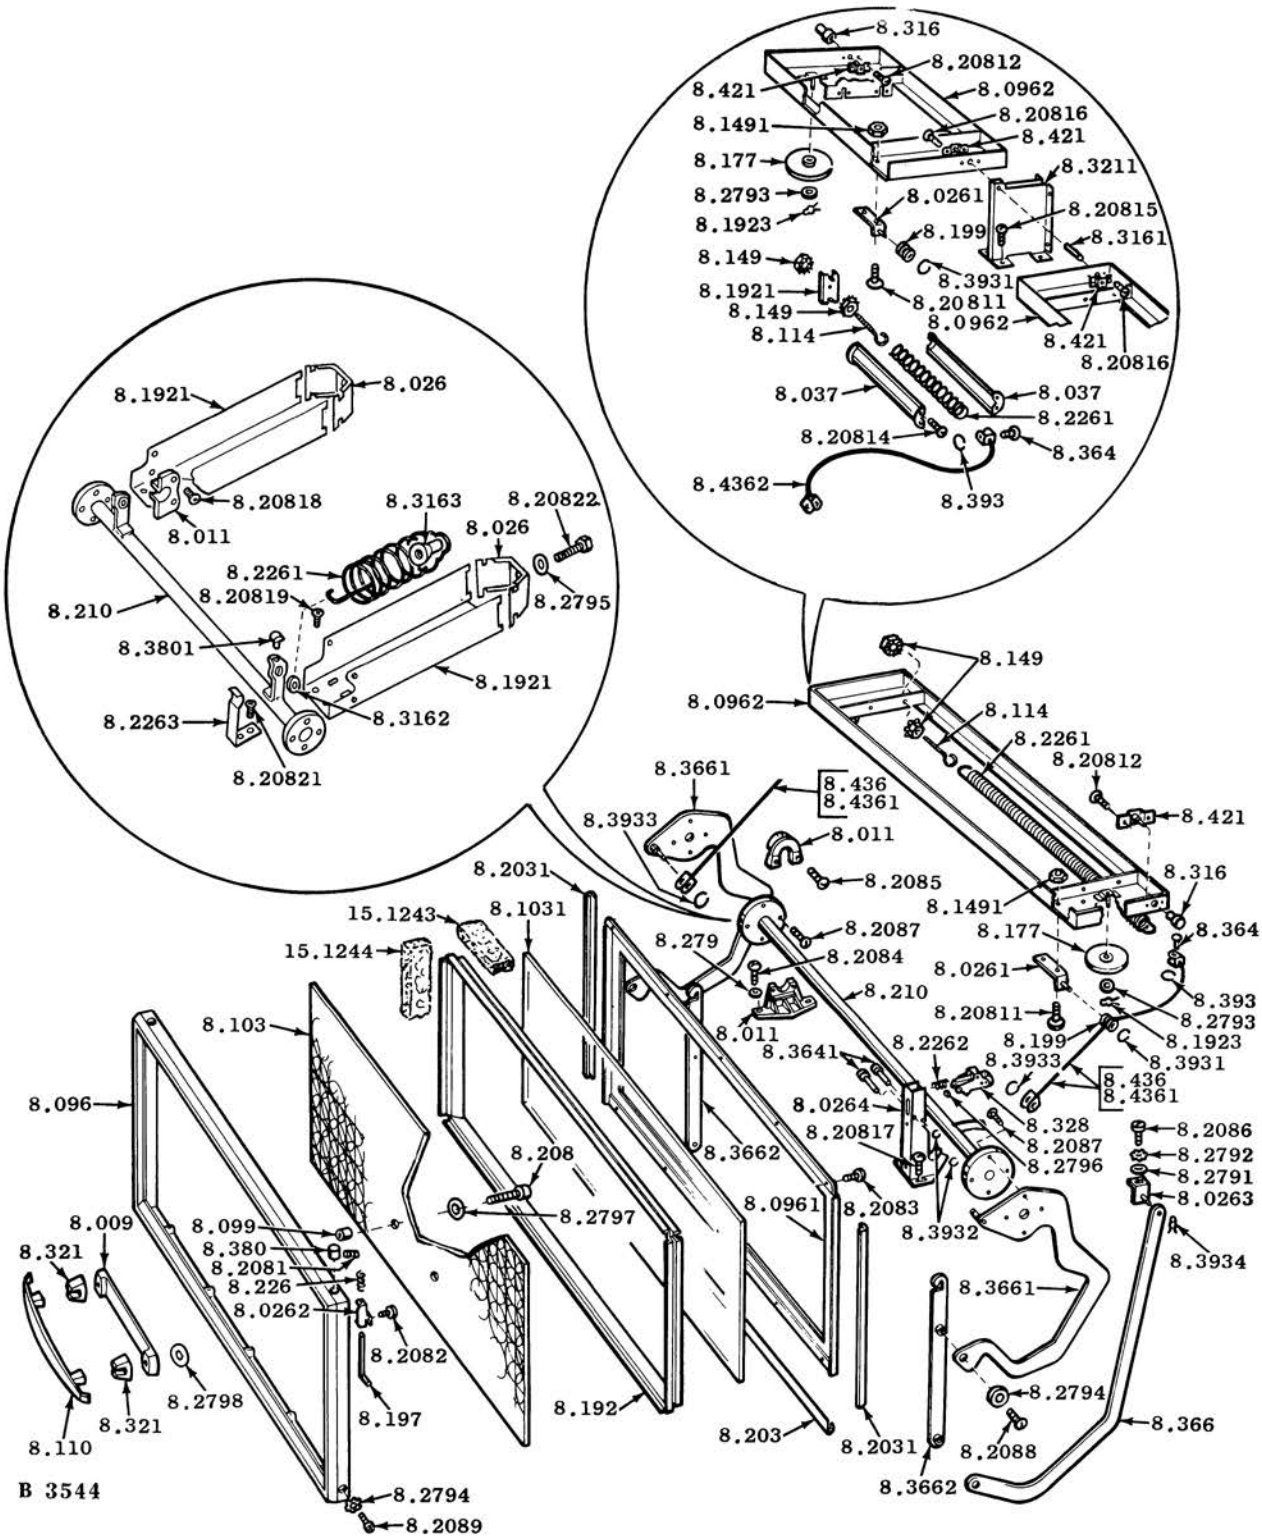


Certain screws, nuts, washers and items of identical design may not be shown.

Model RCIB-635.

This illustration may also be used for the selection of parts for models RCDB-630, RCDB-630-1, RCDB-640, RCDB-640-1 and RCIB-645. but all parts shown are not used on these models. Models RCDB-640, RCDB-640-1 and RCIB-645 have two oven doors. Parts are similar for both doors except that the actuating parts for the small door are different. These are illustrated in the circle at the top of the page.

OVEN LINERS AND INTERIOR PARTS

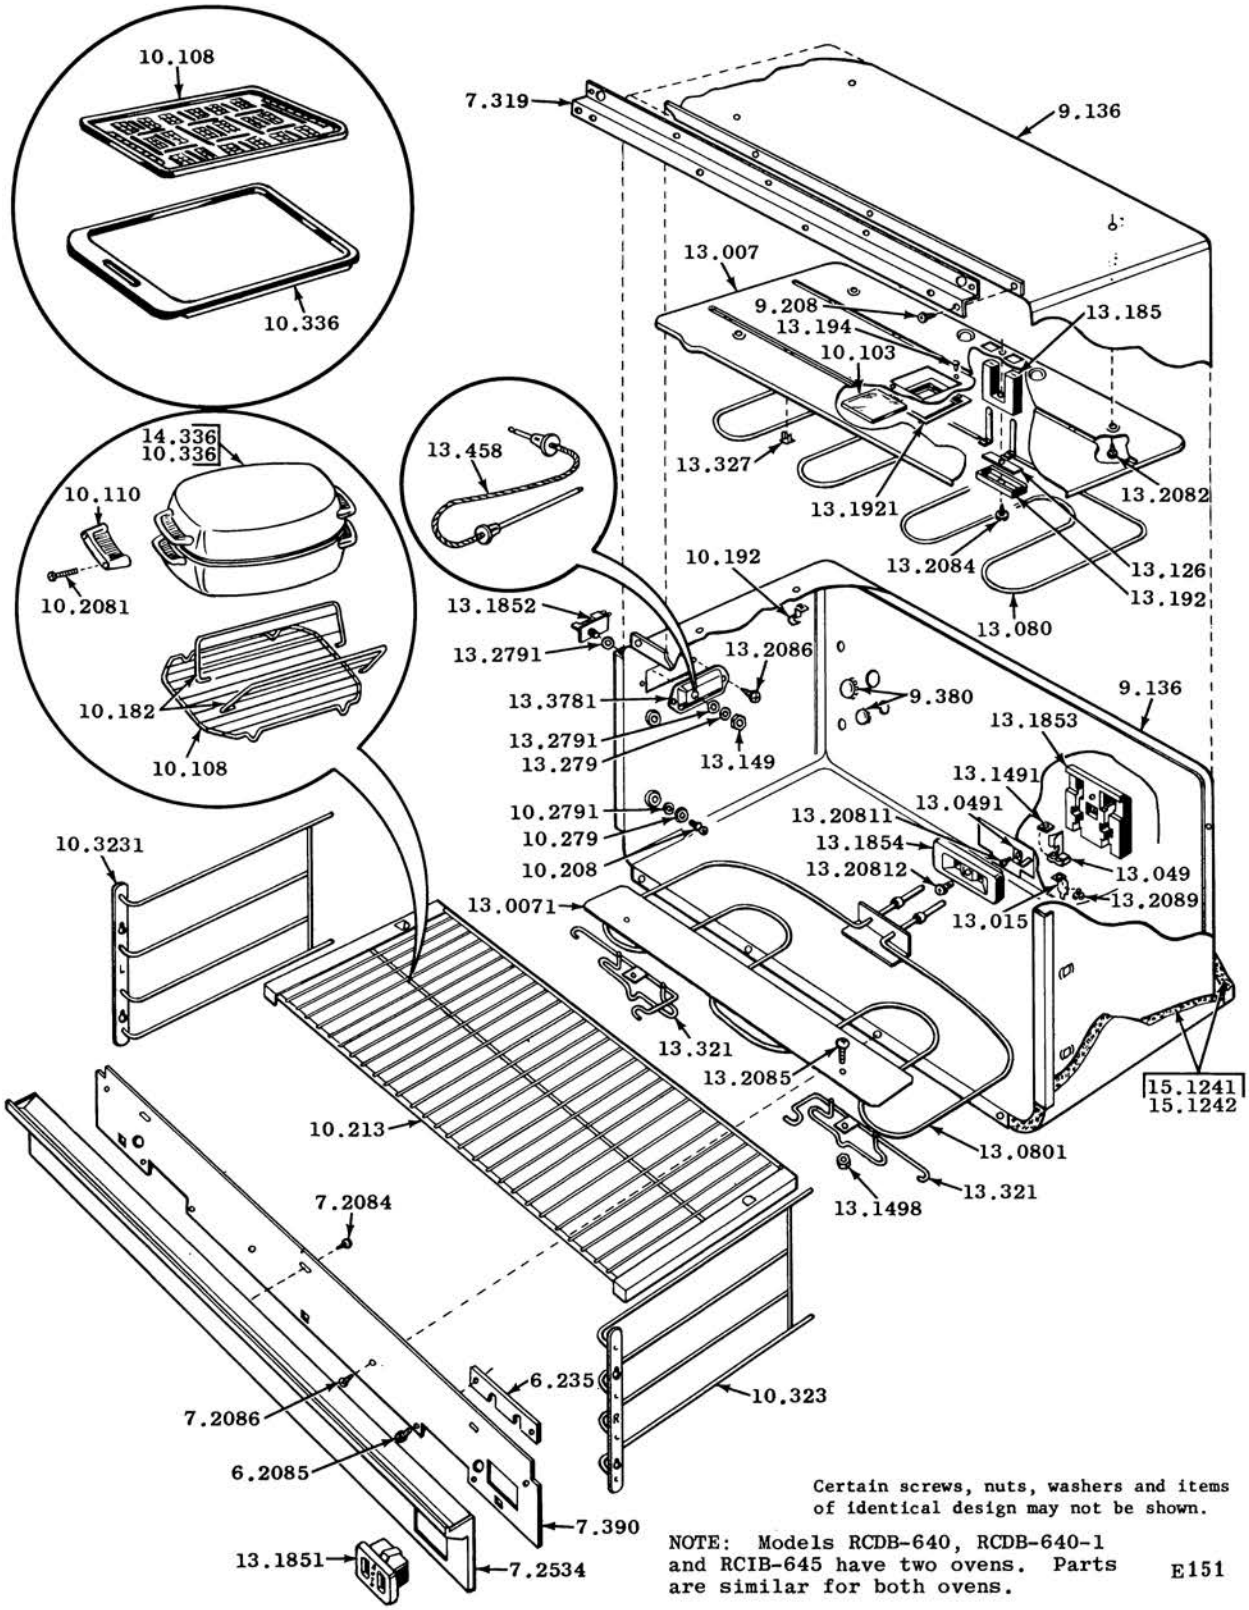

Certain screws, nuts, washers and items of identical design may not be shown.


NOTE: Models RCDB-640, RCDB-640-1 and RCIB-645 have two ovens. Parts are similar for both ovens.

E151

Model RCIB-635.

This illustration may be used for the selection of parts for models RCDB-630, RCDB-630-1, RCDB-640, RCDB-640-1 and RCIB-645, but all parts shown are not used on these models.

PANELS, TRIMS AND PARTS

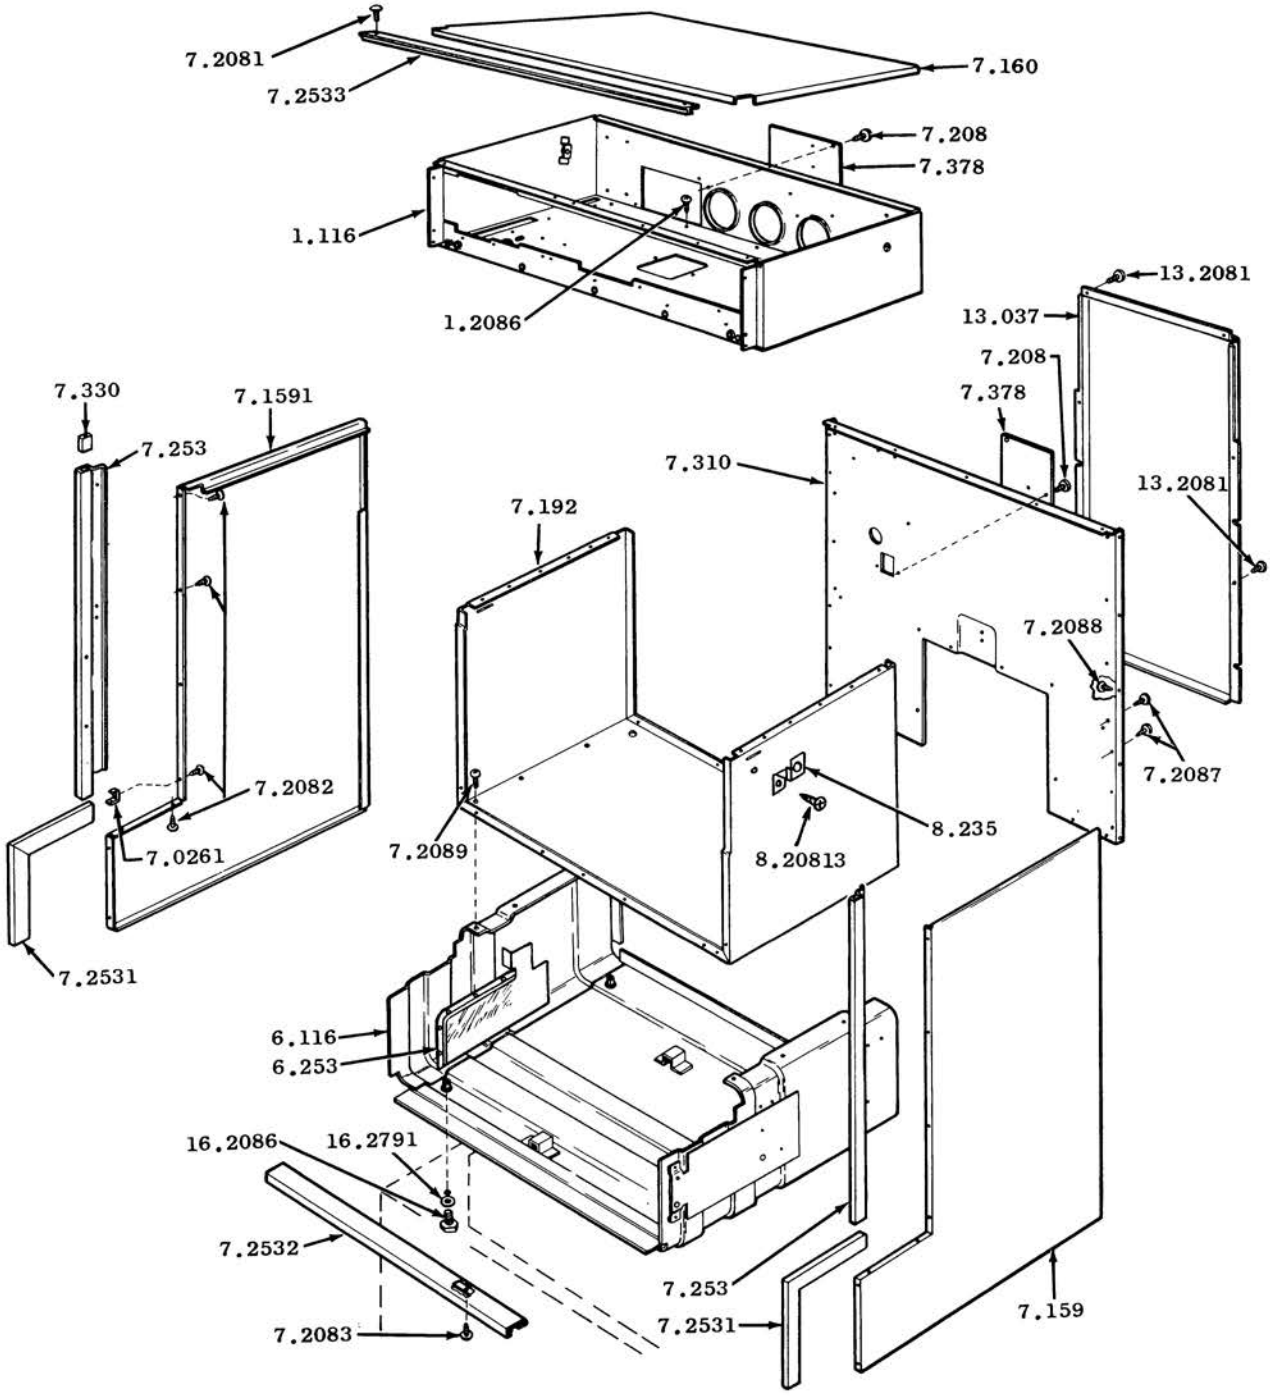


Certain screws, nuts, washers and items of identical design may not be shown.


Model RCIB-635.

This illustration may also be used for the selection of parts for models RCDB-630, RCDB-630-1, RCDB-640, RCDB-640-1 and RCIB-645, but all parts shown are not used on these models.

BASE CABINETS AND PARTS

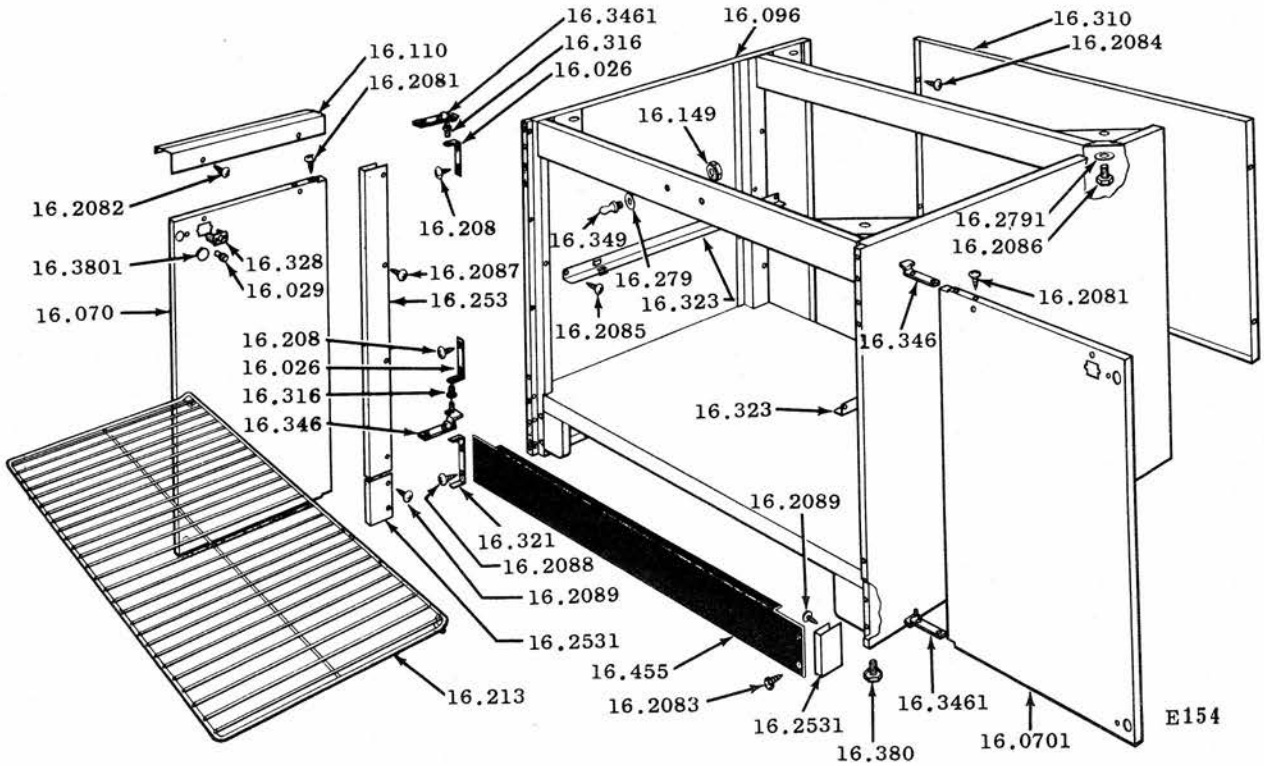

Model Numbers 5430485 and 5930486.

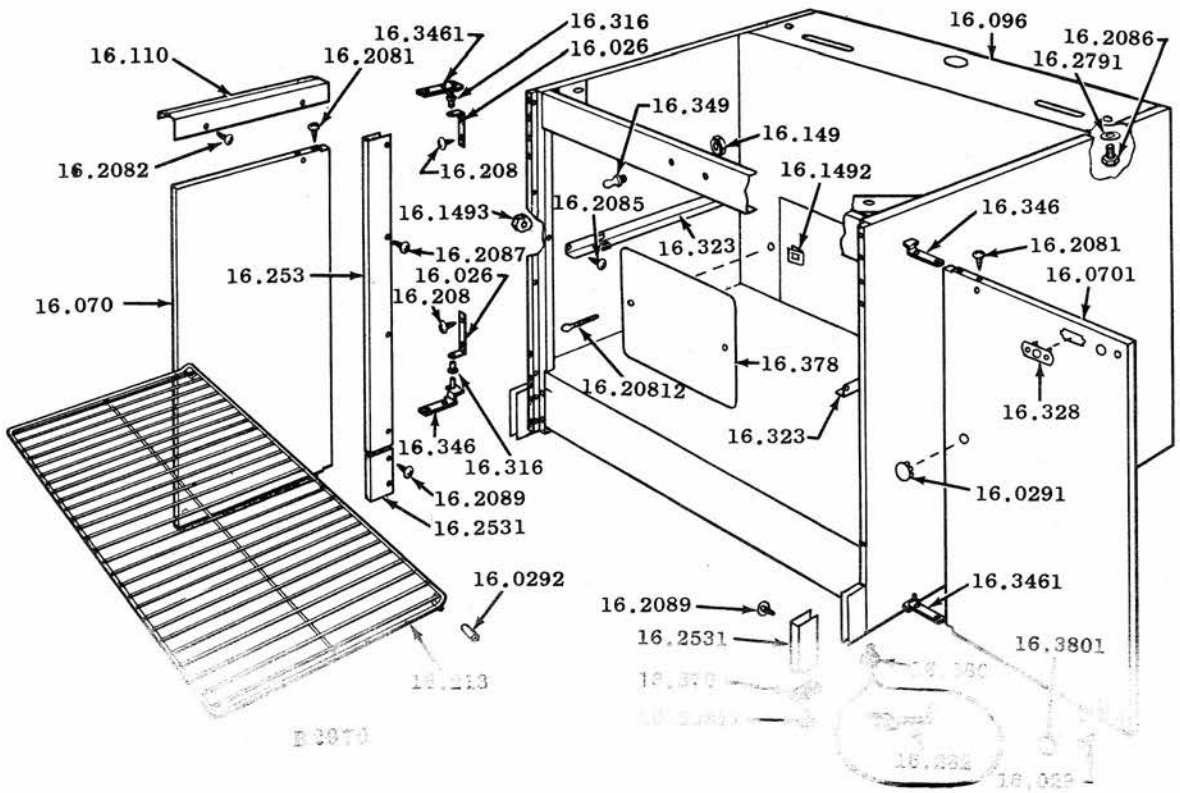


Certain screws, nuts, washers and items of identical design may not be shown.

Model Numbers 5880108 and 5960108.


Use B-30 Base Cabinet illustrated with models RCDB-630, RCDB-630-1 and RCIB-635.
Use B-40 Base Cabinet with models RCDB-640, RCDB-640-1 and RCIB-645.
The B-40 Base Cabinet appears the same as the B-30 Base Cabinet except that it has two shelves and is wider.

14.113 VENT HOOD - ACCESSORY

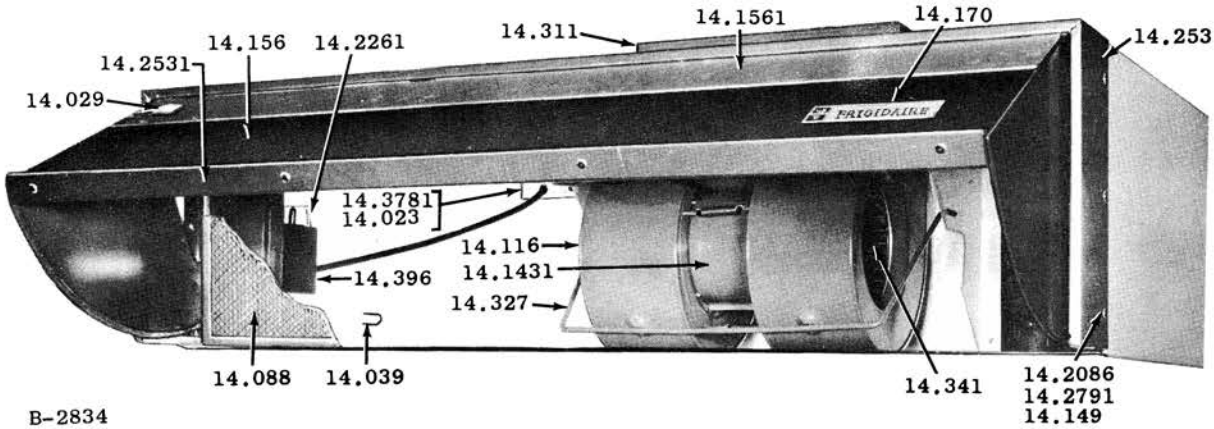

Models RCDB-630-2, RCDB-640-2, RCIB-635-2 and RCIB-645-2.

14.428 ROTISSERIE - ACCESSORY

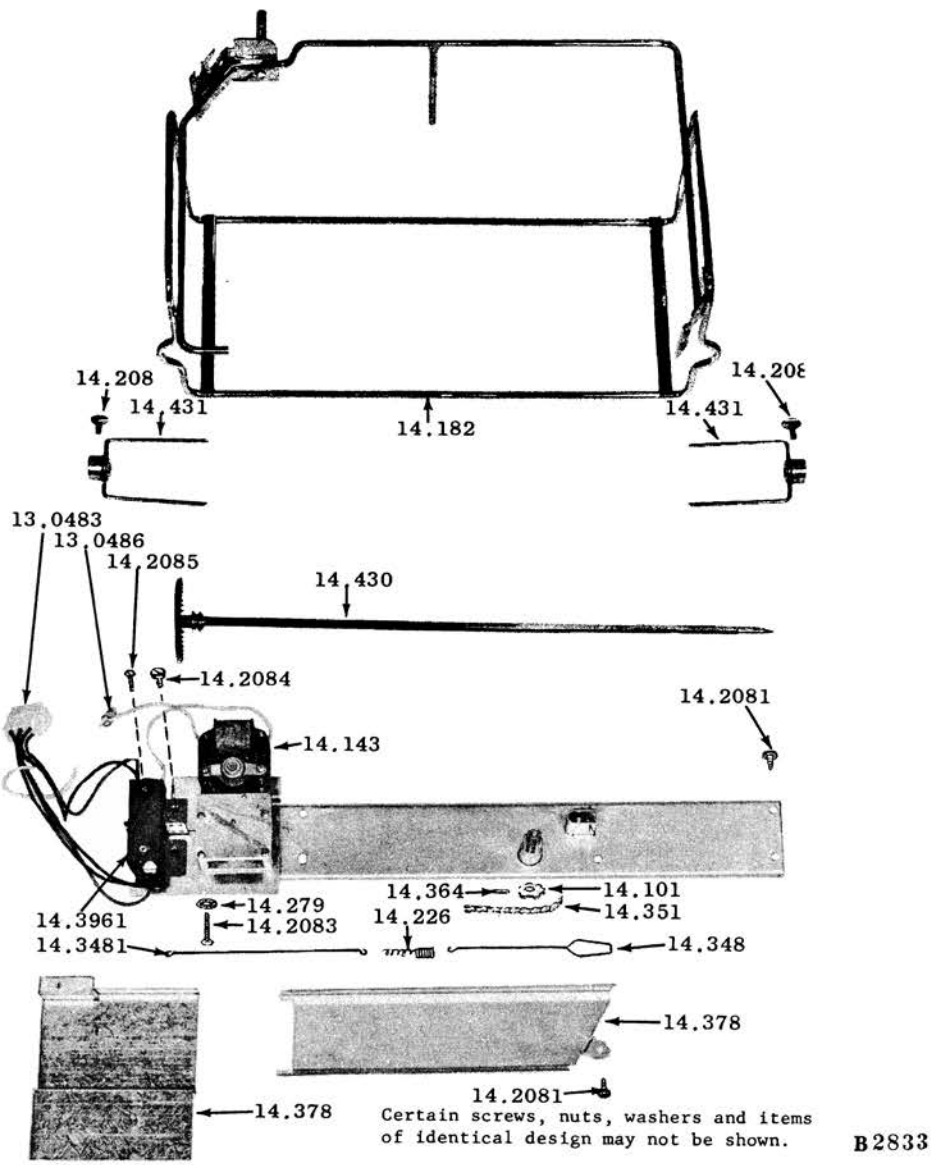


Models RCDB-630, RCDB-630-1, RCDB-640, RCDB-640-1, RCIB-635 and RCIB-645.


ELECTRICAL TERMINALS AND CONNECTORS



13.001



13.0483



13.0482



13.0484



13.0485



13.0486



13.0487



13.1262



13.208



13.3293



13.3294



13.3295



13.3296



13.3297



13.3298



13.3299



13.394



B-1497

13.1262

LEAD WIRE CHART

COLORS	PLASTIC INSULATED STRANDED SIZE	PLASTIC INSULATED STRANDED PIECE NO.	ASBESTOS INSULATED STRANDED SIZE	ASBESTOS INSULATED STRANDED PIECE NO.	ASBESTOS INSULATED SOLID SIZE	ASBESTOS INSULATED SOLID PIECE NO.	BARE SOLID SIZE	BARE SOLID PIECE NO.
Bare	--	-------	--	-------	--	-------	8	5874585
Bare	--	-------	--	-------	--	-------	12	5874561
Black	--	-------	--	-------	12	5874562	--	-------
Black	14	5873791	14	5417736	14	5873614	--	-------
†Black	16	5874583	--	-------	--	-------	--	-------
§Black	16	5874584	--	-------	--	-------	--	-------
Black-Red	14	5875278	--	-------	--	-------	--	-------
Black-White	14	5875271	--	-------	--	-------	--	-------
Blue	14	5873795	14	5873026	14	5873617	--	-------
Blue-White	18	5875283	--	-------	--	-------	--	-------
Brown	14	5874230	--	-------	14	5873619	--	-------
Brown-White	14	5875279	--	-------	--	-------	--	-------
Gray	14	5875276	--	-------	--	-------	--	-------
Green	14	5874238	14	5417738	14	5873615	--	-------
Orange	14	5873794	--	-------	--	-------	--	-------
Orange-Black	14	5875275	--	-------	--	-------	--	-------
Orange-White	14	5875272	--	-------	--	-------	--	-------
Pink	18	5874237	14	5874184	--	-------	--	-------
Purple	14	5874231	14	5874185	--	-------	--	-------
Red	14	5873793	14	5417737	14	5873616	--	-------
Red	--	-------	--	-------	12	5874563	--	-------
Red-Green	14	5875277	--	-------	--	-------	--	-------
Red-White	14	5875270	--	-------	--	-------	--	-------
Tan	14	5875185	--	-------	--	-------	--	-------
White	14	5873792	14	5417735	14	5873620	--	-------
White-Black	14	5875274	--	-------	--	-------	--	-------
White-Blue	18	5875282	--	-------	--	-------	--	-------
White-Brown	18	5875280	--	-------	--	-------	--	-------
White-Red	14	5875273	--	-------	--	-------	--	-------
White-Yellow	18	5875281	--	-------	--	-------	--	-------
Yellow	14	5874229	14	5417739	14	5873618	--	-------
Yellow-Black	14	5875269	--	-------	--	-------	--	-------

† Two conductor - ribbed.

§ Three conductor - ribbed.

NOTE: Bulk wire is available by the foot.

GROUP 1 CONTROL PANELS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	1.063 DEFLECTOR, PLASTIC-CONTROL PANEL SUPPORT			
1.063	RCDB-630 RCIB-635	6568796	1	
1.063	RCDB-640 RCIB-645	6568797	1	
	1.081 ESCUTCHEON-COOKMASTER AND THERMOSTAT			
1.081	RCIB-635	6567598	1	
1.081	RCIB-645	6567599	1	
	1.103 GLASS-CONTROL PANEL			
1.103	RCDB-630	6564598	1	
1.103	RCDB-640	6564599	1	
1.103	RCIB-635	6567595	1	
1.103	RCIB-645	6567597	1	
1.103	RCDB-630-1	6569147	1	
1.103	RCDB-640-1	6569151	1	
	1.1031 GLASS-LAMP HOUSING			
1.1031	RCDB-630 RCIB-635 RCDB-630-1	6567583	1	
1.1031	RCDB-640 RCIB-645 RCDB-640-1	6567584	1	
	1.116 HOUSING-CONTROL			
1.116	RCDB-630 RCIB-635	§6564388	1	
1.116	RCDB-630-1	§7521459	1	
1.116	RCIB-635 RCDB-630-1	#7522325	1	
1.116	RCDB-640 RCIB-645 RCDB-640-1	§7521444	1	
1.116	RCIB-645 RCDB-640-1	#7522358	1	
	1.149 NUT			
1.149	RCDB-630 RCIB-635 RCDB-630-1	5438563	7	SPECIAL-LAMP HOUSING SHIELD
1.149	RCDB-640 RCIB-645 RCDB-640-1	5438563	9	SPECIAL-LAMP HOUSING SHIELD
1.1491	RCDB-630-1 RCDB-640-1	5433660	2	LAMP HOUSING TOP TRIM
	1.153 PAD-CONTROL PANEL GLASS			
1.153	RCDB-630 RCDB-630-1	6567539	2	SPACER
1.153	RCDB-640 RCDB-640-1	6567539	3	SPACER
1.153	RCIB-635 RCIB-645	6567539	1	SPACER
1.153	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6569026	2	
	1.192 RETAINER, TOP-CONTROL PANEL GLASS			
1.192	RCDB-630 RCIB-635 RCDB-630-1	6567863	1	
1.192	RCDB-640 RCIB-645 RCDB-640-1	6567864	1	
	1.204 SEAL, RUBBER-LAMP HOUSING TOP TRIM			
1.204	RCDB-630 RCIB-635 RCDB-630-1	6568460	1	
1.204	RCDB-640 RCIB-645 RCDB-640-1	6568461	1	
	1.208 SCREW			
1.208	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	4	LAMP HOUSING END
1.2081	RCIB-635 RCIB-645	5435825	2	COOKMASTER & THERMOSTAT ESCUTCHEON
1.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	5	LAMP HOUSING LOWER TRIM
1.2083	RCDB-630 RCDB-640 RCIB-635 RCIB-645	6546813	2	LAMP HOUSING TOP TRIM
1.2083	RCDB-630-1 RCDB-640-1	5436439	2	LAMP HOUSING TOP TRIM

§Use when Oven Door Spring is mounted parallel with the Control Panel. Refer to page 5 for illustration.
#Use when Oven Door Spring is mounted parallel with the Side Panels. Refer to page 5 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	1.208 SCREW - Continued			
1.2084	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5435825	5	LIGHT DIFFUSION SUPPORT
1.2085	RCDB-630 RCIB-635 RCDB-630-1	5435825	4	TOP SPACER WASHER
1.2085	RCDB-640 RCIB-645 RCDB-640-1	5435825	5	TOP SPACER WASHER
1.2086	RCDB-630 RCIB-635 RCDB-630-1	5435827	8	CONTROL HOUSING
1.2086	RCDB-640 RCIB-645 RCDB-640-1	5435827	13	CONTROL HOUSING
1.2087	RCDB-630-1	5435825	3	CONTROL PANEL GLASS SUPPORT
1.2087	RCDB-640-1	5435825	5	CONTROL PANEL GLASS SUPPORT
	1.216 SHIELD-LAMP HOUSING			
1.216	RCDB-630 RCIB-635 RCDB-630-1	6567865	1	
1.216	RCDB-640 RCIB-645 RCDB-640-1	6567866	1	
	1.253 TRIM,LOWER-LAMP HOUSING			
1.253	RCDB-630 RCIB-635 RCDB-630-1	6567590	1	
1.253	RCDB-640 RCIB-645 RCDB-640-1	6567591	1	
	1.2531 TRIM,TOP-LAMP HOUSING			
1.2531	RCDB-630 RCIB-635 RCDB-630-1	6567592	1	
1.2531	RCDB-640 RCIB-645 RCDB-640-1	6567593	1	
	1.2532 TRIM-GLASS CONTROL PANEL END			
1.2532	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567585	2	
	1.279 WASHER			
1.279	RCDB-630 RCIB-635 RCDB-630-1	6567860	2	CUP-TOP SPACER
1.279	RCDB-640 RCIB-645 RCDB-640-1	6567860	3	CUP-TOP SPACER
	1.321 SUPPORT-LIGHT DIFFUSION			
1.321	RCDB-630 BEF SER NO 37C57104 RCIB-635 BEF SER NO 38C13090	6590506	1	
1.321	RCDB-630 AFT SER NO 37C57103 RCIB-635 AFT SER NO 38C13089	6568744	1	
1.321	RCDB-640 BEF SER NO 37C58787 RCIB-645 BEF SER NO 38C14352	6590507	1	
1.321	RCDB-640 AFT SER NO 37C58786 RCIB-645 AFT SER NO 38C14351	6568746	1	
	1.3211 SUPPORT-CONTROL PANEL GLASS			
1.3211	RCDB-630-1	6568743	1	
1.3211	RCDB-640-1	6568745	1	
	1.380 BUTTON,PLUG-CONTROL HOUSING			
1.380	RCIB-635 RCDB-630-1	454243	2	1-1/4 INCH HOLE
1.380	RCIB-645 RCDB-640-1	454243	1	1-1/4 INCH HOLE
1.380	RCDB-630 RCIB-635 RCDB-630-1	432269	1	LEFT REAR-7/8 INCH HOLE
	1.395 END-LAMP HOUSING			
1.395	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6569589	1	LH
1.395	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567586	1	RH

GROUP 2 COOK-MASTERS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	2.026 BRACKET-COOKMASTER & THERMOSTAT			
2.026	RCDB-630	6564571	1	
2.026	RCDB-640	6564570	1	
2.026	RCIB-635 BEFORE SER NO 38C45632	6567558	1	
2.026	RCIB-635 AFTER SER NO 38C45631	6568833	1	
2.026	RCIB-645	6567559	1	
2.026	RCDB-630-1 RCDB-640-1	6569122	1	
	2.130 KNOB,CONTROL-COOKMASTER&TIME SIGNAL			
2.130	RCDB-630 RCDB-640	6564479	1	TIME SIGNAL 9/32 INCH SHANK 1-1/4 IN DIA
2.130	RCDB-630 RCDB-640	6564480	3	COOKMASTER&TIME SET 9/32 INCH SHANK 3/4 INCH DIA
2.130	RCIB-635 RCIB-645	6564670	1	TIME SIGNAL 7/8 INCH SHANK 1-1/4 INCH DIA
2.130	RCIB-635 RCIB-645	6564682	2	COOKMASTER SET 7/8 INCH SHANK-3/4 INCH DIA
2.130	RCIB-635 RCIB-645	6564691	1	TIME SET
2.130	RCDB-630-1 RCDB-640-1	7520744	4	COOKMASTER SET,TIME SET & TIME SIGNAL
	2.200 ROTOR-COOKMASTER & TIME SIGNAL			
2.200	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5878726	1	60 CYCLE 115 VOLT
	2.208 SCREW			
2.208	RCDB-630	5435825	4	COOKMASTER & THERMOSTAT BRACKET
2.208	RCDB-640 RCIB-635 RCIB-645	5435825	6	COOKMASTER & THERMOSTAT BRACKET
2.208	RCDB-630-1	5435825	4	COOKMASTER BRACKET
2.208	RCDB-640-1	5435825	6	COOKMASTER BRACKET
2.2081	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	4	COOKMASTER & TIME SIGNAL
	2.374 COOKMASTER & TIME SIGNAL			
2.374	RCDB-630 RCDB-640	6564463	1	GE-60 CYCLE
2.374	RCIB-635 RCIB-645	6563663	1	GE-60 CYCLE
2.374	RCDB-630-1 RCDB-640-1	7521430	1	GE-60 CYCLE
	2.389 COIL,SOLENOID-COOKMASTER & TIME SIGNAL			
2.389	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5878727	1	60 CYCLE 115 VOLT

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 3 SWITCHES AND PARTS

	3.026 BRACKET-LAMP SELECTOR SWITCH			
3.026	RCDB-640 BEF SER NO 38C29643 RCIB-645 BEF SER NO 38C85552	6567554	1	
3.026	RCDB-640 AFT SER NO 38C29642 RCIB-645 AFT SER NO 38C85551	6568832	1	
	3.0261 BRACKET-SWITCH			
3.0261	RCDB-630 RCDB-640 RCIB-635 RCIB-645	6567555	1	
3.0261	RCDB-630-1 RCDB-640-1	6569149	1	
	3.0262 BRACKET-THERMOSTAT			
3.0262	RCDB-630-1 RCDB-640-1	6569123	1	
	3.067 DIASTAT-OVEN THERMOSTAT			
3.067	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592306	AR	
	3.130 KNOB,CONTROL-LAMP SELECTOR SWITCH			
3.130	RCDB-630 RCDB-640 RCIB-635 RCIB-645	6564671	1	
3.130	RCDB-630-1 RCDB-640-1	6564480	1	
	3.1301 KNOB,CONTROL-MEAT TENDER			
3.1301	RCIB-635 RCIB-645	6564682	1	7/8 INCH SHANK 3/4 IN DIA
	3.1302 KNOB,CONTROL-SURFACE UNITS			
3.1302	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564670	4	7/8 INCH SHANK 1-1/4 IN DIA
	3.1303 KNOB,CONTROL-OVEN THERMOSTAT			
3.1303	RCDB-630 RCDB-630-1	6564479	1	9/32 INCH SHANK 1-1/4 IN DIA
3.1303	RCIB-635	6564670	1	7/8 INCH SHANK 1-1/4 IN DIA
3.1303	RCDB-640 RCDB-640-1	6564479	2	9/32 INCH SHANK 1-1/4 IN DIA
3.1303	RCIB-645	6564670	2	7/8 INCH SHANK 1-1/4 IN DIA
	3.1304 KNOB,CONTROL-BROILER CONTROL			
3.1304	RCIB-635 RCIB-645	6564670	1	7/8 INCH SHANK 1-1/4 IN DIA
	3.163 PIN,COTTER-SWITCH OPERATING ARM			
3.163	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	-------	2	1-1/8X3/32 PURCHASE LOCALLY
	3.192 RETAINER,SPRING-CONTROL KNOB			
3.192	ALL MODELS	6592441	AR	13/16 INCHES LONG
3.192	ALL MODELS	6568159	AR	9/16 INCHES LONG
	3.208 SCREW			
3.208	RCDB-640 RCIB-645	5435825	2	LAMP SELECTOR SWITCH BRACKET
3.2081	RCDB-630 RCIB-635 RCDB-630-1	6575221	2	OVEN THERMOSTAT
3.2081	RCDB-640 RCIB-645 RCDB-640-1	6575221	4	OVEN THERMOSTAT
3.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	3	SWITCH BRACKET
3.2083	RCIB-635 RCIB-645	6575221	2	SPEED HEAT SWITCH

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	3.208 SCREW - Continued			
3.2084	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	5435111	8	INFINITE HEAT SURFACE UNIT SWITCH
3.2084	RCIB-635 RCIB-645	5435111	6	INFINITE HEAT SURFACE UNIT SWITCH
3.2085	RCDB-630 BEF SER NO 38C44457 RCDB-640 BEF SER NO 38C29643 RCIB-635 BEF SER NO 38C45632 RCIB-645 BEF SER NO 38C85552	5435111	2	LAMP SWITCH
3.2085	RCDB-630 AFT SER NO 38C44456 RCDB-640 AFT SER NO 38C29642 RCIB-635 AFT SER NO 38C45631 RCIB-645 AFT SER NO 38C85551	443940	1	LAMP SWITCH
3.2085	RCDB-630-1 RCDB-640-1	443940	1	LAMP SWITCH
3.2086	RCIB-635 RCIB-645	5435111	2	BROILER CONTROL SWITCH
3.2087	RCIB-635 RCIB-645	5435825	2	MEAT TEMPERATURE INDICATOR
3.2088	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5435825	4	DISCONNECT SWITCH SHIELD
3.2089	RCDB-630-1 RCDB-640-1	5435825	4	THERMOSTAT BRACKET
3.20811	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	4	DISCONNECT SWITCH
	3.216 SHIELD-DISCONNECT SWITCH			
3.216	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567706	2	
	3.242 THERMOSTAT-OVEN			
3.242	RCDB-630 RCIB-635	7521066	1	
3.242	RCDB-640 RCIB-645 RCDB-640-1	7521066	2	
3.242	RCDB-630-1	6564064	1	
	3.248 INDICATOR-MEAT TEMPERATURE			
3.248	RCIB-635 RCIB-645	6563868	1	12 VOLT
	3.279 WASHER			
3.279	RCDB-630 RCDB-640	6567692	9	CONTROL KNOB SPACER
3.279	RCIB-635 RCIB-645	6567692	8	CONTROL KNOB SPACER
3.279	RCDB-630-1	6567692	6	CONTROL KNOB SPACER
3.279	RCDB-640-1	6567692	7	CONTROL KNOB SPACER
	3.285 SWITCH,SURFACE UNIT-HEAT MINDER			
3.285	RCIB-635 RCIB-645	6563695	1	
	3.2851 SWITCH,SURFACE UNIT-SPEED HEAT			
3.2851	RCIB-635 RCIB-645	7522262	1	
	3.2852 SWITCH,SURFACE UNIT-INFINITE HEAT			
3.2852	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	7521242	2	SMALL 6 INCH
3.2852	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	7521243	2	LARGE 8 INCH
3.2852	RCIB-635 RCIB-645	7521242	1	SMALL 6 INCH
3.2852	RCIB-635 RCIB-645	7521243	1	LARGE 8 INCH
	3.327 CLAMP-THERMOSTAT CAPILLARY TUBE			
3.327	RCDB-630 RCIB-635 RCDB-630-1	5436867	2	
3.327	RCDB-640 RCIB-645 RCDB-640-1	5436867	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	3.366 ARM,CONTROL-SWITCH OPERATING			
3.366	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567150	2	
	3.380 BUTTON-SWITCH ARM GLIDE			
3.380	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567143	2	
	3.381 DIAL,SWITCH-INFINITE HEAT SURFACE UNIT			
3.381	RCDB-630 RCDB-640	6564672	4	
3.381	RCIB-635 RCIB-645	6564681	3	
3.381	RCDB-630-1 RCDB-640-1	7521559	4	
	3.3811 DIAL,SWITCH-HEAT MINDER			
3.3811	RCIB-635 RCIB-645	6564683	1	
	3.3812 DIAL-THERMOSTAT			
3.3812	RCDB-640	6567696	1	LEFT OVEN
3.3812	RCIB-645	6566785	1	LEFT OVEN
3.3812	RCDB-640-1	6564467	1	LEFT OVEN
3.3812	RCDB-630 RCDB-640	6567690	1	ROTISSERIE-RIGHT OVEN
3.3812	RCIB-635 RCIB-645	6566834	1	ROTISSERIE-RIGHT OVEN
3.3812	RCDB-630-1 RCDB-640-1	6564466	1	RIGHT OVEN
	3.3813 DIAL-BROILER CONTROL			
3.3813	RCIB-635 RCIB-645	6564120	1	
	3.3814 DIAL-MEAT TEMPERATURE INDICATOR			
3.3814	RCIB-635 RCIB-645	6566671	1	
	3.3815 DIAL-LAMP SELECTOR SWITCH			
3.3815	RCDB-630-1 RCDB-640-1	6569098	1	
	3.396 SWITCH,CONTROL-BROILER			
3.396	RCIB-635 RCIB-645	6562438	1	
	3.3961 SWITCH,DISCONNECT-SURFACE UNITS			
3.3961	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564289	2	
	3.403 SWITCH,SELECTOR-LAMP			
3.403	RCDB-630 BEF SER NO 38C44457 RCDB-640 BEF SER NO 38C29643 RCIB-635 BEF SER NO 38C45682 RCIB-645 BEF SER NO 38C85552	6564596	1	
3.403	RCDB-630 AFT SER NO 38C44456 RCDB-640 AFT SER NO 38C29642 RCIB-635 AFT SER NO 38C45681 RCIB-645 AFT SER NO 38C85551	7521101	1	
3.403	RCDB-630-1 RCDB-640-1	7521429	1	

GROUP 4 SURFACE UNITS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	4.026 BRACKET-SURFACE UNIT HINGE			
4.026	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6565251	4	
	4.0261 BRACKET,RETAINER-SENSOR			
4.0261	RCIB-635 RCIB-645	6567121	1	
	4.099 GASKET-SURFACE UNIT TERMINAL BLOCK SEAL			
4.099	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5436965	4	
4.099	RCDB-630-1 RCDB-640-1	6567795	4	
	4.208 SCREW			
4.208	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564547	8	SURFACE UNIT CLAMP TO BRACKET
4.2081	RCIB-635 RCIB-645	5436528	4	SENSOR SUPPORT
4.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564547	8	SURFACE UNIT BRACKET
4.2083	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5437025	8	SURFACE UNIT TERMINAL BLOCK
4.2083	RCDB-630-1 RCDB-640-1	6569059	8	SURFACE UNIT TERMINAL BLOCK
4.2084	RCIB-635 RCIB-645	5434896	2	SENSOR RETAINER BRACKET
	4.266 UNIT,SURFACE-6 INCH			
4.266	RCIB-635 RCIB-645	6590381	1	1250W 118V SPEED HEAT-LEFT FRONT-USE ON 208&236 VOLT WITHOUT CHANGE
4.266	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	6590373	2	1450W 236V LEFT FRONT AND RIGHT REAR
4.266	RCIB-635 RCIB-645	6590373	1	1450W 236V RIGHT REAR
4.266	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	6590374	2	1450W 208V LEFT FRONT AND RIGHT REAR
4.266	RCIB-635 RCIB-645	6590374	1	1450W 208V RIGHT REAR
	4.2661 UNIT,SURFACE-8 INCH			
4.2661	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6590379	2	2600W 236V LEFT REAR AND RIGHT FRONT
4.2661	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6590380	2	2600W 208V LEFT REAR AND RIGHT FRONT
	4.321 SUPPORT-HEAT MINDER SENSOR			
4.321	RCIB-635 RCIB-645	6567531	1	
	4.3211 SUPPORT-SURFACE UNIT SMALL			
4.3211	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	5435301	2	LEFT FRONT AND RIGHT REAR
4.3211	RCIB-635 RCIB-645	5435301	1	RIGHT REAR
4.3211	RCIB-635 RCIB-645	6561385	1	SPEED HEAT-LEFT FRONT
	4.3212 SUPPORT-SURFACE UNIT LARGE			
4.3212	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	5435304	2	LEFT REAR AND RIGHT FRONT
4.3212	RCIB-635 RCIB-645	5435304	1	LEFT REAR
4.3212	RCIB-635 RCIB-645	5435224	1	HEAT MINDER-RIGHT FRONT
	4.327 CLAMP-SURFACE UNIT HINGE			
4.327	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6565252	4	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	4.330 BLOCK,FEMALE-SURFACE UNIT CONNECTOR			
4.330	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	5438977	4	BLACK
4.330	RCIB-635 RCIB-645	5438977	3	BLACK
4.330	RCIB-635 RCIB-645	7527656	1	BROWN-USE WITH HEAT MINDER SURFACE UNITS
	4.3301 BLOCK,MALE-SURFACE UNIT CONNECTOR			
4.3301	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	P 5438978	4	
	4.336 PAN,SMALL-SURFACE UNIT DRIP			
4.336	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6565456	2	
	4.3361 PAN,LARGE-SURFACE UNIT DRIP			
4.3361	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6565457	2	
	4.490 SENSOR-HEAT MINDER			
4.490	RCIB-635 RCIB-645	6563752	1	

GROUP 6 TOPS AND PARTS

	6.011 BEARING-SPROCKET SHAFT			
6.011	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	* 6567142	4	NYLON
	6.026 BRACKET,STOP-COOKING TOP			
6.026	RCDB-630 RCDB-640 RCIB-635 RCIB-645	6567140	1	
	6.0261 BRACKET-CHAIN			
6.0261	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	* 6567153	2	

***Use with Roller Chain type drive mechanism. Refer to page 4 for illustration.**

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.0262 BRACKET-TOP COVER SLIDE			
6.0262	RCDB-630 RCIB-635 RCDB-630-1	* 6564287	1	
6.0262	RCIB-635 RCDB-630-1	† 7522205	1	
6.0262	RCDB-640 RCIB-645 RCDB-640-1	* 6564288	1	
6.0262	RCIB-645 RCDB-640-1	† 7522208	1	
	6.0263 BRACKET-LATCH SPRING RETAINER			
6.0263	RCDB-630 AFT SER NO 38C41063 RCDB-640 AFT SER NO 37C58786 RCIB-635 AFT SER NO 38C13089 RCIB-645 AFT SER NO 38C15126	6569713	1	
6.0263	RCDB-630-1 RCDB-640-1	6569713	1	
	6.029 BUMPER-SPROCKET CHANNEL			
6.029	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	* 6567881	2	
	6.0291 BUMPER,CAP-COVER ADJUSTING			
6.0291	RCDB-630 RCDB-640 RCIB-635 RCIB-645	6567880	2	
	6.0292 BUMPER-PULLEY CHANNEL			
6.0292	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 6567881	2	
	6.037 CHANNEL-SPROCKET			
6.037	RCDB-630 RCDB-640 RCIB-635 RCIB-645	* 6567126	1	RH
6.037	RCDB-630 RCDB-640 RCIB-635 RCIB-645	* 6567127	1	LH
	6.0371 CHANNEL-COOKING TOP STOP			
6.0371	RCDB-630 AFTER SER NO 38C41063 RCDB-640 AFTER SER NO 37C58786 RCIB-635 AFTER SER NO 38C13089 RCIB-645 AFTER SER NO 38C15126	6569468	1	
6.0371	RCDB-630-1 RCDB-640-1	6569468	1	
	6.0372 CHANNEL-PULLEY			
6.0372	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 7522204	1	LH
6.0372	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 7522203	1	RH
	6.039 CLIP-CHAIN LINK			
6.039	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	* 6568424	4	
	6.081 ESCUTCHEON-COOKING TOP			
6.081	RCDB-630 RCDB-640 RCIB-635 RCIB-645	6568371	1	PULL TO RELEASE
	6.110 HANDLE-COOKING TOP			
6.110	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567253	1	

*Use with Roller Chain type drive mechanism. Refer to page 4 for illustration.
†Use with Cable type drive mechanism. Refer to page 4 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.116 HOUSING-COOKING TOP			
6.116	RCDB-630 RCIB-635 RCDB-630-1	6564284	1	
6.116	RCDB-640 RCIB-645 RCDB-640-1	6564283	1	
	6.120 SLIDE-COOKING TOP COVER			
6.120	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567147	2	
	6.149 NUT			
6.149	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5434029	2	COOKING TOP FRONT PANEL
6.1491	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7520910	2	LOCK-COOKING TOP SHIPPING
6.1492	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5858705	2	SPACER-COOKING TOP HOUSING
6.1493	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 5439337	2	LATCH CHANNEL GUIDE
6.1494	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 271482	4	COOKING TOP CABLE
	6.156 PANEL,FRONT-COOKING TOP			
6.156	RCDB-630 BEF SER NO 38C41064 RCIB-635 BEF SER NO 38C13090	6564718	1	
6.156	RCDB-630 AFT SER NO 38C41063 RCIB-635 AFT SER NO 38C13089	7521129	1	
6.156	RCDB-640 BEF SER NO 37C58787 RCIB-645 BEF SER NO 38C15127	6564719	1	
6.156	RCDB-640 AFT SER NO 37C58786 RCIB-645 AFT SER NO 38C15126	7521130	1	
6.156	RCDB-630-1	7521129	1	
6.156	RCDB-640-1	7521130	1	
	6.163 PIN,COTTER-COOKING TOP LATCH ARM			
6.163	RCDB-630 RCDB-640 RCIB-635 RCIB-645	-------	1	PURCHASE LOCALLY
	6.177 PULLEY,CABLE-COOKING TOP			
6.177	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 6569474	4	
	6.192 RETAINER-CABLE BRACKET			
6.192	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 7527850	2	UPPER
	6.1921 RETAINER-CHAIN BRACKET			
6.1921	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	* 6567879	2	LOWER
6.1921	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	* 6567878	2	UPPER
	6.1922 RETAINER,SPRING-CABLE PULLEY			
6.1922	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 5437128	4	
	6.199 ROLLER-COOKING TOP			
6.199	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6569100	4	

*Use with Roller Chain type drive mechanism. Refer to page 4 for illustration.
†Use with Cable type drive mechanism. Refer to page 4 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.1991 ROLLER-TOP COVER			
6.1991	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6569100	2	
	6.208 SCREW			
6.208	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5435825	2	COOKING TOP STOP BRACKET
6.2081	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5885072	3	COOKING TOP DRIP PLATE
6.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5885072	3	COOKING TOP FRONT PANEL-LOWER
6.2083	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5428228	2	COVER ADJUSTING 1-1/4 IN
6.2084	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567533	2	COVER ADJUSTING 1-1/2 IN
6.2085	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5439003	4	COVER ADJUSTING SCREW STOP
6.2086	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*5435226	8	SPROCKET CHANNEL
6.2087	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*5431210	4	CHAIN BRACKET RETAINER
6.2088	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*5435827	4	COOKING TOP BRACKET
6.2089	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5436482	2	COOKING TOP FRONT PANEL-UPPER
6.20811	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5439005	2	COOKING TOP HANDLE
6.20812	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5436287	4	COOKING TOP LATCH HINGE
6.20813	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5885072	1	COOKING TOP LATCH ARM SUPPORT
6.20814	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5885072	4	COOKING TOP STOP CHANNEL
6.20815	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5885072	4	LATCH OPERATING LEVER
6.20816	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5436528	4	LATCH SPRING RETAINER BRACKET
6.20817	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5439072	1	LATCH KNOB
6.20818	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	†5899607	2	LATCH CHANNEL GUIDE
6.20819	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	†5435110	4	COOKING TOP CABLE
6.20821	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	†5435226	8	PULLEY CHANNEL
6.20822	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	†5435827	4	COOKING TOP COVER SLIDE BRACKET
	6.210 SHAFT-SPROCKET			
6.210	RCDB-630 RCIB-635 RCDB-630-1	*6567138	1	FRONT
6.210	RCDB-640 RCIB-645 RCDB-640-1	*6567137	1	FRONT
6.210	RCDB-630 RCIB-635 RCDB-630-1	*6568800	1	REAR
6.210	RCDB-640 RCIB-645 RCDB-640-1	*6568801	1	REAR

*Use with Roller Chain type drive mechanism. Refer to page 4 for illustration.
†Use with Cable type drive mechanism. Refer to page 4 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.222 SPACER-LATCH CHANNEL GUIDE			
6.222	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	†6569467	2	
	6.226 SPRING-TOP COVER			
6.226	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567610	2	
	6.2261 SPRING-COOKING TOP ARM			
6.2261	RCDB-630 RCDB-640 RCIB-635 RCIB-645	6567610	1	
	6.2262 SPRING-LATCH PIN OPERATING			
6.2262	RCDB-630 AFT SER NO 38C41063 RCDB-640 AFT SER NO 37C58786 RCIB-635 AFT SER NO 38C13089 RCIB-645 AFT SER NO 38C15126	6568818	1	
6.2262	RCDB-630-1 RCDB-640-1	6568818	1	
	6.235 STOP-COVER ADJUSTING SCREW			
6.235	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567534	2	
	6.253 TRIM-COOKING TOP HOUSING			
6.253	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567289	1	LH-CEMENTED
6.253	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567288	1	RH-CEMENTED
	6.258 TOP-COOKING			
6.258	RCDB-630 RCIB-635 RCDB-630-1	7522207	1	
6.258	RCDB-640 RCIB-645 RCDB-640-1	7522209	1	
	6.279 WASHER			
6.279	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*5407007	AR	PLAIN-COOKING TOP SUPPORT
6.2791	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6565542	AR	PLAIN-ROLLER
6.2792	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	†5427712	4	COOKING TOP CABLE PULLEY
	6.316 BUSHING-COOKING TOP COVER ADJUSTING			
6.316	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5432514	2	INCLUDES NUT
	6.321 SUPPORT-COOKING TOP			
6.321	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*6567535	2	
	6.3211 SUPPORT,HANDLE-COOKING TOP			
6.3211	RCDB-630 RCDB-640	6567519	2	
6.3211	RCDB-630-1 BEF SER NO 41C34659 RCDB-640-1 BEF SER NO 40C84330 RCIB-635 BEF SER NO 41C63546 RCIB-645 BEF SER NO 42C15939	6567519	2	
6.3211	RCDB-630-1 AFT SER NO 41C34658 RCDB-640-1 AFT SER NO 40C84329 RCIB-635 AFT SER NO 41C63545 RCIB-645 AFT SER NO 42C15938	6569716	2	

*Use with Roller Chain type drive mechanism. Refer to page 4 for illustration.
†Use with Cable type drive mechanism. Refer to page 4 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.3212 SUPPORT-COOKING TOP LATCH ARM			
6.3212	RCDB-630 BEF SER NO 38C41064 RCDB-640 BEF SER NO 37C58787 RCIB-635 BEF SER NO 38C13090 RCIB-645 BEF SER NO 38C15127	6590485	1	INCLUDES ARM
	6.323 GUIDE-LATCH CHANNEL			
6.323	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	†6569466	2	
	6.342 SPROCKET-COVER OPERATING			
6.342	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*6567246	4	
	6.346 HINGE,BOTTOM-COOKING TOP LATCH			
6.346	RCDB-630 BEF SER NO 38C41064 RCDB-640 BEF SER NO 37C58787 RCIB-635 BEF SER NO 38C13090 RCIB-645 BEF SER NO 38C15127	6568249	2	
	6.3461 HINGE,TOP-COOKING TOP LATCH			
6.3461	RCDB-630 BEF SER NO 38C41064 RCDB-640 BEF SER NO 37C58787 RCIB-635 BEF SER NO 38C13090 RCIB-645 BEF SER NO 38C15127	6568250	2	
	6.347 LATCH-COOKING TOP			
6.347	RCDB-630 BEF SER NO 38C41064 RCIB-635 BEF SER NO 38C13090	7520311	1	
6.347	RCDB-640 BEF SER NO 37C58787 RCIB-645 BEF SER NO 38C15127	7520312	1	
	6.348 LINK,CHAIN-COOKING TOP			
6.348	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*7520534	4	
	6.350 KNOB-LATCH OPERATING			
6.350	RCDB-630 AFT SER NO 38C41063 RCDB-640 AFT SER NO 37C58786 RCIB-635 AFT SER NO 38C13089 RCIB-645 AFT SER NO 38C15126	6568810	1	
6.350	RCDB-630-1 RCDB-640-1	6568810	1	
	6.351 CHAIN-ROLLER			
6.351	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*6567527	4	
	6.356 LEVER-LATCH OPERATING			
6.356	RCDB-630 AFT SER NO 38C41063 RCDB-640 AFT SER NO 37C58786 RCIB-635 AFT SER NO 38C13089 RCIB-645 AFT SER NO 38C15126	7521097	1	
6.356	RCDB-630-1 RCDB-640-1	7521097	1	
	6.364 PIN-SPROCKET			
6.364	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	*6567152	2	FRONT
	6.3641 PIN-COOKING TOP LATCH			
6.3641	RCDB-630 AFT SER NO 38C41063 RCDB-640 AFT SER NO 37C58786 RCIB-635 AFT SER NO 38C13089 RCIB-645 AFT SER NO 38C15126	6568811	1	
6.3641	RCDB-630-1 RCDB-640-1	6568811	1	

*Use with Roller Chain type drive mechanism. Refer to page 4 for illustration.
†Use with Cable type drive mechanism. Refer to page 4 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.366 ARM,CONTROL-COOKING TOP LATCH			
6.366	RCDB-630 BEF SER NO 38C41064 RCDB-640 BEF SER NO 37C58787 RCIB-635 BEF SER NO 38C13090 RCIB-645 BEF SER NO 38C15127	7520432	1	
	6.376 CAP-SCREW COVER ADJUSTING			
6.376	RCDB-630 RCDB-640 RCIB-635 RCIB-645	6567532	2	
	6.378 COVER-COOKING TOP			
6.378	RCDB-630 RCIB-635 RCDB-630-1	6564292	1	
6.378	RCDB-640 RCIB-645 RCDB-640-1	6564293	1	
	6.380 BUTTON-COOKING TOP COVER			
6.380	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567143	2	
	6.390 PLATE-COOKING TOP DRIP			
6.390	RCDB-630 BEF SER NO 38C41064 RCIB-635 BEF SER NO 38C13090	6567242	1	
6.390	RCDB-630 AFT SER NO 38C41063 RCIB-635 AFT SER NO 38C13089	6568842	1	
6.390	RCDB-640 BEF SER NO 37C58787 RCIB-645 BEF SER NO 38C15127	6567129	1	
6.390	RCDB-640 AFT SER NO 37C58786 RCIB-645 AFT SER NO 38C15126	6568843	1	
6.390	RCDB-630-1	6568842	1	
6.390	RCDB-640-1	6568843	1	
	6.393 RING,RETAINER-SPROCKET			
6.393	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCD2-640-1	* 6567241	4	
	6.3931 RING,RETAINER-TOP COVER ROLLER			
6.3931	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5434944	2	
	6.3932 RING,RETAINER-COOKING TOP LATCH PIN			
6.3932	RCDB-630 AFT SER NO 38C41063 RCDB-640 AFT SER NO 37C58786 RCIB-635 AFT SER NO 38C13089 RCIB-645 AFT SER NO 38C15126	6586240	1	
6.3932	RCDB-630-1 RCDB-640-1	6586240	1	
	6.436 CABLE-COOKING TOP			
6.436	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	† 7522206	2	

*Use with Roller Chain type drive mechanism. Refer to page 4 for illustration.
†Use with Cable type drive mechanism. Refer to page 4 for illustration.

GROUP 7 FRAMES, PANELS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	7.026 BRACKET-SIDE TRIM			
7.026	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567516	2	
	7.159 PANEL,SIDE-RANGE RH			
7.159	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521851	1	WHITE
7.159	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521852	1	YELLOW
7.159	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521853	1	PINK
7.159	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521854	1	TURQUOISE
7.159	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521855	1	COPPER
	7.1591 PANEL,SIDE-RANGE LH			
7.1591	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521856	1	WHITE
7.1591	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521857	1	YELLOW
7.1591	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521858	1	PINK
7.1591	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521859	1	TURQUOISE
7.1591	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7521860	1	COPPER
	7.160 PANEL,TOP-RANGE			
7.160	RCDB-630 RCIB-635 RCDB-630-1	7521861	1	WHITE
7.160	RCDB-630 RCIB-635 RCDB-630-1	7521862	1	YELLOW
7.160	RCDB-630 RCIB-635 RCDB-630-1	7521863	1	PINK
7.160	RCDB-630 RCIB-635 RCDB-630-1	7521864	1	TURQUOISE
7.160	RCDB-630 RCIB-635 RCDB-630-1	7521865	1	COPPER
7.160	RCDB-640 RCIB-645 RCDB-640-1	7521866	1	WHITE
7.160	RCDB-640 RCIB-645 RCDB-640-1	7521867	1	YELLOW
7.160	RCDB-640 RCIB-645 RCDB-640-1	7521868	1	PINK
7.160	RCDB-640 RCIB-645 RCDB-640-1	7521869	1	TURQUOISE
7.160	RCDB-640 RCIB-645 RCDB-640-1	7521870	1	COPPER
	7.192 RETAINER-INSULATION			
7.192	RCDB-630 RCIB-635	6567162	1	OVEN
7.192	RCDB-630-1	6569530	1	OVEN
7.192	RCDB-640 RCIB-645 RCDB-640-1	6569532	1	LEFT OVEN
7.192	RCDB-640 RCIB-645 RCDB-640-1	6569531	1	RIGHT OVEN
	7.208 SCREW			
7.208	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435827	4	ROTISSERIE OPENING COVER
7.2081	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	148101	2	RANGE TOP TRIM
7.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6569714	16	TRIM
7.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435261	2	TRIM-TOP BLOCK TO SIDE TRIM
7.2083	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5435261	5	BOTTOM TRIM 6-20X1/4 IN
7.2083	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435828	2	BOTTOM TRIM 8-18X5/8 IN
7.2083	RCDB-630-1 RCDB-640-1	5435261	4	BOTTOM TRIM 6-20X1/4 IN
7.2084	RCDB-630 RCIB-635 RCDB-630-1	6564547	3	CONDENSATION TRIM-USE WITH TWO PRONG APPLIANCE RECEPTACLE
7.2084	RCIB-635 RCDB-630-1	5435825	3	CONDENSATION TRIM-USE WITH THREE PRONG APPL RECEPTACLE
7.2084	RCDB-640 RCIB-645 RCDB-640-1	6564547	4	CONDENSATION TRIM-USE WITH TWO PRONG APPLIANCE RECEPTACLE

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	7.208 SCREW - Continued			
7.2084	RCIB-645 RCDB-640-1	5435825	4	CONDENSATION TRIM-USE WITH THREE PRONG APPL RECEPTACLES
7.2085	RCDB-630 RCIB-635 RCDB-630-1	5435827	2	OVEN ANGLE
7.2085	RCDB-640 RCIB-645 RCDB-640-1	5435827	4	OVEN ANGLE
7.2086	RCDB-630 RCIB-635 RCDB-630-1	5435827	7	CONDENSATE TRIM PLATE
7.2086	RCDB-640 RCIB-645 RCDB-640-1	5435827	11	CONDENSATE TRIM PLATE
7.2087	RCDB-630 RCIB-635 RCDB-630-1	5435827	19	RANGE BACK PANEL
7.2087	RCDB-640 RCIB-645 RCDB-640-1	5435827	27	RANGE BACK PANEL
7.2088	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	10	SIDE PANEL
7.2089	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5436295	6	INSULATION RETAINER
	7.253 TRIM,SIDE-UPPER			
7.253	RCDB-630 BEF SER NO 38C41407 RCDB-640 BEF SER NO 37C58803 RCIB-635 BEF SER NO 38C44790 RCIB-645 BEF SER NO 38C47355	6567515	1	LH-HIGH LUSTER FINISH-PLAIN
7.253	RCDB-630 AFT SER NO 38C41406 RCDB-640 AFT SER NO 37C58802 RCIB-635 AFT SER NO 38C44789 RCIB-645 AFT SER NO 38C47354	6568906	1	LH-SATIN FINISH-RIBBED
7.253	RCDB-630-1 RCDB-640-1	6568906	1	LH-SATIN FINISH-RIBBED
7.253	RCDB-630 BEF SER NO 38C41407 RCDB-640 BEF SER NO 37C58803 RCIB-635 BEF SER NO 38C44790 RCIB-645 BEF SER NO 38C47355	6567514	1	RH-HIGH LUSTER FINISH-PLAIN
7.253	RCDB-630 AFT SER NO 38C41406 RCDB-640 AFT SER NO 37C58802 RCIB-635 AFT SER NO 38C44789 RCIB-645 AFT SER NO 38C47354	6568905	1	RH-SATIN FINISH-RIBBED
7.253	RCDB-630-1 RCDB-640-1	6568905	1	RH-SATIN FINISH-RIBBED
	7.2531 TRIM,SIDE-LOWER			
7.2531	RCDB-630 BEF SER NO 38C41407 RCDB-640 BEF SER NO 37C58803 RCIB-635 BEF SER NO 38C44790 RCIB-645 BEF SER NO 38C47355	6567513	1	LH-HIGH LUSTER FINISH-PLAIN
7.2531	RCDB-630 AFT SER NO 38C41406 RCDB-640 AFT SER NO 37C58802 RCIB-635 AFT SER NO 38C44789 RCIB-645 AFT SER NO 38C47354	6568904	1	LH-SATIN FINISH-RIBBED
7.2531	RCDB-630-1 RCDB-640-1	6568904	1	LH-SATIN FINISH-RIBBED
7.2531	RCDB-630 BEF SER NO 38C41407 RCDB-640 BEF SER NO 37C58803 RCIB-635 BEF SER NO 38C44790 RCIB-645 BEF SER NO 38C47355	6567512	1	RH-HIGH LUSTER FINISH-PLAIN
7.2531	RCDB-630 AFT SER NO 38C41406 RCDB-640 AFT SER NO 37C58802 RCIB-635 AFT SER NO 38C44789 RCIB-645 AFT SER NO 38C47354	6568903	1	RH-SATIN FINISH-RIBBED
7.2531	RCDB-630-1 RCDB-640-1	6568903	1	RH-SATIN FINISH-RIBBED
	7.2532 TRIM,BOTTOM-RANGE			
7.2532	RCDB-630 BEF SER NO 38C41064 RCIB-635 BEF SER NO 38C13090	6567510	1	HIGH LUSTER FINISH
7.2532	RCDB-630 SERIAL NUMBERS 38C41064 THRU 38C41406 RCIB-635 SERIAL NUMBERS 38C13090 THRU 38C44789	6568815	1	HIGH LUSTER FINISH
7.2532	RCDB-630 AFT SER NO 38C41406 RCIB-635 AFT SER NO 38C44789	6568907	1	SATIN FINISH
7.2532	RCDB-640 BEF SER NO 37C58787 RCIB-645 BEF SER NO 38C15127	6567511	1	HIGH LUSTER FINISH
7.2532	RCDB-640 SERIAL NUMBERS 37C58787 THRU 37C55802 RCIB-645 SERIAL NUMBERS 38C15127 THRU 38C47354	6568816	1	HIGH LUSTER FINISH
7.2532	RCDB-640 AFT SER NO 37C58802 RCIB-645 AFT SER NO 38C47354	6568909	1	SATIN FINISH
7.2532	RCDB-630-1	6568907	1	SATIN FINISH
7.2532	RCDB-640-1	6568909	1	SATIN FINISH

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	7.2533 TRIM,TOP-RANGE			
7.2533	RCDB-630 BEF SER NO 38C41407 RCIB-635 BEF SER NO 38C44790	6567508	1	HIGH LUSTER FINISH
7.2533	RCDB-630 AFT SER NO 38C41406 RCIB-635 AFT SER NO 38C44789	6568908	1	SATIN FINISH
7.2533	RCDB-640 BEF SER NO 37C58803 RCIB-645 BEF SER NO 38C47355	6567509	1	HIGH LUSTER FINISH
7.2533	RCDB-640 AFT SER NO 37C58802 RCIB-645 AFT SER NO 38C47354	6568910	1	SATIN FINISH
7.2533	RCDB-630-1	6568908	1	SATIN FINISH
7.2533	RCDB-640-1	6568910	1	SATIN FINISH
	7.2534 TRIM-CONDENSATION			
7.2534	RCDB-630 BEF SER NO 38C41064 RCIB-635 BEF SER NO 38C13090	6567252	1	USE WITH TWO PRONG APPLIANCE RECEPTACLE AND WITH COOKING TOP LATCH ON LEFT SIDE
7.2534	RCDB-630 AFTER SER NO 38C41063 RCIB-635 AFTER SER NO 38C13089	6568930	1	USE WITH TWO PRONG APPLIANCE RECEPTACLE
7.2534	RCIB-635 RCDB-630-1	6569535	1	USE WITH THREE PRONG APPLIANCE RECEPTACLE
7.2534	RCDB-630-1	6568930	1	USE WITH TWO PRONG APPLIANCE RECEPTACLE
7.2534	RCDB-640 BEF SER NO 37C58787 RCIB-645 BEF SER NO 38C15127	6567133	1	USE WITH TWO PRONG APPLIANCE RECEPTACLE AND WITH COOKING TOP LATCH ON LEFT SIDE
7.2534	RCDB-640 AFTER SER NO 37C58786 RCIB-645 AFTER SER NO 38C15126	6568929	1	USE WITH TWO PRONG APPLIANCE RECEPTACLE
7.2534	RCIB-645 RCDB-640-1	6569536	1	USE WITH THREE PRONG APPLIANCE RECEPTACLE
7.2534	RCDB-640-1	6568929	1	USE WITH TWO PRONG APPLIANCE R5CEPTACLE
	7.310 PANEL,BACK			
7.310	RCDB-630 RCIB-635 RCDB-630-1	6567235	1	
7.310	RCDB-640 RCIB-645 RCDB-640-1	6567236	1	
	7.319 ANGLE-OVEN			
7.319	RCDB-630 RCIB-635 RCDB-630-1	6567345	1	
7.319	RCDB-640 RCIB-645 RCDB-640-1	6567346	1	
	7.330 BLOCK-TOP TRIM			
7.330	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567861	2	
	7.378 COVER-ROTISSERIE OPENING			
7.378	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567869	2	REAR
	7.390 PLATE-CONDENSATE TRIM			
7.390	RCDB-630 RCIB-635 RCDB-630-1	6567251	1	USE WITH TWO PRONG APPLIANCE RECEPTACLE
7.390	RCIB-635 RCDB-630-1	6569533	1	USE WITH THREE PRONG APPLIANCE RECEPTACLE
7.390	RCDB-640 RCIB-645 RCDB-640-1	6567134	1	USE WITH TWO PRONG APPLIANCE RECEPTACLE
7.390	RCIB-645 RCDB-640-1	6569534	1	USE WITH THREE PRONG APPLIANCE RECEPTACLE

GROUP 8 OVEN DOORS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.009 BASE,HANDLE-OVEN DOOR			
8.009	RCDB-630	6567683	1	
8.009	RCDB-640	6567683	2	
8.009	RCDB-630-1 BEF SER NO 41C34659 RCIB-635 BEF SER NO 41C63546	6567683	1	
8.009	RCDB-630-1 AFT SER NO 41C34658 RCIB-635 AFT SER NO 41C63545	6569717	1	
8.009	RCDB-640-1 BEF SER NO 40C84330 RCIB-645 BEF SER NO 42C15939	6567683	2	
8.009	RCDB-640-1 AFT SER NO 40C84329 RCIB-645 AFT SER NO 42C15938	6569717	2	
	8.011 BEARING,NYLON-TORQUE SHAFT			
8.011	RCDB-630 RCIB-635 RCDB-630-1	§6567433	2	LOWER
8.011	RCDB-630 RCIB-635 RCDB-630-1	§6567612	2	UPPER
8.011	RCDB-640 RCIB-645 RCDB-640-1	§6567433	4	LOWER
8.011	RCIB-645 RCDB-640-1	#6567433	2	LOWER
8.011	RCDB-640 RCIB-645 RCDB-640-1	§6567612	4	UPPER
8.011	RCIB-645 RCDB-640-1	#6567612	2	UPPER
8.011	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	#6569567	2	MOUNT TO DOOR SPRING RETAINER
	8.026 BRACKET-DOOR SPRING RETAINER			
8.026	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	#6569554	2	
	8.0261 BRACKET-CABLE ROLLER			
8.0261	RCDB-630 RCIB-635 RCDB-630-1	§6564374	2	
8.0261	RCDB-640 RCIB-645 RCDB-640-1	§6564374	4	
	8.0262 BRACKET-OVEN DOOR LATCH			
8.0262	RCDB-630 RCIB-635 RCDB-630-1	6567380	2	
8.0262	RCDB-640 RCIB-645 RCDB-640-1	6567380	4	
	8.0263 BRACKET-LOWER ARM			
8.0263	RCDB-630 RCIB-635 RCDB-630-1	6564377	2	
8.0263	RCDB-640 RCIB-645 RCDB-640-1	6564377	4	
	8.0264 BRACKET-DOOR STOP			
8.0264	RCDB-630 RCIB-635 RCDB-630-1	§7520729	1	FOR BROIL POSITION
8.0264	RCDB-640 RCIB-645 RCDB-640-1	§7520729	2	FOR BROIL POSITION
	8.037 CHANNEL,GUIDE-OVEN DOOR SPRING			
8.037	RCDB-640 RCIB-645 RCDB-640-1	§6567625	4	
	8.096 FRAME,OUTSIDE-OVEN DOOR			
8.096	RCDB-630 RCIB-635 RCDB-630-1	6567407	1	
8.096	RCDB-640 RCIB-645 RCDB-640-1	6567406	1	LEFT
8.096	RCDB-640 RCIB-645 RCDB-640-1	6567405	1	RIGHT
	8.0961 FRAME,INSIDE-OVEN DOOR			
8.0961	RCDB-630 RCIB-635 RCDB-630-1	6567404	1	
8.0961	RCDB-640 RCIB-645 RCDB-640-1	6567403	1	LEFT
8.0961	RCDB-640 RCIB-645 RCDB-640-1	6567402	1	RIGHT

§Use when Oven Door Spring is mounted parallel with the Control Panel. Refer to page 5 for illustration.

#Use when Oven Door Spring is mounted parallel with the Side Panels. Refer to page 5 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.0962 FRAME-CARRIAGE			
8.0962	RCDB-630 RCIB-635 RCDB-630-1	§ 6564379	1	
8.0962	RCDB-640 RCIB-645 RCDB-640-1	§ 6564381	1	LEFT
8.0962	RCDB-640 RCIB-645 RCDB-640-1	§ 6564380	1	RIGHT
	8.099 GASKET-OVEN DOOR HANDLE			
8.099	RCDB-630 RCIB-635 RCDB-630-1	6567685	2	
8.099	RCDB-640 RCIB-645 RCDB-640-1	6567685	4	
	8.103 GLASS,OUTER-OVEN DOOR			
8.103	RCDB-630 RCIB-635 RCDB-630-1	6567398	1	
8.103	RCDB-640 RCIB-645 RCDB-640-1	6567397	1	LEFT
8.103	RCDB-640 RCIB-645 RCDB-640-1	6567396	1	RIGHT
	8.1031 GLASS,INNER-OVEN DOOR			
8.1031	RCDB-630 RCIB-635 RCDB-630-1	6567395	1	
8.1031	RCDB-640 RCIB-645 RCDB-640-1	6567394	1	LEFT
8.1031	RCDB-640 RCIB-645 RCDB-640-1	6567393	1	RIGHT
	8.110 HANDLE,DOOR-OVEN			
8.110	RCDB-630 RCIB-635 RCDB-630-1	6567518	1	
8.110	RCDB-640 RCIB-645 RCDB-640-1	6567518	2	
	8.114 HOOK-DOOR SPRING RETAINER			
8.114	RCDB-640 RCIB-645 RCDB-640-1	§ 6567615	2	LEFT OVEN
8.114	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	§ 6568436	2	
	8.149 NUT			
8.149	RCDB-630 RCIB-635 RCDB-630-1	§ 5439337	4	DOOR SPRING TO HOOK
8.149	RCDB-640 RCIB-645 RCDB-640-1	§ 5439337	8	DOOR SPRING TO HOOK
8.1491	RCDB-630 RCIB-635 RCDB-630-1	§ 619078	4	CABLE ROLLER BRACKET
8.1491	RCDB-640 RCIB-645 RCDB-640-1	§ 619078	8	CABLE ROLLER BRACKET
	8.177 PULLEY-CABLE			
8.177	RCDB-630 RCIB-635 RCDB-630-1	§ 6567326	2	
8.177	RCDB-640 RCIB-645 RCDB-640-1	§ 6567326	4	
	8.192 RETAINER-OVEN DOOR GLASS			
8.192	RCDB-630 RCIB-635 RCDB-630-1	6567401	1	
8.192	RCDB-640 RCIB-645 RCDB-640-1	6567400	1	LEFT
8.192	RCDB-640 RCIB-645 RCDB-640-1	6567399	1	RIGHT
	8.1921 RETAINER-DOOR SPRING			
8.1921	RCDB-640 RCIB-645 RCDB-640-1	§ 6567623	2	LEFT OVEN
8.1921	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	# 6569566	2	
	8.1923 RETAINER-CABLE PULLEY			
8.1923	RCDB-630 RCIB-635 RCDB-630-1	§ 5437128	2	
8.1923	RCDB-640 RCIB-645 RCDB-640-1	§ 5437128	4	
	8.197 ROD,RELEASE-OVEN DOOR			
8.197	RCDB-630 RCIB-635 RCDB-630-1	6567383	2	
8.197	RCDB-640 RCIB-645 RCDB-640-1	6567383	4	
	8.199 ROLLER-CABLE			
8.199	RCDB-630 RCIB-635 RCDB-630-1	§ 5438687	2	
8.199	RCDB-640 RCIB-645 RCDB-640-1	§ 5438687	4	

§Use when Oven Door Spring is mounted parallel with the Control Panel. Refer to page 5 for illustration.

#Use when Oven Door Spring is mounted parallel with the Side Panels. Refer to page 5 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.203 SEAL,DOOR-BOTTOM			
8.203	RCDB-630 RCIB-635 RCDB-630-1	7527775	1	
8.203	RCDB-640 RCIB-645 RCDB-640-1	7527774	1	LEFT OVEN
8.203	RCDB-640 RCIB-645 RCDB-640-1	7527773	1	RIGHT OVEN
	8.2031 SEAL,DOOR-SIDE			
8.2031	RCDB-630 RCIB-635 RCDB-630-1	6590767	1	
8.2031	RCDB-640 RCIB-645 RCDB-640-1	6590767	2	
	8.208 SCREW			
8.208	RCDB-630 RCIB-635 RCDB-630-1	273224	2	DOOR HANDLE
8.208	RCDB-640 RCIB-645 RCDB-640-1	273224	4	DOOR HANDLE
8.2081	RCDB-630 RCIB-635 RCDB-630-1	446887	2	SET-OVEN DR RELEASE BUTTON
8.2081	RCDB-640 RCIB-645 RCDB-640-1	446887	4	SET-OVEN DR RELEASE BUTTON
8.2082	RCDB-630 RCIB-635 RCDB-630-1	6567391	2	OVEN DOOR LATCH BRACKET
8.2082	RCDB-640 RCIB-645 RCDB-640-1	6567391	4	OVEN DOOR LATCH BRACKET
8.2083	RCDB-630 RCIB-635 RCDB-630-1	6567391	10	INSIDE OVEN DOOR FRAME
8.2083	RCDB-640 RCIB-645 RCDB-640-1	6567391	16	INSIDE OVEN DOOR FRAME
8.2084	RCDB-630 RCIB-635 RCDB-630-1	§ 5435230	4	TORQUE SHAFT LOWER BEARING
8.2084	RCDB-640 RCIB-645 RCDB-640-1	§ 5435230	8	TORQUE SHAFT LOWER BEARING
8.2084	RCIB-645 RCDB-640-1	# 5435230	4	TORQUE SHAFT LOWER BEARING
8.2085	RCDB-630 RCIB-635 RCDB-630-1	§ 5899607	4	TORQUE SHAFT UPPER BEARING
8.2085	RCDB-640 RCIB-645 RCDB-640-1	§ 5899607	8	TORQUE SHAFT UPPER BEARING
8.2085	RCIB-645 RCDB-640-1	# 5899607	4	TORQUE SHAFT UPPER BEARING
8.2086	RCDB-630 RCIB-635 RCDB-630-1	5436295	2	LOWER ARM BRACKET
8.2086	RCDB-640 RCIB-645 RCDB-640-1	5436295	4	LOWER ARM BRACKET
8.2087	RCDB-630 RCIB-635 RCDB-630-1	5439003	8	OVEN DOOR TORQUE SHAFT
8.2087	RCDB-640 RCIB-645 RCDB-640-1	5439003	16	OVEN DOOR TORQUE SHAFT
8.2088	RCDB-630 RCIB-635 RCDB-630-1	6546813	2	OVEN DOOR RELEASE ARM
8.2088	RCDB-640 RCIB-645 RCDB-640-1	6546813	4	OVEN DOOR RELEASE ARM
8.2089	RCDB-630 RCIB-635 RCDB-630-1	6567381	2	LOWER ARM
8.2089	RCDB-640 RCIB-645 RCDB-640-1	6567381	4	LOWER ARM
8.20811	RCDB-630 RCIB-635 RCDB-630-1	§ 5439005	4	CABLE ROLLER BRACKET
8.20811	RCDB-640 RCIB-645 RCDB-640-1	§ 5439005	8	CABLE ROLLER BRACKET
8.20812	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	§ 5435825	4	OUTER CARRIAGE PIVOT
8.20813	RCDB-630 RCIB-635 RCDB-630-1	§ 5435827	1	DOOR ARM STOP
8.20813	RCIB-635 RCDB-630-1	# 6569178	1	DOOR ARM STOP
8.20813	RCDB-640 RCIB-645 RCDB-640-1	§ 5435827	2	DOOR ARM STOP
8.20813	RCIB-645 RCDB-640-1	# 6569178	2	DOOR ARM STOP
8.20814	RCDB-640 RCIB-645 RCDB-640-1	§ 5435827	16	SPRING GUIDE CHANNEL
8.20815	RCDB-640 RCIB-645 RCDB-640-1	§ 5435827	6	CENTER CARRIAGE SUPPORT
8.20816	RCDB-640 RCIB-645 RCDB-640-1	§ 5434896	4	INNER CARRIAGE PIVOT
8.20817	RCDB-630 RCIB-635 RCDB-630-1	§ 5435825	3	BROIL STOP
8.20817	RCDB-640 RCIB-645 RCDB-640-1	§ 5435825	6	BROIL STOP
8.20818	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	# 6569237	4	TORQUE SHAFT BEARING
8.20819	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	# 6569237	12	DOOR SPRING RETAINER
8.20821	RCIB-635 RCDB-630-1	# 6569237	2	BROIL STOP SPRING
8.20821	RCIB-645 RCDB-640-1	# 6569237	4	BROIL STOP SPRING
8.20822	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	# 6569576	2	OVEN DOOR SPRING ADJUSTING

§Use when Oven Door Spring is mounted parallel with the Control Panel. Refer to page 5 for illustration.

#Use when Oven Door Spring is mounted parallel with the Side Panels. Refer to page 5 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.210 SHAFT-TORQUE			
8.210	RCDB-630 RCIB-635 RCDB-630-1	§ 6564431	1	
8.210	RCIB-635 RCDB-630-1	# 7522326	1	
8.210	RCDB-640 RCIB-645 RCDB-640-1	§ 6564430	1	LEFT OVEN
8.210	RCIB-645 RCDB-640-1	# 7522357	1	LEFT OVEN
8.210	RCDB-640 RCIB-645 RCDB-640-1	§ 6564429	1	RIGHT OVEN
8.210	RCIB-645 RCDB-640-1	# 7522356	1	RIGHT OVEN
	8.226 SPRING-OVEN DOOR LATCH			
8.226	RCDB-630 RCIB-635 RCDB-630-1	6567148	2	
8.226	RCDB-640 RCIB-645 RCDB-640-1	6567148	4	
	8.2261 SPRING-OVEN DOOR COUNTERBALANCE			
8.2261	RCDB-630 RCIB-635 RCDB-630-1	§ 6567618	2	
8.2261	RCIB-635 RCDB-630-1	# 6569574	2	
8.2261	RCDB-640 RCIB-645 RCDB-640-1	§ 6567707	2	LEFT
8.2261	RCIB-645 RCDB-640-1	# 6569583	2	LEFT
8.2261	RCDB-640 RCIB-645 RCDB-640-1	§ 6567708	2	RIGHT
8.2261	RCIB-645 RCDB-640-1	# 6569582	2	RIGHT
	8.2262 SPRING-BROIL STOP ROLLER CATCH			
8.2262	RCDB-630 RCIB-635 RCDB-630-1	§ 6568348	1	
8.2262	RCDB-640 RCIB-645 RCDB-640-1	§ 6568348	2	
	8.2263 SPRING-BROIL STOP			
8.2263	RCIB-635 RCDB-630-1	# 6569568	1	
8.2263	RCIB-645 RCDB-640-1	# 6569581	1	LEFT OVEN
8.2263	RCIB-645 RCDB-640-1	# 6569580	1	RIGHT OVEN
	8.235 STOP-DOOR ARM			
8.235	RCDB-630 RCIB-635 RCDB-630-1	6567617	1	
8.235	RCDB-640 RCIB-645 RCDB-640-1	6567617	2	
	8.279 WASHER			
8.279	RCDB-630 RCIB-635 RCDB-630-1	§ 5428229	2	LOWER TORQUE SHAFT BEARING 5/8 IN OD
8.279	RCDB-630 RCIB-635 RCDB-630-1	§ 628122	2	LOWER TORQUESHAFT BEARING 31/32 IN OD
8.279	RCDB-640 RCIB-645 RCDB-640-1	§ 5428229	4	LOWER TORQUE SHAFT BEARING 5/8 IN OD
8.279	RCDB-640 RCIB-645 RCDB-640-1	§ 628122	4	LOWER TORQUE SHAFT BEARING 31/32 IN OD
8.279	RCIB-645 RCDB-640-1	# 5428229	2	LOWER TORQUE SHAFT BEARING 5/8 IN OD
8.279	RCIB-645 RCDB-640-1	# 628122	2	LOWER TORQUE SHAFT BEARING 31/32 IN OD
8.2791	RCDB-630 RCIB-635 RCDB-630-1	6565749	2	PLAIN-LOWER ARM BRACKET
8.2791	RCDB-640 RCIB-645 RCDB-640-1	6565749	4	PLAIN-LOWER ARM BRACKET
8.2792	RCDB-630 RCIB-635 RCDB-630-1	138479	2	LOCK-LOWER ARM BRACKET
8.2792	RCDB-640 RCIB-645 RCDB-640-1	138479	4	LOCK-LOWER ARM BRACKET
8.2793	RCDB-630 RCIB-635 RCDB-630-1	+§ 5912455	2	CABLE PULLEY
8.2793	RCDB-640 RCIB-645 RCDB-640-1	+§ 5912455	4	CABLE PULLEY
8.2794	RCDB-630 RCIB-635 RCDB-630-1	6567384	2	CUP-OVEN DOOR RELEASE ARM
8.2794	RCDB-630 RCIB-635 RCDB-630-1	138479	2	LOCK-OVEN DOOR RELEASE ARM
8.2794	RCDB-630 RCIB-635 RCDB-630-1	6566759	2	PLAIN-OVEN DOOR RELEASE ARM
8.2794	RCDB-640 RCIB-645 RCDB-640-1	6567384	4	CUP-OVEN DOOR RELEASE ARM
8.2794	RCDB-640 RCIB-645 RCDB-640-1	138479	4	LOCK-OVEN DOOR RELEASE ARM
8.2794	RCDB-640 RCIB-645 RCDB-640-1	6566759	4	PLAIN-OVEN DOOR RELEASE ARM
8.2795	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	60002	2	OVEN DOOR SPRING ADJUSTING
8.2796	RCDB-630 RCIB-635 RCDB-630-1	§ 6568627	1	BROIL STOP CATCH
8.2796	RCDB-640 RCIB-645 RCDB-640-1	§ 6568627	2	BROIL STOP CATCH

§Use when Oven Door Spring is mounted parallel with the Control Panel. Refer to page 5 for illustration.
#Use when Oven Door Spring is mounted parallel with the Side Panels. Refer to page 5 for illustration.
+Not available.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.279 WASHER - Continued			
8.2797	RCDB-630 RCIB-635 RCDB-630-1	6566285	2	CUP-OVEN DOOR HANDLE
8.2797	RCDB-640 RCIB-645 RCDB-640-1	6566285	4	CUP-OVEN DOOR HANDLE
8.2798	RCDB-630 RCIB-635 RCDB-630-1	621819	2	PLAIN-OVEN DOOR HANDLE-USE WITH 6567519 HANDLE SUPPORT
8.2798	RCDB-640 RCIB-645 RCDB-640-1	621819	4	PLAIN-OVEN DOOR HANDLE-USE WITH 6567519 HANDLE SUPPORT
	8.316 BUSHING-CARRIAGE PIVOT			
8.316	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	§ 5897695	2	
	8.3161 BUSHING-CENTER BEARING			
8.3161	RCDB-640 RCIB-645 RCDB-640-1	§ 6567325	1	
	8.3162 BUSHING-DOOR SPRING			
8.3162	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	# 6569571	2	
	8.3163 BUSHING-DOOR SPRING SWIVEL			
8.3163	RCIB-635 RCDB-630-1 RCIB-645 RCDB-640-1	# 6569575	2	
	8.321 SUPPORT,HANDLE-OVEN DOOR			
8.321	RCDB-630	6567519	2	
8.321	RCDB-640	6567519	4	
8.321	RCDB-630-1 BEF SER NO 41C34659 RCIB-635 BEF SER NO 41C63546	6567519	2	
8.321	RCDB-640-1 BEF SER NO 40C84330 RCIB-645 BEF SER NO 42C15939	6567519	4	
	8.3211 SUPPORT-CENTER CARRIAGE			
8.3211	RCDB-640 RCIB-645 RCDB-640-1	§ 6567344	1	
	8.328 CATCH,ROLLER-BROIL STOP			
8.328	RCDB-630 RCIB-635 RCDB-630-1	§ 6561550	1	
8.328	RCDB-640 RCIB-645 RCDB-640-1	§ 6561550	2	
	8.364 PIN-OVEN DOOR SPRING			
8.364	RCDB-630 RCIB-635 RCDB-630-1	§ 5438715	2	
8.364	RCDB-640 RCIB-645 RCDB-640-1	§ 5438715	4	
	8.3641 PIN-BROIL STOP ROLLER			
8.3641	RCDB-630 RCIB-635 RCDB-630-1	§ 5438691	2	
8.3641	RCDB-640 RCIB-645 RCDB-640-1	§ 5438691	4	
	8.366 ARM,LOWER-OVEN DOOR			
8.366	RCDB-630 RCIB-635 RCDB-630-1	6567435	2	
8.366	RCDB-640 RCIB-645 RCDB-640-1	6567435	4	
	8.3661 ARM,UPPER-OVEN DOOR			
8.3661	RCDB-630 RCIB-635 RCDB-630-1	§ 6564433	1	LEFT
8.3661	RCIB-635 RCDB-630-1	# 7522328	1	LEFT
8.3661	RCDB-630 RCIB-635 RCDB-630-1	§ 6564432	1	RIGHT
8.3661	RCIB-635 RCDB-630-1	# 7522327	1	RIGHT
8.3661	RCDB-640 RCIB-645 RCDB-640-1	§ 6564433	2	LEFT
8.3661	RCIB-645 RCDB-640-1	# 7522328	2	LEFT
8.3661	RCDB-640 RCIB-645 RCDB-640-1	§ 6564432	2	RIGHT
8.3661	RCIB-645 RCDB-640-1	# 7522327	2	RIGHT

§Use when Oven Door Spring is mounted parallel with the Control Panel. Refer to page 5 for illustration.

#Use when Oven Door Spring is mounted parallel with the Side Panels. Refer to page 5 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.3662 ARM,RELEASE-OVEN DOOR			
8.3662	RCDB-630 RCIB-635 RCDB-630-1	6564415	1	LEFT
8.3662	RCDB-630 RCIB-635 RCDB-630-1	6564414	1	RIGHT
8.3662	RCDB-640 RCIB-645 RCDB-640-1	6564415	2	LEFT
8.3662	RCDB-640 RCIB-645 RCDB-640-1	6564414	2	RIGHT
	8.380 BUTTON,RELEASE-OVEN DOOR			
8.380	RCDB-630 RCIB-635 RCDB-630-1	6567382	2	
8.380	RCDB-640 RCIB-645 RCDB-640-1	6567382	4	
	8.3801 BUTTON-BROIL STOP			
8.3801	RCIB-635 RCDB-630-1	# 6569572	1	
8.3801	RCIB-645 RCDB-640-1	# 6569572	2	
	8.393 RING,RETAINER-OVEN DOOR SPRING PIN			
8.393	RCDB-630 RCIB-635 RCDB-630-1	§ 5438692	2	
8.393	RCDB-640 RCIB-645 RCDB-640-1	§ 5438692	4	
	8.3931 RING,RETAINER-CABLE ROLLER			
8.3931	RCDB-630 RCIB-645 RCDB-630-1	§ 5438692	2	
8.3931	RCDB-640 RCIB-645 RCDB-640-1	§ 5438692	4	
	8.3932 RING,RETAINER-BROIL STOP ROLLER PIN			
8.3932	RCDB-630 RCIB-635 RCDB-630-1	§ 5438692	2	
8.3932	RCDB-640 RCIB-645 RCDB-640-1	§ 5438692	4	
	8.3933 RING,RETAINER-DOOR CABLE			
8.3933	RCDB-630 RCIB-635 RCDB-630-1	§ 5438692	2	
8.3933	RCDB-640 RCIB-645 RCDB-640-1	§ 5438692	4	
	8.3934 RING,RETAINER-LOWER ARM BRACKET			
8.3934	RCDB-630 RCIB-635 RCDB-630-1	6567241	2	
8.3934	RCDB-640 RCIB-645 RCDB-640-1	6567241	4	
	8.421 PIVOT-OVEN DOOR CARRIAGE			
8.421	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	§ 6564375	2	OUTER
8.421	RCDB-640 RCIB-645 RCDB-640-1	§ 6564376	2	INNER
	8.436 CABLE,OUTER-OVEN DOOR			
8.436	RCDB-630 RCIB-635 RCDB-630-1	§ 6564629	1	LH
8.436	RCDB-630 RCIB-635 RCDB-630-1	§ 6564628	1	RH
	8.4361 CABLE-RIGHT OVEN DOOR			
8.4361	RCDB-640 RCIB-645 RCDB-640-1	§ 6564629	1	LH
8.4361	RCDB-640 RCIB-645 RCDB-640-1	§ 6564628	1	RH
	8.4362 CABLE-LEFT OVEN DOOR			
8.4362	RCDB-640 RCIB-645 RCDB-640-1	§ 6564628	1	LH
8.4362	RCDB-640 RCIB-645 RCDB-640-1	§ 6564630	1	RH

§Use when Oven Door Spring is mounted parallel with Control Panel. Refer to page 5 for illustration.

#Use when Oven Door Spring is mounted parallel with the Side Panels. Refer to page 5 for illustration.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 9 OVEN LINERS AND PARTS

9.136 LINER-OVEN

9.136	RCDB-630	6564323	1	
9.136	RCIB-635	6564329	1	
9.136	RCDB-630-1	7521355	1	
9.136	RCDB-640 RCIB-645	6564325	1	LEFT
9.136	RCDB-640	6564324	1	RIGHT
9.136	RCIB-645	6564330	1	RIGHT
9.136	RCDB-640-1	7521353	1	LEFT
9.136	RCDB-640-1	7521354	1	RIGHT

9.149 NUT

9.149	RCDB-630-1	271163	4	OVEN LINER
9.149	RCDB-640-1	271163	8	OVEN LINER

9.153 PAD-OVEN LINER

9.153	RCDB-630-1	6569427	2	STAINLESS STEEL
9.153	RCDB-640-1	6569427	4	STAINLESS STEEL

9.208 SCREW

9.208	RCDB-630 RCIB-635 RCDB-630-1	5435827	7	OVEN LINER
9.208	RCDB-640 RCIB-645 RCDB-640-1	5435827	12	OVEN LINER

9.376 CAP-OVEN LINER CORNER

9.376	RCDB-630-1 RCDB-640-1	6569770	2	

9.380 BUTTON,PLUG-ROTISSERIE

9.380	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567525	1	LOWER RIGHT
9.380	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567526	1	UPPER LEFT

GROUP 10 OVEN INTERIOR PARTS

10.103 GLASS-OVEN LIGHT

10.103	RCDB-630 RCIB-635 RCDB-630-1	6567295	1	
10.103	RCDB-640 RCIB-645 RCDB-640-1	6567295	2	

10.108 GRILL-BROILER PAN

10.108	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	6565589	1	
10.108	RCIB-635 RCIB-645	6561009	1	PART OF SPATTER FREE BRL PAN

10.110 HANDLE-BROILER PAN

10.110	RCIB-635 RCIB-645	5437919	4	PART OF SPATTER FREE BRL PAN

10.182 RACK-ROASTER SIDE

10.182	RCIB-635 RCIB-645	6560779	2	PART OF SPATTER FREE BRL PAN

10.192 RETAINER-THERMOSTAT BULB

10.192	RCDB-630 RCIB-635 RCDB-630-1	6568792	2	
10.192	RCDB-640 RCIB-645	6569993	4	
10.192	RCDB-640-1	6568792	4	

10.208 SCREW

10.208	RCDB-630 RCIB-635 RCDB-630-1	6567501	4	SHELF GUIDE
10.208	RCDB-640 RCIB-645 RCDB-640-1	6567501	8	SHELF GUIDE
10.2081	RCIB-635 RCIB-645	5438261	8	HANDLE-PART OF SPATTER FREE BROILER PAN

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	10.213 SHELF-OVEN			
10.213	RCDB-630 RCIB-635 RCDB-630-1	6564483	2	
10.213	RCDB-640 RCIB-645 RCDB-640-1	6564485	2	LEFT
10.213	RCDB-640 RCIB-645 RCDB-640-1	6564484	2	RIGHT
	10.279 WASHER			
10.279	RCDB-630 RCIB-635 RCDB-630-1	6567604	4	PLAIN-SHELF GUIDE
10.279	RCDB-640 RCIB-645 RCDB-640-1	6567604	8	PLAIN-SHELF GUIDE
10.2791	RCDB-630 RCIB-635 RCDB-630-1	6565749	4	LOCK-SHELF GUIDE
10.2791	RCDB-640 RCIB-645 RCDB-640-1	6565749	8	LOCK-SHELF GUIDE
10.2792	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5426173	AR	SPACER-SHELF GUIDE
	10.323 GUIDE-SHELF RH			
10.323	RCDB-630 RCIB-635 RCDB-630-1	6564481	1	
10.323	RCDB-640 RCIB-645 RCDB-640-1	6564481	2	
	10.3231 GUIDE-SHELF LH			
10.3231	RCDB-630 RCIB-635 RCDB-630-1	6564482	1	
10.3231	RCDB-640 RCIB-645 RCDB-640-1	6564482	2	
	10.336 PAN-BROILER			
10.336	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	6569846	1	
10.336	RCIB-635 RCIB-645	6561567	1	SPATTER FREE-COMPLETE

GROUP 13 ELECTRICAL PARTS

	13.001 ADAPTER-ELECTRICAL			
13.001	ALL MODELS	5875048	AR	THREE TERMINAL .030X1/4 INCH TAB
	13.007 BAFFLE-BROIL ELEMENT			
13.007	RCDB-630 RCIB-635 RCDB-630-1	6567290	1	
13.007	RCDB-640 RCIB-645 RCDB-640-1	6567291	1	LEFT OVEN
13.007	RCDB-640 RCIB-645 RCDB-640-1	6567290	1	RIGHT OVEN
	13.0071 BAFFLE-BAKE ELEMENT			
13.0071	RCDB-630 RCDB-640 RCIB-635 RCIB-645	7520535	1	RIGHT OVEN-FOR FORMED FRONT TYPE ELEMENTS
13.0071	RCDB-640-1	7521560	1	RIGHT OVEN
	13.009 BASE-STARTER			
13.009	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6562260	1	
	13.015 BLADE,TERMINAL-BAKE RECEPTACLE			
13.015	RCDB-630 RCIB-635 RCDB-630-1	6567318	2	
13.015	RCDB-640 RCIB-645 RCDB-640-1	6567318	4	
	13.026 BRACKET-LAMPHOLDER			
13.026	RCDB-630 RCIB-635 RCDB-630-1	6567862	2	
13.026	RCDB-640 RCIB-645 RCDB-640-1	6567582	2	
	13.0261 BRACKET-SPEED HEAT UNIT FUSE			
13.0261	RCIB-635 RCIB-645	6568925	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.037 CHANNEL-LEAD COVER			
13.037	RCDB-630 RCIB-635 RCDB-630-1	6567831	1	
13.037	RCDB-640 RCIB-645 RCDB-640-1	6567831	2	
	13.039 CLIP-LEAD WIRE			
13.039	RCDB-630 RCDB-640	5426666	3	WIRE TYPE
13.039	RCIB-635 RCIB-645	5426666	1	WIRE TYPE
13.039	RCDB-630-1 RCDB-640-1	5426666	1	WIRE TYPE
13.039	RCDB-640 RCIB-645	5435256	5	
13.039	RCIB-635	5435256	1	
13.039	RCDB-630-1	5435256	2	
13.039	RCDB-640-1	5435256	6	
13.039	RCIB-635 RCIB-645	5437814	1	SURFACE UNIT-MOUNTS TO SENSOR SUPPORT
	13.048 CONNECTOR-LINE TERMINAL			
13.048	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5429035	3	COPPER-PLAIN
	13.0481 CONNECTOR,LINE-TER RECEPTACLE JUMPER			
13.0481	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6561562	2	
	13.0482 CONNECTOR,MALE-LEAD WIRE SPLICE			
13.0482	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5438151	2	NATURAL COLOR-ROTISSERIE-SIX LEAD WIRES
13.0482	RCIB-635 RCIB-645	6566745	2	WHITE-SINGLE LEAD WIRE
	13.0483 CONNECTOR,FEMALE-LEAD WIRE SPLICE			
13.0483	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567412	2	NATURAL COLOR-SIX LEAD WIRES
13.0483	RCIB-635 RCIB-645	6566746	2	WHITE-SINGLE LEAD WIRE
	13.0484 CONNECTOR,MALE-ELECTRICAL			
13.0484	ALL MODELS	P 5877822	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	13.0485 CONNECTOR,FEMALE-ELECTRICAL			
13.0485	ALL MODELS	P 5877823	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	13.0486 CONNECTOR,MARR			
13.0486	ALL MODELS	6585261	AR	SMALL-SET SCREW TYPE NO 18 TO 20 WIRE-3/32 IN ID
13.0486	ALL MODELS	5851484	AR	MEDIUM-SET SCREW TYPE NO 14 TO 18 WIRE-1/8 IN ID
13.0486	ALL MODELS	84514	AR	LARGE-SET SCREW TYPE NO 14 TO 18 WIRE-3/16 IN ID
	13.0487 CONNECTOR,SLEEVE			
13.0487	ALL MODELS	5873790	AR	CRIMP TYPE #14 TO #16 1 WIRE
	13.049 CONTACT-BAKE TERMINAL			
13.049	RCDB-630 RCIB-635 RCDB-630-1	6567317	2	
13.049	RCDB-640 RCIB-645 RCDB-640-1	6567317	4	
	13.0491 CONTACT-GROUND TERMINAL BLADE			
13.0491	RCDB-630 RCIB-635 RCDB-630-1	6567621	1	
13.0491	RCDB-640 RCIB-645 RCDB-640-1	6567621	2	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.080 ELEMENT,HEATING-BROIL			
13.080	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564765	1	RIGHT OVEN 3200W 236V
13.080	RCDB-640 RCIB-645 RCDB-640-1	6564823	1	LEFT OVEN 1750W 236V
13.080	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-640-1 RCDB-630-1	7520982	1	RIGHT OVEN 2800W 208V
13.080	RCDB-640 RCIB-645 RCDB-640-1	7520986	1	LEFT OVEN 1750W 208V
	13.0801 ELEMENT,HEATING-BAKE			
13.0801	RCDB-630 RCIB-635 RCDB-630-1	7521393	1	2400W 236V
13.0801	RCDB-640 RCIB-645 RCDB-640-1	6564694	1	LEFT OVEN 1750W 236V FORMED FRONT
13.0801	RCDB-640-1	7521900		LEFT OVEN 1750W 236V STRAIGHT FRONT
13.0801	RCDB-640 RCIB-645 RCDB-640-1	6564754	1	RIGHT OVEN 2400W 236V
13.0801	RCDB-630 RCIB-635 RCDB-630-1	7521397	1	2330W 208V
13.0801	RCDB-640-1 RCDB-640 RCIB-645	7521905	1	LEFT OVEN 1750W 208V STRAIGHT FRONT
13.0801	RCDB-640 RCIB-645 RCDB-640-1	7520966	1	RIGHT OVEN 2330W 208V
	13.098 FUSE			
13.098	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	-------	1	15 AMP-PURCHASE LOCALLY
13.098	RCIB-635 RCIB-645	-------	1	20 AMP-SPEED HEAT UNIT-PURCHASE LOCALLY
	13.116 HOUSING-TERMINAL BLOCK			
13.116	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567245	1	
	13.126 INSULATOR,ELECTRICAL-BROIL RECEPTACLE			
13.126	RCDB-630 RCIB-635 RCDB-630-1	6567294	1	
13.126	RCDB-640 RCIB-645 RCDB-640-1	6567294	2	
	13.1262 INSULATOR,SLEEVE			
13.1262	ALL MODELS	6565881	AR	VINYL-1 INCH LONG 3/16 IN ID
13.1262	ALL MODELS	6568691	AR	VINYL-1-7/16 INCHES LONG 3/16 IN ID
13.1262	ALL MODELS	5423696	AR	37-1/2 INCHES-FOR NO 10 WIRE
13.1262	ALL MODELS	6567957	AR	VINYL-TERMINAL
	13.132 LAMP,FLUORESCENT			
13.132	RCDB-630 RCIB-635 RCDB-630-1	-------	1	25 WATT GE F25T12/CW-28 INCH PURCHASE LOCALLY
13.132	RCDB-640 RCIB-645 RCDB-640-1	-------	1	30 WATT GE F30T8/CW-36 INCH PURCHASE LOCALLY
	13.149 NUT			
13.149	RCIB-635 RCIB-645	5438020	1	TEMPERATURE PROBE RECPTL
13.1491	RCDB-630 RCIB-635 RCDB-630-1	5423225	2	BAKE RECPTL TERMINAL BLADE
13.1491	RCDB-640 RCIB-645 RCDB-640-1	5423225	4	BAKE RECPTL TERMINAL BLADE
13.1492	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	619078	2	TERMINAL BLOCK
13.1493	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	619078	6	TERMINAL BLOCK TERMINAL
13.1494	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	619078	3	CONNECTOR BLOCK TERMINAL
13.1495	RCIB-635 RCIB-645	619078	2	MEAT TEMPERATURE INDICATOR
13.1496	RCDB-640 RCIB-645 RCDB-640-1	5858355	2	TERMINAL BLOCK HOUSING
13.1497	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5855706	3	LINE TERMINAL CONNECTOR
13.1498	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-640-1	5439496	2	OVEN BAKE ELEMENT BAFFLE

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.185 RECEPTACLE-BROIL ELEMENT TERMINAL			
13.185	RCDB-630 RCIB-635 RCDB-630-1	6567292	1	
13.185	RCDB-640 RCIB-645 RCDB-640-1	6567292	2	
	13.1851 RECEPTACLE-APPLIANCE			
13.1851	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564635	1	TWO PRONG
13.1851	RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7522292	1	THREE PRONG-POLARIZED
	13.1852 RECEPTACLE-TEMPERATURE PROBE			
13.1852	RCIB-635 RCIB-645	6560804	1	
	13.1853 RECPTACLE,REAR-BAKE ELEMENT TERMINAL			
13.1853	RCDB-630 RCIB-635 RCDB-630-1	6567279	1	
13.1853	RCDB-640 RCIB-645 RCDB-640-1	6567279	2	
	13.1854 RECEPTACLE,FRONT-BAKE ELEMENT TERMINAL			
13.1854	RCDB-630 RCIB-635 RCDB-630-1	6567316	1	
13.1854	RCDB-640 RCIB-645 RCDB-640-1	6567316	2	
	13.1855 RECEPTACLE,LAMP-OVEN			
13.1855	RCDB-630 RCIB-635 RCDB-630-1	6564356	1	
13.1855	RCDB-640 RCIB-645 RCDB-640-1	6564356	2	
	13.1856 RECEPTACLE-FUSE			
13.1856	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	5421002	1	
13.1856	RCIB-635 RCIB-645	5421002	2	
	13.192 RETAINER-BROIL RECEPTACLE			
13.192	RCDB-630 RCIB-635 RCDB-630-1	6567293	1	
13.192	RCDB-640 RCIB-645 RCDB-640-1	6567293	2	
	13.1921 RETAINER-OVEN LAMP COVER			
13.1921	RCDB-630 RCIB-635 RCDB-630-1	6567297	1	
13.1921	RCDB-640 RCIB-645 RCDB-640-1	6567297	2	
	13.1922 RETAINER-CONDUIT			
13.1922	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5425684	1	
	13.1923 RETAINER-FUSE RECEPTACLE			
13.1923	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	7520171	2	
13.1923	RCIB-635 RCIB-645	7520171	4	
	13.194 RIVET-OVEN LAMP COVER RETAINER			
13.194	RCDB-630 RCIB-635 RCDB-630-1	6547820	2	
13.194	RCDB-640 RCIB-645 RCDB-640-1	6547820	4	
	13.208 SCREW			
13.208	ALL MODELS	628321	AR	TERMINAL 4-40X5/16 INCH
13.208	ALL MODELS	5899914	AR	TERMINAL 4-40X7/16 INCH
13.208	ALL MODELS	5894191	AR	TERMINAL 6-32X1/4 INCH
13.208	ALL MODELS	5427015	AR	TERMINAL 8-32X1/4 INCH
13.208	ALL MODELS	5426525	AR	TERMINAL 8-32X3/8 INCH
13.208	ALL MODELS	5427014	AR	TERMINAL 8-32X1/2 INCH
13.208	ALL MODELS	5894189	AR	TERMINAL 8-32X5/8 INCH
13.208	ALL MODELS	5426495	AR	TERMINAL 10-32X1/4 INCH
13.208	ALL MODELS	9408527	AR	TERMINAL 10-32X1/2 INCH

13.208 SCREW - Continued

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
13.2081	RCDB-630 RCIB-635 RCDB-630-1	5435827	4	LEAD COVER CHANNEL
13.2081	RCDB-640-1	5435827	6	LEAD COVER CHANNEL
13.2081	RCDB-640 RCIB-645	5435827	8	LEAD COVER CHANNEL
13.2082	RCDB-630 RCIB-635 RCDB-630-1	6569178	2	BROIL ELEMENT 8-15X1/2 IN
13.2082	RCDB-630 RCIB-635 RCDB-630-1	6567885	2	BROIL ELEMENT 10-32X2 IN
13.2082	RCDB-640 RCIB-645 RCDB-640-1	6569178	4	BROIL ELEMENT 8-15X1/2 IN
13.2082	RCDB-640 RCIB-645 RCDB-640-1	6567885	4	BROIL ELEMENT 10-32X2 IN
13.2083	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	2	LEAD WIRE CLIP
13.2084	RCDB-630 RCIB-635 RCDB-630-1	6565857	1	BROIL RECEPTACLE RETAINER
13.2084	RCDB-640 RCIB-645 RCDB-640-1	6565857	2	BROIL RECEPTACLE RETAINER
13.2085	RCDB-630 RCDB-640 RCIB-635 RCIB-645	5427395	2	OVEN BAKE ELEMENT BAFFLE
13.2085	RCDB-640-1	6568426	2	OVEN BAKE ELEMENT BAFFLE
13.2086	RCIB-635 RCIB-645	5436528	2	MEAT TEMP PROBE RECEPTACLE COVER
13.2087	RCIB-635 RCIB-645	6567391	2	TRANSFORMER
13.2088	RCIB-635 RCIB-645	5435825	2	MEAT TEMPERATURE SIGNAL
13.2089	RCDB-630 RCIB-635	5897583	2	BAKE TER CONTACT TO BLADE
13.2089	RCDB-640 RCIB-645	5897583	4	BAKE TER CONTACT TO BLADE
13.2089	RCDB-630-1	442697	2	BAKE TER CONTACT TO BLADE
13.2089	RCDB-640-1	442697	4	BAKE TER CONTACT TO BLADE
13.20811	RCDB-630 RCIB-635 RCDB-630-1	5435827	1	GROUND TERMINAL CONTACT
13.20811	RCDB-640 RCIB-645 RCDB-640-1	5435827	2	GROUND TERMINAL CONTACT
13.20812	RCDB-630 RCIB-635 RCDB-630-1	6567885	1	FRONT BAKE UNIT RECEPTACLE
13.20812	RCDB-640 RCIB-645 RCDB-640-1	6567885	2	FRONT BAKE UNIT RECEPTACLE
13.20813	RCDB-630 RCIB-635 RCDB-630-1	6562577	2	OVEN LAMP RECEPTACLE
13.20813	RCDB-640 RCIB-645 RCDB-640-1	6562577	4	OVEN LAMP RECEPTACLE
13.20814	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	2	FLUOR LAMP HOLDER BRACKET
13.20815	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	163102	2	FLUOR LAMP HOLDER
13.20816	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435825	2	STARTER BASE
13.20817	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6566861	2	TERMINAL BLOCK
13.20818	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5436724	2	CONDUIT RETAINER
13.20819	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5436295	1	GROUND STRAP
13.20821	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6546560	2	NEUTRAL CONNECTOR BLOCK
13.20822	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5436724	2	TERMINAL BLOCK HOUSING
13.20823	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6546560	2	TERMINAL CONNECTOR BLOCK
13.20825	RCDB-640 RCIB-645 RCDB-640-1	5435827	3	TERMINAL BLOCK COVER
13.20826	RCDB-630 RCIB-635	6567391	2	FLUORESCENT LAMP BALLAST
13.20826	RCDB-640 RCIB-645 RCDB-640-1	5436724	2	FLUORESCENT LAMP BALLAST
13.20826	RCDB-630-1	5435360	2	FLUORESCENT LAMP BALLAST
13.20827	RCDB-630 RCDB-640	5435825	2	CONTROL PANEL TERMINAL SHIELD
13.20827	RCDB-640-1	5435825	4	CONTROL PANEL TERMINAL SHIELD
13.20829	RCIB-635 RCIB-645	5435825	1	SPEED HEAT UNIT FUSE BRACKET

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.216 SHIELD,TERMINAL-CONTROL PANEL			
13.216	RCDB-630 BEF SER NO 38C44457	6567867	1	
13.216	RCDB-630 AFT SER NO 38C44456	6568834	1	
13.216	RCDB-640 BEF SER NO 38C29643	6567868	1	
13.216	RCDB-640 AFT SER NO 38C29642	6568835	1	
13.216	RCDB-640-1	6569153	1	2-15/16X5-5/16 INCHES
13.216	RCDB-640-1	6569152	1	5-5/16X5-7/16 INCHES
	13.230 STARTER-FLUORESCENT LAMP			
13.230	RCDB-630 RCIB-635 RCDB-630-1	6560637	1	
13.230	RCDB-640 RCIB-645 RCDB-640-1	5432429	1	
	13.251 TRANSFORMER			
13.251	RCIB-635 RCIB-645	6590597	1	12 VOLT
	13.279 WASHER			
13.279	RCIB-635 RCIB-645	118930	1	LOCK-TEMP PROBE RECEPTACLE
13.2791	RCIB-635 RCIB-645	5438491	2	PLAIN-TEMP PROBE RECEPTACLE
13.2792	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5433842	3	TERMINAL
13.2793	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5433842	1	CONDUIT RETAINER
	13.321 SUPPORT-BAKE ELEMENT			
13.321	RCDB-630 RCIB-635	7520536	1	RH
13.321	RCDB-630 RCIB-635	7520537	1	LH
13.321	RCDB-630-1 RCDB-630 RCIB-635	7521396	1	FOR STRAIGHT FRONT TYPE HEATING ELEMENTS
13.321	RCIB-645 RCDB-640-1	7521903	1	FOR STRAIGHT FRONT TYPE HEATING ELEMENTS
13.321	RCDB-640 RCIB-645	6567778	1	RH-LEFT OVEN FOR FORMED FRONT TYPE HEATING ELEMENTS
13.321	RCDB-640 RCIB-645	6568058	1	LH-LEFT OVEN FOR FORMED FRONT TYPE HEATING ELEMENTS
13.321	RCDB-640 RCIB-645 RCDB-640-1	7520538	1	RH-RIGHT OVEN
13.321	RCDB-640 RCIB-645 RCDB-640-1	7520539	1	LH-RIGHT OVEN
	13.327 CLAMP,BROIL ELEMENT RETAINER-OVEN			
13.327	RCDB-630 RCIB-635 RCDB-630-1	5436951	12	
13.327	RCDB-640 RCIB-645 RCDB-640-1	5436951	16	
	13.329 TERMINAL,ELECTRIC			
13.329	RCDB-630	5438535	1	LEAD CONNECTOR-BRASS ANGLE WITH HOLE
13.329	RCDB-640	5438535	2	LEAD CONNECTOR-BRASS ANGLE WITH HOLE
13.3293	ALL MODELS	P 5873786	AR	EYELET-LEAD WIRE #6 SCREW
13.3293	ALL MODELS	P 5873787	AR	EYELET-LEAD WIRE #8 SCREW
13.3293	ALL MODELS	P 5873788	AR	EYELET-LEAD WIRE #10 SCREW
13.3294	ALL MODELS	P 5873789	AR	BULLET NOSE
13.3295	ALL MODELS	P 5875093	AR	BLADE RECEPTACLE-1 WIRE STR .030X1/4 INCH TAB
13.3295	ALL MODELS	6566627	AR	BLADE RECEPTACLE-1 WIRE STR .020X3/16 INCH TAB
13.3295	ALL MODELS	P 5435432	AR	BLADE RECEPTACLE-2 WIRE STR .030X1/4 INCH TAB
13.3296	ALL MODELS	P 5875091	AR	BLADE RECEPTACLE-FLAG-1 WIRE .020X3/16 INCH TAB
13.3296	ALL MODELS	P 5875092	AR	BLADE RECEPTACLE-FLAG-1 WIRE .030X1/4 INCH TAB
13.3297	ALL MODELS	6592122	AR	TAB-.016X1/4 INCH-2 WIRE STR
13.3298	ALL MODELS	p 5875094	AR	BLADE RECEPTACLE-PIGGY BACK-1 WIRE STRAIGHT .030X1/4 TAB
13.3299	ALL MODELS	6592002	AR	RECEPTACLE-HARNESS HOUSING 2 WIRE STR-.030X1/4 INCH TAB

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.330 BLOCK-TERMINAL			
13.330	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6563359	1	
	13.3301 BLOCK,TERMINAL-NEUTRAL CONNECTOR			
13.3301	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5432396	1	
	13.3302 BLOCK-CONNECTOR			
13.3302	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6563359	1	
	13.358 BULB,LAMP-OVEN ILLUMINATING			
13.358	RCDB-630 RCIB-635 RCDB-630-1	-------	1	40 WATT-PURCHASE LOCALLY
13.358	RCDB-640 RCIB-645 RCDB-640-1	-------	2	40 WATT-PURCHASE LOCALLY
	13.363 HOLDER,LAMP-FLUORESCENT			
13.363	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564594	2	
	13.371 BALLAST-FLUORESCENT LAMP			
13.371	RCDB-630 RCIB-635 RCDB-630-1	6562489	1	25 WATT
13.371	RCDB-640 RCIB-645 RCDB-640-1	5432344	1	30 WATT
	13.378 COVER-TERMINAL BLOCK			
13.378	RCDB-640 RCIB-645 RCDB-640-1	6567870	1	
	13.3781 COVER-MEAT TEMP PROBE RECEPTACLE			
13.3781	RCIB-635 RCIB-645	6567436	1	
	13.386 STRAP,GROUND			
13.386	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5426989	1	
	13.394 SPLICE,MALE-ELECTRICAL			
13.394	ALL MODELS	P 5431641	AR	BLADE TO BLADE .030X1/4 INCH TAB
	13.438 HARNESS,ELECTRICAL			
13.438	RCDB-630 RCDB-630-1	7520372	1	COOKING TOP
13.438	RCDB-640 RCDB-640-1	7520380	1	COOKING TOP
13.438	RCIB-635	7520373	1	COOKING TOP
13.438	RCIB-645	7520381	1	COOKING TOP
13.438	RCDB-640 RCIB-645	7521104	1	COOKMASTER AND THERMOSTAT
13.438	RCDB-640-1	7521554	1	COOKMASTER AND THERMOSTAT
13.438	RCDB-630 BEFORE SER NO 38C44457	7520374	1	LINE AND THERMOSTAT
13.438	RCDB-630 AFTER SER NO 38C44456	7521102	1	LINE AND THERMOSTAT
13.438	RCIB-635	7521103	1	LINE AND THERMOSTAT
13.438	RCDB-630-1	7521566	1	LINE AND THERMOSTAT
13.438	RCDB-640	7520378	1	RIGHT THERMOSTAT
13.438	RCIB-645	7520379	1	RIGHT THERMOSTAT
13.438	RCDB-640-1	7521553	1	RIGHT THERMOSTAT
13.438	RCDB-630 RCDB-630-1	7520370	1	SWITCHES
13.438	RCIB-635	7520371	1	SWITCHES
13.438	RCDB-640	7520383	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCIB-645	7520384	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCDB-640-1	7521555	1	SWITCHES AND LEFT THERMOSTAT
	13.457 SIGNAL-MEAT TEMPERATURE			
13.457	RCIB-635 RCIB-645	6562432	1	12 VOLT

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.458 PROBE-MEAT TEMPERATURE			
13.458	RCIB-635 RCIB-645	6560817	1	
	13.489 LIGHT,PILOT-SURFACE UNIT			
13.489	RCIB-635 RCIB-645	6564191	1	SPEED HEAT
13.489	RCIB-635 RCIB-645	6564597	3	INFINITE HEAT
13.489	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	6564597	4	INFINITE HEAT
	13.4891 LIGHT,PILOT-OVEN			
13.4891	RCDB-630 RCDB-630-1	7520543	1	
13.4891	RCDB-640 RCDB-640-1	7520543	2	
13.4891	RCIB-635	6564193	1	BAKE
13.4891	RCIB-645	6564193	2	BAKE
13.4891	RCIB-635	6564192	1	BROIL
13.4891	RCIB-645	6564192	2	BROIL

GROUP 14 ACCESSORIES AND PARTS

	14.023 BOX-JUNCTION			
14.023	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879987	1	PART OF EH-30&EH-40 VENT HOOD
	14.029 BUMPER-FRONT PANEL			
14.029	RCDB-630 RCIB-635 RCDB-630-1	5879990	2	PART OF EH-30 VENT HOOD BEFORE SERIAL NO 24-HD-210
14.029	RCDB-630 RCIB-635 RCDB-630-1	6592262	2	PART OF EH-30 VENT HOOD AFTER SERIAL NO 24-HD-209
14.029	RCDB-640 RCIB-645 RCDB-640-1	5879990	4	PART OF EH-40 VENT HOOD BEFORE SERIAL NO 26-HD-144 AND SERIAL NOS 26-HD-190 THRU 26-HD-240
14.029	RCDB-640 RCIB-645 RCDB-640-1	6592262	4	PART OF EH-40 VENT HOOD SERIAL NOS 26-HD-144 THRU 26-HD-189 AND AFTER SERIAL NO 26-HD-240
	14.039 CLIP-FILTER			
14.039	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592128	2	PART OF EH-30&EH-40 VENT HOOD
	14.088 FILTER,AIR			
14.088	RCDB-630 RCIB-635 RCDB-630-1	5879979	1	PART OF EH-30 VENT HOOD
14.088	RCDB-640 RCIB-645 RCDB-640-1	5879980	1	PART OF EH-40 VENT HOOD
	14.101 GEAR-SPROCKET			
14.101	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592135	2	PART OF 6590486 ROTISSERIE
	14.113 HOOD,VENT			
14.113	RCDB-630 RCIB-635 RCDB-630-1	-------	1	EH-30 FINISHED PRODUCTS
14.113	RCDB-640 RCIB-645 RCDB-640-1	-------	1	EH-40 FINISHED PRODUCTS
	14.116 HOUSING-BLOWER			
14.116	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879984	1	RH PART OF EH-30&EH-40 VENT HOOD
14.116	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879985	1	LH PART OF EH-30&EH-40 VENT HOOD

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.143 MOTOR-ROTISSERIE			
14.143	RCDB-630 RCIB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7520918	1	
	14.1431 MOTOR-BLOWER			
14.1431	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879986	1	PART OF EH-30&EH-40 VENT HOOD
	14.149 NUT			
14.149	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	95142	AR	TRIM-PART OF EH-30&EH-40 VENT HOOD
	14.156 PANEL,FRONT-VENT HOOD			
14.156	RCDB-630 RCIB-635 RCDB-630-1	5879993	1	COMPLETE-PART OF EH-30 VENT HOOD
14.156	RCDB-640 RCIB-645 RCDB-640-1	5879994	1	COMPLETE-PART OF EH-40 VENT HOOD
	14.1561 PANEL,FRONT-HOOD TRIM			
14.1561	RCDB-630 RCIB-635 RCDB-630-1	6590677	1	PART OF EH-30 VENT HOOD
14.1561	RCDB-640 RCIB-645 RCDB-640-1	6590678	1	PART OF EH-40 VENT HOOD
	14.170 PLATE,NAME-HOOD			
14.170	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592127	1	PART OF EH-30&EH-40 VENT HOOD
	14.182 RACK-ROTISSERIE			
14.182	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7520920	1	
	14.185 RECEPTACLE,ELECTRICAL			
14.185	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879989	1	PART OF EH-30&EH-40 VENT HOOD
	14.208 SCREW			
14.208	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435817	2	THUMB-ROTISSERIE FORK
14.2081	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6562048	5	ROTISSERIE
14.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879992	4	VENT HOOD
14.2083	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5430929	4	GEARS AND MOTOR-PART OF 6590486 ROTISSERIE
14.2084	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879944	2	SWITCH INSULATOR-PART OF 6590486 ROTISSERIE
14.2085	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592138	2	SWITCH-PART OF 6590486 ROTISS
14.2086	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5855529	AR	TRIM-PART OF EH-30&EH-40 VENT HOOD
14.2087	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5885238	1	COVER-PART OF EH-30&EH-40 VENT HOOD
	14.226 SPRING-LINK WIRE			
14.226	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592136	1	PART OF 6590486 ROTISSERIE
	14.2261 SPRING-SWITCH			
14.2261	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592124	1	PART OF EH-30&EH-40 VENT HOOD

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.253 TRIM-HOOD HOUSING			
14.253	RCDB-630 RCIB-635 RCDB-630-1	6592123	1	PART OF EH-30 VENT HOOD
14.253	RCDB-640 RCIB-645 RCDB-640-1	6592129	1	PART OF EH-40 VENT HOOD
	14.2531 TRIM,FRONT-HOOD			
14.2531	RCDB-630 RCIB-635 RCDB-630-1	6592125	1	PART OF EH-30 VENT HOOD
14.2531	RCDB-640 RCIB-645 RCDB-640-1	6592130	1	PART OF EH-40 VENT HOOD
	14.279 WASHER			
14.279	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879591	4	GEARS AND MOTOR-PART OF 6590486 ROTISSERIE
14.2791	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5898148	AR	TRIM-PART OF EH-30&EH-40 VENT HOOD
	14.311 DUCT,AIR			
14.311	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879977	1	PART OF EH-30&EH-40 VENT HOOD
	14.327 CLAMP-BLOWER HOUSING			
14.327	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879978	1	PART OF EH-30&EH-40 VENT HOOD
	14.336 PAN-BROILER			
14.336	RCDB-630 RCDB-640 RCDB-630-1 RCDB-640-1	6561567	1	SPATTER FREE-COMPLETE
14.336	RCDB-640 RCIB-645 RCDB-640-1	6591106	1	SMALL FOR LEFT OVEN-COMPLETE
	14.341 WHEEL,BLOWER			
14.341	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879982	1	LH PART OF EH-30&EH-40 VENT HOOD
14.3 1	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879981	1	RH PART OF EH-30&EH-40 VENT HOOD
	14.348 LINK-TRIGGER TO SPRING			
14.348	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592132	1	PART OF 6590486 ROTISSERIE
	14.3481 LINK-ACTUATING ARM TO PLATE			
14.3481	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592134	1	PART OF 6590486 ROTISSERIE
	14.351 CHAIN-DRIVE			
14.351	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592133	1	PART OF 6590486 ROTISSERIE
	14.364 PIN-GEAR			
14.364	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6592137	2	PART OF 6590486 ROTISSERIE
	14.378 COVER-ROTISSERIE			
14.378	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568762	1	UPPER
14.378	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568763	1	LOWER
	14.3781 COVER-JUNCTION BOX			
14.3781	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879988	1	PART OF EH-30&EH-40 VENT HOOD
	14.396 SWITCH-BLOWER OPERATING			
14.396	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5879983	1	PART OF EH-30&EH-40 VENT HOOD

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.3961 SWITCH-ROTISSERIE			
14.3961	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7520919	1	
	14.428 ROTISSERIE KIT			
14.428	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6590486	1	
	14.430 SPIT-ROTISSERIE			
14.430	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7520921	1	
	14.431 FORK,TURNING-ROTISSERIE			
14.431	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5432586	2	
	14.485 GRIDDLE,KANT SLIDE			
14.485	ALL MODELS	6563250	1	USE ON 8 INCH SURFACE UNITS

GROUP 15 INSULATION

	15.124 INSULATION,BULK			
15.124	ALL MODELS	5873771	AR	1X18X30 INCHES
15.124	ALL MODELS	5873772	AR	2X24X90 INCHES
15.124	ALL MODELS	5873773	AR	2-1/2X42X90 INCHES
15.124	ALL MODELS	5873774	AR	3X38X90 INCHES
15.1241	RCDB-630 RCDB-635 RCDB-630-1	*-------	1	OVEN SIDES AND BOTTOM 2X15X59 INCHES
15.1241	RCDB-640 RCIB-645 RCDB-640-1	*-------	1	LEFT OVEN SIDES AND BOTTOM 2X15X49 INCHES
15.1241	RCDB-640 RCIB-645 RCDB-640-1	*-------	1	RIGHT OVEN SIDES AND BOTTOM 2X15X57 INCHES
15.1242	RCDB-630 RCIB-635 RCDB-630-1	*-------	3	OVEN TOP AND BACK 2X16X28 IN
15.1242	RCDB-640 RCIB-645 RCDB-640-1	*-------	3	LEFT OVEN TOP AND BACK 2X14X16 INCHES
15.1242	RCDB-640 RCIB-645 RCDB-640-1	*-------	3	RIGHT OVEN TOP AND BACK 2X16X22 INCHES
15.1243	RCDB-630 RCIB-635 RCDB-630-1	*-------	1	DOOR TOP 1/2X3X27 INCHES
15.1243	RCDB-640 RCIB-645 RCDB-640-1	*-------	1	DOOR TOP 1/2X3X21 INCHES-RIGHT OVEN
15.1243	RCDB-640 RCIB-645 RCDB-640-1	*-------	1	DOOR TOP 1/2X3X13 INCHES-LEFT OVEN
15.1244	RCDB-630 RCIB-635 RCDB-630-1	*-------	2	DOOR SIDES 1/2X2X11 INCHES
15.1244	RCDB-640 RCIB-645 RCDB-640-1	*-------	4	DOOR SIDES 1/2X2X11 INCHES
	15.1245 INSULATION,ASBESTOS-COOKING TOP COVER			
15.1245	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567916	1	SOUND 8-7/16X18 INCHES-CUT TO SIZE REQUIRED

*CUT TO SIZE FROM BULK PIECES.

GROUP 16 BASE CABINETS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.026 BRACKET-HINGE PIVOT			
16.026	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567649	4	PART OF ALL B-30&B-40 BASE CABINETS
	16.029 BUMPER-DOOR			
16.029	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568324	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
16.029	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568980	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.0291 BUMPER-SHELF			
16.0291	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6569025	3	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.0292 BUMPER,SLEEVE-SHELF			
16.0292	RCDB-630 RCIB-635 RCDB-630-1	6569022	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.0292	RCDB-640 RCIB-645 RCDB-640-1	6569022	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.070 DOOR-BASE CABINET LH			
16.070	RCDB-630 RCIB-635 RCDB-630-1	6564646	1	WHITE-PART OF B-30 BASE CABINET MODEL NO 5430485
16.070	RCDB-630 RCIB-635 RCDB-630-1	7521951	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-630 RCIB-635 RCDB-630-1	7521972	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-630 RCIB-635 RCDB-630-1	7521973	1	PINK-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-630 RCIB-635 RCDB-630-1	7521974	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-630 RCIB-635 RCDB-630-1	7521975	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-640 RCIB-645 RCDB-640-1	6564651	1	WHITE-PART OF B-40 BASE CABINET MODEL NO 5430486
16.070	RCDB-640 RCIB-645 RCDB-640-1	7521978	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDB-640 RCIB-645 RCDB-640-1	7521999	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDB-640 RCIB-645 RCDB-640-1	7522000	1	PINK-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDB-640 RCIB-645 RCDB-640-1	7522001	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDB-640 RCIB-645 RCDB-640-1	7522002	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	16.0701 DOOR-BASE CABINET RH			
16.0701	RCDB-630 RCIB-635 RCDB-630-1	6564645	1	WHITE-PART OF B-30 BASE CABINET MODEL NO 5430485
16.0701	RCDB-630 RCIB-635 RCDB-630-1	7521950	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-630 RCIB-635 RCDB-630-1	7521964	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-630 RCIB-635 RCDB-630-1	7521965	1	PINK-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-630 RCIB-635 RCDB-630-1	7521966	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-630 RCIB-635 RCDB-630-1	7521967	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-640 RCIB-645 RCDB-640-1	6564650	1	WHITE-PART OF B-40 BASE CABINET MODEL NO 5430486
16.0701	RCDB-640 RCIB-645 RCDB-640-1	7521977	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDB-640 RCIB-645 RCDB-640-1	7521991	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDB-640 RCIB-645 RCDB-640-1	7521992	1	PINK-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDB-640 RCIB-645 RCDB-640-1	7521993	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDB-640 RCIB-645 RCDB-640-1	7521994	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.096 FRAME-BASE CABINET			
16.096	RCDB-630 RCIB-635 RCDB-630-1	-------	1	PART OF B-30 BASE CABINET NOT AVAILABLE
16.096	RCDB-640 RCIB-645 RCDB-640-1	-------	1	PART OF B-40 BASE CABINET NOT AVAILABLE
	16.110 HANDLE,DOOR-BASE CABINET			
16.110	RCDB-630 RCIB-635 RCDB-630-1	6567659	2	PART OF B-30 BASE CABINET MODEL NO 5430485
16.110	RCDB-630 RCIB-635 RCDB-630-1	6568979	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.110	RCDB-640 RCIB-645 RCDB-640-1	6567680	2	PART OF B-40 BASE CABINET MODEL NO 5430486
16.110	RCDB-640 RCIB-645 RCDB-640-1	6568996	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.149 NUT			
16.149	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5439337	2	DOOR STRIKE-PART OF ALL B-30& B-40 BASE CABINETS
16.1492	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	447014	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.1493	RCDB-630 RCIB-635 RCDB-630-1	5870061	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105
16.1493	RCDB-640 RCIB-645 RCDB-640-1	5870061	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106
	16.208 SCREW			
16.208	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435827	8	HINGE PIVOT BRACKET-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
16.208	RCDB-630 RCDB-640 RCDB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5887109	8	HINGE PIVOT BRACKET-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.2081	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5899983	8	DOOR HINGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
16.2081	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5909850	8	DOOR HINGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	161416	4	DOOR HANDLE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
16.2082	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568999	3	DOOR HANDLE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.2083	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567645	4	TOE SPACE PANEL-PART OF B-30& B-40 BASE CABINETS MODEL NOS 5430485 AND 5430486
16.2084	RCDB-630 RCIB-635 RCDB-630-1	5435827	4	CABINET REAR PANEL-PART OF B-30 BASE CABINET MODEL NO 5430485
16.2084	RCDB-640 RCIB-645 RCDB-640-1	5435827	8	CABINET REAR PANEL-PART OF B-40 BASE CABINET MODEL NO 5430486
16.2085	RCDB-630 RCIB-635 RCDB-630-1	5435827	4	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 5430485
16.2085	RCDB-630 RCIB-635 RCDB-630-1	5909850	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-32X1/2
16.2085	RCDB-630 RCIB-635 RCDB-630-1	5435827	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-15X1/2
16.2085	RCDB-640 RCIB-645 RCDB-640-1	5435827	8	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 5430486
16.2085	RCDB-640 RCIB-645 RCDB-640-1	5909850	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-32X1/2

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.208 SCREW - Continued			
16.2085	RCDB-640 RCIB-645 RCDB-640-1	5435827	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-15X1/2
16.2086	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	122138	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NOS 5430485 AND 5430486
16.2086	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5415118	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.2087	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	167506	8	UPPER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 5430485 AND 5430486
16.2087	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	455508	4	UPPER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106
16.2088	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435827	4	TRIM SUPPORT-PART OF B-30& B-40 BASE CABINETS MODEL NOS 5430485 AND 5430486
16.2089	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	167506	4	LOWER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 5430485 AND 5430486
16.2089	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	455508	4	LOWER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NO 6560105 AND 6560106
16.20811	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6569714	2	LOWER TRIM CAP-PART OF B-30& B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.20812	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6574035	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.213 SHELF-CABINET			
16.213	RCDB-630 RCIB-635 RCDB-630-1	6567661	1	PART OF B-30 BASE CABINET MODEL NO 5430485
16.213	RCDB-630 RCIB-635 RCDB-630-1	7521343	1	PART OF B-30 BASE CABINET MODEL NO 6560105
16.213	RCDB-640 RCIB-645 RCDB-640-1	6567682	2	PART OF B-40 BASE CABINET MODEL NO 5430486
16.213	RCDB-640 RCIB-645 RCDB-640-1	7521344	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.253 TRIM,SIDE-UPPER			
16.253	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567665	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486-HIGH LUSTER FINISH-PLAIN
16.253	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568911	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486-SATIN FINISH-RIBBED
16.253	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568982	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106-SATIN FINISH-RIBBED
	16.2531 TRIM,SIDE-LOWER			
16.2531	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567666	1	LH-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486-HIGH LUSTER FINISH-PLAIN
16.2531	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568913	1	LH-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486-SATIN FINISH-RIBBED

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.2531 TRIM, SIDE - LOWER - Continued			
16.2531	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567678	1	RH-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486-HIGH LUSTER FINISH-PLAIN
16.2531	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568912	1	RH-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486-SATIN FINISH-RIBBED
16.2531	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568983	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.279 WASHER			
16.279	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5433133	2	GASKET-DOOR STRIKE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
16.2791	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	640152	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
16.2791	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	446548	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.282 WRENCH-GLIDER BUTTON ADJUSTING			
16.282	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568988	1	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.310 PANEL-BACK			
16.310	RCDB-630 RCIB-635 RCDB-630-1	6567660	1	PART OF B-30 BASE CABINET MODEL NO 5430485
16.310	RCDB-640 RCIB-645 RCDB-640-1	6567681	2	PART OF B-40 BASE CABINET MODEL NO 5430486
	16.316 BUSHING-HINGE PIVOT			
16.316	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567650	4	PART OF ALL B-30&B-40 BASE CABINETS
	16.321 SUPPORT-TRIM			
16.321	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567667	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
	16.323 GUIDE-SHELF			
16.323	RCDB-630 RCIB-635 RCDB-630-1	6567647	2	PART OF B-30 BASE CABINET MODEL NO 5430485
16.323	RCDB-630 RCIB-635 RCDB-630-1	6569021	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.323	RCDB-640 RCIB-645 RCDB-640-1	6567647	4	PART OF B-40 BASE CABINET MODEL NO 5430486
16.323	RCDB-640 RCIB-645 RCDB-640-1	6569021	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.328 CATCH,SPRING-DOOR			
16.328	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567662	2	PART OF ALL B-30&B-40 BASE CABINETS
	16.346 HINGE,DOOR-RH TOP AND LH BOTTOM			
16.346	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564643	2	PART OF ALL B-30&B-40 BASE CABINETS
	16.3461 HINGE,DOOR-LH TOP AND RH BOTTOM			
16.3461	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6564644	2	PART OF ALL B-30&B-40 BASE CABINETS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.349 STRIKE-DOOR			
16.349	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6567664	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
16.349	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568984	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.376 CAP-LOWER TRIM			
16.376	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6569067	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.378 COVER-REAR ACCESS			
16.378	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7522003	2	WHITE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7522004	2	YELLOW-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7522005	2	PINK-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7522006	2	TURQUOISE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	7522007	2	COPPER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.380 BUTTON,GLIDER-CABINET			
16.380	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	5435246	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 5430485 AND 5430486
16.380	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	6568985	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.3801 BUTTON,PLUG-DOOR			
16.3801	RCDB-630 RCDB-640 RCIB-635 RCIB-645 RCDB-630-1 RCDB-640-1	432609	4	PART OF ALL B-30&B-40 BASE CABINETS
	16.455 PANEL,TOE PLATE			
16.455	RCDB-630 RCIB-635 RCDB-630-1	6567648	1	PART OF B-30 BASE CABINET MODEL NO 5430485
16.455	RCDB-640 RCIB-645 RCDB-640-1	6567674	1	PART OF B-40 BASE CABINET MODEL NO 5430486


GM
MARK OF EXCELLENCE

FRIGIDAIRE
FLAIR RANGES
PARTS CATALOG

1962 AND 1963 MODELS

1962/1963

INDEX

GROUP CODES	DESCRIPTION	ILLUSTRATION PAGES	PARTS INFORMATION PAGES
	ALPHABETICAL INDEX	B, C, D	--
	PRODUCT VIEWS	1, 2	--
	OVEN DOORS AND ACTUATING PARTS	3	--
	CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS	4	--
	CONTROL PANEL, COOK-MASTER AND PARTS	5	--
	COOKING TOP, SURFACE UNITS AND PARTS	6, 7	--
	OVEN LINERS AND INTERIOR PARTS	8	--
	PANELS, TRIMS AND PARTS	9	--
	BASE CABINETS AND PARTS	10	--
	14.428 ROTISSERIE - ACCESSORY	10	--
	14.113 VENT HOOD - ACCESSORY	11	--
	ELECTRICAL CONNECTOR IDENTIFICATION CHART	12	--
	LEAD WIRE CHART	12	--
1	CONTROL PANELS AND PARTS	--	13
2	COOK-MASTERS AND PARTS	--	14
3	SWITCHES AND PARTS	--	15
4	SURFACE UNITS AND PARTS	--	16
6	TOPS AND PARTS	--	18
7	FRAMES, PANELS AND PARTS	--	20
8	OVEN DOORS AND PARTS	--	22
9	OVEN LINERS AND PARTS	--	24
10	OVEN INTERIOR PARTS	--	25
13	ELECTRICAL PARTS	--	26
14	ACCESSORIES AND PARTS	--	31
15	INSULATION	--	34
16	BASE CABINETS AND PARTS	--	35

ALPHABETICAL INDEX

DESCRIPTION	CODE
ADAPTER - Electrical	13.001
ANGLE - Oven	7.319
ARM, CONTROL - Switch Operating	3.366
ARM, LOWER - Oven Door	8.366
ARM, RELEASE - Oven Door	8.3662
ARM, UPPER - Oven Door	8.3661
BAFFLE - Bake Element	13.0071
BAFFLE - Broil Element	13.007
BALLAST - Fluorescent Lamp	13.371
BASE, HANDLE - Oven Door	8.009
BASE - Starter	13.009
BEARING, NYLON - Torque Shaft	8.011
BLADE, TERMINAL - Bake Receptacle	13.015
BLOCK, FEMALE - Surface Unit Connector	4.330
BLOCK, MALE - Surface Unit Connector	4.3301
BLOCK - Terminal	13.330
BLOCK, TERMINAL - Neutral Connector	13.3301
BLOCK - Top Trim	7.330
BOX - Junction	14.023
BRACKET - Cooking Top Safety Stop	6.0262
BRACKET - Cookmaster And Time Signal	2.026
BRACKET - Disconnect Switch Skid	6.0263
BRACKET - Door Spring Retainer	8.0261
BRACKET - Hinge Pivot	16.026
BRACKET - Lampholder	13.026
BRACKET - Latch Spring Retainer	6.0261
BRACKET - Lower Arm	8.026
BRACKET - Meat Temperature Indicator	3.026
BRACKET - Oven Door Latch	8.0262
BRACKET, RETAINER - Sensor	4.0261
BRACKET - Side Trim	7.026
BRACKET - Speed Heat Unit Fuse	13.0261
BRACKET - Surface Unit Hinge	4.026
BRACKET - Surface Unit Switch	3.0261
BRACKET - Thermostat	3.0262
BRACKET - Top Cover Slide	6.026
BULB, LAMP - Oven Illuminating	13.358
BULB, LAMP - Pilot	13.3581
BUMPER - Door	16.029
BUMPER - Front Panel	14.029
BUMPER - Pulley Channel	6.029
BUMPER - Shelf	16.0291
BUMPER, SLEEVE - Shelf	16.0292
BUSHING - Cooking Top Cover Adjusting	6.316
BUSHING - Door Spring	8.316
BUSHING - Door Spring Swivel	8.3161
BUSHING - Hinge Pivot	16.316
BUTTON - Broil Stop	8.3801
BUTTON - Cooking Top Cover	6.380
BUTTON - Cooking Top Front Panel	6.3801
BUTTON, GLIDER - Cabinet	16.380
BUTTON, PLUG - Control Housing	1.380
BUTTON, PLUG - Door	16.3801
BUTTON, PLUG - Rotisserie	9.380
BUTTON, RELEASE - Oven Door	8.380
BUTTON - Switch Arm Glide	3.380
BUTTON - Top Spacer	1.3801
CABLE - Cooking Top	6.436
CAP - Lower Trim	16.376
CAP - Oven Liner Corner	9.376
CATCH, SPRING - Door	16.328
CHAIN - Drive	14.351
CHANNEL - Cooking Top Stop	6.0371
CHANNEL - Lead Cover	13.037
CHANNEL - Pulley	6.037
CHANNEL - Wiring	14.037
CLAMP - Blower Housing	14.327
CLAMP, BROIL ELEMENT RETAINER - Oven	13.327
CLAMP - Lead Wire	13.3271
CLAMP - Meat Temperature Ind Spacer	3.3271
CLAMP - Surface Unit Hinge	4.327
CLAMP - Thermostat Capillary Tube	3.327
CLIP - Filter	14.039
CLIP - Lead Wire	13.039
CLIP - Top Panel To Control Housing	7.039
CONNECTOR, FEMALE - Electrical	13.0485
CONNECTOR, FEMALE - Lead Wire Splice	13.0483
CONNECTOR, FEMALE - Lead Wire Splice (Vent Hood)	14.048
CONNECTOR - Line Terminal	13.048
CONNECTOR, LINE - Terminal Receptacle Jumper	13.0481
CONNECTOR, MALE - Electrical	13.0484
CONNECTOR, MALE - Lead Wire Splice	13.0482
CONNECTOR, MALE - Lead Wire Splice (Vent Hood)	14.0481
CONNECTOR, SLEEVE	13.0487
CONNECTOR, SOLDERLESS	13.0486
CONTACT - Bake Terminal	13.049
CONTACT - Ground Terminal Blade	13.0491
COOKMASTER AND TIME SIGNAL	2.374
COVER - Air Duct	14.3783
COVER - Control Housing	1.378
COVER - Cooking Top	6.378
COVER - Junction Box	14.3781
COVER - Meat Temperature Probe Recptl	13.3781
COVER - Plug In	14.3784
COVER - Rear Access	16.378
COVER - Rotisserie	14.378
COVER - Rotisserie Opening	7.378
COVER - Switch Box	14.3782
COVER - Terminal Block	13.378
CUP - Switch Water Seal	3.326
CUSHION - Cookmaster & Time Signal Spacer	2.400
DEFLECTOR - Heat	1.063
DIAL - Broiler Control	3.3813
DIAL - Lamp Selector Switch	3.3814
DIAL, SWITCH - Heat Minder	3.3811
DIAL, SWITCH - Infinite Heat Surf Unit	3.381
DIAL - Thermostat	3.3812
DOOR - Base Cabinet	16.070
DUCT, AIR	14.311
ELEMENT, HEATING - Bake	13.0801
ELEMENT, HEATING - Broil	13.080
END - Lamp Housing	1.395
ESCUTCHEON - Control Panel	1.081
FILTER, AIR	14.088
FORK, TURNING - Rotisserie	14.431
FRAME - Base Cabinet	16.096
FRAME - Cookmaster And Time Signal	2.096
FRAME, INSIDE - Oven Door	8.0961
FRAME, OUTSIDE - Oven Door	8.096
FUSE	13.098
GASKET - Oven Door Handle	8.099
GASKET - Surface Unit Terminal Blk Seal	4.099
GASKET - Switch Water Seal	3.099
GEAR - Sprocket	14.101
GLASS - Control Panel	1.103
GLASS - Cookmaster And Time Signal	2.103
GLASS, INNER - Oven Door	8.1031
GLASS - Lamp Housing	1.1031
GLASS, OUTER - Oven Door	8.103
GLASS - Oven Light	10.103
GRIDDLE, KANT SLIDE	14.485
GRILL - Broiler Pan	10.108
GROMMET, NEOPRENE - Conduit	14.109
GUIDE - Latch Channel	6.323
GUIDE - Shelf (Base Cabinet)	16.323
GUIDE - Shelf LH	10.3231
GUIDE - Shelf RH	10.323
HANDLE - Broiler Pan	10.110
HANDLE - Cooking Top	6.110
HANDLE, DOOR - Base Cabinet	16.110
HANDLE, DOOR - Oven	8.110
HARNESS, ELECTRICAL	13.438
HINGE, DOOR - LH Top And RH Bottom	16.3461
HINGE, DOOR - RH Top And LH Bottom	16.346
HOLDER, LAMP - Fluorescent	13.363
HOLDER, LAMP - Pilot	13.3631
HOOD, VENT	14.113
HOUSING - Blower	14.116
HOUSING - Control	1.116
HOUSING - Cooking Top	6.116
HOUSING - Terminal Block	13.116

ALPHABETICAL INDEX - Continued


DESCRIPTION	CODE
INDICATOR - Meat Temperature	3.248
INDICATOR - Pilot Lamp	13.248
INSULATION, ASBESTOS - Cooking Top Cover	15.1243
INSULATION, BULK	15.124
INSULATOR, ELECTRICAL - Broil Receptacle	13.126
INSULATOR, SLEEVE	13.1262
KNOB, CONTROL - Broiler Control	3.1304
KNOB, CONTROL - Cookmaster & Time Signal	2.130
KNOB, CONTROL - Lamp Selector Switch	3.130
KNOB, CONTROL - Meat Tender	3.1301
KNOB, CONTROL - Oven Thermostat	3.1303
KNOB, CONTROL - Surface Units	3.1302
KNOB - Latch Operating	6.350
LAMP, FLUORESCENT	13.132
LEVER - Latch Operating	6.356
LIGHT, PILOT - Oven	13.4891
LIGHT, PILOT - Surface Unit	13.489
LINER - Oven	9.136
LINK - Actuating Arm To Plate	14.3481
LINK - Trigger To Spring	14.348
MOTOR - Blower	14.1431
MOTOR - Cookmaster And Time Signal	2.143
MOTOR - Rotisserie	14.143
NUT - Bake Receptacle Terminal Blade	13.1491
NUT - Circuit Breaker (Vent Hood)	14.1491
NUT - Condensation Trim Spacer	7.149
NUT - Cooking Top Shipping	6.149
NUT - Disconnect Switch Slide	6.1491
NUT - Door Strike (Base Cabinet)	16.149
NUT - Heat Deflector	1.1492
NUT - Knurled - Lamp Selector Switch	3.1491
NUT - Lamp Housing Shield	1.149
NUT - Lamp Housing Top Trim	1.1491
NUT - Line Terminal Connector	13.1497
NUT - Meat Temperature Indicator	3.149
NUT - Oven Bake Element Baffle	13.1498
NUT - Oven Liner	9.149
NUT - Pilot Lamp Indicator	13.1495
NUT - Rear Access Cover (Base Cabinet)	16.1492
NUT - Shelf Guide (Base Cabinet)	16.1493
NUT - Surface Unit Disconnect Switch	3.1492
NUT - Temperature Prove Receptacle	13.149
NUT - Terminal Block	13.1492
NUT - Terminal Block Housing	13.1496
NUT - Terminal Block Terminal	13.1493
NUT - Trim (Vent Hood)	14.149
PAD - Control Panel Glass	1.153
PAD - Oven Liner	9.153
PAN - Broiler	10.336
PAN, LARGE - Surface Unit Drip	4.3361
PAN, SMALL - Surface Unit Drip	4.336
PANEL, BACK	7.310
PANEL, FRONT - Cooking Top	6.156
PANEL, FRONT - Hood Trim	14.1561
PANEL, FRONT - Vent Hood	14.156
PANEL, SIDE - Range LH	7.1591
PANEL, SIDE - Range RH	7.159
PANEL, TOP - Range	7.160
PIN - Cooking Top Latch	6.364
PIN, COTTER - Switch Operating Arm	3.163
PIN - Gear	14.364
PLATE - Condensate Trim	7.390
PLATE - Cooking Top Drip	6.390
PLATE, NAME - Hood	14.170
PROBE - Meat Temperature	13.458
PROTECTOR, ELECTRICAL - Circuit Breaker	14.174
PULLEY, CABLE - Cooking Top	6.177
RACK - Roaster Side	10.182
RACK - Rotisserie	14.182
RECEPTACLE - Appliance	13.1851
RECEPTACLE, FRONT - Bake Element Ter	13.1856
RECEPTACLE - Fuse	13.1856
RECEPTACLE, LAMP - Oven	13.1855
RECEPTACLE, REAR - Bake Element Terminal	13.1853
RECEPTACLE - Temperature Probe	13.1852
RETAINER - Cable Bracket	6.192
RETAINER - Conduit	13.1922
RETAINER - Door Spring Cover	8.1921
RETAINER - Fuse Receptacle	13.1923
RETAINER - Insulation	7.192
RETAINER - Oven Door Glass	8.192
RETAINER - Oven Lamp	13.1921
RETAINER, SPRING - Cable Pulley	6.1921
RETAINER, SPRING - Switch	3.192
RETAINER - Thermostat Bulb	10.192
RETAINER, TOP - Control Panel Glass	1.192
RECEPTACLE - Broil Element Terminal	13.185
RECEPTACLE, ELECTRICAL	14.185
RETAINER - Broil Receptacle	13.192
RETAINER - Front Panel	14.192
RING, RETAINER - Cooking Top Latch Pin	6.393
RING, RETAINER - Lower Arm Bracket	8.393
RING, RETAINER - Top Cover Roller	6.3931
RIVET - Oven Lamp Cover Retainer	13.194
ROD - Oven Door Latch Plate	8.1971
ROD, RELEASE - Oven Door	8.197
ROLLER - Cooking Top	6.199
ROLLER - Front Panel	14.199
ROLLER - Oven Door Stop	8.199
ROLLER - Top Cover	6.1991
ROTISSERIE KIT	14.428
SCREW - Bake Terminal Contact To Blade	13.2089
SCREW - Bottom Trim	7.2083
SCREW - Broil Element	13.2082
SCREW - Broil Receptacle Retainer	13.2084
SCREW - Broil Stop Spring	8.20815
SCREW - Broiler Control Switch	3.2086
SCREW - Condensate Trim Plate	7.2086
SCREW - Condensation Trim	7.2084
SCREW - Condensation Trim Spacer	7.20811
SCREW - Conduit Retainer	13.20818
SCREW - Control Housing	1.2084
SCREW - Control Housing Cover	1.2086
SCREW - Control Panel Escutcheon	1.2088
SCREW - Control Panel Escutcheon	1.2089
SCREW - Control Panel Glass Support	1.2081
SCREW - Control Panel Terminal Shield	13.20827
SCREW - Cooking Top Cable	6.2089
SCREW - Cooking Top Cover Slide Bracket	6.20812
SCREW - Cooking Top Drip Plate	6.2081
SCREW - Cooking Top Front Panel - Lower	6.2082
SCREW - Cooking Top Handle	6.20811
SCREW - Cooking Top Safety Stop Bracket	6.20814
SCREW - Cooking Top Stop Channel	6.2088
SCREW - Cookmaster And Time Signal	2.208
SCREW - Cookmaster & Time Signal Bracket	2.2081
SCREW - Cover Adjusting	6.2083
SCREW - Disconnect Switch	3.20811
SCREW - Disconnect Switch Shield	3.2088
SCREW - Disconnect Switch Skid Bracket	6.20815
SCREW - Door Arm Stop	8.20813
SCREW - Door Handle	8.208
SCREW - Door Handle (Base Cabinets)	16.2082
SCREW - Door Hinge (Base Cabinets)	16.2081
SCREW - Door Spring Retainer	8.20814
SCREW - Flair Range (Base Cabinets)	16.2086
SCREW - Fluorescent Lamp Ballast	13.20826
SCREW - Fluorescent Lamp Holder	13.20815
SCREW - Fluorescent Lamp Holder Bracket	13.20814
SCREW - Front Bake Unit Receptacle	13.20812
SCREW - Front Panel Retainer (Vent Hood)	14.20812
SCREW - Gears And Motor	14.2083
SCREW - Ground Strap	13.20819
SCREW - Ground Terminal Contact	13.20811
SCREW - Handle (Spatter Free Broiler Pan)	10.2081
SCREW - Heat Deflector	1.2087
SCREW - Hinge Pivot Bracket (Base Cabinets)	16.208
SCREW - Infinite Heat Surface Unit Sw	3.2084
SCREW - Inside Oven Door Frame	8.2083
SCREW - Junction Box (Vent Hood)	14.2088
SCREW - Junction Box Cover (Vent Hood)	14.2087
SCREW - Lamp Housing End	1.208
SCREW - Lamp Housing Lower Trim	1.2082

1962 / 1963


ALPHABETICAL INDEX - Continued

DESCRIPTION	CODE
SCREW - Lamp Housing Top Trim	1.2083
SCREW - Lamp Switch	3.2085
SCREW - Latch Channel Guide	6.2087
SCREW - Latch Knob	6.208
SCREW - Latch Operating Lever	6.2085
SCREW - Latch Spring Retainer Bracket	6.2084
SCREW - Lead Cover Channel	13.2081
SCREW - Lead Wire Clip	13.2083
SCREW - Lower Arm	8.2089
SCREW - Lower Arm Bracket	8.2086
SCREW - Lower Side Trim (Base Cabinet)	16.2089
SCREW - Lower Trim Cap (Base Cabinet)	16.20811
SCREW - Meat Temperature Indicator	3.2087
SCREW - Meat Temperature Indicator Bracket	3.2081
SCREW - Meat Temperature Indicator Spacer Clamp	3.20812
SCREW - Meat Temperature Probe Receptacle Cover	13.2086
SCREW - Meat Temperature Signal	13.2088
SCREW - Neutral Connector Block	13.20821
SCREW - Oven Angle	7.2085
SCREW - Oven Bake Element Baffle	13.2085
SCREW - Oven Door Latch Bracket	8.2082
SCREW - Oven Door Latch Plate Rod	8.20816
SCREW - Oven Door Release Arm	8.2088
SCREW - Oven Door Spring Adjusting	8.20811
SCREW - Oven Door Stop Roller	8.20817
SCREW - Oven Door Torque Shaft	8.2087
SCREW - Oven Lamp Receptacle	13.20813
SCREW - Oven Liner	9.208
SCREW - Oven Thermostat	3.2081
SCREW - Plug In Cover (Vent Hood)	14.20814
SCREW - Pulley Channel	6.2086
SCREW - Range Back Panel	7.2087
SCREW - Rear Access Cover (Base Cabinet)	16.20812
SCREW - Rotisserie	14.2081
SCREW - Rotisserie Opening Cover	7.208
SCREW - Sensor Retainer Bracket	4.2084
SCREW - Sensor Support	4.2081
SCREW - Set - Blower Wheel	14.20813
SCREW - Set - Oven Door Release Button	8.2081
SCREW - Shelf Guide	10.208
SCREW - Shelf Guide (Base Cabinet)	16.2085
SCREW - Side Panel	7.2088
SCREW - Speed Heat Switch	3.2083
SCREW - Speed Heat Unit Fuse Bracket	13.20824
SCREW - Starter Base	13.20816
SCREW - Surface Unit Bracket	4.2082
SCREW - Surface Unit Clamp To Bracket	4.208
SCREW - Surface Unit Terminal Block	4.2083
SCREW - Switch Box Cover	14.2089
SCREW - Switch Bracket	3.2082
SCREW - Switch Insulator	14.2084
SCREW - Switch (Rotisserie)	14.2085
SCREW - Switch Water Seal Cup	3.20813
SCREW - Terminal	13.208
SCREW - Terminal Block	13.20817
SCREW - Terminal Block Cover	13.20825
SCREW - Terminal Block Housing	13.20822
SCREW - Thermostat Bracket	3.2089
SCREW - Thermostat Capillary Tube Clamp	3.20814
SCREW - Thumb - Rotisserie Fork	14.208
SCREW - Top Spacer Washer	1.2085
SCREW - Top Trim	7.2081
SCREW - Torque Shaft Bearing	8.20812
SCREW - Torque Shaft Lower Bearing	8.2084
SCREW - Torque Shaft Upper Bearing	8.2085
SCREW - Transformer	13.2087
SCREW - Trim	7.2082
SCREW - Trim (Vent Hood)	14.2086
SCREW - Upper Side Trim (Base Cabinet)	16.2087
SCREW - Vent Hood	14.2082
SCREW - Wiring Channel (Vent Hood)	14.20811
SEAL, DOOR - Bottom	8.203
SEAL, DOOR - Side	8.2031
SEAL, RUBBER - Lamp Housing Top Trim	1.204
SENSOR - Heat Minder	4.490
SHAFT - Torque	8.210
SHELF - Cabinet	16.216
SHELF - Oven	10.213
SHIELD - Disconnect Switch	3.216
SHIELD - Lamp Housing	1.216
SHIELD, SCREW - Trim	7.216
SHIELD - Surface Unit Switch	3.2161
SHIELD, TERMINAL - Control Panel	13.216
SIGNAL - Meat Temperature	13.457
SLIDE - Cooking Top Cover	6.120
SLIDE - Disconnect Switch	6.1201
SPACER - Condensation Trim	7.222
SPACER - Latch Channel Guide	6.222
SPACER - Oven Door Lower Arm	8.222
SPIT - Rotisserie	14.430
SPLICE, MALE - Electrical	13.394
SPRING - Broil Stop	8.2262
SPRING - Filter	14.2262
SPRING - Front Panel Roller	14.2263
SPRING - Latch Pin Operating	6.2261
SPRING - Link Wire	14.226
SPRING - Oven Door Counterbalance	8.2261
SPRING - Oven Door Latch	8.226
SPRING - Switch	14.2261
SPRING - Top Cover	6.226
STARTER - Fluorescent Lamp	13.230
STOP - Cooking Top Cover	6.235
STOP - Door Arm	8.235
STRAP, GROUND	13.386
STRAP - Meat Temperature Ind Lead Wires	13.322
STRIKE - Door	16.349
SUPPORT - Bake Element	13.321
SUPPORT - Control Panel Glass	1.321
SUPPORT, HANDLE - Cooking Top	6.321
SUPPORT - Heat Minder Sensor	4.321
SUPPORT - Surface Unit Large	4.3212
SUPPORT - Surface Unit Small	4.3211
SWITCH - Blower Operating	14.396
SWITCH, CONTROL - Broiler	3.396
SWITCH - Cookmaster And Time Signal	2.396
SWITCH, DISCONNECT - Surface Units	3.3961
SWITCH - Rotisserie	14.3961
SWITCH, SELECTOR - Lamp	3.403
SWITCH, SURFACE UNIT - Heat Minder	3.285
SWITCH, SURFACE UNIT - Infinite Heat	3.2852
SWITCH, SURFACE UNIT - Speed Heat	3.2851
TERMINAL, ELECTRIC	13.329
THERMOSTAT - Oven	3.242
TOP - Cooking	6.258
TRANSFORMER	13.251
TRIM, BOTTOM - Range	7.2532
TRIM - Circuit Breaker	14.2532
TRIM - Condensation	7.2534
TRIM - Cooking Top Housing	6.253
TRIM, FRONT - Hood	14.2531
TRIM - Glass Control Panel End	1.2532
TRIM - Hood Housing	14.253
TRIM, LOWER - Lamp Housing	1.253
TRIM, SIDE - Lower	7.2531
TRIM, SIDE - Lower (Base Cabinet)	16.2531
TRIM, SIDE - Upper	7.253
TRIM, SIDE - Upper (Base Cabinet)	16.253
TRIM, TOP - Lamp Housing	1.2531
TRIM, TOP - Range	7.2533
UNIT SURFACE 6 INCH	4.266
UNIT SURFACE 8 INCH	4.2661
WASHER - Broil Stop Spring	8.2796
WASHER - Circuit Breaker (Vent Hoods)	14.2792
WASHER - Control Knob Spacer	3.279
WASHER - Cooking Top Cable Pulley	6.279
WASHER - Flair Range	16.2791
WASHER - Gears And Motor	14.279
WASHER - Lamp Selector Switch	3.2791
WASHER - Lower Arm Bracket	8.2792
WASHER - Lower Torque Shaft Bearing	8.279
WASHER - Oven Door Handle	8.2793
WASHER - Oven Door Release Arm	8.2794
WASHER - Oven Door Spring Adjusting	8.2791
WASHER - Roller	6.2791
WASHER - Shelf Guide	10.279
WASHER - Temperature Probe Receptacle	13.279
WASHER - Terminal	13.2792
WASHER - Top Spacer	1.279
WASHER - Trim (Vent Hood)	14.2791
WHEEL, BLOWER ADJUSTING	14.341
WRENCH - Glider Button	16.282


1962 AND 1963 PRODUCT VIEWS

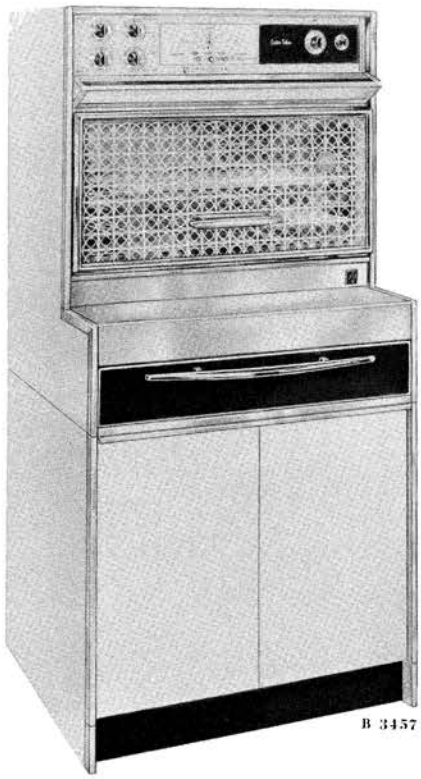

Model RCDB-630-2 with B-30 Base Cabinet

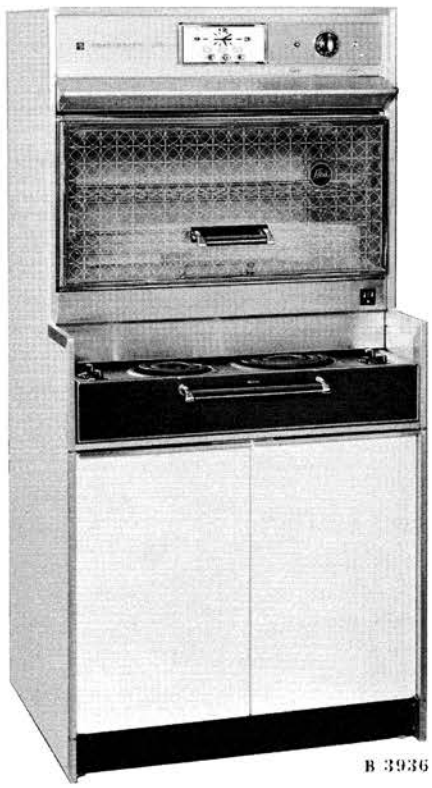


Model RDF-630 with B-30 Base Cabinet

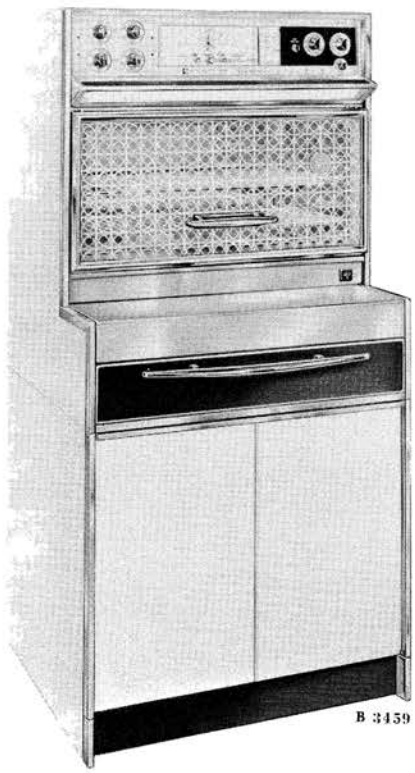


Model RCIB-635-2 with B-30 Base Cabinet

1962 AND 1963 PRODUCT VIEWS

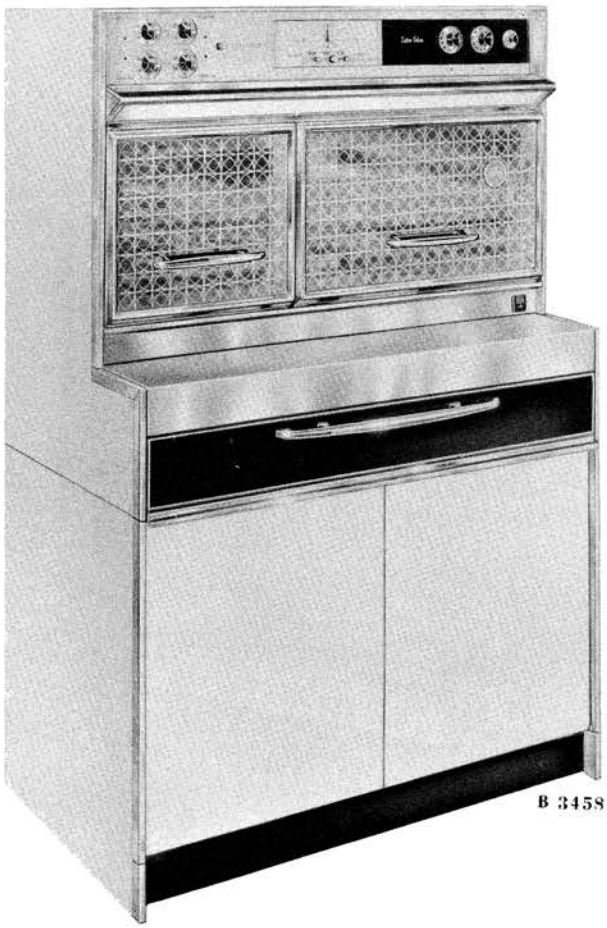


Model RCDB-640-2 with B-40 Base Cabinet

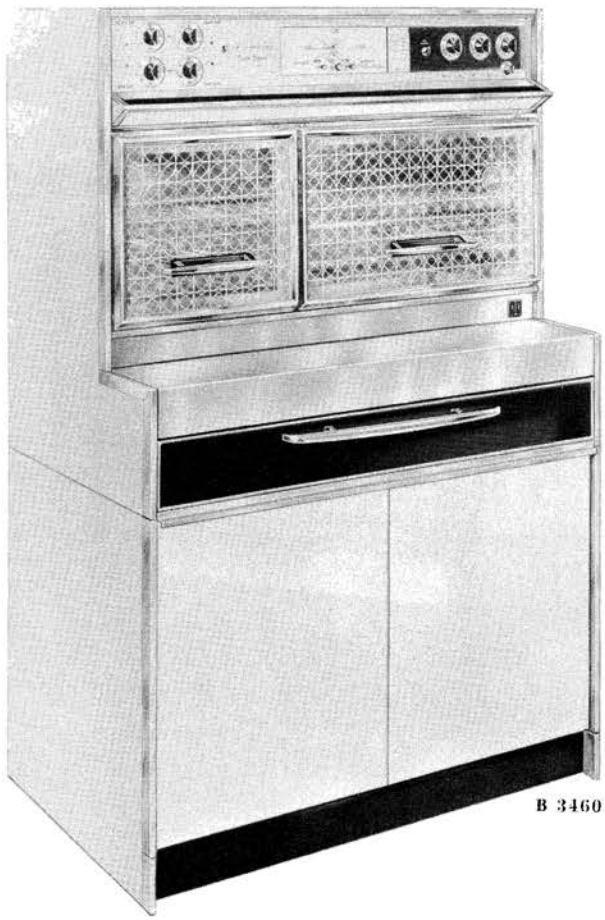

Model RCIB-645-2 with B-40 Base Cabinet

OVEN DOORS AND ACTUATING PARTS

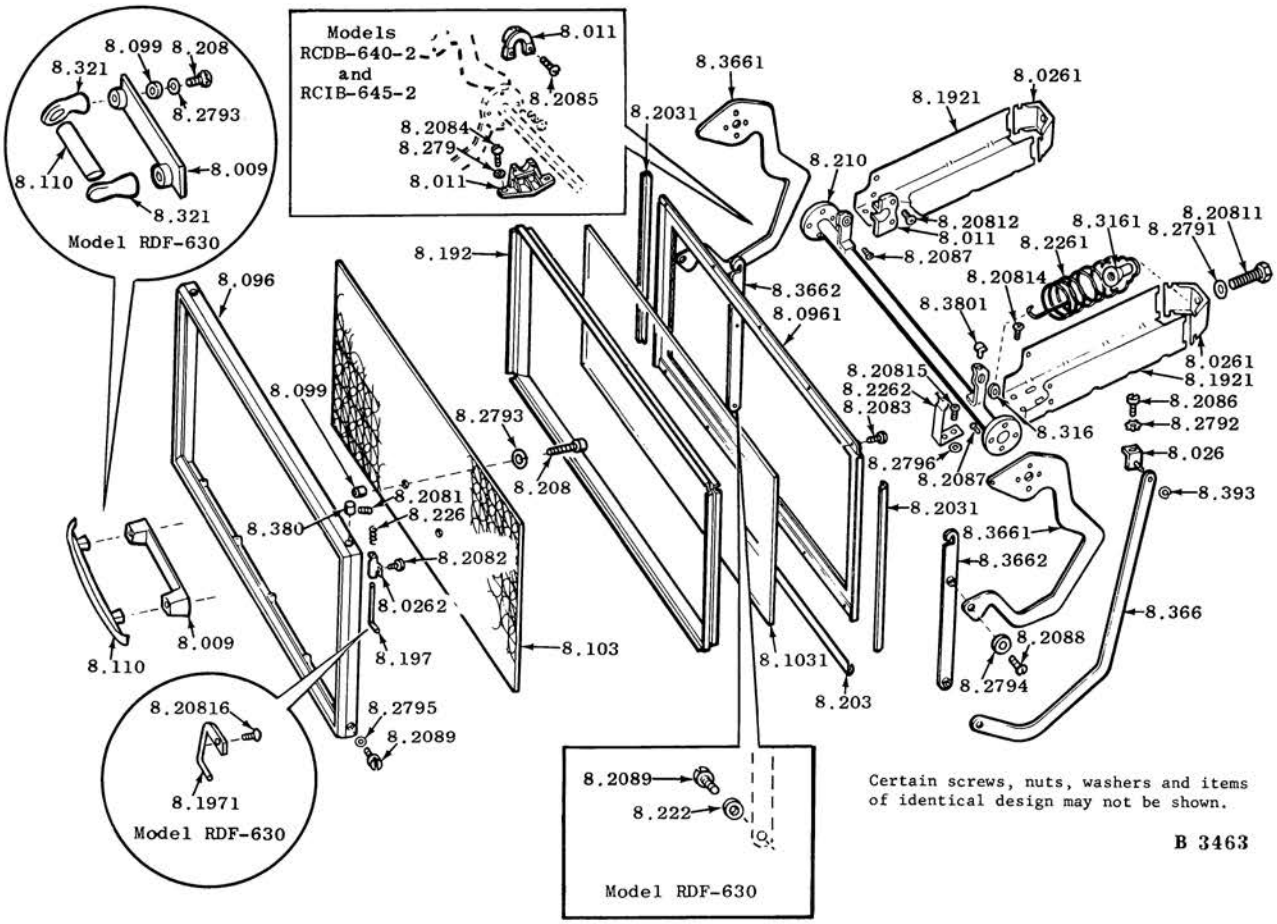

Certain screws, nuts, washers and items of identical design may not be shown.

B 3463


Model RCIB-635-2

This illustration may also be used for the selection of parts for models RCDB-630-2, RDF-630, RCDB-640-2 and RCIB-645-2, but all parts shown are not used on these models.

Models RCDB-640-2 and RCIB-645-2 have two oven doors. Parts are similar for both doors.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS

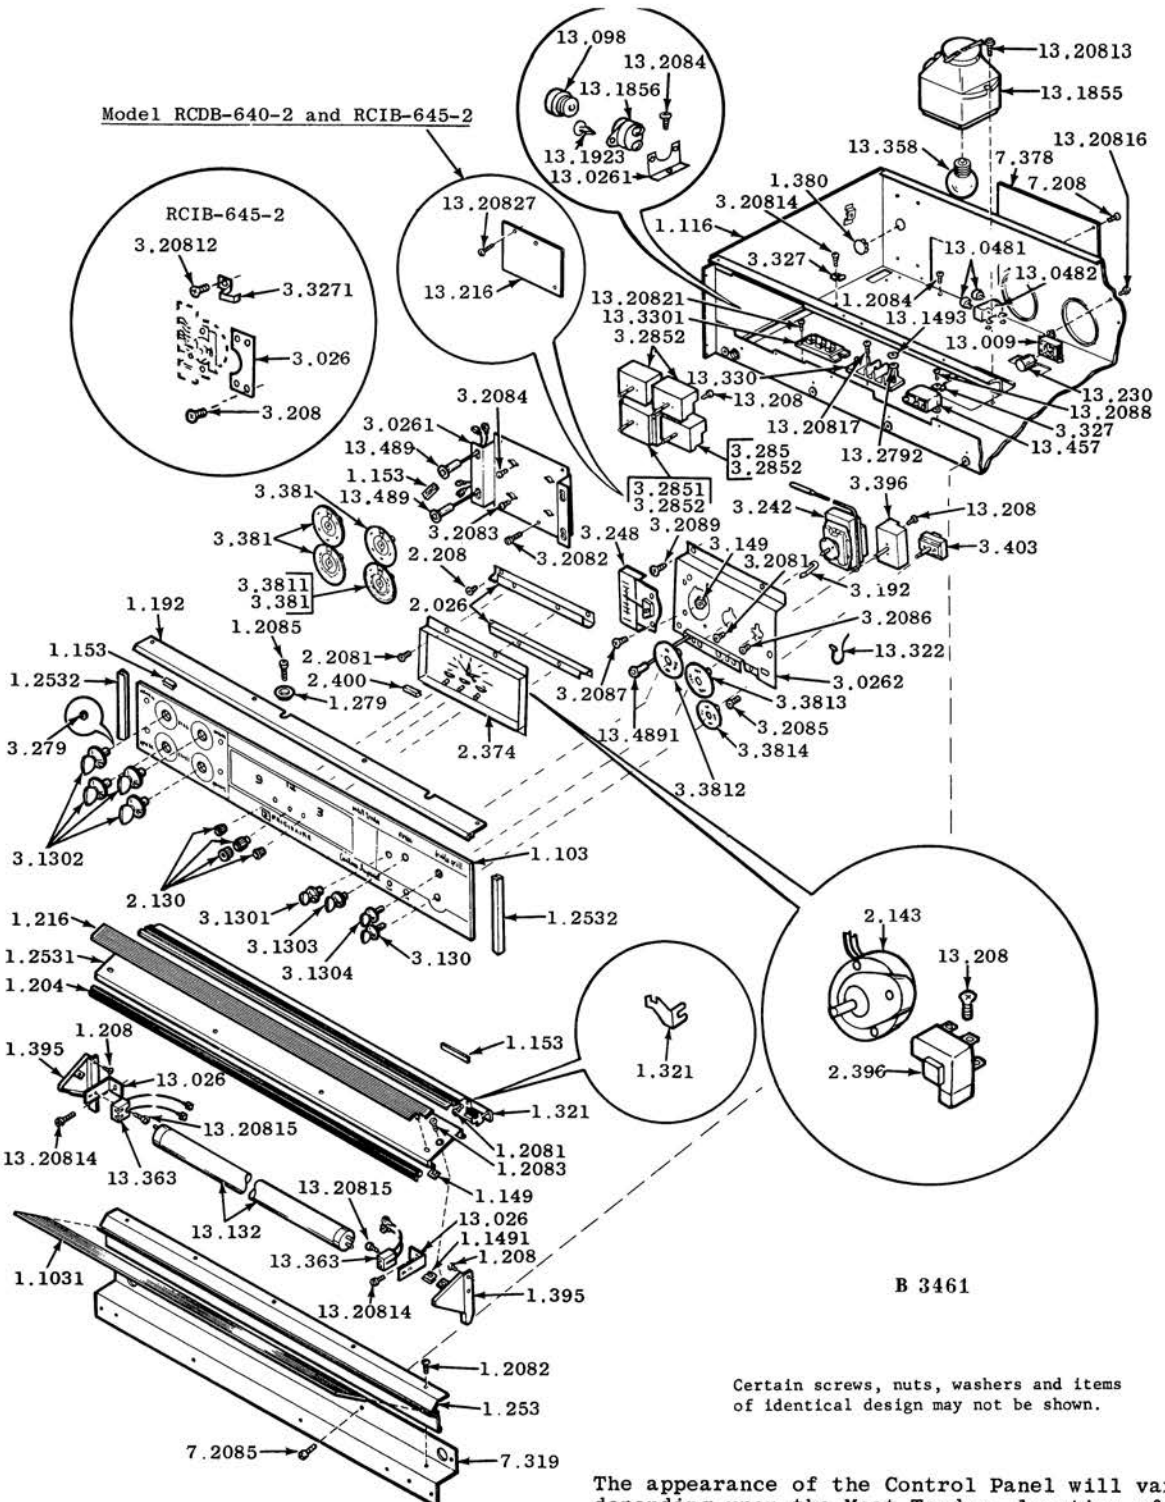

Certain screws, nuts, washers and items of identical design may not be shown.


The appearance of the Control Panel will vary depending upon the Meat Tender, location of the Lamp Selector Switch and number of Thermostats required for the particular product.

Model RCIB-635-2

This illustration may also be used for the selection of parts for models RCDB-630-2, RCDB-640-2 and RCIB-645-2, but all parts shown are not used on these models.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

CONTROL PANEL, COOK-MASTER AND PARTS

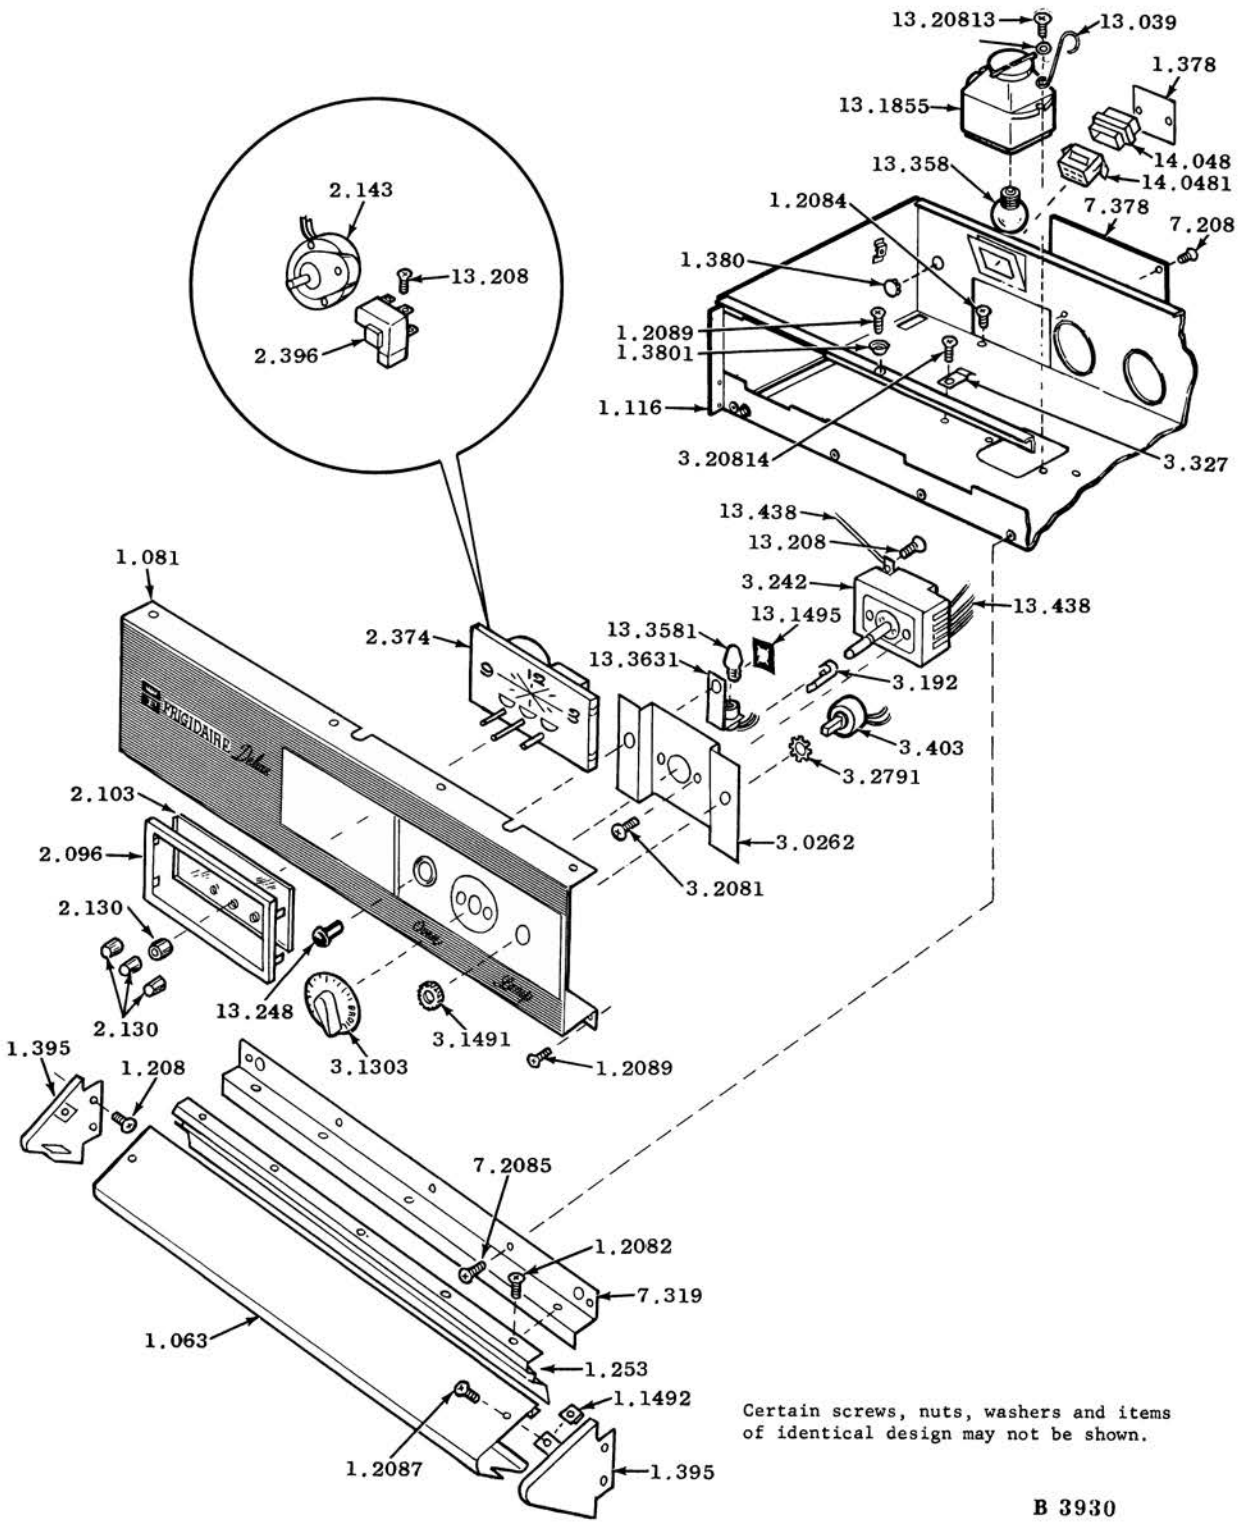


Certain screws, nuts, washers and items of identical design may not be shown.

B 3930

Model RDF-630

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

COOKING TOP, SURFACE UNITS AND PARTS

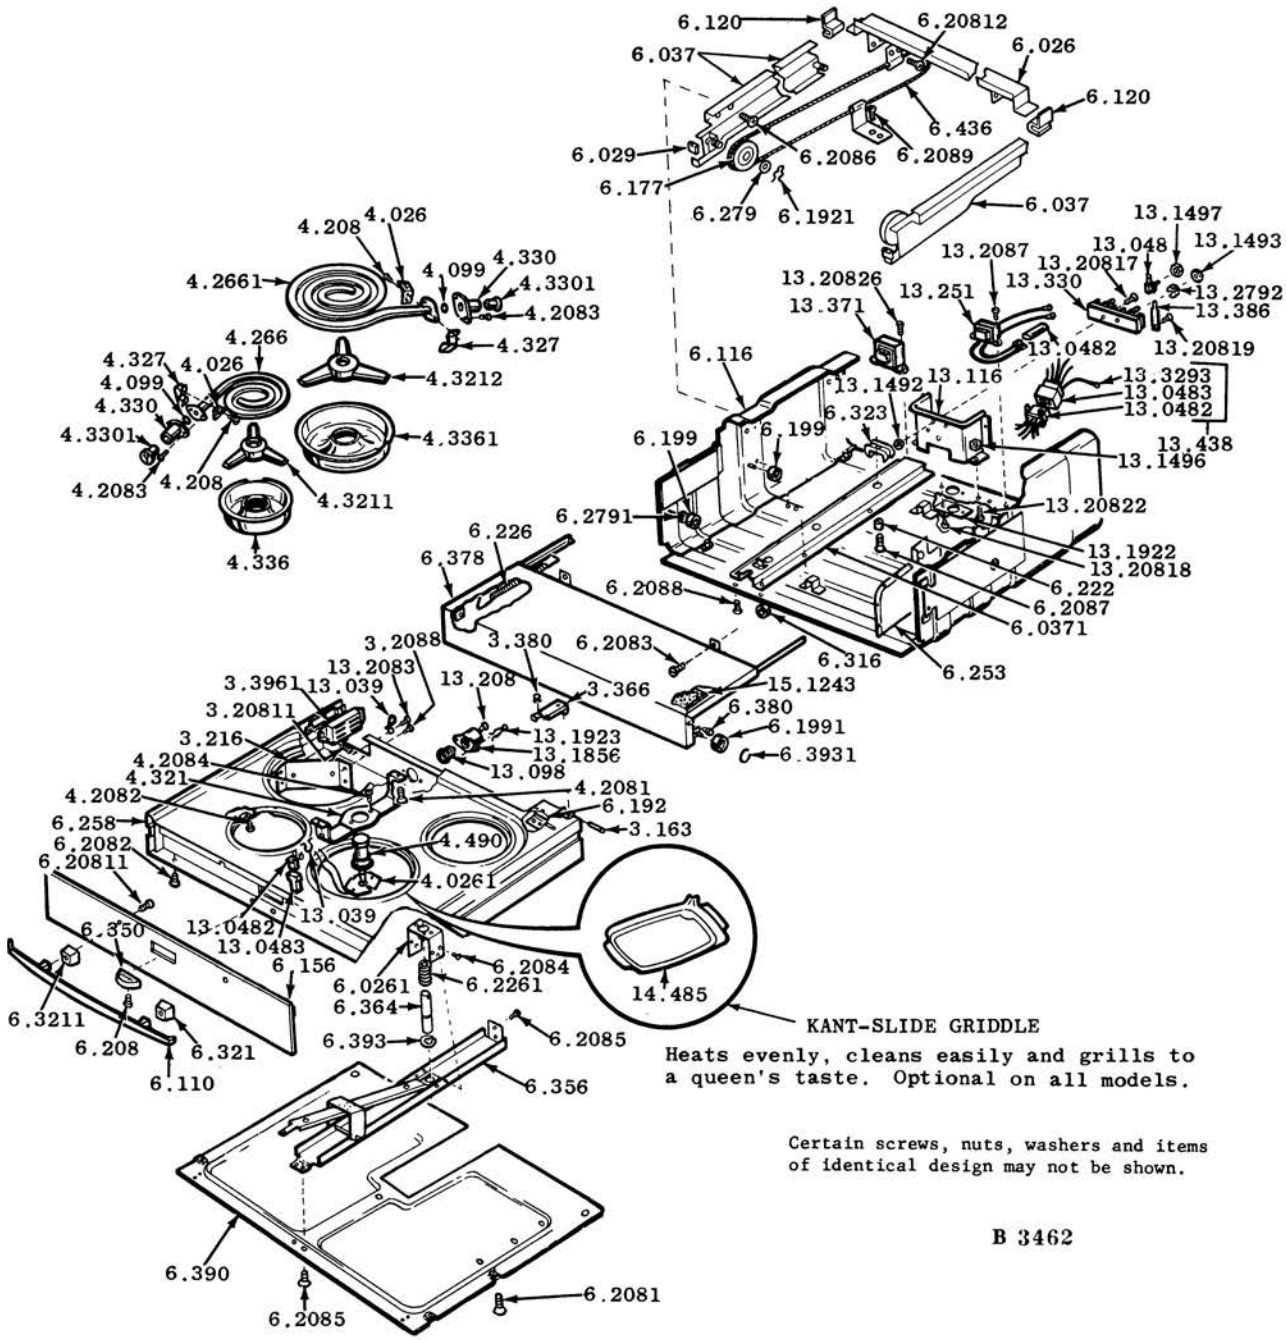

KANT-SLIDE GRIDDLE

Heats evenly, cleans easily and grills to a queen's taste. Optional on all models.

Certain screws, nuts, washers and items of identical design may not be shown.

B 3462


Model RCIB-635-2

This illustration may also be used for the selection of parts for models RCDB-630-2, RCDB-640-2 and RCIB-645-2, but all parts shown are not used on these models.

Models RCDB-630-2 and RCDB-640-2 appear the same as models RCIB-635-2 and RCIB-645-2, except that they have no speed heat or heat minder units.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

COOKING TOP, SURFACE UNITS AND PARTS

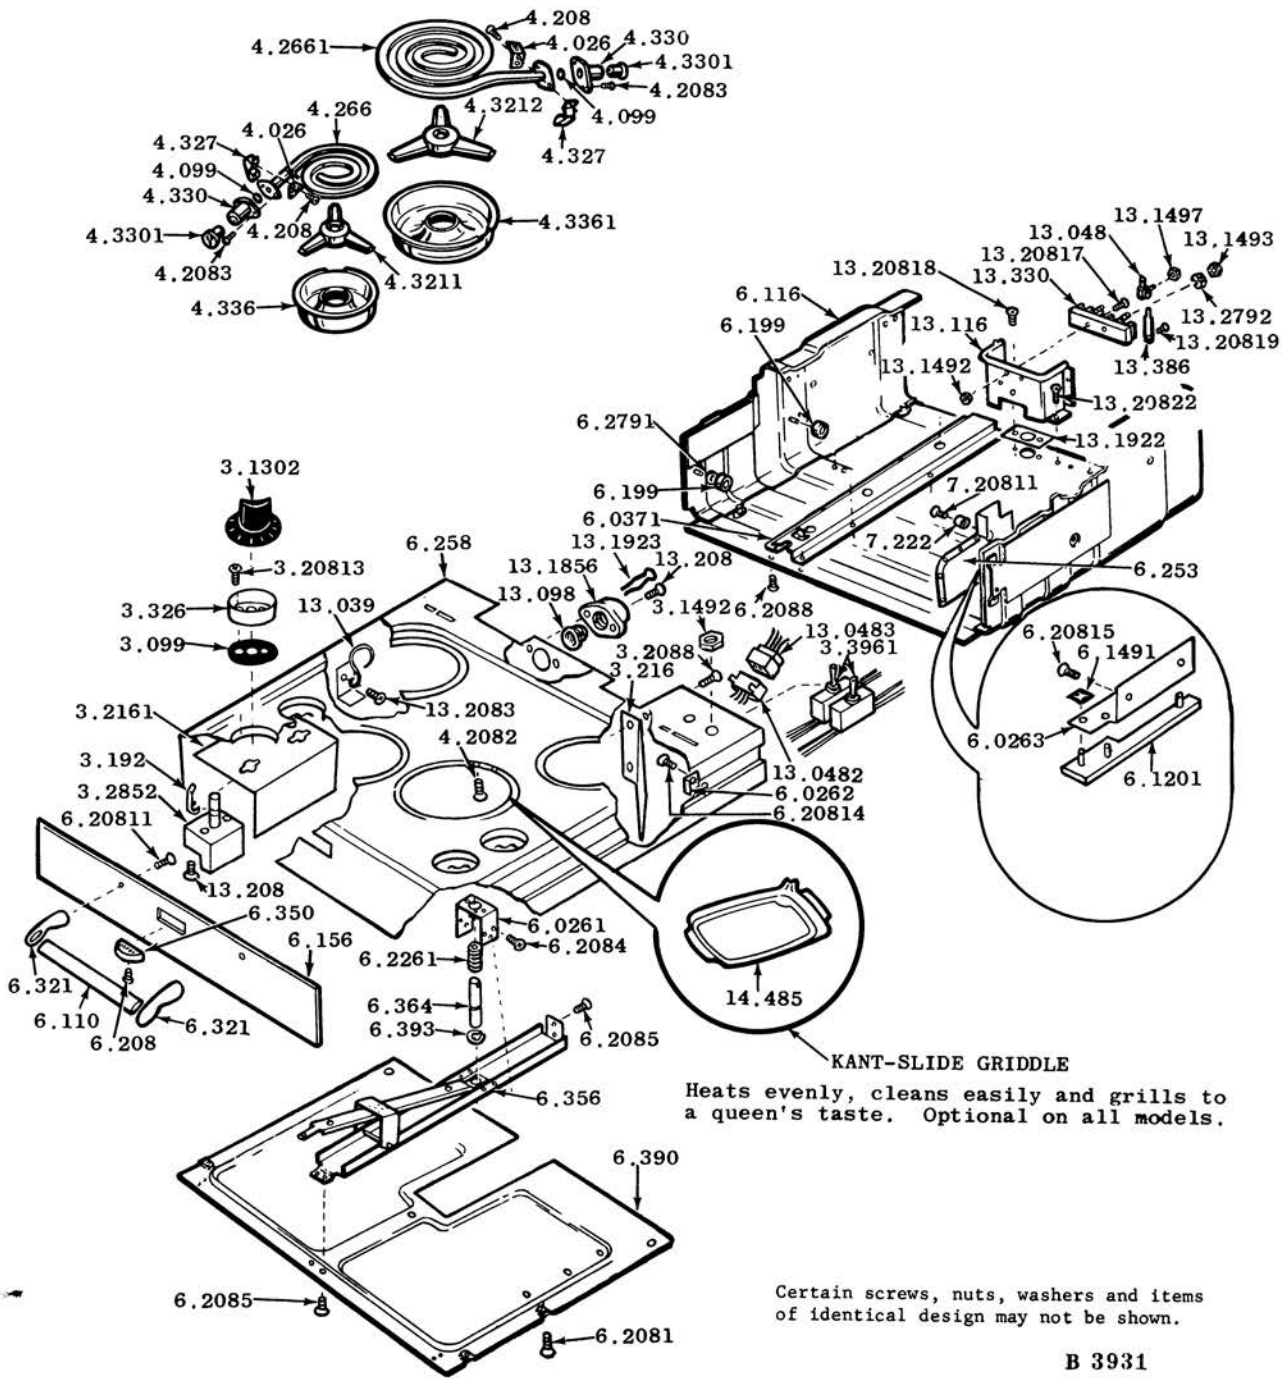

Heats evenly, cleans easily and grills to a queen's taste. Optional on all models.


Certain screws, nuts, washers and items of identical design may not be shown.

B 3931

Model RDF-630

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

OVEN LINERS AND INTERIOR PARTS

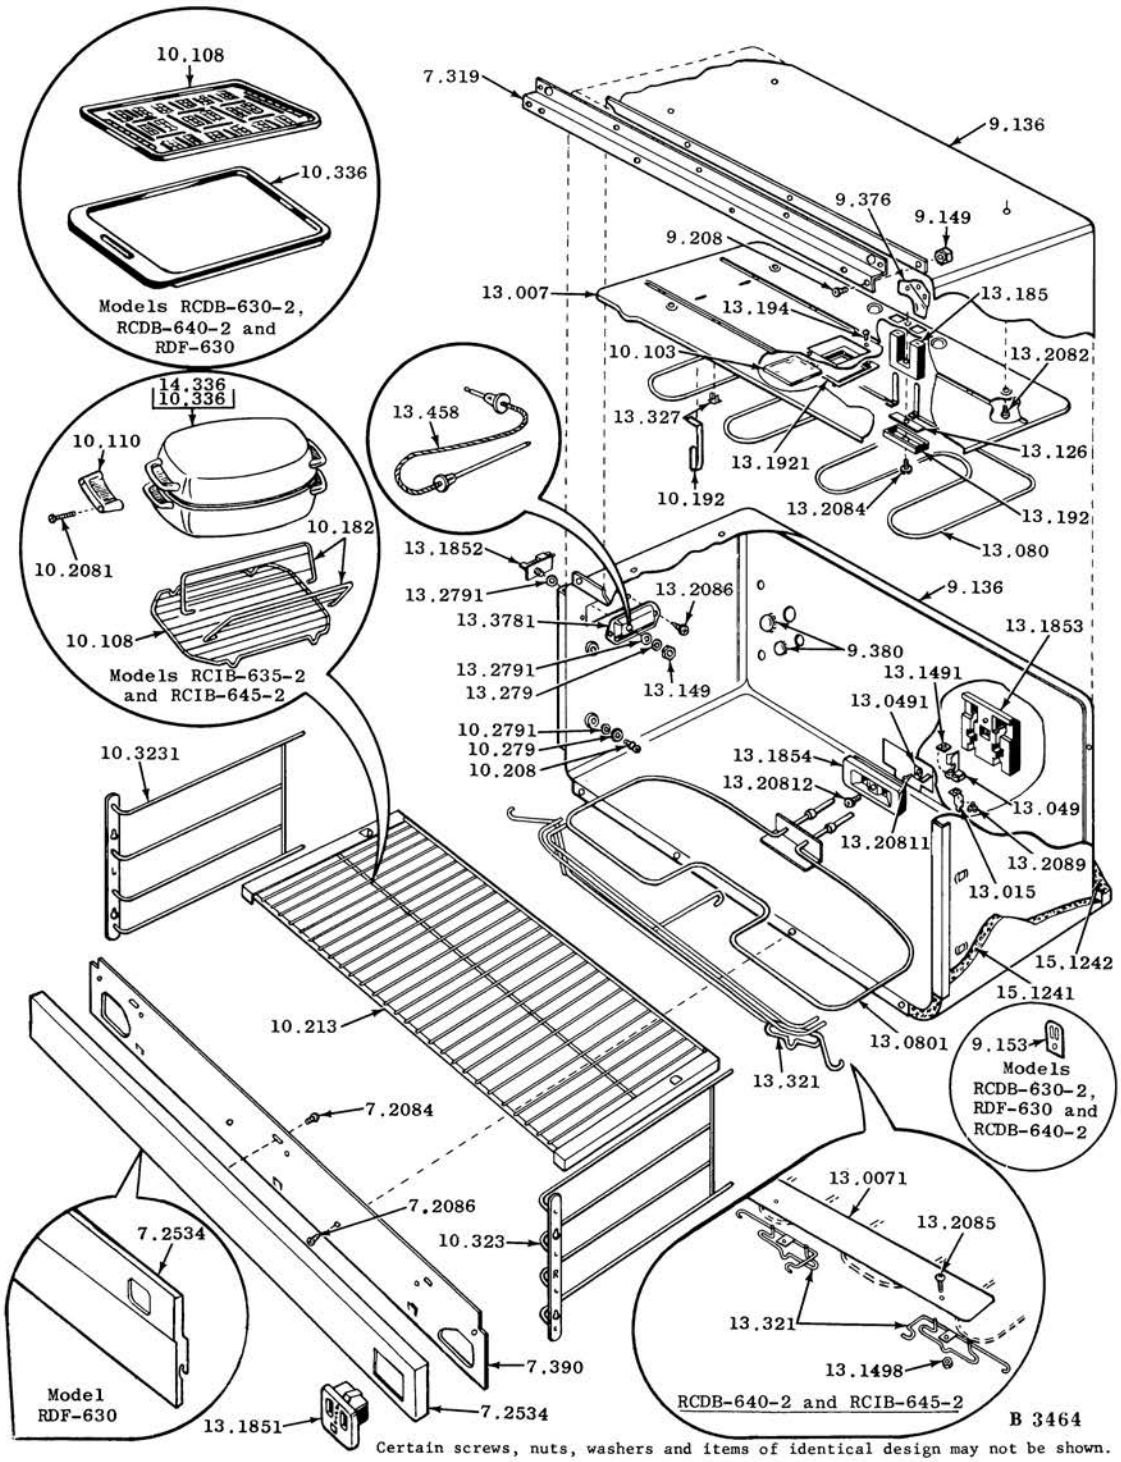


Certain screws, nuts, washers and items of identical design may not be shown.

Model RCIB-635-2

This illustration may be used for the selection of parts for models RCDB-630-2, RDF-630, RCDB-640-2 and RCIB-645-2, but all parts shown are not used on these models.

NOTE: Models RCDB-640-2 and RCIB-645-2 have two ovens. Parts are similar for both ovens.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

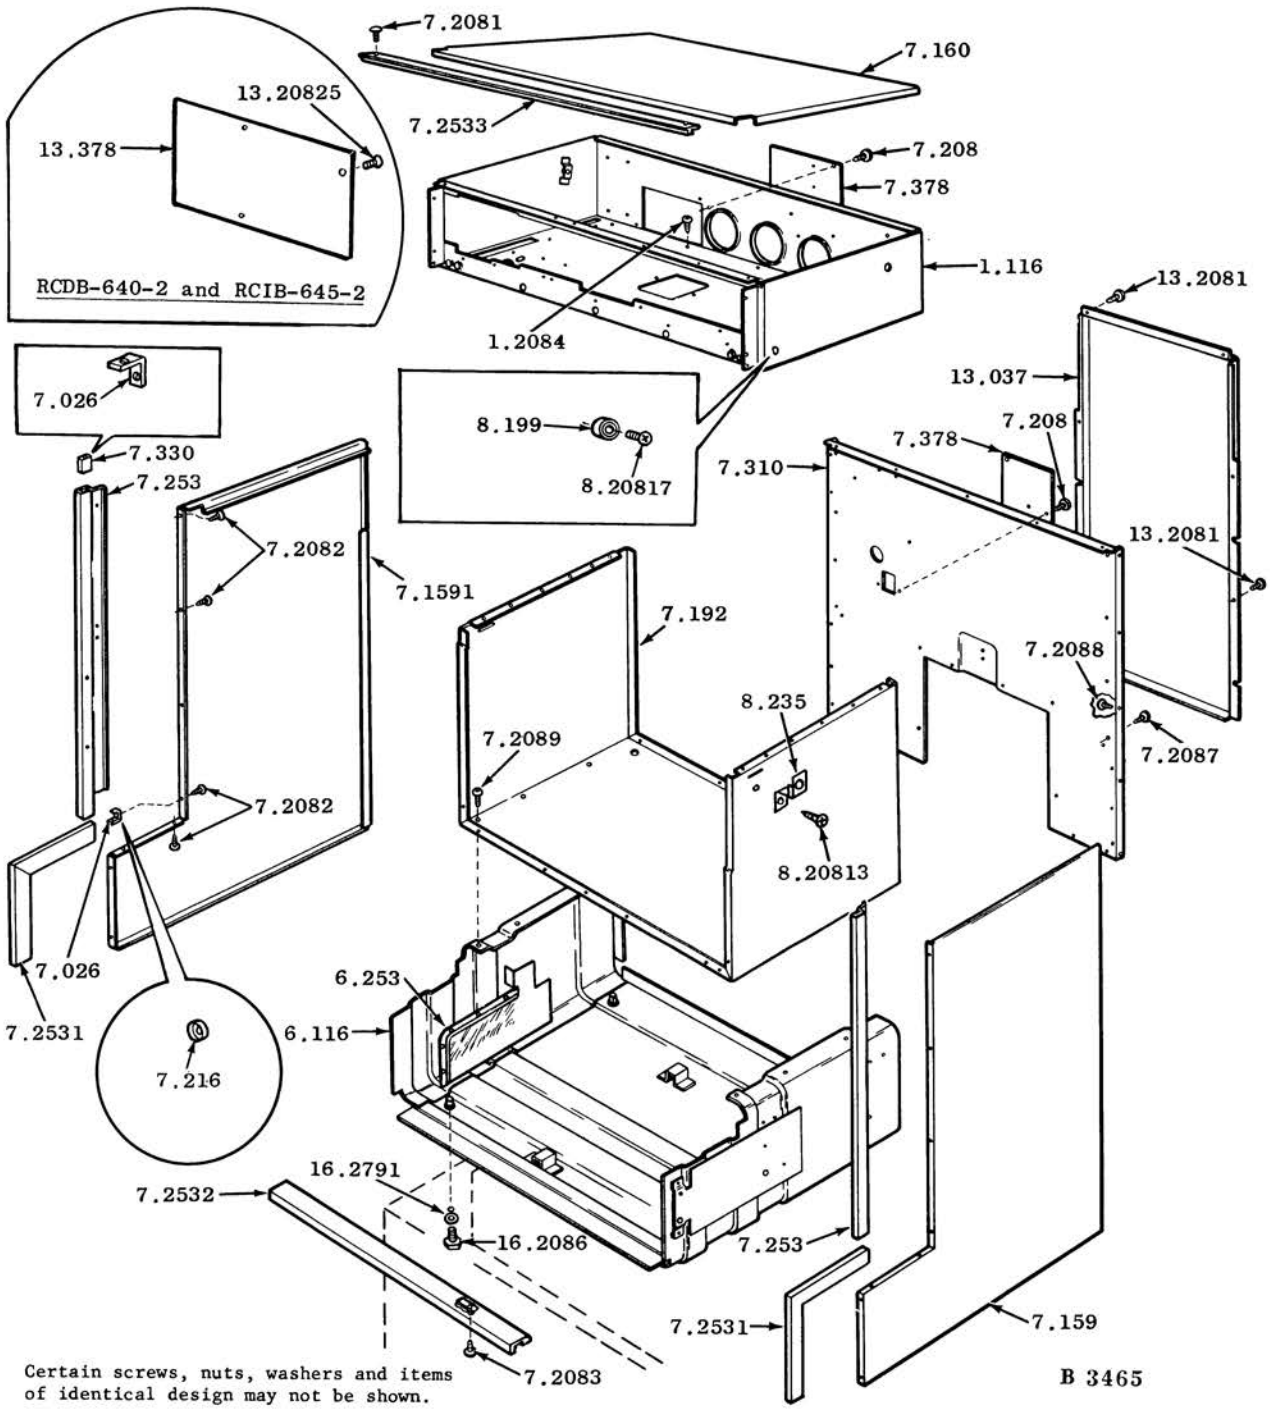


Model RCIB-635-2

This illustration may also be used for the selection of parts for models RCDB-630-2, RDF-630, RCDB-640-2 and RCIB-645-2, but all parts shown are not used on these models.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

BASE CABINETS AND PARTS

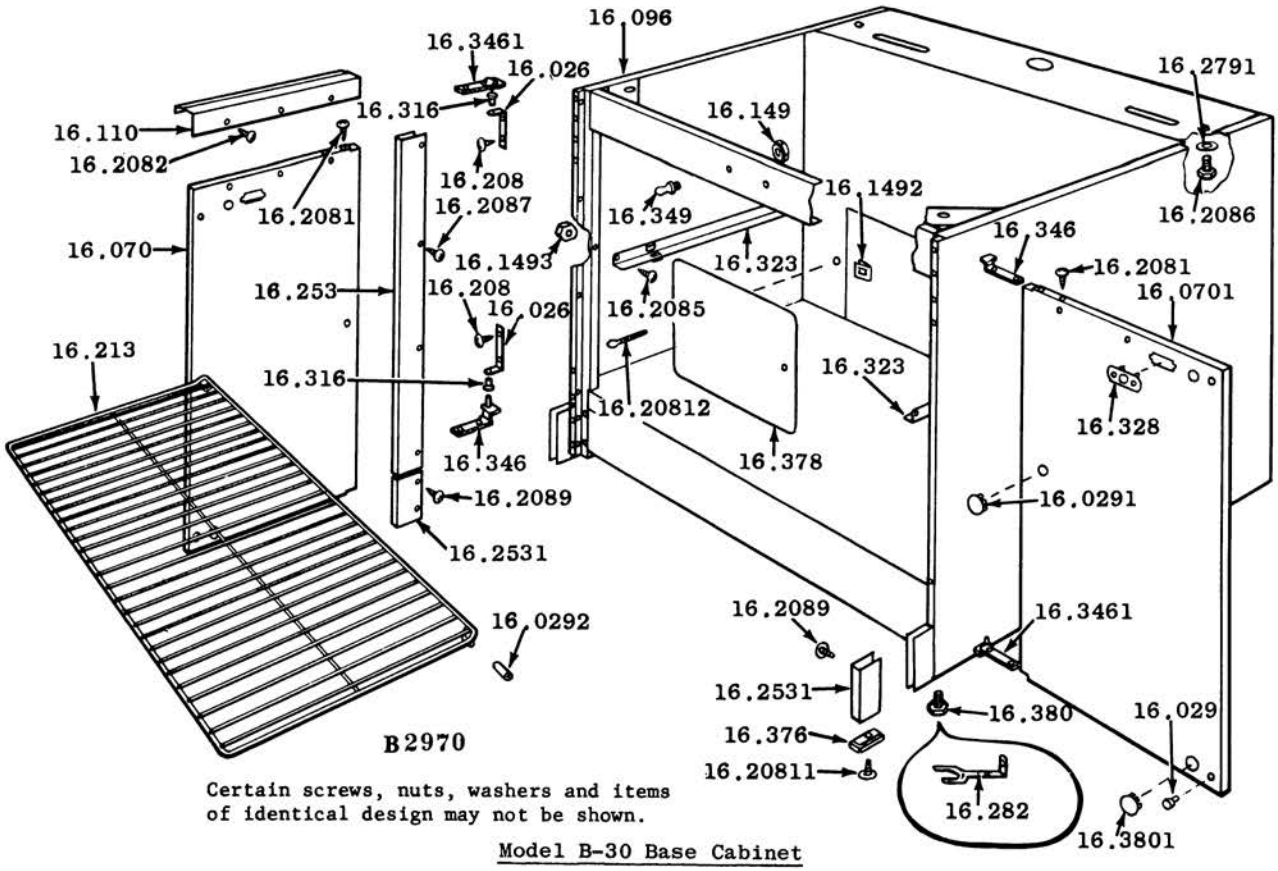


Certain screws, nuts, washers and items of identical design may not be shown.

Model B-30 Base Cabinet

The B-40 Base Cabinet appears the same as the B-30 Base Cabinet except that it has two shelves and is wider.
Use B-30 Base Cabinet illustrated with models RCDB-630-2, RCIB-635-2 and RDF-630.
Use B-40 Base Cabinet with models RCDB-640-2 and RCIB-645-2.

14.428 ROTISSERIE - ACCESSORY

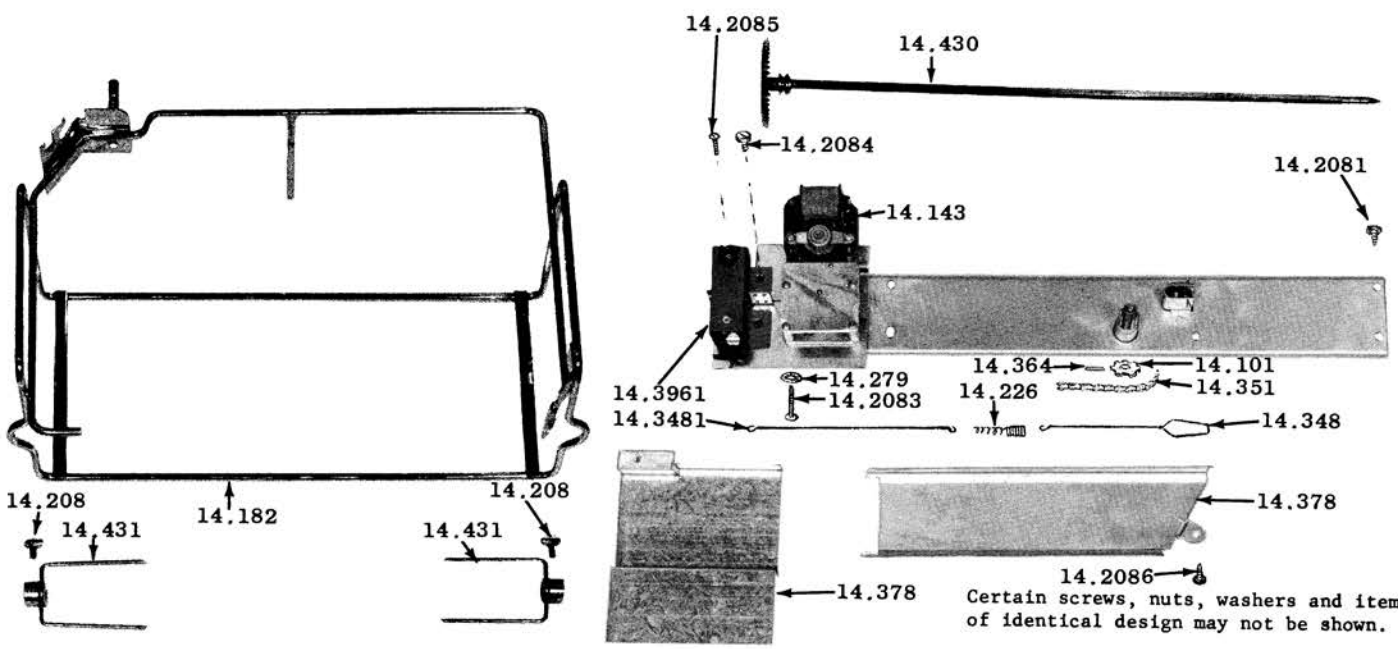


Certain screws, nuts, washers and items of identical design may not be shown.

Models RCDB-630-2, RCDB-640-2, RCIB-635-2 and RCIB-645-2

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.


14.113 VENT HOOD - ACCESSORY



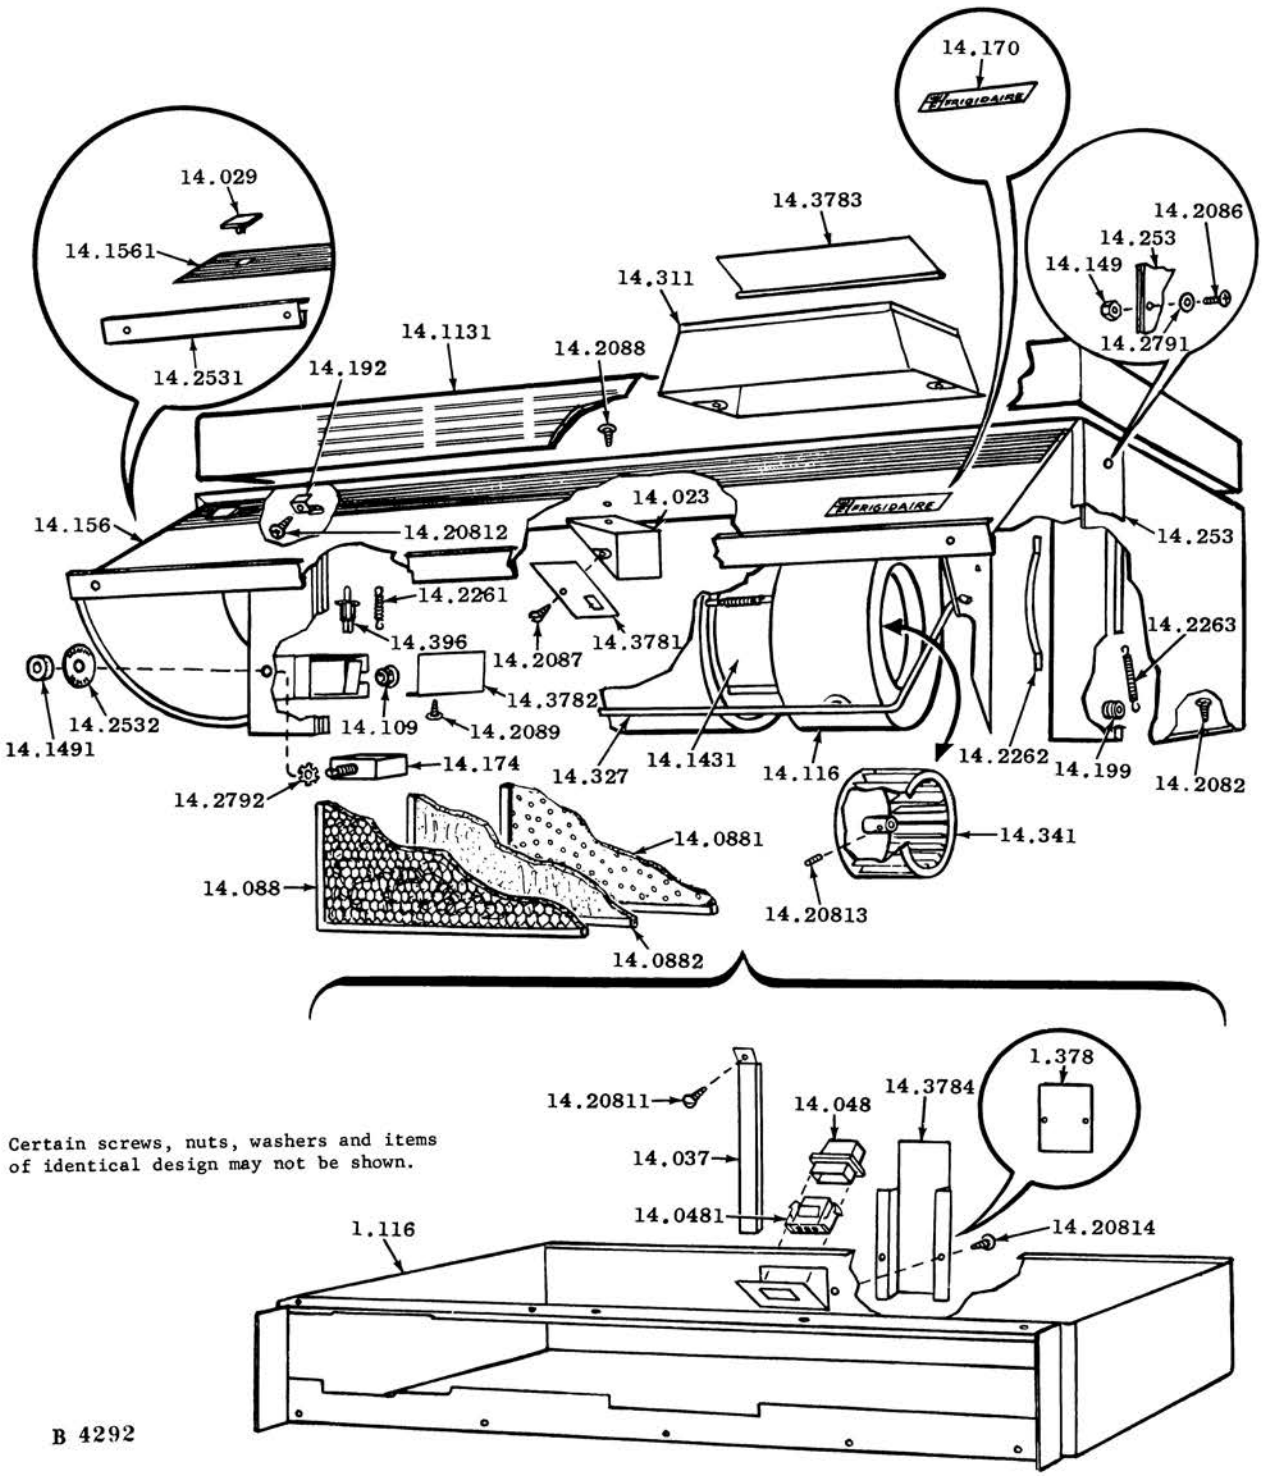


Models RDH-630, RCDH-630, RCDH-640, RCIH-635 and RCIH-645

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

ELECTRICAL CONNECTOR IDENTIFICATION CHART

PIECE	PART NUMBER	DESCRIPTION	DATA
	P 5873786 (10 in Pkg.)	#6 EYELET - COPPER - TIN-VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	P 5873787 (10 in Pkg.)	#8 EYELET - COPPER - TIN-VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	P 5873788 (10 in Pkg.)	#10 EYELET - COPPER - TIN-VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	5428475 628321 5899914 5894191 5427015 5426525 5427014 5894189 5426495 9408527	BDG. HEAD BRASS TERMINAL SCREW	4-36 X 1/4" 4-40 X 5/16" 4-40 X 7/16" 6-32 X 1/4" 8-32 X 1/4" 8-32 X 3/8" 8-32 X 1/2" 8-32 X 5/8" 10-32 X 1/4" 10-32 X 1/2"
	7529602	ST. RECEPTACLE BRASS	#18 TWO WIRE .020 X 3/16" TAB
	P 5875093 (20 in Pkg.)	STEEL - NICKEL LOCK TAB	#14 TO #18 ONE WIRE .030 X 1/4" TAB
	P 6569386 (20 in Pkg.)	BRASS LOCK TAB	#18 TWO WIRE .030 X 1/4" TAB
	P 7535219 (12 in Pkg.)	ST. RECEPTACLE STEEL - NICKEL	#14 TWO WIRE .030 X 1/4" TAB
	7547988	ST. RECEPTACLE BRASS - TIN	#18 TO #22 ONE WIRE .032 X .205 TAB
	6592002	HARNESS HOUSING RECPTL BRASS - TIN	#16 TWO WIRE .030 X 1/4" TAB
	P 5875094 (20 in Pkg.)	ST. PIGGY-BACK RECPTL BRASS - TIN	#14 TO #18 ONE WIRE .030 X 1/4" TAB
	P 5875091 (10 in Pkg.)	FLAG RECEPTACLE BRASS - TIN	#16 TO #20 ONE WIRE .020 X 3/16" TAB
	P 5875092 (10 in Pkg.)	FLAG RECEPTACLE BRASS - TIN	#12 TO #18 ONE WIRE .030 X 1/4" TAB
	7547989	FLAG RECEPTACLE BRASS - TIN	#14 TO #20 ONE WIRE .032 X .205 TAB
	P 7529179 (6 in Pkg.)	ADAPTER - 3 TERMINAL BRASS	.030 X 1/4" TABS
	5223619	RECEPTACLE TERMINAL & SCREW ASSY. BRASS - TIN	.030 X 1/4" TAB #6 - 32 SCREW
	6568735	TAB - TERMINAL BRASS - TIN	#16 TO #18 ONE WIRE .012 X 3/32" TAB
	2973916	TAB-TERMINAL BRONZE-TIN LOCK TAB	#14 TO #16 WIRE .016 X 1/8" TAB
	5438535	TAB TERMINAL ADAPTER-BRASS	.030 X 1/4" TAB TO #8 SCREW
	P 6592122 (12 in Pkg.)	TAB TERMINAL BRASS - TIN	#16 TWO WIRE .016 X 1/4" TAB
	P 5873789 (10 in Pkg.)	BULLET NOSE CONNECTOR COPPER - TIN	#14 TO #16 WIRE

PIECE	PART NUMBER	DESCRIPTION	DATA
	P 5877822 (10 in Pkg.)	BULLET NOSE TO BLADE CONN. (MALE) BRASS - TIN	.030 X 1/4" TAB
	P 5877823 (20 in Pkg.)	BULLET NOSE TO BLADE CONN.(FEMALE) BRASS - TIN	.030 X 1/4" TAB
	P 5431641 (10 in Pkg.)	SLEEVE BLADE CONNECTOR (MALE) BRASS-NYLON SLEEVE	.030 X 1/4" TAB
	P 5873790 (10 in Pkg.)	SLEEVE SPLICE CONNECTOR-BRASS VINYL SLEEVE	#14 TO #16 ONE WIRE .115 TO .170 INSUL. DIA.
	6569360	GROUND PRESSURE CONNECTOR COPPER-TIN	.132" I.D.
	5423696	INSULATING SLEEVING 37-1/2" LONG FIBERGLASS	FOR #10 WIRE
	6568691	INSULATING SLEEVING VINYL	3/16" I.D. X 1 7/16" LONG
	7529395	SILICONE	3/16" I.D. X 1" LONG
	6506745 7528468 6568794 5438151 2977594 2984780	HOUSING SPLICE -MALE SINGLE LEAD WIRE THREE LEAD WIRES FOUR LEAD WIRES SIX LEAD WIRES SIX LEAD WIRES TWELVE LEAD WIRES	
	6566746 7529998 6568739 6567412 2977593 7537908 2984781	HOUSING SPLICE-FEMALE SINGLE LEAD WIRE THREE LEAD WIRES FOUR LEAD WIRES SIX LEAD WIRES SIX LEAD WIRES NINE LEAD WIRES TWELVE LEAD WIRES	
	P 5851484 (6 in Pkg.)	CONNECTOR (MEDIUM)	#14 TO #18 WIRE 1/8" I.D.
	6585261	SOLDERLESS CONNECTOR (SMALL)	#18 TO #20 WIRE 3/32" I.D.
	P 84514 (6 in Pkg.)	CONNECTOR (LARGE) BRASS-BAKELITE	#14 TO #18 WIRE 3/16" I.D.
	6567957	INSULATOR - FLAG TERMINAL (VINYL)	
	7538803	INSULATOR- FLAG TERMINAL NYLON	
	7536780	FLAG CONTACT (MALE) FOR 7536783 HOUSING BRONZE - TIN	#18 TO #22 WIRE .016 X .180 TAB

E 245

LEAD WIRE CHART

COLORS	PLASTIC INSULATED STRANDED		ASBESTOS INSULATED STRANDED		ASBESTOS INSULATED SOLID		SILICONE RUBBER GLASS BRAIDED INSULATED STRANDED	
	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.
Black	12	6594075	--	-------	--	-------	--	-------
Black	14	*5875355	--	-------	12	5874562	--	-------
Black	14	5873791	14	5417736	14	5873614	--	-------
†Black	16	5874583	--	-------	--	-------	--	-------
§Black	16	5874584	--	-------	--	-------	--	-------
Black-Red	14	5875278	--	-------	--	-------	--	-------
Black-White	14	5875271	--	-------	--	-------	--	-------
Blue	14	5873795	14	5873026	14	5873617	--	-------
Blue-White	18	5875283	--	-------	--	-------	--	-------
Brown	14	5874230	--	-------	14	5873619	--	-------
Brown-White	14	5875279	--	-------	--	-------	--	-------
Gray	14	5875276	--	-------	--	-------	--	-------
Green	14	5874238	14	5417738	14	5873615	--	-------
Orange	14	5873794	--	-------	--	-------	--	-------
Orange-Black	14	5875275	--	-------	--	-------	--	-------
Pink	18	5874237	14	5874184	--	-------	--	-------
Purple	14	5874231	14	5874185	--	-------	--	-------
Red	12	6594076	--	-------	--	-------	--	-------
Red	14	5873793	14	5417737	14	5873616	--	-------
Red	--	-------	--	-------	12	5874563	--	-------
Red-Green	14	5875277	--	-------	--	-------	--	-------
Red-White	14	5875270	--	-------	--	-------	--	-------
Tan	14	5875185	--	-------	--	-------	--	-------
White	14	5873792	14	5417735	14	5873620	--	-------
White-Black	14	5875274	--	-------	--	-------	14	#6595597
White-Blue	18	5875282	--	-------	--	-------	14	#6595596
White-Brown	18	5875280	--	-------	--	-------	--	-------
White-Red	14	5875273	--	-------	--	-------	14	#6595598
White-Yellow	18	5875281	--	-------	--	-------	14	#6595599
Yellow	14	5874229	14	5417739	14	5873618	--	-------
Yellow-Black	14	5875269	--	-------	--	-------	--	-------

Bare Wire - Size # 8, Piece No. 5874585

Bare Wire - Size #12, Piece No. 5874561

† Two conductor - ribbed.
§ Three conductor - ribbed.
NOTE: Bulk Wire is available by the foot.

* Use where extreme flexing is required.
High Temperature Application - Nickel Plated.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

GROUP 1 CONTROL PANELS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	DEFLECTOR-HEAT			
1.063	RDF-630	7529124	1	
	ESCUTCHEON-CONTROL PANEL			
1.081	RDF-630	7529128	1	
	GLASS-CONTROL PANEL			
1.103	RCIB-635-2	6569961	1	
1.103	RCIB-645-2	6569962	1	
1.103	RCDB-630-2	6569963	1	
1.103	RCDB-640-2	6569964	1	
	GLASS-LAMP HOUSING			
1.1031	RCDB-630-2 RCIB-635-2	6567583	1	
1.1031	RCDB-640-2 RCIB-645-2	6567584	1	
	HOUSING-CONTROL			
1.116	RCDB-630-2 RCIB-635-2 RDF-630	7524004	1	
1.116	RCDB-640-2 RCIB-645-2	7524897	1	
	NUT			
1.149	RCDB-630-2 RCIB-635-2	5438563	7	SPECIAL-LAMP HOUSING SHIELD
1.149	RCDB-640-2 RCIB-645-2	5438563	9	SPECIAL-LAMP HOUSING SHIELD
1.1491	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5433660	2	LAMP HOUSING TOP TRIM
1.1492	RDF-630	5433660	2	HEAT DEFLECTOR
	PAD-CONTROL PANEL GLASS			
1.153	RCDB-630-2 RCDB-640-2	7538047	1	SPACER 1/8X3/8X1
1.153	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7538047	1	MOUNT TO SURFACE UNIT SWITCH BRACKET 1/8X3/8X1
1.153	RCIB-635-2 RCIB-645-2	7538047	2	SPACER 1/8X3/8X1
1.153	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569026	2	1/16X3/16X1-1/2
1.153	RCDB-630-2 RCIB-635-2	7528218	1	
1.153	RCDB-640-2 RCIB-645-2	7528218	2	
1.153	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7535415	4	1/32X1/2X3/4
	RETAINER,TOP-CONTROL PANEL GLASS			
1.192	RCDB-630-2 RCIB-635-2	6567863	1	
1.192	RCDB-640-2 RCIB-645-2	6567864	1	
	SEAL,RUBBER-LAMP HOUSING TOP TRIM			
1.204	RCDB-630-2 RCIB-635-2 RCDB-640-2 RCIB-645-2	6568461	1	
	SCREW			
1.208	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7528041	4	LAMP HOUSING END 8-18X7/16
1.2081	RCDB-630-2 RCIB-635-2	5436528	3	CONTROL PANEL GLASS SUPPORT-USE WITH ALUMINUM SUPPORTS 8-15X3/8
1.2081	RCDB-640-2 RCIB-645-2	5436528	5	CONTROL PANEL GLASS SUPPORT-USE WITH ALUMINUM SUPPORTS 8-15X3/8
1.2081	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6560805	3	CONTROL PANEL GLASS SUPPORT-USE WITH NYLON SUPPORTS 8-15X3/8
1.2082	RCIB-635-2 RCIB-645-2	5436528	5	LAMP HOUSING LOWER TRIM 8-15X3/8
1.2082	RCDB-630-2 RCDB-640-2 RDF-630	7528041	5	LAMP HOUSING LOWER TRIM 8-18X7/16
1.2083	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5436439	2	LAMP HOUSING TOP TRIM 8-15X5/8
1.2084	RCDB-630-2 RCIB-635-2 RDF-630	7528041	8	CONTROL HOUSING 8-18X7/16
1.2084	RCDB-640-2 RCIB-645-2	7528041	13	CONTROL HOUSING 8-18X7/16
1.2085	RCDB-630-2 RCIB-635-2 RDF-630	7528041	4	TOP SPACER WASHER 8-18X7/16
1.2085	RCDB-640-2 RCIB-645-2	7528041	5	TOP SPACER WASHER 8-18X7/16
1.2086	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7528041	1	CONTROL HOUSING COVER 8-18X7/16
1.2087	RDF-630	5436439	2	HEAT DEFLECTOR 8-15X5/8
1.2089	RDF-630	5436528	6	CONTROL PANEL ESCUTCHEON 8-15X3/8
	SHIELD-LAMP HOUSING			
1.216	RCDB-630-2 RCIB-635-2	6567865	1	
1.216	RCDB-640-2 RCIB-645-2	6567866	1	
	TRIM,LOWER-LAMP HOUSING			
1.253	RCDB-630-2 RCIB-635-2 RDF-630	6567590	1	
1.253	RCDB-640-2 RCIB-645-2	6567591	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	TRIM,TOP-LAMP HOUSING			
1.2531	RCDB-630-2 RCIB-635-2	6567592	1	
1.2531	RCDB-640-2 RCIB-645-2	6567593	1	
	TRIM-GLASS CONTROL PANEL END			
1.2532	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567585	2	
	WASHER			
1.279	RCDB-630-2 RCIB-635-2 RDF-630	6567860	2	CUP-TOP SPACER
1.279	RCDB-640-2 RCIB-645-2	6567860	3	CUP-TOP SPACER
	SUPPORT-CONTROL PANEL GLASS			
1.321	RCDB-630-2 RCIB-635-2	6591667	1	ALUMINUM
1.321	RCDB-640-2 RCIB-645-2	7528932	1	ALUMINUM
1.321	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7529455	3	NYLON BRACKET TYPE
	COVER-CONTROL HOUSING			
1.378	RDF-630	7528458	1	VENT HOOD PLUG IN
1.378	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	*7528458	1	VENT HOOD PLUG IN
	BUTTON,PLUG-CONTROL HOUSING			
1.380	RCDB-630-2 RCIB-635-2 RDF-630	432269	1	LEFT REAR-CONDUIT HOLE-7/8 INCH HOLE
1.380	RCDB-640-2 RCIB-645-2	454243	1	1-1/4 INCH HOLE
1.380	RCDB-630-2 RCIB-635-2 RDF-630	454243	2	1-1/4 INCH HOLE
	BUTTON-TOP SPACER			
1.3801	RDF-630	6566917	2	
	END-LAMP HOUSING			
1.395	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569588	1	RH
1.395	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569589	1	LH

GROUP 2 COOK-MASTERS AND PARTS

	BRACKET-COOKMASTER & TIME SIGNAL			
2.026	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569902	2	
	FRAME-COOKMASTER AND TIME SIGNAL			
2.096	RDF-630	5875454	1	
	GLASS-COOKMASTER AND TIME SIGNAL			
2.103	RDF-630	5875455	1	
	KNOB,CONTROL-COOKMASTER AND TIME SIGNAL			
2.130	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568474	1	TIME STOP-INNER CENTER
2.130	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521201	1	TIME SET-WHITE-OUTER CENTER
2.130	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	P7523846	2	HOURS TO COOK AND TIME SIGNAL -BLACK-TAPERED 7/16 TO 3/8 INCH OD
2.130	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	P7523846	2	HOURS TO COOK AND TIME SIGNAL -BLACK-TAPERED 9/16 TO 1/2 INCH OD
	MOTOR-COOKMASTER AND TIME SIGNAL			
2.143	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592779	1	60 CYCLE 115 VOLT
	SCREW			
2.208	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5434896	4	COOKMASTER & TIME SIGNAL 8-18X1/4
2.2081	RCDB-630-2 RCDB-640-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5436528	4	COOKMASTER & TIME SIGNAL BRACKET 8-15X3/8
	COOKMASTER & TIME SIGNAL			
2.374	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7524728	1	60 CYCLE 115 VOLT
2.374	RDF-630	7525258	1	60 CYCLE 115 VOLT
	SWITCH-COOKMASTER AND TIME SIGNAL TERMINAL			
2.396	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592112	1	
	CUSHION-COOKMASTER AND TIME SIGNAL SPACER			
2.400	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5436693	2	

*Use with models having the letter "R" following the serial number.

GROUP 3 SWITCHES AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BRACKET-MEAT TEMPERATURE INDICATOR			
3.026	RCIB-645-2	6569513	1	
	BRACKET-SURFACE UNIT SWITCH			
3.0261	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7528904	1	SWITCH HOLES 3/4 IN ON CENTER
	BRACKET-THERMOSTAT			
3.0262	RCDB-640-2 RCIB-645-2	6569953	1	
3.0262	RCDB-630-2 RCIB-635-2	6569954	1	
3.0262	RDF-630	7529203	1	
	GASKET-SWITCH WATER SEAL			
3.099	RDF-630	7528627	4	
	KNOB,CONTROL-LAMP SELECTOR SWITCH			
3.130	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6564480	1	
	KNOB, CONTROL-MEAT TENDER			
3.1301	RCIB-635-2 RCIB-645-2	6564480	1	
	KNOB, CONTROL-SURFACE UNITS			
3.1302	RDF-630	6564315	4	
3.1302	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7522780	4	BLUE
3.1302	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7524723	4	WHITE
	KNOB,CONTROL-OVEN THERMOSTAT			
3.1303	RCDB-630-2 RCIB-635-2	7522202	1	BLUE
3.1303	RCDB-640-2 RCIB-645-2	7522202	2	BLUE
3.1303	RCDB-630-2 RCIB-635-2	7523802	1	WHITE
3.1303	RCDB-640-2 RCIB-645-2	7523802	2	WHITE
3.1303	RDF-630	7524972	1	
	KNOB,CONTROL-BROILER CONTROL			
3.1304	RCIB-635-2 RCIB-645-2	7522202	1	BLUE
3.1304	RCIB-635-2 RCIB-645-2	7523802	1	WHITE
	NUT			
3.149	RCIB-635-2 RCIB-645-2	619078	2	MEAT TEMPERATURE INDICATOR
3.1491	RDF-630	5434526	1	KNURLED-LAMP SELECTOR SWITCH
3.1492	RDF-630	5435463	4	SURFACE UNIT DISCONNECT SWITCH
	PIN,COTTER-SWITCH OPERATING ARM			
3.163	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	-------	2	1-1/8X3/32 PURCHASE LOCALLY
	RETAINER,SPRING-SWITCH			
3.192	ALL MODELS	6568159	AR	9/16 INCHES LONG
3.192	ALL MODELS	6592441	AR	13/16 INCHES LONG
	SCREW			
3.208	RCIB-645-2	5436528	2	MEAT TEMPERATURE INDICATOR BRACKET 8-15X3/8
3.2081	RCDB-630-2 RCIB-635-2 RDF-630	6576499	2	OVEN THERMOSTAT 6-32X3/16
3.2081	RCDB-640-2 RCIB-645-2	6576499	4	OVEN THERMOSTAT 6-32X3/16
3.2082	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5436528	3	SWITCH BRACKET 8-15X3/8
3.2083	RCIB-635-2 RCIB-645-2	5435111	2	SPEED HEAT SWITCH 8-32X1/4
3.2083	RCIB-635-2 RCIB-645-2	6576499	2	SPEED HEAT SWITCH 6-32X3/16
3.2084	RCIB-635-2 RCIB-645-2	5435111	6	INFINITE HEAT SURFACE UNIT SWITCH 8-32X1/4
3.2084	RCDB-630-2 RCDB-640-2	5435111	8	INFINITE HEAT SURFACE UNIT SWITCH 8-32X1/4
3.2085	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	443940	1	LAMP SWITCH 6-32X3/16
3.2086	RCIB-635-2 RCIB-645-2	5435111	2	BROILER CONTROL SWITCH 8-32X1/4
3.2087	RCIB-635-2 RCIB-645-2	5436528	2	MEAT TEMPERATURE INDICATOR 8-15X3/8
3.2088	RDF-630	7528041	2	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2088	RCDB-630-2 RCIB-635-2	7528041	4	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2088	RCDB-640-2 RCIB-645-2	7528041	5	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2089	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5436528	4	THERMOSTAT BRACKET 8-15X3/8
3.20811	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5436528	4	DISCONNECT SWITCH 8-15X3/8
3.20812	RCIB-645-2	5436528	1	MEAT TEMPERATURE INDICATOR SPACER CLAMP 8-15X3/8
3.20813	RDF-630	148101	8	SWITCH WATER SEAL CUP 8-32X3/8

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
3.20814	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5436528	2	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X3/8
3.20815	RDF-630	P7536987	2	SURFACE UNIT SWITCH SHIELD 8-15X1/2
	SHIELD-DISCONNECT SWITCH			
3.216	RDF-630	6567706	1	
3.216	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567706	2	
	SHIELD-SURFACE UNIT SWITCH			
3.2161	RDF-630	7529759	2	
	THERMOSTAT-OVEN			
3.242	RCDB-630-2 RCDB-640-2	6564064	1	
3.242	RCIB-635-2	7521066	1	
3.242	RCIB-645-2	7521066	2	
3.242	RDF-630	7524968	1	
	INDICATOR-MEAT TEMPERATURE			
3.248	RCIB-635-2 RCIB-645-2	7524729	1	12 VOLT
	WASHER			
3.279	RCDB-630-2	6567692	7	CONTROL KNOB SPACER
3.279	RCIB-635-2 RCDB-640-2 RCIB-645-2	6567692	8	CONTROL KNOB SPACER
3.279	RCIB-645-2	6567692	9	CONTROL KNOB SPACER
3.2791	RDF-630	5886323	1	LAMP SELECTOR SWITCH
	SWITCH,SURFACE UNIT-HEAT MINDER			
3.285	RCIB-635-2 RCIB-645-2	6563695	1	
	SWITCH,SURFACE UNIT-SPEED HEAT			
3.2851	RCIB-635-2 RCIB-645-2	7522262	1	MOUNTING SCREWS 5/8 INCHES OC 6-32 THREAD-2 MOUNTING HOLES
3.2851	RCIB-635-2 RCIB-645-2	7524058	1	MOUNTING SCREWS 3/4 INCHES OC 8-32 THREAD-4 MOUNTING HOLES
	SWITCH,SURFACE UNIT-INFINITE HEAT			
3.2852	RCIB-635-2 RCIB-645-2	7521242	1	SMALL 6 INCH
3.2852	RCDB-630-2 RCDB-640-2	7521242	2	SMALL 6 INCH
3.2852	RCIB-635-2 RCIB-645-2	7521243	1	LARGE 8 INCH
3.2852	RCDB-630-2 RCDB-640-2	7521243	2	LARGE 8 INCH
3.2852	RDF-630	7521244	3	SMALL 6 INCH
3.2852	RDF-630	7521370	1	LARGE 8 INCH
	CUP-SWITCH WATER SEAL			
3.326	RDF-630	7528628	4	
	CLAMP-THERMOSTAT CAPILLARY TUBE			
3.327	RCDB-630-2 RCIB-635-2 RDF-630 RCDB-640-2 RCIB-645-2	5436867	2	
	CLAMP-MEAT TEMP INDICATOR SPACER			
3.3271	RCIB-645-2	6569044	1	
	ARM,CONTROL-SWITCH OPERATING			
3.366	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567150	2	
	BUTTON-SWITCH ARM GLIDE			
3.380	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567143	2	
	DIAL,SWITCH-INFINITE HEAT SURFACE UNIT			
3.381	RCIB-635-2 RCIB-645-2	7522782	3	
3.381	RCDB-630-2 RCDB-640-2	7522782	4	
	DIAL,SWITCH-HEAT MINDER			
3.3811	RCIB-635-2 RCIB-645-2	7522781	1	
	DIAL-THERMOSTAT			
3.3812	RCDB-630-2 RCIB-635-2	7522783	1	
3.3812	RCDB-640-2 RCIB-645-2	7522783	1	ROTISSERIE-RIGHT OVEN
3.3812	RCDB-640-2 RCIB-645-2	7522784	1	LEFT OVEN
	DIAL-BROILER CONTROL			
3.3813	RCIB-635-2 RCIB-645-2	7522785	1	
	DIAL-LAMP SELECTOR SWITCH			
3.3814	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569098	1	
	SWITCH,CONTROL-BROILER			
3.396	RCIB-635-2 RCIB-645-2	7523006	1	
	SWITCH,DISCONNECT-SURFACE UNITS			
3.3961	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6564289	2	
3.3961	RDF-630	7524932	2	
	SWITCH,SELECTOR-LAMP			
3.403	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7521429	1	
3.403	RDF-630	7524967	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 4 SURFACE UNITS AND PARTS

	BRACKET-SURFACE UNIT HINGE			
4.026	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6565251	4	
	BRACKET,RETAINER-SENSOR			
4.0261	RCIB-635-2 RCIB-645-2	7528900	1	
	GASKET-SURFACE UNIT TERMINAL BLOCK SEAL			
4.099	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7535507	4	
	SCREW			
4.208	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	P5430929	8	SURFACE UNIT CLAMP TO BRACKET 8-32X5/16
4.2081	RCIB-635-2 RCIB-645-2	5436528	4	SENSOR SUPPORT 8-15X3/8
4.2082	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5430929	8	SURFACE UNIT BRACKET 8-32X5/16
4.2083	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	449607	8	SURFACE UNIT TERMINAL BLOCK 6-32X5/8
4.2084	RCIB-635-2 RCIB-645-2	5434896	2	SENSOR RETAINER BRACKET 8-18X1/4
	UNIT,SURFACE 6-INCH			
4.266	RCIB-635-2 RCIB-645-2	6590804	1	1450W 236V-RIGHT REAR
4.266	RCDB-630-2 RCDB-640-2	6590804	2	1450W 236V-LEFT FRONT AND RIGHT REAR
4.266	RDF-630	6590804	3	1450W 236V-LEFT FRONT, RIGHT &LEFT REAR
4.266	RCIB-635-2 RCIB-645-2	6591937	1	1450W 208V-RIGHT REAR
4.266	RCDB-630-2 RCDB-640-2	6591937	2	1450W 208V-LEFT FRONT AND RIGHT REAR
4.266	RDF-630	6591937	3	1450W 208V-LEFT FRONT, RIGHT &LEFT REAR
4.266	RCIB-635-2 RCIB-645-2	6591863	1	1250W 118V SPEED HEAT-LEFT FRONT-USE ON 208&236 VOLT WITHOUT CHANGE
	UNIT,SURFACE 8-INCH			
4.2661	RDF-630	7521366	1	2050W 236V-RIGHT FRONT
4.2661	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6590805	2	2600W 236V-LEFT REAR AND RIGHT FRONT
4.2661	RDF-630	6597656	1	2050W 208V-RIGHT FRONT
4.2661	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6591938	2	2600W 208V-LEFT REAR AND RIGHT FRONT
	SUPPORT-HEAT MINDER SENSOR			
4.321	RCIB-635-2 RCIB-645-2	6567531	1	
	SUPPORT-SURFACE UNIT SMALL			
4.3211	RCIB-635-2 RCIB-645-2	7529769	1	RIGHT REAR
4.3211	RCDB-630-2 RCDB-640-2	7529769	2	LEFT FRONT AND RIGHT REAR
4.3211	RDF-630	7529769	3	LEFT FRONT,RIGHT & LEFT REAR
4.3211	RCIB-635-2 RCIB-645-2	7525863	1	SPEED HEAT-LEFT FRONT
	SUPPORT-SURFACE UNIT LARGE			
4.3212	RCIB-635-2 RCIB-645-2	5435224	1	HEAT MINDER-RIGHT FRONT
4.3212	RDF-630	7529770	1	RIGHT FRONT
4.3212	RCIB-635-2 RCIB-645-2	7529770	1	LEFT REAR
4.3212	RCDB-630-2 RCDB-640-2	7529770	2	LEFT REAR AND RIGHT FRONT
	CLAMP-SURFACE UNIT HINGE			
4.327	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6565252	4	
	BLOCK,FEMALE-SURFACE UNIT CONNECTOR			
4.330	RCIB-635-2 RCIB-645-2	5438977	3	BLACK
4.330	RCDB-630-2 RCDB-640-2 RDF-630	5438977	4	BLACK
4.330	RCIB-635-2 RCIB-645-2	7527656	1	BROWN-USE WITH SPEED HEAT SURFACE UNIT
	BLOCK,MALE-SURFACE UNIT CONNECTOR			
4.3301	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	P5438978	4	BLACK
	PAN,SMALL-SURFACE UNIT DRIP			
4.336	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6565456	2	
4.336	RDF-630	6565456	3	
	PAN,LARGE-SURFACE UNIT DRIP			
4.3361	RDF-630	6565457	1	
4.3361	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6565457	2	
	SENSOR-HEAT MINDER			
4.490	RCIB-635-2 RCIB-645-2	6563752	1	

1962 - 1963

GROUP 6 TOPS AND PARTS

	BRACKET-TOP COVER SLIDE			
6.026	RCDB-630-2 RCDB-640-2	7522205	1	
6.026	RCIB-635-2 RCIB-645-2	7522208	1	
	BRACKET-LATCH SPRING RETAINER			
6.0261	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569713	1	
	BRACKET-COOKING TOP SAFETY STOP			
6.0262	RDF-630	7529096	1	
	BRACKET-DISCONNECT SWITCH-SKID			
6.0263	RDF-630	7529051	1	
	BUMPER-PULLEY CHANNEL			
6.029	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567881	2	
	CHANNEL-PULLEY			
6.037	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7522203	1	RH
6.037	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7522204	1	LH
	CHANNEL-COOKING TOP STOP			
6.0371	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2 RDF-630	7529050	1	USE WITH SHIELD
	CHANNEL-CABLE SPACER			
6.0372	RCDB-630-2 RCIB-635-2	7529880	1	
6.0372	RCDB-640-2 RCIB-645-2	7529901	1	
	HANDLE-COOKING TOP			
6.110	RDF-630	5875450	1	
6.110	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567253	1	
	HOUSING-COOKING TOP			
6.116	RCDB-640-2 RCIB-645-2	6564283	1	
6.116	RCDB-630-2 RCIB-635-2 RDF-630	7524973	1	
	SLIDE-COOKING TOP COVER			
6.120	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567147	2	
	SLIDE-DISCONNECT SWITCH			
6.1201	RDF-630	7529052	1	
	NUT			
6.149	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7520910	2	LOCK-COOKING TOP SHIPPING
6.1491	RDF-630	5438563	3	DISCONNECT SWITCH SLIDE
6.1492	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	P5423225	2	CABLE SPACER CHANNEL 10-32
	PANEL,FRONT-COOKING TOP			
6.156	RCDB-630-2 RCIB-635-2 RDF-630	6590801	1	
6.156	RCDB-640-2 RCIB-645-2	6590802	1	
	PULLEY,CABLE-COOKING TOP			
6.177	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569474	4	
	RETAINER-CABLE BRACKET			
6.192	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7527850	2	UPPER
	RETAINER,SPRING-CABLE PULLEY			
6.1921	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5437128	4	
	ROLLER-COOKING TOP			
6.199	RDF-630	6568686	3	
6.199	RDF-630	6569100	1	
6.199	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569100	4	
	ROLLER-TOP COVER			
6.1991	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6568686	2	
	SCREW			
6.208	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5439072	1	LATCH KNOB 6-32X3/8
6.2081	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5885072	3	COOKING TOP DRIP PLATE 8-18X3/8
6.2082	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5885072	3	COOKING TOP FRONT PANEL-LOWER 8-18X3/8
6.2083	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6566861	2	COVER ADJUSTING 10-32X3/4
6.2084	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5436528	4	LATCH SPRING RETAINER BRACKET 8-15X3/8

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
6.2085	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7528041	4	LATCH OPERATING LEVER 8-18X7/16
6.2086	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5435226	8	PULLEY CHANNEL 10X3/8
6.2087	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5899607	2	LATCH CHANNEL GUIDE 10-16X5/8
6.2088	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5885072	4	COOKING TOP STOP CHANNEL 8-18X3/8
6.2089	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7528041	4	COOKING TOP CABLE 8-18X7/16
6.20811	RDF-630	5439004	2	COOKING TOP HANDLE 10-24X1/2
6.20811	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5439121	2	COOKING TOP HANDLE 10-32X3/4
6.20812	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	P7536987	4	COOKING TOP COVER SLIDE BRACKET 8-15X1/2
6.20813	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5885072	2	COOKING TOP STOP CHANNEL SHIELD 8-18X3/8
6.20814	RDF-630	5435226	1	COOKING TOP SAFETY STOP BRACKET 10-12X3/8
6.20815	RDF-630	5424117	2	DISCONNECT SWITCH SKID BRACKET 10-16X3/8
6.20816	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7535565	2	CABLE SPACER CHANNEL 10-32X1-7/8
	SHIELD,SCREW-COOKING TOP STOP CHANNEL			
6.216	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6566986	2	
	SPACER-LATCH CHANNEL GUIDE			
6.222	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569467	2	
	SPRING-TOP COVER			
6.226	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567610	2	
	SPRING-LATCH PIN OPERATING			
6.2261	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568818	1	
	STOP-COOKING TOP COVER			
6.235	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7528879	1	
	TRIM-COOKING TOP HOUSING			
6.253	RDF-630 RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7529132	1	RH-CEMENTED
6.253	RDF-630 RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7529133	1	LH-CEMENTED
	TOP-COOKING			
6.258	RCDB-630-2 RCIB-635-2	7522207	1	
6.258	RCDB-640-2 RCIB-645-2	7522209	1	
6.258	RDF-630	7524931	1	
	WASHER			
6.279	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5427712	4	COOKING TOP CABLE PULLEY
6.2791	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6565542	AR	PLAIN-ROLLER
	BUSHING-COOKING TOP COVER ADJUSTING			
6.316	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5432514	2	INCLUDES NUT
	SUPPORT,HANDLE-COOKING TOP			
6.321	RDF-630	5875452	1	RIGHT
6.321	RDF-630	5875453	1	LEFT
6.321	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569716	2	
	GUIDE-LATCH CHANNEL			
6.323	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569466	2	
	KNOB-LATCH OPERATING			
6.350	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568810	1	
	LEVER-LATCH OPERATING			
6.356	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521097	1	
	PIN-COOKING TOP LATCH			
6.364	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568811	1	
	COVER-COOKING TOP			
6.378	RCDB-630-2 RCIB-635-2	6564292	1	
6.378	RCDB-640-2 RCIB-645-2	6564293	1	

1962-1963

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BUTTON-COOKING TOP COVER			
6.380	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567143	2	
	BUTTON-COOKING TOP FRONT PANEL			
6.3801	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6566917	2	
	PLATE-COOKING TOP DRIP			
6.390	RCDB-630-2 RCIB-635-2 RDF-630	6568842	1	
6.390	RCDB-640-2 RCIB-645-2	6568843	1	
	RING,RETAINER-COOKING TOP LATCH PIN			
6.393	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6586240	1	
	RING,RETAINER-TOP COVER ROLLER			
6.3931	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7537983	2	
	CABLE-COOKING TOP			
6.436	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7522206	2	

GROUP 7 FRAMES, PANELS AND PARTS

	BRACKET-SIDE TRIM			
7.026	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567516	2	LOWER
7.026	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7529048	2	REPLACES TOP TRIM BLOCK
	CLIP-TOP PANEL TO CONTROL HOUSING			
7.039	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7528581	2	
	NUT			
7.149	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5433660	AR	CONDENSATION TRIM SPACER
	PANEL,SIDE-RANGE RH			
7.159	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521851	1	WHITE
7.159	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521852	1	YELLOW
7.159	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521853	1	PINK
7.159	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521854	1	TURQUOISE
7.159	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521855	1	COPPER
7.159	RCIB-645-2	7523320	1	CHARCOAL
	PANEL,SIDE-RANGE LH			
7.1591	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521856	1	WHITE
7.1591	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521857	1	YELLOW
7.1591	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521858	1	PINK
7.1591	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521859	1	TURQUOISE
7.1591	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7521860	1	COPPER
7.1591	RCIB-645-2	7523321	1	CHARCOAL
	PANEL,TOP-RANGE			
7.160	RCDB-630-2 RCIB-635-2	7524006	1	YELLOW
7.160	RCDB-630-2 RCIB-635-2	# 7521863	1	PINK
7.160	RCDB-640-2 RCIB-645-2	7524012	1	WHITE
7.160	RCIB-645-2	# 7523322	1	CHARCOAL
7.160	RCDB-630-2 RCIB-635-2	7524005	1	WHITE
7.160	RDF-630	7524005	1	WHITE
7.160	RCDB-630-2 RCIB-635-2	7524006	1	YELLOW
7.160	RDF-630	7524006	1	YELLOW
7.160	RCDB-630-2 RCIB-635-2	* 7524007	1	PINK
7.160	RDF-630	7524007	1	PINK
7.160	RCDB-630-2 RCIB-635-2	7524008	1	TURQUOISE
7.160	RDF-630	7524008	1	TURQUOISE
7.160	RCDB-630-2 RCIB-635-2	7524009	1	COPPER
7.160	RDF-630	7524009	1	COPPER
7.160	RCDB-640-2 RCIB-645-2	7524012	1	WHITE

*Use with models having the letter "R" following the serial number.
#Use with models without the letter "R" following the serial number.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	PANEL, TOP-RANGE			
7.160	RCDB-640-2 RCIB-645-2	7524013	1	YELLOW
7.160	RCDB-640-2 RCIB-645-2	7524014	1	PINK
7.160	RCDB-640-2 RCIB-645-2	7524015	1	TURQUOISE
7.160	RCDB-640-2 RCIB-645-2	7524016	1	COPPER
7.160	RCIB-645-2	* 7524017	1	CHARCOAL
	RETAINER-INSULATION			
7.192	RCDB-630-2 RCIB-635-2 RDF-630	6569530	1	OVEN
7.192	RCDB-640-2 RCIB-645-2	6569531	1	RIGHT OVEN
7.192	RCDB-640-2 RCIB-645-2	6569532	1	LEFT OVEN
	SCREW			
7.208	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7528041	4	ROTISSERIE OPENING COVER 8-18X7/16
7.2081	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	148101	2	TOP TRIM
7.2082	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5435261	2	TRIM 6-20X1/4-USE WITH TOP TRIM BLOCK
7.2082	RDF-630	5436528	2	TRIM-USE WITH SHIELD 8-15X3/8
7.2082	RDF-630	6569714	14	TRIM 6-20X3/8
7.2082	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569714	16	TRIM 6-20X3/8
7.2082	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7527829	2	TRIM 6-32X1/4-USE WITH SIDE TRIM BRACKET
7.2083	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5435261	4	BOTTOM TRIM 6-20X1/4
7.2083	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6545038	2	BOTTOM TRIM 8-18X5/8
7.2084	RCDB-630-2 RCIB-635-2 RDF-630	5436528	3	CONDENSATION TRIM 8-15X3/8
7.2084	RCDB-640-2 RCIB-645-2	5436528	4	CONDENSATION TRIM 8-15X3/8
7.2085	RCDB-630-2 RCIB-635-2	6567391	2	OVEN ANGLE 8-32X5/16
7.2085	RCDB-640-2 RCIB-645-2	6567391	4	OVEN ANGLE 8-32X5/16
7.2085	RDF-630	7528041	2	OVEN ANGLE 8-18X7/16
7.2086	RCDB-630-2 RCIB-635-2	6567391	2	CONDENSATE TRIM PLATE 8-32X5/16
7.2086	RCDB-640-2 RCIB-645-2	6567391	3	CONDENSATE TRIM PLATE 8-32X5/16
7.2086	RCDB-630-2 RCIB-635-2 RDF-630	7528041	5	CONDENSATE TRIM PLATE 8-18X7/16
7.2086	RCDB-640-2 RCIB-645-2	7528041	8	CONDENSATE TRIM PLATE 8-18X7/16
7.2087	RCDB-630-2 RCIB-635-2 RDF-630	P7536987	19	RANGE BACK PANEL 8-15X1/2
7.2087	RCDB-640-2 RCIB-645-2	P7536987	27	RANGE BACK PANEL 8-15X1/2
7.2088	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7528041	10	SIDE PANEL 8-18X7/16
7.2089	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5436295	6	INSULATION RETAINER 10-12X1/2
7.20811	RDF-630	163162	2	CONDENSATION TRIM SPACER 8-18X1/2
	SHIELD,SCREW-TRIM			
7.216	ALL MODELS	6566986	2	
	SPACER-CONDENSATION TRIM			
7.222	RDF-630	7529137	2	
	TRIM,SIDE-UPPER			
7.253	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6590872	1	RH-SATIN FINISH-RIBBED
7.253	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6590873	1	LH-SATIN FINISH-RIBBED
7.253	RDF-630	7524676	1	RH-SATIN FINISH-RIBBED
7.253	RDF-630	7524677	1	LH-SATIN FINISH-RIBBED
	TRIM,SIDE-LOWER			
7.2531	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6590870	1	RH-SATIN FINISH-RIBBED
7.2531	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6590871	1	LH-SATIN FINISH-RIBBED
7.2531	RDF-630	7524674	1	RH-SATIN FINISH-RIBBED
7.2531	RDF-630	7524675	1	LH-SATIN FINISH-RIBBED
	TRIM,BOTTOM-RANGE			
7.2532	RCDB-630-2 RCIB-635-2 RDF-630	6568907	1	SATIN FINISH
7.2532	RCDB-640-2 RCIB-645-2	6568909	1	SATIN FINISH
	TRIM,TOP-RANGE			
7.2533	RCDB-630-2 RCIB-635-2 RDF-630	6568908	1	SATIN FINISH
7.2533	RCDB-640-2 RCIB-645-2	6568910	1	SATIN FINISH
	TRIM-CONDENSATION			
7.2534	RCDB-630-2 RCIB-635-2	6569535	1	
7.2534	RCDB-640-2 RCIB-645-2	6569536	1	
7.2534	RDF-630	7529097	1	
	PANEL,BACK			
7.310	RCDB-630-2 RCIB-635-2 RDF-630	6567235	1	
7.310	RCDB-640-2 RCIB-645-2	6567236	1	

*Use with models having the letter "R" following the serial number.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	ANGLE-OVEN			
7.319	RCDB-630-2 RCIB-635-2 RDF-630	7537679	1	
7.319	RCDB-640-2 RCIB-645-2	7537680	1	
	BLOCK-TOP TRIM			
7.330	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7529048	2	
	COVER-ROTISSERIE OPENING			
7.378	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6567869	2	REAR
	BUTTON-LOWER SIDE TRIM			
7.380	RDF-630	6567143	2	
	PLATE-CONDENSATE TRIM			
7.390	RCDB-630-2 RCDB-635-2 RDF-630	6569533	1	
7.390	RCDB-640-2 RCIB-645-2	6569534	1	

GROUP 8 OVEN DOORS AND PARTS

	BASE,HANDLE-OVEN DOOR			
8.009	RCDB-630-2 RCIB-635-2	6569717	1	
8.009	RCDB-640-2 RCIB-645-2	6569717	2	
8.009	RDF-630	7529127	1	
	BEARING,NYLON-TORQUE SHAFT			
8.011	RCDB-640-2 RCIB-645-2	6567433	2	LOWER
8.011	RCDB-640-2 RCIB-645-2	6567612	2	UPPER
8.011	RCDB-630-2 RCIB-635-2 RDF-630 RCIB-640-2 RCIB-645-2	6569567	2	MOUNT TO DOOR SPRING RETAINER
	BRACKET-LOWER ARM			
8.026	RDF-630	6564377	1	
8.026	RCDB-630-2 RCIB-635-2	6564377	2	
8.026	RCDB-640-2 RCIB-645-2	6564377	4	
	BRACKET-DOOR SPRING RETAINER			
8.0261	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569554	2	
	BRACKET-OVEN DOOR LATCH			
8.0262	RCDB-630-2 RCIB-635-2	6567380	2	
8.0262	RCDB-640-2 RCIB-645-2	6567380	4	
	FRAME,OUTSIDE-OVEN DOOR			
8.096	RCDB-640-2 RCIB-645-2	6567405	1	RIGHT
8.096	RCDB-640-2 RCIB-645-2	6567406	1	LEFT
8.096	RCDB-630-2 RCIB-635-2	6567407	1	
8.096	RDF-630	7529102	1	
	FRAME,INSIDE-OVEN DOOR			
8.0961	RCDB-640-2 RCIB-645-2	6567402	1	RIGHT
8.0961	RCDB-640-2 RCIB-645-2	6567403	1	LEFT
8.0961	RCDB-630-2 RCIB-635-2 RDF-630	6567404	1	
	GASKET-OVEN DOOR HANDLE			
8.099	RCDB-630-2 RCIB-635-2 RDF-630	6567685	2	
8.099	RCDB-640-2 RCIB-645-2	6567685	4	
	GLASS,OUTER-OVEN DOOR			
8.103	RCDB-640-2 RCIB-645-2	6567396	1	RIGHT
8.103	RCDB-640-2 RCIB-645-2	6567397	1	LEFT
8.103	RCDB-630-2 RCIB-635-2 RDF-630	6567398	1	
	GLASS,INNER-OVEN DOOR			
8.1031	RCDB-640-2 RCIB-645-2	6567393	1	RIGHT
8.1031	RCDB-640-2 RCIB-645-2	6567394	1	LEFT
8.1031	RCDB-630-2 RCIB-635-2 RDF-630	6567395	1	
	HANDLE,DOOR-OVEN			
8.110	RDF-630	5875451	1	
8.110	RCDB-630-2 RCIB-635-2	6567518	1	
8.110	RCDB-640-2 RCIB-645-2	6567518	2	
	RETAINER-OVEN DOOR GLASS			
8.192	RCDB-640-2 RCIB-645-2	6567399	1	RIGHT
8.192	RCDB-640-2 RCIB-645-2	6567400	1	LEFT
8.192	RCDB-630-2 RCIB-635-2 RDF-630	6567401	1	
	RETAINER-DOOR SPRING			
8.1921	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569566	2	
	ROD,RELEASE-OVEN DOOR			
8.197	RCDB-630-2 RCIB-635-2	6567383	2	
8.197	RCDB-640-2 RCIB-645-2	6567383	4	
	ROD-OVEN DOOR LATCH PLATE			
8.1971	RDF-630	7529103	1	RH
8.1971	RDF-630	7529104	1	LH
	ROLLER-OVEN DOOR STOP			
8.199	RDF-630 RCDB-630-2 RCIB-635-2	5426925	1	
8.199	RCDB-640-2 RCIB-645-2	5426925	2	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SEAL,DOOR-BOTTOM			
8.203	RCDB-640-2 RCIB-645-2	7527773	1	RIGHT OVEN
8.203	RCDB-640-2 RCIB-645-2	7527774	1	LEFT OVEN
8.203	RCDB-630-2 RCIB-635-2 RDF-630	7527775	1	
	SEAL,DOOR-SIDE			
8.2031	RCDB-630-2 RCIB-635-2 RDF-630	6590767	1	INCLUDES SEALS FOR BOTH SIDES
8.2031	RCDB-640-2 RCIB-645-2	6590767	2	INCLUDES SEALS FOR BOTH SIDES
	SCREW			
8.208	RCDB-630-2 RCIB-635-2	273224	2	DOOR HANDLE 10-32X1-1/4
8.208	RCDB-640-2 RCIB-645-2	273224	4	DOOR HANDLE 10-32X1-1/4
8.208	RDF-630	7524965	2	DOOR HANDLE 10-24X1-1/2
8.2081	RCDB-630-2 RCIB-635-2	446887	2	SET-OVEN DR RELEASE BUTTON 8-32X1/8
8.2081	RCDB-640-2 RCIB-645-2	446887	4	SET-OVEN DR RELEASE BUTTON 8-32X1/8
8.2082	RCDB-630-2 RCIB-635-2	6567391	2	OVEN DOOR LATCH BRACKET 8-32X5/16
8.2082	RCDB-640-2 RCIB-645-2	6567391	4	OVEN DOOR LATCH BRACKET 8-32X5/16
8.2083	RCDB-630-2 RCIB-635-2 RDF-630	6567391	10	INSIDE OVEN DOOR FRAME 8-32X5/16
8.2083	RCDB-640-2 RCIB-645-2	6567391	16	INSIDE OVEN DOOR FRAME 8-32X5/16
8.2084	RCDB-640-2 RCIB-645-2	5435230	4	TORQUE SHAFT LOWER BEARING 10-12X3/4
8.2085	RCDB-640-2 RCIB-645-2	5899607	4	TORQUE SHAFT UPPER BEARING 10-16X5/8
8.2086	RDF-630	274920	1	LOWER ARM BRACKET 10-12X1/2
8.2086	RCDB-630-2 RCIB-635-2	274920	2	LOWER ARM BRACKET 10-12X1/2
8.2086	RCDB-640-2 RCIB-645-2	274920	4	LOWER ARM BRACKET 10-12X1/2
8.2087	RCDB-630-2 RCIB-635-2 RDF-630	5439003	8	OVEN DOOR TORQUE SHAFT 10-32X3/8
8.2087	RCDB-640-2 RCIB-645-2	5439003	16	OVEN DOOR TORQUE SHAFT 10-32X3/8
8.2088	RCDB-630-2 RCIB-635-2 RDF-630	6546813	2	OVEN DOOR RELEASE ARM 8-32X1/4
8.2088	RCDB-640-2 RCIB-645-2	6546813	4	OVEN DOOR RELEASE ARM 8-32X1/4
8.2089	RCDB-630-2 RCIB-635-2 RDF-630	6567381	2	LOWER ARM 10-32X31/64
8.2089	RCDB-640-2 RCIB-645-2	6567381	4	LOWER ARM 10-32X31/64
8.20811	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7539817	2	OVEN DOOR SPRING ADJUSTING
8.20812	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569817	4	TORQUE SHAFT BEARING 10-16X1/2
8.20813	RCDB-630-2 RCIB-635-2 RDF-630	7528041	1	DOOR ARM STOP 8-18X7/16
8.20813	RCDB-640-2 RCIB-645-2	7528041	2	DOOR ARM STOP 8-18X7/16
8.20814	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569817	12	DOOR SPRING RETAINER 10-16X1/2
8.20815	RCDB-630-2 RCIB-635-2 RDF-630	6569817	2	BROIL STOP SPRING 10-16X1/2
8.20815	RCDB-640-2 RCIB-645-2	6569817	4	BROIL STOP SPRING 10-16X1/2
8.20816	RDF-630	6567391	2	OVEN DOOR LATCH PLATE ROD 8-32X5/16
8.20817	RDF-630 RCDB-630-2 RCIB-635-2	5436175	1	OVEN DOOR STOP ROLLER 10-32X1
8.20817	RCDB-640-2 RCIB-645-2	5436175	2	OVEN DOOR STOP ROLLER 10-32X1
	SHAFT-TORQUE			
8.210	RCDB-630-2 RCIB-635-2 RDF-630	7522326	1	
8.210	RCDB-640-2 RCIB-645-2	7522356	1	RIGHT OVEN
8.210	RCDB-640-2 RCIB-645-2	7531655	1	LEFT OVEN
	SPACER-OVEN DOOR LOWER ARM			
8.222	RDF-630	7529105	1	
	SPRING-OVEN DOOR LATCH			
8.226	RCDB-630-2 RCIB-635-2	6567148	2	
8.226	RCDB-640-2 RCIB-645-2	6567148	4	
	SPRING-OVEN DOOR COUNTERBALANCE			
8.2261	RCDB-630-2 RCIB-635-2 RDF-630	6569574	2	
8.2261	RCDB-640-2 RCIB-645-2	6569582	1	RIGHT
8.2261	RCDB-640-2 RCIB-645-2	6569583	1	LEFT
	SPRING-BROIL STOP			
8.2262	RCDB-630-2 RCIB-635-2 RDF-630	6569568	1	
8.2262	RCDB-640-2 RCIB-645-2	6569580	1	RIGHT OVEN
8.2262	RCDB-640-2 RCIB-645-2	6569581	1	LEFT OVEN
	STOP-DOOR ARM			
8.235	RCDB-630-2 RCIB-635-2 RDF-630	6567617	1	
8.235	RCDB-640-2 RCIB-645-2	6567617	2	

1962 1963

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	WASHER			
8.279	RCDB-640-2 RCIB-645-2	629690	2	LOWER TORQUE SHAFT BEARING 3/4 IN OD
8.279	RCDB-640-2 RCIB-645-2	5428229	2	LOWER TORQUE SHAFT BEARING 5/8 IN OD
8.2791	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	60002	2	OVEN DOOR SPRING ADJUSTING
8.2792	RDF-630	6565749	1	LOCK-LOWER ARM BRACKET
8.2792	RCDB-630-2 RCIB-635-2	6565749	2	LOCK-LOWER ARM BRACKET
8.2792	RCDB-640-2 RCIB-645-2	6565749	4	LOCK-LOWER ARM BRACKET
8.2793	RCDB-630-2 RCIB-635-2 RDF-630	P6566285	2	CUP-OVEN DOOR HANDLE
8.2793	RCDB-640-2 RCIB-645-2	P6566285	4	CUP-OVEN DOOR HANDLE
8.2794	RCDB-630-2 RCIB-635-2 RDF-630	6567384	2	CUP-OVEN DOOR RELEASE ARM
8.2794	RCDB-640-2 RCIB-645-2	6567384	4	CUP-OVEN DOOR RELEASE ARM
8.2795	RDF-630	6566759	1	OVEN DOOR RELEASE ARM
8.2795	RCDB-630-2 RCIB-635-2	6566759	2	OVEN DOOR RELEASE ARM
8.2795	RCDB-640-2 RCIB-645-2	6566759	4	OVEN DOOR RELEASE ARM
8.2796	RCDB-630-2 RDF-630 RCIB-635-2	5428229	1	BROIL STOP SPRING
8.2796	RCDB-640-2 RCIB-645-2	5428229	2	BROIL STOP SPRING
	BUSHING-DOOR SPRING			
8.316	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6569571	2	
8.316	RDF-630	7528017	2	
	BUSHING-DOOR SPRING SWIVEL			
8.3161	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6591883	2	
	SUPPORT,HANDLE-OVEN DOOR			
8.321	RDF-630	5875452	1	RIGHT
8.321	RDF-630	5875453	1	LEFT
	ARM,LOWER-OVEN DOOR			
8.366	RDF-630	6567435	1	
8.366	RCDB-630-2 RCIB-635-2	6567435	2	
8.366	RCDB-640-2 RCIB-645-2	6567435	4	
	ARM,UPPER-OVEN DOOR			
8.3661	RCDB-630-2 RCIB-635-2 RDF-630	7522327	1	RIGHT
8.3661	RCDB-640-2 RCIB-645-2	7522327	2	RIGHT
8.3661	RCDB-630-2 RCIB-635-2 RDF-630	7522328	1	LEFT
8.3661	RCDB-640-2 RCIB-645-2	7522328	2	LEFT
	ARM,RELEASE-OVEN DOOR			
8.3662	RCDB-630-2 RCIB-635-2 RDF-630	6564414	1	RIGHT
8.3662	RCDB-640-2 RCIB-645-2	6564414	2	RIGHT
8.3662	RCDB-630-2 RCIB-635-2 RDF-630	6564415	1	LEFT
8.3662	RCDB-640-2 RCIB-645-2	6564415	2	LEFT
	BUTTON,RELEASE-OVEN DOOR			
8.380	RCDB-630-2 RCIB-635-2	6567382	2	
8.380	RCDB-645-2 RCIB-645-2	6567382	4	
	BUTTON-BROIL STOP			
8.3801	RCDB-630-2 RCIB-635-2 RDF-630	6569572	1	
8.3801	RCDB-640-2 RCIB-645-2	6569572	2	
	RING,RETAINER-LOWER ARM BRACKET			
8.393	RDF-630	6567241	1	
8.393	RCDB-630-2 RCIB-635-2	6567241	2	
8.393	RCDB-640-2 RCIB-645-2	6567241	4	

GROUP 9 OVEN LINERS AND PARTS

	LINER-OVEN			
9.136	RCIB-645-2	6591699	1	LEFT-CHROMIUM
9.136	RCIB-635-2	6591700	1	CHROMIUM
9.136	RCIB-645-2	6591701	1	RIGHT-CHROMIUM
9.136	RCDB-640-2	7521353	1	LEFT-PORCELAIN
9.136	RCDB-640-2	7521354	1	RIGHT-PORCELAIN
9.136	RCDB-630-2 RDF-630	7521355	1	PORCELAIN
	NUT			
9.149	RCDB-630-2 RDF-630 RCIB-635-2	7524744	4	OVEN LINER
9.149	RCDB-640-2 RCIB-645-2	7524744	8	OVEN LINER
	PAD-OVEN LINER			
9.153	RCDB-630-2	6569427	2	
9.153	RCDB-640-2	6569427	4	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
9.208	RDF-630	6567391	5	OVEN LINER 8-18X7/16
9.208	RCDB-630-2 RCIB-635-2	6567391	7	OVEN LINER 8-32X5/16
9.208	RCDB-640-2 RCIB-645-2	6567391	12	OVEN LINER 8-32X5/16
9.208	RDF-630	7528041	2	OVEN LINER 8-18X7/16
	CAP-OVEN LINER CORNER			
9.376	RCDB-630-2 RDF-630	7528414	2	
9.376	RCDB-640-2	7528414	4	
	BUTTON,PLUG-ROTISSERIE			
9.380	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6567525	1	LOWER RIGHT
9.380	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6567526	1	UPPER LEFT

1962/1963

GROUP 10 OVEN INTERIOR PARTS

	GLASS-OVEN LIGHT			
10.103	RCDB-630-2 RCIB-635-2 RDF-630	6567295	1	
10.103	RCDB-640-2 RCIB-645-2	6567295	2	
	GRILL-BROILER PAN			
10.108	RCIB-635-2 RCIB-645-2	7532503	1	PART OF SPATTER FREE BRL PAN
10.108	RCDB-630-2 RCDB-640-2 RDF-630	6565589	1	
	HANDLE-BROILER PAN			
10.110	RCIB-635-2 RCIB-645-2	5437919	4	PART OF SPATTER FREE BRL PAN
	RACK-ROASTER SIDE			
10.182	RCIB-635-2 RCIB-645-2	6597531	2	PART OF SPATTER FREE BRL PAN
	RETAINER-THERMOSTAT BULB			
10.192	RCDB-630-2 RCIB-635-2 RDF-630	6568792	2	
10.192	RCDB-640-2	6568792	4	
10.192	RCIB-645-2	6569993	4	
	SCREW			
10.208	RCDB-630-2 RCIB-635-2 RDF-630	6567501	4	SHELF GUIDE
10.208	RCDB-640-2 RCIB-645-2	6567501	8	SHELF GUIDE
10.2081	RCIB-635-2 RCIB-645-2	5438261	8	HANDLE-PART OF SPATTER FREE BROILER PAN
	SHELF-OVEN			
10.213	RCDB-630-2 RCIB-635-2	6564483	2	26 SPACES WITH PLATE TYPE ENDS
10.213	RCDB-640-2 RCIB-645-2	6564484	2	RIGHT-20 SPACES WITH PLATE TYPE ENDS
10.213	RCDB-640-2 RCIB-645-2	6564485	2	LEFT-12 SPACES WITH PLATE TYPE ENDS
10.213	RCDB-630-2 RCIB-635-2 RDF-630	631204	2	27 SPACES WITH WIRE TYPE ENDS
10.213	RCDB-640-2 RCIB-645-2	7532548	2	RIGHT-21 SPACES WITH WIRE TYPE ENDS
10.213	RCDB-640-2 RCIB-645-2	7532549	2	LEFT-12 SPACES WITH WIRE TYPE ENDS
	WASHER			
10.279	RCDB-630-2 RCIB-635-2 RDF-630	6567604	4	PLAIN-SHELF GUIDE
10.279	RCDB-640-2 RCIB-645-2	6567604	8	PLAIN-SHELF GUIDE
10.2791	RCDB-630-2 RCIB-635-2 RDF-630	6565749	4	LOCK-SHELF GUIDE
10.2791	RCDB-640-2 RCIB-645-2	6565749	8	LOCK-SHELF GUIDE
10.2792	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5426173	AR	SPACER-SHELF GUIDE
	GUIDE-SHELF RH			
10.323	RCDB-630-2 RCIB-635-2 RDF-630	6564481	1	
10.323	RCDB-640-2 RCIB-645-2	6564481	2	
	GUIDE-SHELF LH			
10.3231	RCDB-630-2 RCIB-635-2 RDF-630	6564482	1	
10.3231	RCDB-640-2 RCIB-645-2	6564482	2	
	PAN-BROILER			
10.336	RCIB-635-2 RCIB-645-2	6561567	1	SPATTER FREE-COMPLETE
10.336	RCDB-630-2 RCDB-640-2 RDF-630	6569846	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 13 ELECTRICAL PARTS

	ADAPTER-ELECTRICAL			
13.001	ALL MODELS	P7529179	AR	THREE TERMINAL .030X1/4 INCH TAB
	BAFFLE-BROIL ELEMENT			
13.007	RCDB-630-2 RCIB-635-2 RDF-630	7535362	1	
13.007	RCDB-640-2 RCIB-645-2	7535362	1	RIGHT OVEN
13.007	RCDB-640-2 RCIB-645-2	6567291	1	LEFT OVEN
	BAFFLE-BAKE ELEMENT			
13.0071	RCIB-645-2	7520535	1	RIGHT OVEN
13.0071	RCDB-640-2	7521560	1	RIGHT OVEN
	BASE-STARTER			
13.009	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6562260	1	
	BLADE,TERMINAL-BAKE RECEPTACLE			
13.015	RCDB-630-2 RCIB-635-2 RDF-630	6567318	2	
13.015	RCDB-640-2 RCIB-645-2	6567318	4	
	BRACKET-LAMPHOLDER			
13.026	RCDB-640-2 RCIB-645-2	6567582	2	
13.026	RCDB-630-2 RCIB-635-2	6567862	2	
	BRACKET-SPEED HEAT UNIT FUSE			
13.0261	RCIB-635-2 RCIB-645-2	6568925	1	
	CHANNEL-LEAD COVER			
13.037	RCDB-630-2 RCIB-635-2 RDF-630	6567831	1	
13.037	RCDB-640-2 RCIB-645-2	6567831	2	
	CLIP-LEAD WIRE			
13.039	RCDB-630-2 RCIB-635-2 RCDB-640-2 RCIB-645-2	5435256	2	WIRE TYPE
13.039	RCDB-640-2 RCIB-645-2	5435256	2	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
13.039	RCIB-635-2	5435256	3	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
13.039	RCDB-630-2	5435256	4	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
13.039	RCDB-640-2 RCIB-645-2	5437814	1	WIRE SNAP IN TYPE
13.039	RCIB-635-2 RCIB-645-2	5437814	1	WIRE SNAP IN TYPE-SURFACE UNIT-MOUNTS TO SENSOR SUPPORT
13.039	RCDB-630-2 RCIB-635-2 RCDB-640-2 RCIB-645-2	5438956	1	MOUNT WITH SCREW,1/4 IN DIA
13.039	RCIB-635-2 RCIB-645-2 RCDB-640-2	5929166	1	MOUNT WITH SCREW
13.039	RDF-630	6565889	1	MOUNT WITH SCREW,3/8 IN DIA
13.039	RCDB-630-2 RCIB-635-2	6568338	1	WIRE TYPE MOUNTING WITH SCREW 1-1/4 IN DIA
13.039	RDF-630	6567490	1	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
13.039	RCDB-630-2 RCIB-635-2	6568051	1	WIRE TYPE MOUNTING WITH SCREW
13.039	RCDB-640-2 RCIB-645-2	6568051	2	WIRE TYPE MOUNTING WITH SCREW
13.039	RDF-630	6568051	4	WIRE TYPE MOUNTING WITH SCREW
13.039	RDF-630	7528581	2	MOUNTS TO CONTROL HOUSING
13.039	ALL MODELS	6569719	1	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
	CONNECTOR-LINE TERMINAL			
13.048	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5429035	3	COPPER-PLAIN
	CONNECTOR,LINE-TER RECEPTACLE JUMPER			
13.0481	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7532005	2	
	CONNECTOR,MALE-LEAD WIRE SPLICE			
13.0482	ALL MODELS	5438151	2	NATURAL COLOR-ROTISSERIE-SIX LEAD WIRES
13.0482	ALL MODELS	6566745	2	WHITE-SINGLE LEAD WIRE
	CONNECTOR,FEMALE-LEAD WIRE SPLICE			
13.0483	ALL MODELS	6566746	2	WHITE-SINGLE LEAD WIRE
13.0483	ALL MODELS	6567412	2	NATURAL COLOR-SIX LEAD WIRES
	CONNECTOR,MALE-ELECTRICAL			
13.0484	ALL MODELS	P5877822	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	CONNECTOR,FEMALE-ELECTRICAL			
13.0485	ALL MODELS	P5877823	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	CONNECTOR,SOLDERLESS			
13.0486	ALL MODELS	P84514	AR	LARGE-SET SCREW TYPE NO 14 TO 18 WIRE-3/16 IN ID
13.0486	ALL MODELS	P5851484	AR	MEDIUM-SET SCREW TYPE NO 14 TO 18 WIRE-1/8 IN ID
13.0486	ALL MODELS	6585261	AR	SMALL-SET SCREW TYPE NO 18 TO 20 WIRE-3/32 IN ID
	CONNECTOR,SLEEVE			
13.0487	ALL MODELS	P5873790	AR	CRIMP TYPE #14 TO #16 1 WIRE
	CONTACT-BAKE TERMINAL			
13.049	RCDB-630-2 RCIB-635-2 RDF-630	6567317	2	
13.049	RCDB-640-2 RCIB-645-2	6567317	4	
	CONTACT-GROUND TERMINAL BLADE			
13.0491	RCDB-630-2 RCIB-635-2 RDF-630	6567621	1	
13.0491	RCDB-640-2 RCIB-645-2	6567621	2	
	ELEMENT,HEATING-BROIL			
13.080	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6564765	1	RIGHT OVEN 3200W 236V
13.080	RCDB-640-2 RCIB-645-2	6564823	1	LEFT OVEN 1750W 236V
13.080	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7520982	1	RIGHT OVEN 2800W 208V
13.080	RCDB-640-2 RCIB-645-2	7520986	1	LEFT OVEN 1750W 208V
	ELEMENT,HEATING-BAKE			
13.0801	RCDB-630-2 RCIB-635-2 RDF-630	7521393	1	2400W 236V
13.0801	RCDB-630-2 RCIB-635-2 RDF-630	7521397	1	2330W 208V
13.0801	RCDB-640-2 RCIB-645-2	7521900	1	LEFT OVEN 1750W 236V
13.0801	RCDB-640-2 RCIB-645-2	7521905	1	LEFT OVEN 1750W 208V
13.0801	RCDB-640-2 RCIB-645-2	7523311	1	RIGHT OVEN 2200W 236V
13.0801	RCDB-640-2 RCIB-645-2	7523312	1	RIGHT OVEN 2200W 208V
	FUSE			
13.098	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	-------	1	15 AMP-PURCHASE LOCALLY
13.098	RCIB-635-2 RCIB-645-2	-------	1	20 AMP-SPEED HEAT UNIT-PURCHASE LOCALLY
	HOUSING-TERMINAL BLOCK			
13.116	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6567245	1	
	INSULATOR,ELECTRICAL-BROIL RECEPTACLE			
13.126	RCDB-630-2 RCIB-635-2 RDF-630	6567294	1	
13.126	RCDB-640-2 RCIB-645-2	6567294	2	
	INSULATOR,SLEEVE			
13.1262	ALL MODELS	5423696	AR	37-1/2 INCHES-FOR NO 10 WIRE
13.1262	ALL MODELS	6568691	AR	VINYL 1-7/16 INCHES LONG 3/16 IN ID
	LAMP,FLUORESCENT			
13.132	RCDB-630-2 RCIB-635-2	-------	1	25 WATT GE F25T12/CW-28 INCH PURCHASE LOCALLY
13.132	RCDB-640-2 RCIB-645-2	-------	1	30 WATT GE F30T8/CW-36 INCH PURCHASE LOCALLY
	NUT			
13.149	RCIB-635-2 RCIB-645-2	5438020	1	TEMPERATURE PROBE RECPTL
13.1491	RCDB-630-2 RCIB-635-2 RDF-630	P5423225	2	BAKE RECPTL TERMINAL BLADE
13.1491	RCDB-640-2 RCIB-645-2	P5423225	4	BAKE RECPTL TERMINAL BLADE
13.1492	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	619078	2	TERMINAL BLOCK
13.1493	RDF-630	619078	6	TERMINAL BLOCK TERMINAL
13.1493	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	619078	9	TERMINAL BLOCK TERMINAL
13.1495	RDF-630	5895869	1	PILOT LAMP INDICATOR
13.1496	RCDB-640-2 RCIB-645-2	5898589	2	TERMINAL BLOCK HOUSING
13.1497	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5855706	3	LINE TERMINAL CONNECTOR
13.1498	RCDB-640-2 RCIB-645-2	5439496	2	OVEN BAKE ELEMENT BAFFLE
	RECEPTACLE-BROIL ELEMENT TERMINAL			
13.185	RCDB-630-2 RCIB-635-2 RDF-630	6567292	1	
13.185	RCDB-640-2 RCIB-645-2	6567292	2	
	RECEPTACLE-APPLIANCE			
13.1851	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7522292	1	
	RECEPTACLE-TEMPERATURE PROBE			
13.1852	RCIB-635-2 RCIB-645-2	6560804	1	
	RECEPTACLE,REAR-BAKE ELEMENT TERMINAL			
13.1853	RCDB-630-2 RCIB-635-2 RDF-630	6567279	1	
13.1853	RCDB-640-2 RCIB-645-2	6567279	2	

1962 1963

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	RECEPTACLE,FRONT BAKE ELEMENT TERMINAL			
13.1854	RCDB-630-2 RCIB-635-2 RDF-630	6567316	1	FRONT
13.1854	RCDB-640-2 RCIB-645-2	6567316	2	FRONT
	RECEPTACLE,LAMP-OVEN			
13.1855	RCDB-630-2 RCIB-635-2 RDF-630	6564356	1	
13.1855	RCDB-640-2 RCIB-645-2	6564356	2	
	RECEPTACLE-FUSE			
13.1856	RCDB-630-2 RCDB-640-2 RDF-630	7531422	1	
13.1856	RCIB-635-2 RCIB-645-2	7531422	2	
	RETAINER-BROIL RECEPTACLE			
13.192	RCDB-630-2 RCIB-635-2 RDF-630	6567293	1	
13.192	RCDB-640-2 RCIB-645-2	6567293	2	
	RETAINER-OVEN LAMP COVER			
13.1921	RCDB-630-2 RCIB-635-2	6567297	1	
13.1921	RCDB-640-2 RCIB-645-2	6567297	2	
	RETAINER-CONDUIT			
13.1922	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5425684	1	
	RETAINER-FUSE RECEPTACLE			
13.1923	RCDB-630-2 RCDB-640-2 RDF-630	7520171	2	
13.1923	RCIB-635-2 RCIB-645-2	7520171	4	
	RIVET-OVEN LAMP COVER RETAINER			
13.194	RCDB-630-2 RCIB-635-2	6547820	2	
13.194	RCDB-640-2 RCIB-645-2	6547820	4	
	SCREW			
13.208	ALL MODELS	628321	AR	TERMINAL 4-40X5/16 INCH
13.208	ALL MODELS	5426495	AR	TERMINAL 10-32X1/4 INCH
13.208	ALL MODELS	5426525	AR	TERMINAL 8-32X3/8 INCH
13.208	ALL MODELS	5427014	AR	TERMINAL 8-32X1/2 INCH
13.208	ALL MODELS	5427015	AR	TERMINAL 8-32X1/4 INCH
13.208	ALL MODELS	5894189	AR	TERMINAL 8-32X5/8 INCH
13.208	ALL MODELS	5894191	AR	TERMINAL 6-32X1/4 INCH
13.208	ALL MODELS	5899914	AR	TERMINAL 4-40X7/16 INCH
13.208	ALL MODELS	9408527	AR	TERMINAL 10-32X1/2 INCH
13.2081	RCDB-630-2 RCIB-635-2 RDF-630	7528041	4	LEAD COVER CHANNEL 8-18X7/16
13.2081	RCDB-640-2 RCIB-645-2	7528041	6	LEAD COVER CHANNEL 8-18X7/16
13.2082	RCDB-630-2 RCIB-635-2 RDF-630	6567885	2	BROIL ELEMENT 10-32X2
13.2082	RCDB-640-2 RCIB-645-2	6567885	4	BROIL ELEMENT 10-32X2
13.2082	RCDB-630-2 RCIB-635-2 RDF-630	7528041	2	BROIL ELEMENT 8-18X7/16
13.2082	RCDB-640-2 RCIB-645-2	7528041	4	BROIL ELEMENT 8-18X7/16
13.2083	RDF-630	5436287	7	LEAD WIRE CLIP 8-18X3/8
13.2083	RCDB-640-2 RCIB-645-2	7528041	4	LEAD WIRE CLIP 8-18X7/16
13.2083	RCDB-630-2 RCIB-635-2	7528041	5	LEAD WIRE CLIP 8-18X7/16
13.2083	ALL MODELS	5436528	1	LEAD WIRE CLIP-USE WITH 6569719 CLIP 8-15X3/8
13.2084	RCDB-640-2 RCIB-645-2	6565857	2	BROIL RECEPTACLE RETAINER 10-12X1
13.2084	RCDB-630-2 RCIB-635-2 RDF-630	7528041	1	BROIL RECEPTACLE RETAINER 10-12X1
13.2085	RCDB-640-2 RCIB-645-2	6568426	2	OVEN BAKE ELEMENT BAFFLE
13.2086	RCIB-635-2 RCIB-645-2	5436528	2	MEAT TEMP PROBE RECEPTACLE COVER 8-15X3/8
13.2087	RCIB-635-2 RCIB-645-2	6567391	2	TRANSFORMER 8-32X5/16
13.2088	RCIB-635-2 RCIB-645-2	5436528	2	MEAT TEMPERATURE SIGNAL 8-15X3/8
13.2089	RCDB-630-2 RCIB-635-2 RDF-630	442697	2	BAKE TER CONTACT TO BLADE 10-32X9/16
13.2089	RCDB-640-2 RCIB-645-2	442697	4	BAKE TER CONTACT TO BLADE 10-32X9/16
13.20811	RCDB-630-2 RCIB-635-2 RDF-630	7528041	1	GROUND TERMINAL CONTACT 8-18X7/16
13.20811	RCDB-640-2 RCIB-645-2	7528041	2	GROUND TERMINAL CONTACT 8-18X7/16
13.20812	RCDB-630-2 RCIB-635-2 RDF-630	6567885	1	FRONT BAKE UNIT RECEPTACLE 10-12X2
13.20812	RCDB-640-2 RCIB-645-2	6567885	2	FRONT BAKE UNIT RECEPTACLE 10-12X2
13.20813	RCDB-630-2 RCIB-635-2 RDF-630	6565857	2	OVEN LAMP RECEPTACLE 10-12X1
13.20813	RCDB-640-2 RCIB-645-2	6565857	4	OVEN LAMP RECEPTACLE 10-12X1
13.20814	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5436528	2	FLUOR LAMP HOLDER BRACKET 8-15X3/8
13.20815	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	163102	2	FLUOR LAMP HOLDER 6-20X1/2
13.20816	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5436528	2	STARTER BASE 8-15X3/8

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
13.20817	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6546560	2	TERMINAL BLOCK 10-12X3/4
13.20817	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6566861	2	TERMINAL BLOCK 10-32X3/4
13.20818	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5436724	2	CONDUIT RETAINER 10-32X3/8
13.20819	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5424117	1	GROUND STRAP 10-12X3/8
13.20821	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6546560	2	NEUTRAL CONNECTOR BLOCK 10-12X3/4
13.20822	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5436724	2	TERMINAL BLOCK HOUSING 10-32X3/8
13.20824	RCIB-635-2 RCIB-645-2	7528041	1	SPEED HEAT UNIT FUSE BRACKET 8-18X7/16
13.20825	RCDB-640-2 RCIB-645-2	7528041	3	TERMINAL BLOCK COVER 8-18X7/16
13.20826	RCDB-630-2 RCIB-635-2	6567391	2	FLUORESCENT LAMP BALLAST 8-32X5/16
13.20826	RCDB-640-2 RCIB-645-2	5436724	2	FLUORESCENT LAMP BALLAST 10-32X3/8
13.20827	RCIB-645-2	5436528	2	CONTROL PANEL TERMINAL SHIELD 8-15X3/8
13.20827	RCDB-640-2	5436528	4	CONTROL PANEL TERMINAL SHIELD 8-15X3/8
13.20828	RDF-630	5426495	2	TERMINAL EXTENSION 10-32X1/4
	SHIELD,TERMINAL-CONTROL PANEL			
13.216	RCDB-640-2	6569957	1	4-1/4X5-5/16 INCHES
13.216	RCIB-645-2	6569958	1	5-5/16X5-7/16 INCHES
	STARTER-FLUORESCENT LAMP			
13.230	RCDB-640-2 RCIB-645-2	5432429	1	
13.230	RCDB-630-2 RCIB-635-2	6560637	1	
	INDICATOR-PILOT LAMP			
13.248	RDF-630	7529130	1	
	TRANSFORMER			
13.251	RCIB-635-2 RCIB-645-2	7520845	1	12 VOLT
	WASHER			
13.279	RCIB-635-2 RCIB-645-2	5918758	1	LOCK-TEMP PROBE RECEPTACLE
13.2791	RCIB-635-2 RCIB-645-2	5438491	2	PLAIN-TEMP PROBE RECEPTACLE
13.2792	RDF-630	5433842	1	TERMINAL
13.2792	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5433842	5	TERMINAL
	SUPPORT-BAKE ELEMENT			
13.321	RCDB-640-2 RCIB-645-2	+ 7520538	1	RH-RIGHT OVEN
13.321	RCDB-640-2 RCIB-645-2	+ 7520539	1	LH-RIGHT OVEN
13.321	RCDB-640-2 RCIB-645-2	§ 7523315	1	
13.321	RCDB-630-2 RCIB-635-2	6597604	1	
13.321	RCDB-640-2 RCIB-645-2	6597604	1	LEFT OVEN
	STRAP-MEAT TEMP INDICATOR LEAD WIRES			
13.322	RCDB-640-2 RCIB-645-2	7527794	1	
13.322	RCDB-630-2 RCIB-635-2	7527794	2	
	CLAMP,BROIL ELEMENT RETAINER-OVEN			
13.327	RCDB-630-2 RCIB-635-2 RDF-630	5436951	12	
13.327	RCDB-640-2 RCIB-645-2	5436951	16	
	CLAMP-LEAD WIRE			
13.3271	RCDB-630-2	5929166	1	
13.3271	ALL MODELS	7527865	1	AT FUSE RECEPTACLE
	TERMINAL,ELECTRIC			
13.3293	ALL MODELS	P5873786	AR	EYELET-LEAD WIRE #6 SCREW
13.3293	ALL MODELS	P5873787	AR	EYELET-LEAD WIRE #8 SCREW
13.3293	ALL MODELS	P5873788	AR	EYELET-LEAD WIRE #10 SCREW
13.3294	ALL MODELS	P5873789	AR	BULLET NOSE-NO 14 TO 16 WIRE
13.3295	ALL MODELS	P6569386	AR	BLADE RECEPTACLE-2 WIRE STR .030X1/4 INCH TAB
13.3295	ALL MODELS	P5875093	AR	BLADE RECEPTACLE-1 WIRE STR .030X1/4 INCH TAB
13.3295	ALL MODELS	7529602	AR	BLADE RECEPTACLE-1 WIRE STR .020X3/16 INCH TAB
13.3296	ALL MODELS	P5875091	AR	BLADE RECEPTACLE-FLAG-1 WIRE .020X3/16 INCH TAB
13.3296	ALL MODELS	P5875092	AR	BLADE RECEPTACLE-FLAG-1 WIRE .030X1/4 INCH TAB
13.3297	ALL MODELS	6568735	6	TAB-USE WITH VENT HOODS
13.3297	ALL MODELS	P6592122	AR	TAB-.016X1/4 INCH-2 WIRE STR
13.3298	ALL MODELS	P5875094	AR	BLADE RECEPTACLE-PIGGY BACK-1 WIRE STRAIGHT .030X1/4 TAB
13.3299	ALL MODELS	6592002	AR	RECEPTACLE-HARNESS HOUSING 2 WIRE STR-.030X1/4 INCH TAB

§Use with heater elements having one full width support.
+Use with heater elements having two separate supports.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BLOCK-TERMINAL			
13.330	RCDB-630	6563359	1	
13.330	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6563359	2	
	BLOCK,TERMINAL-NEUTRAL CONNECTOR			
13.3301	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5432396	1	
	BULB,LAMP-OVEN ILLUMINATING			
13.358	RCDB-630-2 RCIB-635-2 RDF-630	-------	1	MEDIUM BASE-40 WATT PURCHASE LOCALLY
13.358	RCDB-640-2 RCIB-645-2	-------	2	MEDIUM BASE-40 WATT-PURCHASE LOCALLY
	BULB,LAMP-PILOT			
13.3581	RDF-630	-------	1	CANDELABRA BASE-10 WATT-PURCHASE LOCALLY
	HOLDER,LAMP-FLUORESCENT			
13.363	RCDB-640-2 RCIB-645-2	6564594	1	LH
13.363	RCDB-630-2 RCIB-635-2	6564594	2	
13.363	RCDB-640-2 RCIB-645-2	7524722	1	RH
	HOLDER,LAMP-PILOT			
13.3631	RDF-630	7524966	1	
	BALLAST-FLUORESCENT LAMP			
13.371	RCDB-640-2 RCIB-645-2	5432344	1	30 WATT
13.371	RCDB-630-2 RCIB-635-2	6562489	1	25 WATT
	COVER-TERMINAL BLOCK			
13.378	RCDB-640-2 RCIB-645-2	6567870	1	
	COVER-MEAT TEMP PROBE RECEPTACLE			
13.3781	RCIB-635-2 RCIB-645-2	6567436	1	
	STRAP,GROUND			
13.386	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5426989	1	
	SPLICE,MALE-ELECTRICAL			
13.394	ALL MODELS	P5431641	AR	BLADE TO BLADE .030X1/4 INCH TAB
	EXTENSION-TERMINAL			
13.429	RDF-630	7529819	2	
	HARNESS,ELECTRICAL			
13.438	RCDB-630-2 BEF SER NO 42C37631	#7520370	1	SWITCHES
13.438	RCDB-630-2 AFT SER NO 42C37630	#7523387	1	SWITCHES
13.438	RCDB-630-2	*7524003	1	SWITCHES
13.438	RCIB-635-2 BEF SER NO 42C83557	#7520371	1	SWITCHES
13.438	RCIB-635-2 AFT SER NO 42C83556	#7523390	1	SWITCHES
13.438	RCIB-635-2	*7524001	1	SWITCHES
13.438	RDF-630	7524976	1	COOKING TOP
13.438	RCDB-630-2	*7524002	1	COOKING TOP
13.438	RCDB-630-2 BEF SER NO 42C37631	#7520372	1	COOKING TOP
13.438	RCDB-630-2 AFT SER NO 42C37630	#7523386	1	COOKING TOP
13.438	RCIB-635-2 AFT SER NO 42C83556	#7523389	1	COOKING TOP
13.438	RCIB-635-2 BEF SER NO 42C83557	#7520373	1	COOKING TOP
13.438	RCIB-635-2	*7524000	1	COOKING TOP
13.438	RCDB-640-2	*7523998	1	COOKING TOP
13.438	RCDB-640-2 BEF SER NO 42C38429	#7520380	1	COOKING TOP
13.438	RCDB-640-2 AFT SER NO 42C38428	#7523397	1	COOKING TOP
13.438	RCIB-645-2	*7523996	1	COOKING TOP
13.438	RCIB-645-2 BEF SER NO 42C85330	#7520381	1	COOKING TOP
13.438	RCIB-645-2 AFT SER NO 42C85329	#7523402	1	COOKING TOP
13.438	RCDB-640-2	*7524083	1	RIGHT THERMOSTAT
13.438	RCDB-640-2 BEF SER NO 42C38429	#7522798	1	RIGHT THERMOSTAT
13.438	RCDB-640-2 AFT SER NO 42C38428	#7523399	1	RIGHT THERMOSTAT
13.438	RCIB-645-2	*7524079	1	RIGHT THERMOSTAT
13.438	RCIB-645-2 BEF SER NO 42C85329	#7522806	1	RIGHT THERMOSTAT
13.438	RCIB-645-2 AFT SER NO 42C85328	#7523404	1	RIGHT THERMOSTAT
13.438	RDF-630	7524975	1	LINE AND THERMOSTAT
13.438	RCDB-630-2	*7524081	1	LINE AND THERMOSTAT
13.438	RCDB-630-2 BEF SER NO 42C37631	#7521566	1	LINE AND THERMOSTAT
13.438	RCDB-630-2 AFT SER NO 42C37630	#7523388	1	LINE AND THERMOSTAT
13.438	RCIB-635-2	*7524077	1	LINE AND THERMOSTAT
13.438	RCIB-635-2 BEF SER NO 42C83557	#7522808	1	LINE AND THERMOSTAT
13.438	RCIB-635-2 AFT SER NO 42C83556	#7523391	1	LINE AND THERMOSTAT
13.438	RCDB-640-2	*7523999	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCDB-640-2 BEF SER NO 42C38429	#7521555	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCDB-640-2 AFT SER NO 42C38428	#7523398	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCIB-645-2	*7523997	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCIB-645-2 BEF SER NO 42C85329	#7522807	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCIB-645-2 AFT SER NO 42C85328	#7523403	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCDB-640-2 BEF SER NO 42C38429 RCIB-645-2 BEF SER NO 42C85330	7522799	1	COOKMASTER AND THERMOSTAT
13.438	RCDB-640-2 AFT SER NO 42C38428 RCIB-645-2 AFT SER NO 42C85329	7523400	1	COOKMASTER AND THERMOSTAT

*Use with models having the letter "R" following the serial number.
#Use with models without the letter "R" following the serial number.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SIGNAL-MEAT TEMPERATURE			
13.457	RCIB-635-2 RCIB-645-2	6562432	1	12 VOLT
	PROBE-MEAT TEMPERATURE			
13.458	RCIB-635-2 RCIB-645-2	6560817	1	
	LIGHT,PILOT-SURFACE UNIT			
13.489	RCIB-635-2 BEF SER NO 42C83557 RCIB-645-2 BEF SER NO 42C85330	6595026	1	SPEED HEAT-LEFT FRONT
13.489	RCIB-635-2 BEF SER NO 42C83557 RCIB-645-2 BEF SER NO 42C85330	6595026	3	LEFT REAR,RIGHT FRONT AND RIGHT REAR
13.489	RCDB-630-2 BEF SER NO 42C37631 RCDB-640-2 BEF SER NO 42C38429	6595026	4	
13.489	RCDB-630-2 AFT SER NO 42C37630 RCDB-640-2 AFT SER NO 42C38428	6595026	4	LEFT FRONT,LEFT REAR,RIGHT FRONT AND RIGHT REAR
13.489	RCIB-635-2 AFT SER NO 42C83556 RCIB-645-2 AFT SER NO 42C85329	6595026	4	LEFT REAR,RIGHT FRONT,RIGHT REAR AND LEFT FRONT
	LIGHT,PILOT-OVEN			
13.4891	RCDB-630-2	6595025	1	
13.4891	RCDB-640-2	6595025	2	
13.4891	RCIB-635-2	6595025	1	BAKE
13.4891	RCIB-645-2	6595025	2	BAKE
13.4891	RCIB-635-2	6595026	1	BROIL
13.4891	RCIB-645-2	6595026	2	BROIL

1962/1963

GROUP 14 ACCESSORIES AND PARTS

	BOX-JUNCTION			
14.023	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5879987	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	BUMPER-FRONT PANEL			
14.029	RCDB-630-2 RCIB-635-2 RDF-630	5879990	2	PART OF EH-30 VENT HOOD BEFORE SERIAL NO 24-HD-210
14.029	RCDB-640-2 RCIB-645-2	5879990	4	PART OF EH-40 VENT HOOD BEFORE SERIAL NO 26-HD-144 AND SERIAL NOS 26-HD-190 THRU 26-HD-240
14.029	RCDB-630-2 RCIB-635-2 RDF-630	6592262	2	PART OF EH-30 VENT HOOD
14.029	RCDB-630-2 RCIB-635-2 RDF-630	6592262	2	PART OF EH-35 VENT HOOD AFTER SERIAL NO 24-HD-209
14.029	RCDB-640-2 RCIB-645-2	6592262	4	PART OF EH-40 VENT HOOD
14.029	RCDB-640-2 RCIB-645-2	6592262	4	PART OF EH-45 VENT HOOD SERIAL NOS 26-HD-144 THRU 26-HD-189 AND AFTER SERIAL NO 26-HD-240
	CHANNEL-WIRING			
14.037	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*6592480	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	CLIP-FILTER			
14.039	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592128	2	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	CONNECTOR,FEMALE-LEAD WIRE SPLICE			
14.048	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*7529998	2	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	CONNECTOR,MALE-LEAD WIRE SPLICE			
14.0481	RCDB-630-2 RCDB-640-2 RDF-630 RCI-635-2 RCIB-645-2	*7528468	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
14.0481	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7528468	1	VENT HOOD PLUG IN-MOUNTS TO CONTROL HOUSING
	FILTER,AIR			
14.088	RCDB-630-2 RCIB-635-2 RDF-630	5879979	1	PART OF EH-30&EH-35 VENT HOODS
14.088	RCDB-640-2 RCIB-645-2	5879980	1	PART OF EH-40&EH-45 VENT HOODS
14.0881	RCDB-630-2 RCIB-635-2 RDF-630	6592487	1	CARBON-PART OF EH-35 VENT HOOD
14.0881	RCDB-640-2 RCIB-645-2	6592488	1	CARON-PART OF EH-45 VENT HOOD
14.0882	RCDB-630-2 RCIB-635-2 RDF-630	6592489	1	SMOKE-PART OF EH-35 VENT HOOD
14.0882	RCDB-640-2 RCIB-645-2	6592490	1	SMOKE-PART OF EH-45 VENT HOOD
	GEAR-SPROCKET			
14.101	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6592135	2	PART OF 6590486 ROTISSERIE

*Use with models having the letter "R" following the serial number.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	GROMMET,NEOPRENE-CONDUIT			
14.109	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5875949	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	HOOD,VENT			
14.113	RCDB-630-2 RCIB-635-2 RDF-630	-------	1	EH-30&EH-35 FINISHED PRODUCTS
14.113	RCDB-640-2 RCIB-645-2	-------	1	EH-40&EH-45 FINISHED PRODUCTS
	HOUSING-BLOWER			
14.116	RCDB-630-2 RCIB-635-2 RDF-630	5879984	1	RH PART OF EH-30,EH-40,EH-35& EH-45 HOODS
14.116	RCDB-640-2 RCIB-645-2	5879985	1	LH PART OF EH-30,EH-40,EH-35& EH-45 HOODS
	MOTOR-ROTISSERIE			
14.143	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7524935	1	PART OF ROTISSERIE KIT
	MOTOR-BLOWER			
14.1431	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	#5879986	1	PART OF EH-30&EH-40 VENT HOOD
14.1431	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*6592484	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	NUT			
14.149	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569014	AR	TRIM-PART OF EH-30,EH-40, EH-35&EH-45 VENT HOODS
14.1491	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5434526	1	CIRCUIT BREAKER-PART OF EH-30 EH-40,EH-35&EH-45 VENT HOODS
	PANEL,FRONT-VENT HOOD			
14.156	RCDB-630-2 RCIB-635-2 RDF-630	6593105	1	COMPLETE-PART OF EH-30&EH-35 VENT HOODS-BLACK
14.156	RCDB-640-2 RCIB-645-2	6593106	1	COMPLETE-PART OF EH-40&EH-45 VENT HOODS-BLACK
	PANEL,FRONT-HOOD TRIM			
14.1561	RCDB-630-2 RCIB-635-2 RDF-630	6590677	1	PART OF EH-30 VENT HOOD BEFORE SERIAL NO 24-HD-210
14.1561	RCDB-640-2 RCIB-645-2	6590678	1	PART OF EH-40 VENT HOOD BEFORE SERIAL NO 26-HD-144 AND SERIAL NOS 26-HD-190 THRU 26-HD-240
14.1561	RCDB-630-2 RCIB-635-2 RDF-630	6592263	1	PART OF EH-30 VENT HOOD
14.1561	RCDB-630-2 RCIB-635-2 RDF-630	6592263	1	PART OF EH-35 VENT HOOD AFTER SERIAL NO 24-HD-209
14.1561	RCDB-640-2 RCIB-645-2	6592264	1	PART OF EH-40 VENT HOOD
14.1561	RCDB-640-2 RCIB-645-2	6592264	1	PART OF EH-45 VENT HOOD SERIAL NOS 26-HD-144 THRU 26-HD-189 AND AFTER SERIAL NO 26-HD-240
	PLATE,NAME-HOOD			
14.170	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592127	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	PROTECTOR,ELECTRICAL-CIRCUIT BREAKER			
14.174	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*5432132	1	15 AMP-PART OF EH-30,EH-40, EH-35&EH-45 VENT HOODS
	RACK-ROTISSERIE			
14.182	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7520920	1	PART OF ROTISSERIE KIT
	RECEPTACLE,ELECTRICAL			
14.185	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	#5879989	1	PART OF EH-30&EH-40 VENT HOOD
	RETAINER-FRONT PANEL			
14.192	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592481	2	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	ROLLER-FRONT PANEL			
14.199	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592482	2	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	SCREW			
14.208	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5435817	2	THUMB-ROTISSERIE FORK-PART OF ROTISSERIE KIT
14.2081	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6562048	5	ROTISSERIE-PART OF ROTISSERIE KIT 10-12X1/2
14.2082	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5879992	4	VENT HOOD
14.2083	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5430929	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT 8-32X3/8
14.2084	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5879944	2	SWITCH INSULATOR-PART OF ROTISSERIE KIT 6-32X1/4
14.2085	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6592138	2	SWITCH-PART OF ROTISSERIE KIT 2-56X1-3/8
14.2086	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5855529	AR	TRIM-PART OF EH-30,EH-40, EH-35&EH-45 VENT HOODS

*Use with EH-30 and EH-40 Vent Hoods having the letter "R" following the serial number.
#Use with EH-30 and EH-40 Vent Hoods without the letter "R" following the serial number.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
14.2087	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5885238	1	JUNCTION BOX COVER-PART OF EH-30,EH-40,EH-35&EH-45 VENT HOODS
14.2088	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5885238	3	JUNCTION BOX-PART OF EH-30, EH-40,EH-35&EH-45 VENT HOODS
14.2089	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5885238	1	SWITCH BOX COVER-PART OF EH-30,EH-40,EH-35&EH-45 VENT HOODS
14.20811	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*5885238	1	WIRING CHANNEL-PART OF EH-30, EH-40,EH-35&EH-45 VENT HOODS
14.20812	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5887721	2	FRONT PANEL RETAINER-PART OF EH-30,EH-40,EH-35&EH-45 VENT HOODS
14.20813	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	639383	2	SET-BLOWER WHEEL-PART OF EH-30,EH-40,EH-35&EH-45 VENT HOODS
14.20814	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*7528041	2	PLUG IN COVER-PART OF EH-30, EH-40,EH-35&EH-45 VENT HOODS
	SPRING-LINK WIRE			
14.226	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6592136	1	PART OF ROTISSERIE KIT EH-45 VENT HOODS
	SPRING-FILTER			
14.2262	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592475	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	SPRING-FRONT PANEL ROLLER			
14.2263	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592483	2	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	TRIM-HOOD HOUSING			
14.253	RCDB-630-2 RCIB-635-2 RDF-630	6592123	1	PART OF EH-30&EH-35 VENT HOODS
14.253	RCDB-640-2 RCIB-645-2	6592129	1	PART OF EH-40&EH-45 VENT HOODS
	TRIM,FRONT-HOOD			
14.2531	RCDB-630-2 RCIB-635-2 RDF-630	6592125	1	PART OF EH-30&EH-35 VENT HOODS
14.2531	RCDB-640-2 RCIB-645-2	6592130	1	PART OF EH-40&EH-45 VENT HOODS
	TRIM-CIRCUIT BREAKER			
14.2532	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*6565962	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	WASHER			
14.279	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5879591	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT
14.2791	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5898148	AR	TRIM-PART OF EH-30,EH-40, EH-35&EH-45 VENT HOODS
14.2792	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*5886323	1	LOCK-CIRCUIT BREAKER-PART OF EH-30,EH-40,EH-35&EH-45 VENT HOODS
	DUCT,AIR			
14.311	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5879977	1	PART OF EH-30&EH-40 VENT HOOD
	CLAMP-BLOWER HOUSING			
14.327	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5879978	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	PAN-BROILER			
14.336	RCDB-630-2 RCDB-640-2 RDF-630	6561567	1	SPATTER FREE-COMPLETE
14.336	RCDB-640-2 RCIB-645-2	7526124	1	SMALL FOR LEFT OVEN-COMPLETE
	WHEEL,BLOWER			
14.341	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5879981	1	RH-PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
14.341	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5879982	1	LH-PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	LINK-TRIGGER TO SPRING			
14.348	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6592132	1	PART OF ROTISSERIE KIT
	LINK-ACTUATING ARM TO PLATE			
14.3481	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6592134	1	PART OF ROTISSERIE KIT
	CHAIN-DRIVE			
14.351	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6592133	1	PART OF ROTISSERIE KIT
	PIN-GEAR			
14.364	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6592137	2	PART OF ROTISSERIE KIT

1962-1963

*Use with EH-30 and EH-40 Vent Hoods having the letter "R" following the serial number.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	COVER-ROTISSERIE			
14.378	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6568762	1	UPPER
14.378	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6568763	1	LOWER
	COVER-JUNCTION BOX			
14.3781	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	#5879988	1	PART OF EH-30&EH-40 VENT HOOD
14.3781	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*6592477	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	COVER-SWITCH BOX			
14.3782	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592476	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	COVER-AIR DUCT			
14.3783	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6592486	1	PART OF EH-30&EH-40 VENT HOOD
	COVER-PLUG IN			
14.3784	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	*5592485	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	SWITCH-BLOWER OPERATING			
14.396	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5432253	1	PART OF EH-30,EH-40,EH-35& EH-45 VENT HOODS
	SWITCH-ROTISSERIE			
14.3961	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7520919	1	PART OF ROTISSERIE KIT
	ROTISSERIE KIT			
14.428	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6590486	1	
	SPIT-ROTISSERIE			
14.430	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	7520921	1	PART OF ROTISSERIE KIT
	FORK,TURNING-ROTISSERIE			
14.431	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	5432586	2	PART OF ROTISSERIE KIT
	GRIDDLE,KANT SLIDE			
14.485	ALL MODELS	630794	1	USE ON 8 INCH SURFACE UNITS

GROUP 15 INSULATION

	INSULATION,BULK			
15.124	ALL MODELS	5873771	AR	1X18X30 INCHES
15.124	ALL MODELS	5873772	AR	2X24X90 INCHES
15.124	ALL MODELS	5873773	AR	2-1/2X42X90 INCHES
15.124	ALL MODELS	5873774	AR	3X38X90 INCHES
15.1241	RCDB-630-2 RCIB-635-2 RDF-630	§-------	1	OVEN SIDES AND BOTTOM 2X15X59 INCHES
15.1241	RCDB-640-2 RCIB-645-2	§-------	1	LEFT OVEN SIDES AND BOTTOM 2X15X49 INCHES
15.1241	RCDB-640-2 RCIB-645-2	§-------	1	RIGHT OVEN SIDES AND BOTTOM 2X15X57 INCHES
15.1242	RDF-630	§-------	1	OVEN BACK 2X16X28 INCHES
15.1242	RDF-630	§-------	1	OVEN TOP 3X16X28 INCHES
15.1242	RCDB-630-2 RCIB-635-2	§-------	3	OVEN TOP AND BACK 2X16X28 IN
15.1242	RCDB-640-2 RCIB-645-2	§-------	3	LEFT OVEN TOP AND BACK 2X14X16 INCHES
15.1242	RCDB-640-2 RCIB-645-2	§-------	3	RIGHT OVEN TOP AND BACK 2X16X22 INCHES
	INSULATON,ASBESTOS-COOKING TOP COVER			
15.1243	RCDB-630-2 RCDB-640-2 RCIB-635-2 RCIB-645-2	6567916	1	SOUND 8-7/16X18 INCHES-CUT TO SIZE REQUIRED

§Cut to size from bulk pieces.

*Use with EH-30 and EH-40 Vent Hoods having the letter "R" following the serial number.
#Use with EH-30 and EH-40 Vent Hoods without the letter "R" following the serial number.

GROUP 16 BASE CABINETS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BRACKET-HINGE PIVOT			
16.026	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6567649	4	PART OF B-30&B-40 BASE CABINETS
	BUMPER-DOOR			
16.029	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568980	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUMPER-SHELF			
16.0291	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569025	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUMPER,SLEEVE-SHELF			
16.0292	RCDB-630-2 RCIB-635-2 RDF-630	6569022	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.0292	RCDB-640-2 RCIB-645-2	6569022	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	DOOR-BASE CABINET LH			
16.070	RCDB-630-2 RCIB-635-2 RDF-630	7521951	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-630-2 RCIB-635-2 RDF-630	7521972	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-630-2 RCIB-635-2 RDF-630	7521973	1	PINK-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-630-2 RCIB-635-2 RDF-630	7521974	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-630-2 RCIB-635-2 RDF-630	7521975	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDB-640-2 RCIB-645-2	7521978	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDB-640-2 RCIB-645-2	7521999	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDB-640-2 RCIB-645-2	7522000	1	PINK-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDB-640-2 RCIB-645-2	7522001	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDB-640-2 RCIB-645-2	7522002	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCIB-645-2	7523357	1	CHARCOAL-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	DOOR-BASE CABINET RH			
16.0701	RCDB-630-2 RCIB-635-2 RDF-630	7521950	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-630-2 RCIB-635-2 RDF-630	7521964	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-630-2 RCIB-635-2 RDF-630	7521965	1	PINK-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-630-2 RCIB-635-2 RDF-630	7521966	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-630-2 RCIB-635-2 RDF-630	7521967	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDB-640-2 RCIB-645-2	7521977	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDB-640-2 RCIB-645-2	7521991	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDB-640-2 RCIB-645-2	7521992	1	PINK-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDB-640-2 RCIB-645-2	7521993	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDB-640-2 RCIB-645-2	7521994	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCIB-645-2	7523356	1	CHARCOAL-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	FRAME-BASE CABINET			
16.096	RCDB-630-2 RCIB-635-2 RDF-630	-------	1	PART OF B-30 BASE CABINET
16.096	RCDB-640-2 RCIB-645-2	-------	1	PART OF B-40 BASE CABINET
	HANDLE,DOOR-BASE CABINET			
16.110	RCDB-630-2 RCIB-635-2 RDF-630	6568979	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.110	RCDB-640-2 RCIB-645-2	6568996	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	NUT			
16.149	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5439337	2	DOOR STRIKE-PART OF B-30& B-40 BASE CABINETS
16.1492	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	447014	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106

1962 — 1963

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	NUT			
16.1493	RCDB-630-2 RCIB-635-2 RDF-630	5870061	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105
16.1493	RCDB-640-2 RCIB-645-2	5870061	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106
	SCREW			
16.208	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5887109	8	HINGE PIVOT BRACKET-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
16.2081	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5909850	8	DOOR HINGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
16.2082	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568999	6	DOOR HANDLE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-18X3/8
16.2085	RCDB-630-2 RCIB-635-2 RDF-630	P7536987	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-15X1/2
16.2085	RCDB-640-2 RCIB-645-2	P7536987	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-15X1/2
16.2085	RCDB-630-2 RCIB-635-2 RDF-630	5909850	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-32X1/2
16.2085	RCDB-640-2 RCIB-645-2	5909850	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-32X1/2
16.2086	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5415118	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 3/8-16X5/8
16.2087	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	455508	4	UPPER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
16.2089	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	455508	4	LOWER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NO 6560105 AND 6560106 6-18X3/8
16.20811	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569714	2	LOWER TRIM CAP-PART OF B-30& B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 6-20X3/8
16.20812	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	5427288	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	SHELF-CABINET			
16.213	RCDB-630-2 RCIB-635-2 RDF-630	7521343	1	PART OF B-30 BASE CABINET MODEL NO 6560105
16.213	RCDB-640-2 RCIB-645-2	7521344	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	TRIM,SIDE-UPPER			
16.253	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568982	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106-SATIN FINISH-RIBBED
	TRIM,SIDE-LOWER			
16.2531	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568983	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	WASHER			
16.2791	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	640152	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	WRENCH-GLIDER BUTTON ADJUSTING			
16.282	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568988	1	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUSHING-HINGE PIVOT			
16.316	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6567650	4	PART OF B-30&B-40 BASE CABINETS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	GUIDE-SHELF			
16.323	RCDB-630-2 RCIB-635-2 RDF-630	6569021	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.323	RCDB-640-2 RCIB-645-2	6569021	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	CATCH,SPRING-DOOR			
16.328	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6567662	2	PART OF B-30&B-40 BASE CABINETS
	HINGE,DOOR-RH TOP AND LH BOTTOM			
16.346	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6564643	2	PART OF B-30&B-40 BASE CABINETS
	HINGE,DOOR-LH TOP AND RH BOTTOM			
16.3461	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6564644	2	PART OF B-30&B-40 BASE CABINETS
	STRIKE-DOOR			
16.349	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568984	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	CAP-LOWER TRIM			
16.376	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6569067	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	COVER-REAR ACCESS			
16.378	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7522003	2	WHITE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7522004	2	YELLOW-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7522005	2	PINK-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7522006	2	TURQUOISE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	7522007	2	COPPER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCIB-645-2	7523365	2	CHARCOAL-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	BUTTON,GLIDER-CABINET			
16.380	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6568985	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUTTON,PLUG-DOOR			
16.3801	RCDB-630-2 RCDB-640-2 RDF-630 RCIB-635-2 RCIB-645-2	6567526	4	PART OF B-30&B-40 BASE CABINETS

1962-1963


GM
MARK OF EXCELLENCE

FRIGIDAIRE
FLAIR RANGES
PARTS CATALOG

1964 MODELS

INDEX

GROUP CODES	DESCRIPTION	ILLUSTRATION PAGES	PARTS INFORMATION PAGES
	ALPHABETICAL INDEX	--	B, C, D
	PRODUCT VIEWS	1 and 2	--
	OVEN DOORS AND ACTUATING PARTS	3	--
	CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS	4 and 5	--
	COOKING TOP, SURFACE UNITS AND PARTS	6 and 7	--
	OVEN LINERS AND INTERIOR PARTS	8	--
	PANELS, TRIMS AND PARTS	9	--
	BASE CABINETS AND PARTS	10	--
	14.428 ROTISSERIE - ACCESSORY	10	--
	14.113 VENT HOOD - ACCESSORY	11	--
	ELECTRICAL CONNECTOR IDENTIFICATION CHART	12	--
	LEAD WIRE CHART	12	--
1	CONTROL PANELS AND PARTS	--	13 and 14
2	COOK-MASTERS AND PARTS	--	14
3	SWITCHES AND PARTS	--	14 thru 16
4	SURFACE UNITS AND PARTS	--	17
6	TOPS AND PARTS	--	18 and 19
7	FRAMES, PANELS AND PARTS	--	20 and 21
8	OVEN DOORS AND PARTS	--	21 thru 23
9	OVEN LINERS AND PARTS	--	24
10	OVEN INTERIOR PARTS	--	24
13	ELECTRICAL PARTS	--	25 thru 29
14	ACCESSORIES AND PARTS	--	29 thru 32
15	INSULATION	--	32
16	BASE CABINETS AND PARTS	--	33 thru 35

1964

ALPHABETICAL INDEX

DESCRIPTION	CODE
ADAPTER - Electrical	13.011
ANGLE - Oven	7.319
ARM, CONTROL - Switch Operating	3.366
ARM, LOWER - Oven Door	8.366
ARM, RELEASE - Oven Door	8.3662
ARM, UPPER - Oven Door	8.3661
BAFFLE - Broil Element	13.007
BALLAST - Fluorescent Lamp	13.371
BASE, HANDLE - Oven Door	8.009
BASE - Starter	13.009
BEARING, NYLON - Torque Shaft	8.011
BLOCK, FEMALE - Surface Unit Connector	4.330
BLOCK, MALE - Surface Unit Connector	4.3301
BLOCK - Terminal	13.330
BOX - Junction	14.023
BRACKET - Cooking Top Safety Stop	6.0262
BRACKET - Disconnect Switch Skid	6.0263
BRACKET - Door Spring Retainer	8.0261
BRACKET - Hinge Pivot	16.026
BRACKET - Lampholder	13.026
BRACKET - Latch Spring Retainer	6.0261
BRACKET - Lower Arm	8.026
BRACKET - Meat Temperature Indicator	3.026
BRACKET - Oven Door Latch	8.0262
BRACKET - Pilot Light	13.0262
BRACKET, RETAINER - Sensor	4.0261
BRACKET - Selector Switch	3.0263
BRACKET - Side Trim	7.026
BRACKET - Speed Heat Unit Fuse	13.0261
BRACKET - Surface Unit Hinge	4.026
BRACKET - Surface Unit Switch	3.0261
BRACKET - Thermostat	3.0262
BRACKET - Top Cover Slide	6.026
BULB, LAMP - Oven Illuminating	13.358
BULB, LAMP - Oven Pilot	13.3581
BUMPER - Door	16.029
BUMPER - Front Panel	14.029
BUMPER - Pulley Channel	6.029
BUMPER - Shelf	16.0291
BUSHING - Door Spring	8.316
BUSHING - Door Spring Swivel	8.3161
BUSHING - Hinge Pivot	16.316
BUTTON - Broil Stop	8.3801
BUTTON - Cooking Top Cover	6.380
BUTTON - Cooking Top Front Panel	6.3801
BUTTON, GLIDER - Cabinet	16.380
BUTTON - Lower Side Trim	7.380
BUTTON, PLUG - Control Housing	1.380
BUTTON, PLUG - Door	16.3801
BUTTON, PLUG - Rotisserie	9.380
BUTTON, RELEASE - Oven Door	8.380
BUTTON - Switch Arm Glide	3.380
CABLE - Cooking Top	6.436
CAP - Lower Trim	16.376
CAP - Oven Liner Corner	9.376
CATCH, SPRING - Door	16.328
CHAIN - Drive	14.351
CHANNEL - Cable Spacer	6.0372
CHANNEL - Cooking Top Stop	6.0371
CHANNEL - Lead Cover	13.037
CHANNEL - Pulley	6.037
CHANNEL - Wiring	14.037
CLAMP - Blower Housing	14.327
CLAMP, BROIL ELEMENT RETAINER - Oven	13.327
CLAMP - Lead Wire	13.3271
CLAMP - Surface Unit Hinge	4.327
CLAMP - Thermostat Capillary Tube	3.327
CLIP - Filter	14.039
CLIP - Lead Wire	13.039
CLIP - Top Panel To Control Housing	7.039
CONNECTOR, FEMALE - Electrical	13.0485
CONNECTOR, FEMALE - Lead Wire Splice	13.0483
CONNECTOR, FEMALE - Lead Wire Splice (Vent Hood)	14.048
CONNECTOR - Line Terminal	13.048
CONNECTOR, LINE - Terminal Recptl Jumper	13.0481
CONNECTOR, MALE - Electrical	13.0484
CONNECTOR, MALE - Lead Wire Splice	13.0482
CONNECTOR, MALE - Lead Wire Splice (Vent Hood)	14.0481
CONNECTOR, SLEEVE	13.0487
CONNECTOR, SOLDERLESS	13.0486
COOKMASTER AND TIME SIGNAL	2.374
COVER - Air Duct	14.3783
COVER - Control Housing	1.378
COVER - Cooking Top	6.378
COVER - Junction Box	14.3781
COVER - Plug In	14.3784
COVER - Rear Access	16.378
COVER - Roast Themometer Probe Recptl	13.3781
COVER - Rotisserie	14.378
COVER - Rotisserie Opening	7.378
COVER - Switch Box	14.3782
COVER - Terminal Block	13.378
CUP - Switch Water Seal	3.326
DEFLECTOR - Heat	1.063
DIAL - Broiler Control	3.3813
DIAL - Lamp Selector Switch	3.3814
DIAL, SWITCH - Heat Minder	3.3811
DIAL, SWITCH - Infinite Heat Surf Unit	3.381
DIAL - Thermostat	3.3812
DOOR - Base Cabinet	16.070
DUCT, AIR	14.311
ELEMENT, HEATING - Bake	13.0801
ELEMENT, HEATING - Broil	13.080
END - Lamp Housing	1.395
ESCUTCHEON - Control Panel	1.081
EXTENSION, TERMINAL	13.429
FILTER, AIR	14.088
FORK, TURNING - Rotisserie	14.431
FRAME - Base Cabinet	16.096
FRAME - Cookmaster And Time Signal	2.096
FRAME, INSIDE - Oven Door	8.0961
FRAME, OUTSIDE - Oven Door	8.096
FUSE	13.098
GASKET - Oven Door Handle	8.099
GASKET - Surface Unit Terminal Blk Seal	4.099
GASKET - Switch Water Seal	3.099
GEAR - Sprocket	14.101
GLASS - Control Panel	1.103
GLASS - Cookmaster And Time Signal	2.103
GLASS, INNER - Oven Door	8.1031
GLASS - Lamp Housing	1.1031
GLASS, OUTER - Oven Door	8.103
GLASS - Oven Light	10.103
GRIDDLE, KANT SLIDE	14.485
GRILL - Broiler Pan	10.108
GROMMET, NEOPRENE - Conduit	14.109
GUIDE - Shelf (Base Cabinet)	16.323
GUIDE - Shelf LH	10.3231
GUIDE - Shelf RH	10.323
HANDLE - Broiler Pan	10.110
HANDLE - Cooking Top	6.110
HANDLE, DOOR - Base Cabinet	16.110
HANDLE, DOOR - Oven	8.110
HARNESS, ELECTRICAL	13.438
HINGE, DOOR - LH Top And RH Bottom	16.3461
HINGE, DOOR - RH Top And LH Bottom	16.346
HOLDER - Cable Spacer Channel	6.112
HOLDER, LAMP - Fluorescent	13.363
HOLDER, LAMP - Oven Pilot	13.3631
HOOD, VENT	14.113
HOUSING - Blower	14.116
HOUSING - Control	1.116
HOUSING - Cooking Top	6.116
HOUSING - Terminal Block	13.116

ALPHABETICAL INDEX - Continued

DESCRIPTION	CODE
INDICATOR - Oven Roast Thermometer	3.248
INDICATOR - Pilot Lamp	13.248
INSULATION, ABSESTOS - Cooking Top Cover	15.1244
INSULATION, BULK	15.124
INSULATOR, ELECTRICAL - Broil Receptacle	13.126
INSULATOR, SLEEVE	13.1262
INSULATOR - Surface Unit Connector	4.126
KNOB, CONTROL - Broiler Control	3.1304
KNOB, CONTROL - Cookmaster & Time Signal	2.130
KNOB, CONTROL - Lamp Selector Switch	3.130
KNOB, CONTROL - Oven Thermostat	3.1303
KNOB, CONTROL - Roast Thermometer	3.1301
KNOB, CONTROL - Surface Units	3.1302
KNOB - Latch Operating	6.350
LAMP, FLUORESCENT	13.132
LEVER - Latch Operating	6.356
LIGHT, PILOT - Oven	13.4891
LIGHT, PILOT - Surface Unit	13.489
LINER - Oven	9.136
LINK - Actuating Arm To Plate	14.3481
LINK - Trigger To Spring	14.348
MOTOR - Blower	14.1431
MOTOR - Cookmaster And Time Signal	2.143
MOTOR - Rotisserie	14.143
NUT - Cable Spacer Channel	6.1492
NUT - Circuit Breaker (Vent Hood)	14.1491
NUT - Condensation Trim Spacer	7.149
NUT - Cooking Top Shipping	6.149
NUT - Dial Shield	3.1493
NUT - Disconnect Switch Slide	6.1491
NUT - Door Strike (Base Cabinet)	16.149
NUT - Heat Deflector	1.1492
NUT - Lamp Housing Shield	1.149
NUT - Lamp Housing Top Trim	1.1491
NUT - Lamp Selector Switch	3.1491
NUT - Line Terminal Connector	13.1494
NUT - Oven Liner	9.149
NUT - Pilot Lamp Indicator	13.1495
NUT - Rear Access Cover (Base Cabinet)	16.1492
NUT - Roast Thermometer Indicator	3.149
NUT - Roast Thermometer Probe Receptacle	13.149
NUT - Shelf Guide (Base Cabinet)	16.1493
NUT - Surface Unit Disconnect Switch	3.1492
NUT - Terminal Block	13.1492
NUT - Terminal Block Housing	13.1491
NUT - Terminal Block Terminal	13.1493
NUT - Trim (Vent Hood)	14.149
PAD - Control Panel Glass	1.153
PAD - Oven Liner	9.153
PAN - Broiler	10.336
PAN, LARGE - Surface Unit Drip	4.3361
PAN, SMALL - Surface Unit Drip	4.336
PANEL, BACK	7.310
PANEL, FRONT - Cooking Top	6.156
PANEL, FRONT - Hood Trim	14.1561
PANEL, FRONT - Vent Hood	14.156
PANEL, SIDE - Range LH	7.1591
PANEL, SIDE - Range RH	7.159
PANEL, TOP - Range	7.160
PIN - Cooking Top Latch	6.364
PIN, COTTER - Switch Operating Arm	3.163
PIN - Gear	14.364
PLATE - Bake Element Hinge	13.390
PLATE - Condensate Trim	7.390
PLATE - Cooking Top Drip	6.390
PLATE, NAME - Hood	14.170
PROBE - Roast Thermometer	13.458
PROTECTOR, ELECTRICAL - Circuit Breaker	14.174
PULLEY, CABLE - Cooking Top	6.177
RACK - Roaster Side	14.1821
RACK - Rotisserie	14.182
RECEPTACLE - Appliance	13.1851
RECEPTACLE - Bake Element Terminal	13.1853
RECEPTACLE - Broil Element Terminal	13.185
RECEPTACLE - Fuse	13.1854
RECEPTACLE, LAMP - Oven	13.1855
RECEPTACLE - Roast Thermometer Probe	13.1852
RETAINER - Broil Receptacle	13.192
RETAINER - Cable Bracket	6.192
RETAINER - Conduit	13.1922
RETAINER - Door Spring	8.1921
RETAINER - Front Panel	14.192
RETAINER - Fuse Receptacle	13.1921
RETAINER - Insulation	7.192
RETAINER - Oven Door Glass	8.192
RETAINER, SPRING - Cable Pulley	6.1921
RETAINER, SPRING - Switch	3.192
RETAINER - Thermostat Bulb	10.192
RETAINER, TOP - Control Panel Glass	1.192
RING, RETAINER - Cooking Top Latch Pin	6.393
RING, RETAINER - Lower Arm Bracket	8.393
RING, RETAINER - Top Cover Roller	6.3931
ROD - Oven Door Latch Plate	8.1971
ROD, RELEASE - Oven Door	8.197
ROLLER - Cooking Top	6.199
ROLLER - Front Panel	14.199
ROLLER - Oven Door Stop	8.199
ROLLER - Top Cover	6.1991
ROTISSERIE KIT	14.428
SCREW - Bake Element Hinge Plate	13.2089
SCREW - Bottom Trim	7.2083
SCREW - Broil Element	13.2082
SCREW - Broil Receptacle Retainer	13.2084
SCREW - Broil Stop Spring	8.20815
SCREW - Broiler Control Switch	3.2086
SCREW - Cable Spacer Channel	6.2087
SCREW - Condensate Trim Plate	7.2086
SCREW - Condensation Trim	7.2084
SCREW - Condensation Trim Spacer	7.20811
SCREW - Conduit Retainer	13.20818
SCREW - Control Housing	1.2084
SCREW - Control Housing Cover	1.2086
SCREW - Control Panel Escutcheon	1.2088
SCREW - Control Panel Glass Support	1.2081
SCREW - Cooking Top Cable	6.2089
SCREW - Cooking Top Cover Slide Bracket	6.20812
SCREW - Cooking Top Drip Plate	6.2081
SCREW - Cooking Top Front Panel - Lower	6.2082
SCREW - Cooking Top Handle	6.20811
SCREW - Cooking Top Safety Stop Bracket	6.20814
SCREW - Cooking Top Stop Channel	6.2088
SCREW - Cooking Top Stop Channel Screw Shield	6.2083
SCREW - Cookmaster And Time Signal	2.208
SCREW - Cookmaster And Time Signal Trim	2.2081
SCREW - Disconnect Switch	3.20811
SCREW - Disconnect Switch Shield	3.2088
SCREW - Disconnect Switch Skid Bracket	6.20813
SCREW - Door Handle	8.208
SCREW - Door Handle (Base Cabinets)	16.2082
SCREW - Door Hinge (Base Cabinets)	16.2081
SCREW - Door Spring Retainer	8.20814
SCREW - Flair Range (Base Cabinets)	16.2086
SCREW - Fluorescent Lamp Ballast	13.20823
SCREW - Fluorescent Lamp Holder	13.20815
SCREW - Fluorescent Lamp Holder Bracket	13.20814
SCREW - Front Panel Retainer (Vent Hood)	14.20812
SCREW - Fuse Receptacle Terminal	13.20821
SCREW - Gears And Motor	14.2083
SCREW - Ground Strap	13.20819
SCREW - Handle (Spatter Free Brl Pan)	10.2081
SCREW - Heat Deflector	1.2087
SCREW - Hinge Pivot Brkt (Base Cabinets)	10.208
SCREW - Infinite Heat Surface Unit Sw	3.2084
SCREW - Inside Oven Door Frame	8.2083
SCREW - Insulation Retainer	7.2089
SCREW - Junction Box (Vent Hood)	14.2088
SCREW - Junction Box Cover (Vent Hood)	14.2087
SCREW - Lamp Housing End	1.208
SCREW - Lamp Housing Lower Trim	1.2082

1964

ALPHABETICAL INDEX - Continued

DESCRIPTION	CODE
SCREW - Lamp Housing Top Trim	1.2083
SCREW - Lamp Switch	3.2085
SCREW - Latch Knob	6.208
SCREW - Latch Operating Lever	6.2085
SCREW - Latch Spring Retainer Bracket	6.2084
SCREW - Lead Cover Channel	13.2081
SCREW - Lead Wire Clip	13.2083
SCREW - Lower Arm	8.2089
SCREW - Lower Arm Bracket	8.2086
SCREW - Lower Side Trim (Base Cabinet)	16.2089
SCREW - Lower Trim Cap (Base Cabinet)	16.20811
SCREW - Oven Angle	7.2085
SCREW - Oven Door Latch Bracket	8.2082
SCREW - Oven Door Latch Plate Rod	8.20816
SCREW - Oven Door Release Arm	8.2088
SCREW - Oven Door Spring Adjusting	8.20811
SCREW - Oven Door Stop Roller	8.20813
SCREW - Oven Door Torque Shaft	8.2087
SCREW - Oven Lamp Receptacle	13.20813
SCREW - Oven Liner	9.208
SCREW - Oven Thermostat	3.2081
SCREW - Pilot Light Bracket	13.2085
SCREW - Plug In Cover (Vent Hood)	14.20814
SCREW - Pulley Channel	6.2086
SCREW - Range Back Panel	7.2087
SCREW - Rear Access Cover (Base Cabinet)	16.20812
SCREW - Roast Thermometer Indicator	3.2087
SCREW - Roast Thermometer Indicator Brkt	3.208
SCREW - Roast Thermometer Probe Receptacle Cover	13.2086
SCREW - Roast Thermometer Signal	13.2088
SCREW - Rotisserie	14.2081
SCREW - Rotisserie Opening Cover	7.208
SCREW - Selector Switch Bracket	3.20815
SCREW - Sensor Retainer Bracket	4.2084
SCREW - Sensor Support	4.2081
SCREW - Set - Blower Wheel	14.20813
SCREW - Set - Oven Door Release Button	8.2081
SCREW - Shelf Guide	10.208
SCREW - Shelf Guide (Base Cabinet)	16.2085
SCREW - Side Panel	7.2088
SCREW - Speed Heat Switch	3.2083
SCREW - Speed Heat Unit Fuse Bracket	13.20811
SCREW - Starter Base	13.20816
SCREW - Surface Unit Bracket	4.2082
SCREW - Surface Unit Clamp To Bracket	4.208
SCREW - Surface Unit Connector Block	4.2085
SCREW - Surface Unit Switch Shield	3.20812
SCREW - Surface Unit Terminal Block	4.2083
SCREW - Switch Box Cover	14.2089
SCREW - Switch Bracket	3.2082
SCREW - Switch Insulator	14.2084
SCREW - Switch (Rotisserie)	14.2085
SCREW - Switch Water Seal Cup	3.20813
SCREW - Terminal	13.208
SCREW - Terminal Block	13.20817
SCREW - Terminal Block Cover	13.20812
SCREW - Terminal Block Housing	13.20822
SCREW - Thermostat Bracket	3.2089
SCREW - Thermostat Capillary Tube Clamp	3.20814
SCREW - Thumb - Rotisserie Fork	14.208
SCREW - Top Spacer Washer	1.2085
SCREW - Top Trim	7.2081
SCREW - Torque Shaft Bearing	8.20812
SCREW - Torque Shaft Lower Bearing	8.2084
SCREW - Torque Shaft Upper Bearing	8.2085
SCREW - Transformer	13.2087
SCREW - Trim	7.2082
SCREW - Trim (Vent Hood)	14.2086
SCREW - Upper Side Trim (Base Cabinet)	16.2087
SCREW - Vent Hood	14.2082
SCREW - Wiring Channel (Vent Hood)	14.20811
SEAL, DOOR - Bottom	8.203
SEAL, DOOR - Side	8.2031
SEAL, RUBBER - Lamp Housing Top Trim	1.204
SENSOR - Heat Minder	4.490
SHAFT - Torque	8.210
SHELF - Cabinet	16.216
SHELF - Oven	10.213
SHIELD - Dial	3.2162
SHIELD - Disconnect Switch	3.216
SHIELD - Lamp Housing	1.216
SHIELD, SCREW - Cooking Top Stop Channel	6.216
SHIELD, SCREW - Trim	7.216
SHIELD - Surface Unit Switch	3.2161
SIGNAL - Roast Thermometer	13.457
SLIDE - Cooking Top Cover	6.120
SLIDE - Disconnect Switch	6.1201
SPACER - Condensation Trim	7.222
SPACER - Oven Door Lower Arm	8.222
SPIT - Rotisserie	14.430
SPLICE, MALE - Electrical	13.394
SPRING - Broil Stop	8.2262
SPRING - Filter	14.2262
SPRING - Front Panel Roller	14.2263
SPRING - Latch Pin Operating	6.2261
SPRING - Link Wire	14.226
SPRING - Oven Door Counter-balance	8.2261
SPRING - Oven Door Latch	8.226
SPRING - Switch	14.2261
SPRING - Top Cover	6.226
STARTER - Fluorescent Lamp	13.230
STOP - Cooking Top Cover	6.235
STRAP, GROUND	13.386
STRIKE - Door	16.349
SUPPORT - Bake Element	13.321
SUPPORT - Control Panel Glass	1.321
SUPPORT, HANDLE - Oven Door	8.321
SUPPORT - Heat Minder Sensor	4.321
SUPPORT - Surface Unit Large	4.3212
SUPPORT - Surface Unit Small	4.3211
SWITCH - Blower Operating	14.396
SWITCH, CONTROL - Broiler	3.396
SWITCH - Cookmaster And Time Signal	2.396
SWITCH, DISCONNECT - Surface Units	3.3961
SWITCH - Rotisserie	14.3961
SWITCH, SELECTOR - Lamp	3.403
SWITCH, SURFACE UNIT - Heat Minder	3.285
SWITCH, SURFACE UNIT - Infinite Heat	3.2852
SWITCH, SURFACE UNIT - Speed Heat	3.2851
TERMINAL, ELECTRIC	13.329
THERMOSTAT - Oven	3.242
TOP - Cooking	6.258
TRANSFORMER - Roast Thermometer	13.251
TRIM, BOTTOM - Range	7.2532
TRIM - Circuit Breaker	14.2532
TRIM - Condensation	7.2534
TRIM - Cooking Top Housing	6.253
TRIM - Cookmaster And Time Signal	2.253
TRIM, FRONT - Hood	14.2531
TRIM - Glass Control Panel End	1.2532
TRIM - Hood Housing	14.253
TRIM, LOWER - Lamp Housing	1.253
TRIM, SIDE - Lower	7.2531
TRIM, SIDE - Lower (Base Cabinet)	16.2531
TRIM, SIDE - Upper	7.253
TRIM, SIDE - Upper (Base Cabinet)	16.253
TRIM, TOP - Lamp Housing	1.2531
TRIM, TOP - Range	7.2533
UNIT SURFACE 6 INCH	4.266
UNIT SURFACE 8 INCH	4.2661
WASHER - Broil Stop Spring	8.2796
WASHER - Circuit Breaker (Vent Hoods)	14.2792
WASHER - Cooking Top Cable Pulley	6.279
WASHER - Flair Range	16.2791
WASHER - Gears And Motor	14.279
WASHER - Lamp Selector Switch	3.279
WASHER - Lower Arm Bracket	8.2792
WASHER - Lower Torque Shaft Bearing	8.279
WASHER - Oven Door Handle	8.2793
WASHER - Oven Door Release Arm	8.2794
WASHER - Oven Door Spring Adjusting	8.2791
WASHER - Roast Thermometer Prob Recptl	13.279
WASHER - Roller	6.2791
WASHER - Shelf Guide	10.279
WASHER - Terminal	13.2792
WASHER - Top Spacer	1.279
WASHER - Trim (Vent Hood)	14.2791
WHEEL, BLOWER	14.341
WRENCH - Glider Button Adjusting	16.282


1964 PRODUCT VIEWS



Model RCDH-630 with B-30 Base Cabinet



Model RDH-630 with B-30 Base Cabinet

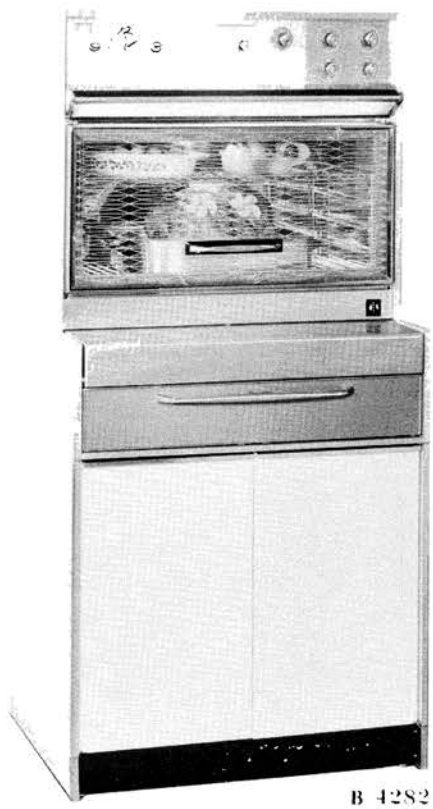

Model RCIH-635 with B-30 Base Cabinet

1964 PRODUCT VIEWS



B 4283


Model RCDH-640 with B-40 Base Cabinet



B 4284

Model RCIH-645 with B-40 Base Cabinet


OVEN DOORS AND ACTUATING PARTS

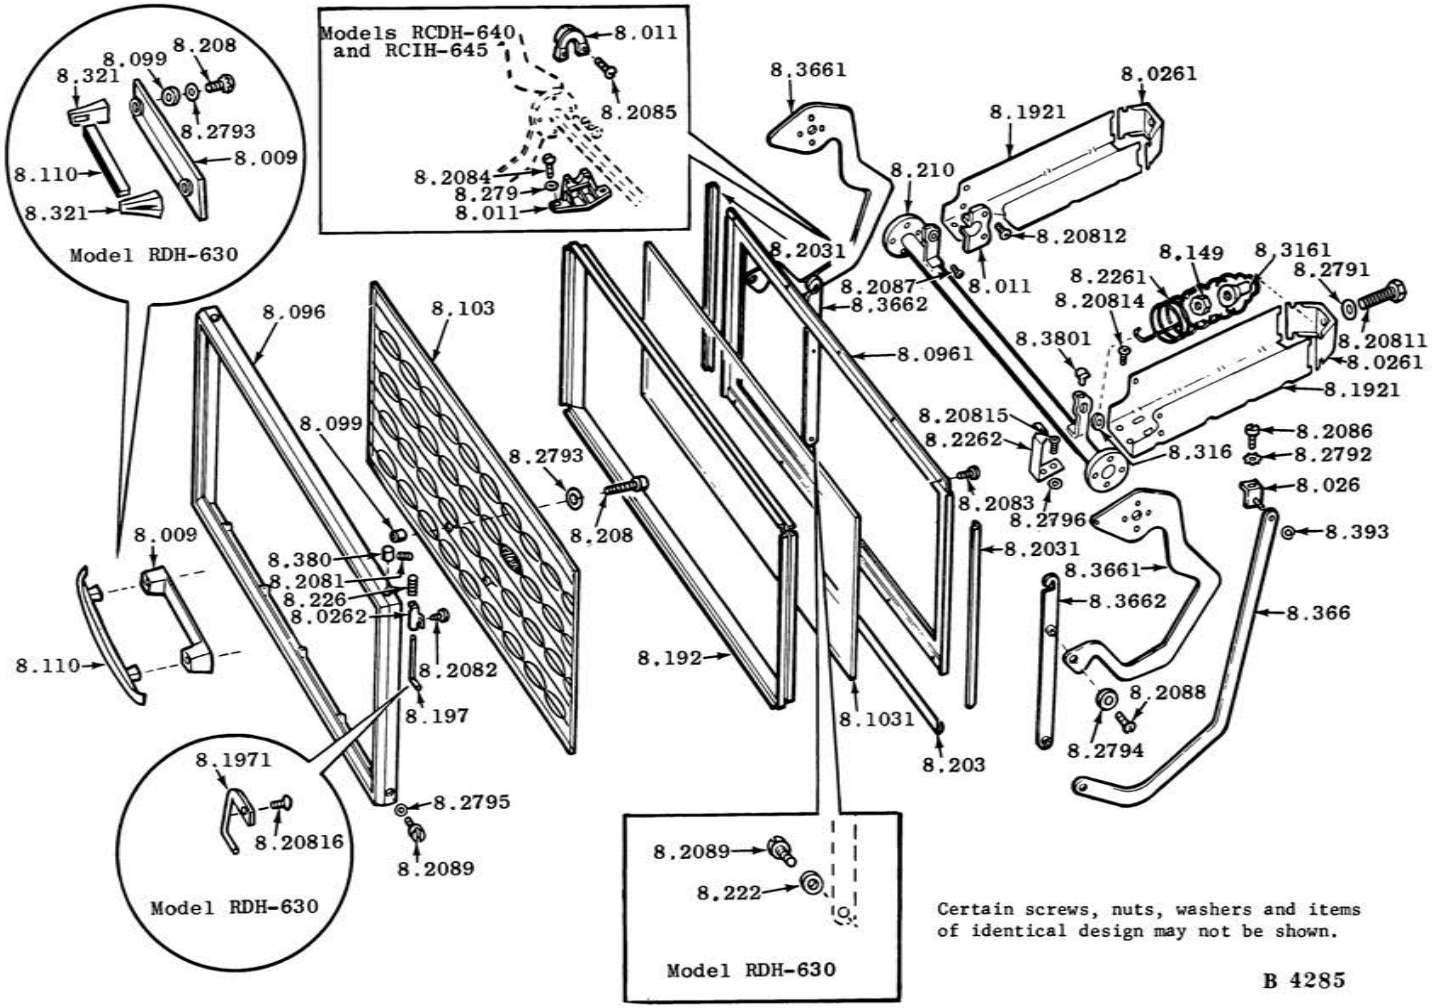

Model RCIH-635

This illustration may also be used for the selection of parts for models RDH-630, RCDH-630, RCDH-640 and RCIH-645, but all parts shown are not used on these models. Models RCDH-640 and RCIH-645 have two oven doors. Parts are similar for both doors.

CONTROL PANEL, COOK-MASTERS, SWITCHES AND PARTS

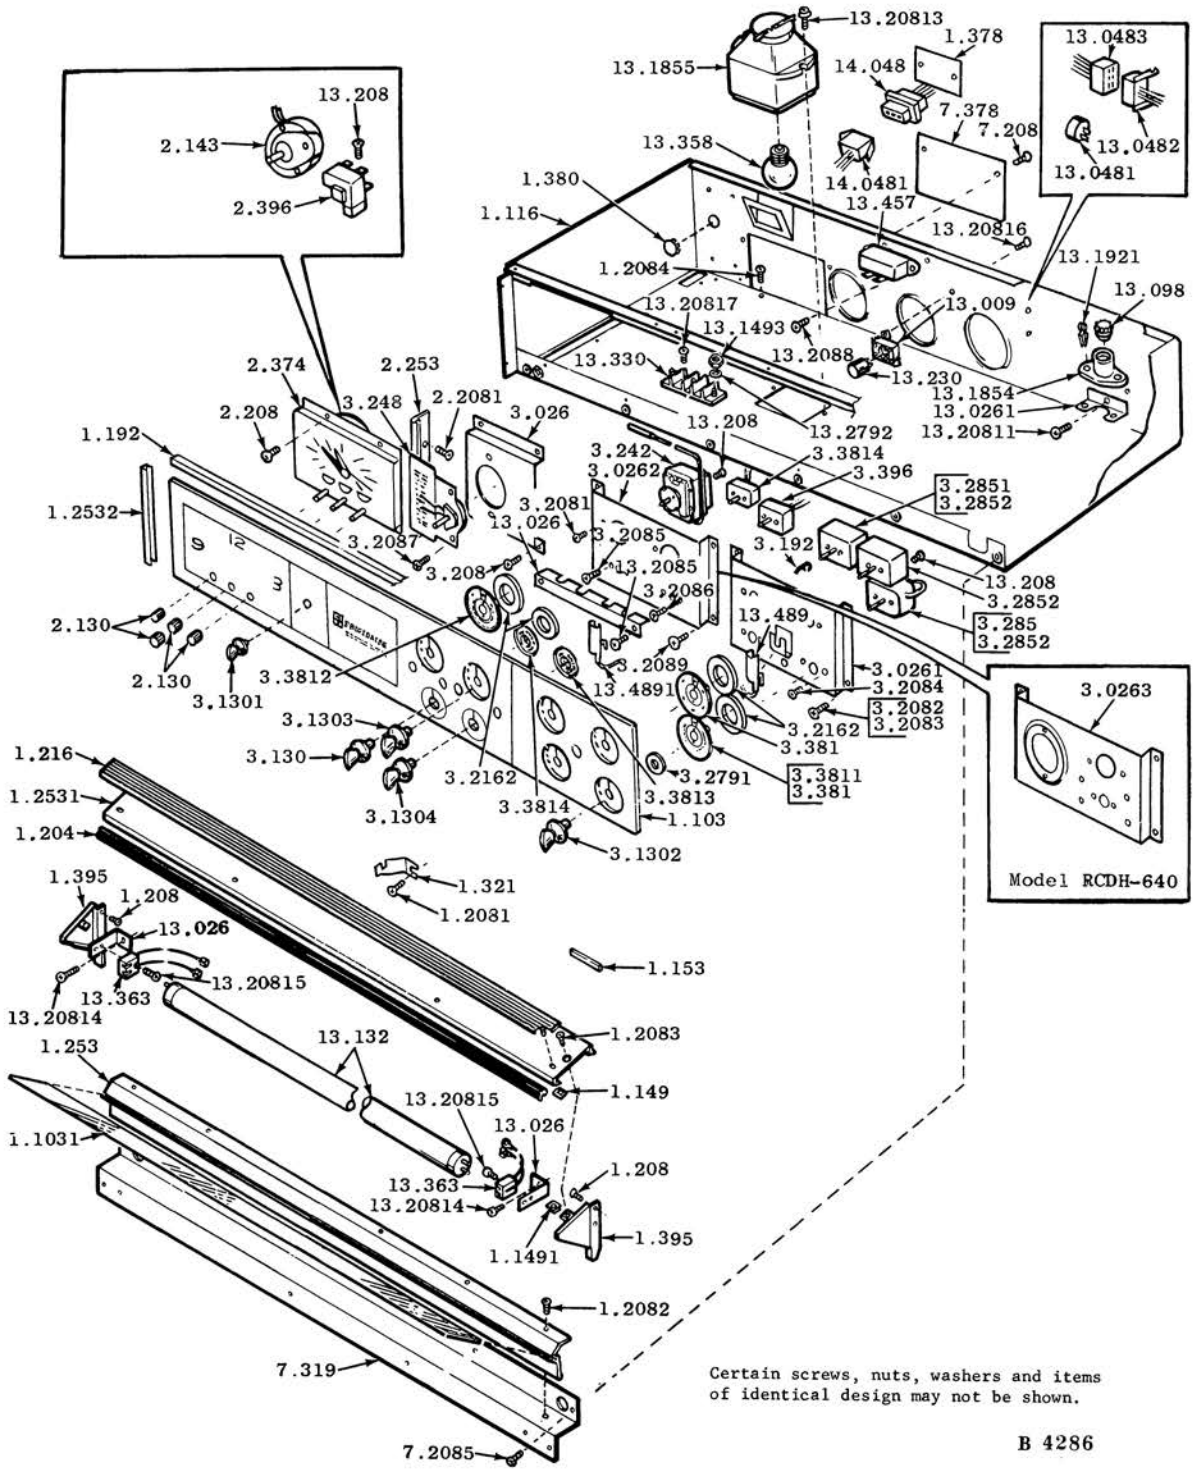

Certain screws, nuts, washers and items of identical design may not be shown.

B 4286


The appearance of the Control Panel will vary depending upon the Roast Thermometer, location of Lamp Selector Switch and number of Thermostats required for the particular product.

Model RCIH-645

This illustration may also be used for the selection of parts for models RCDH-630, RCIH-635 and RCDH-640, but all parts shown are not used on these models.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS

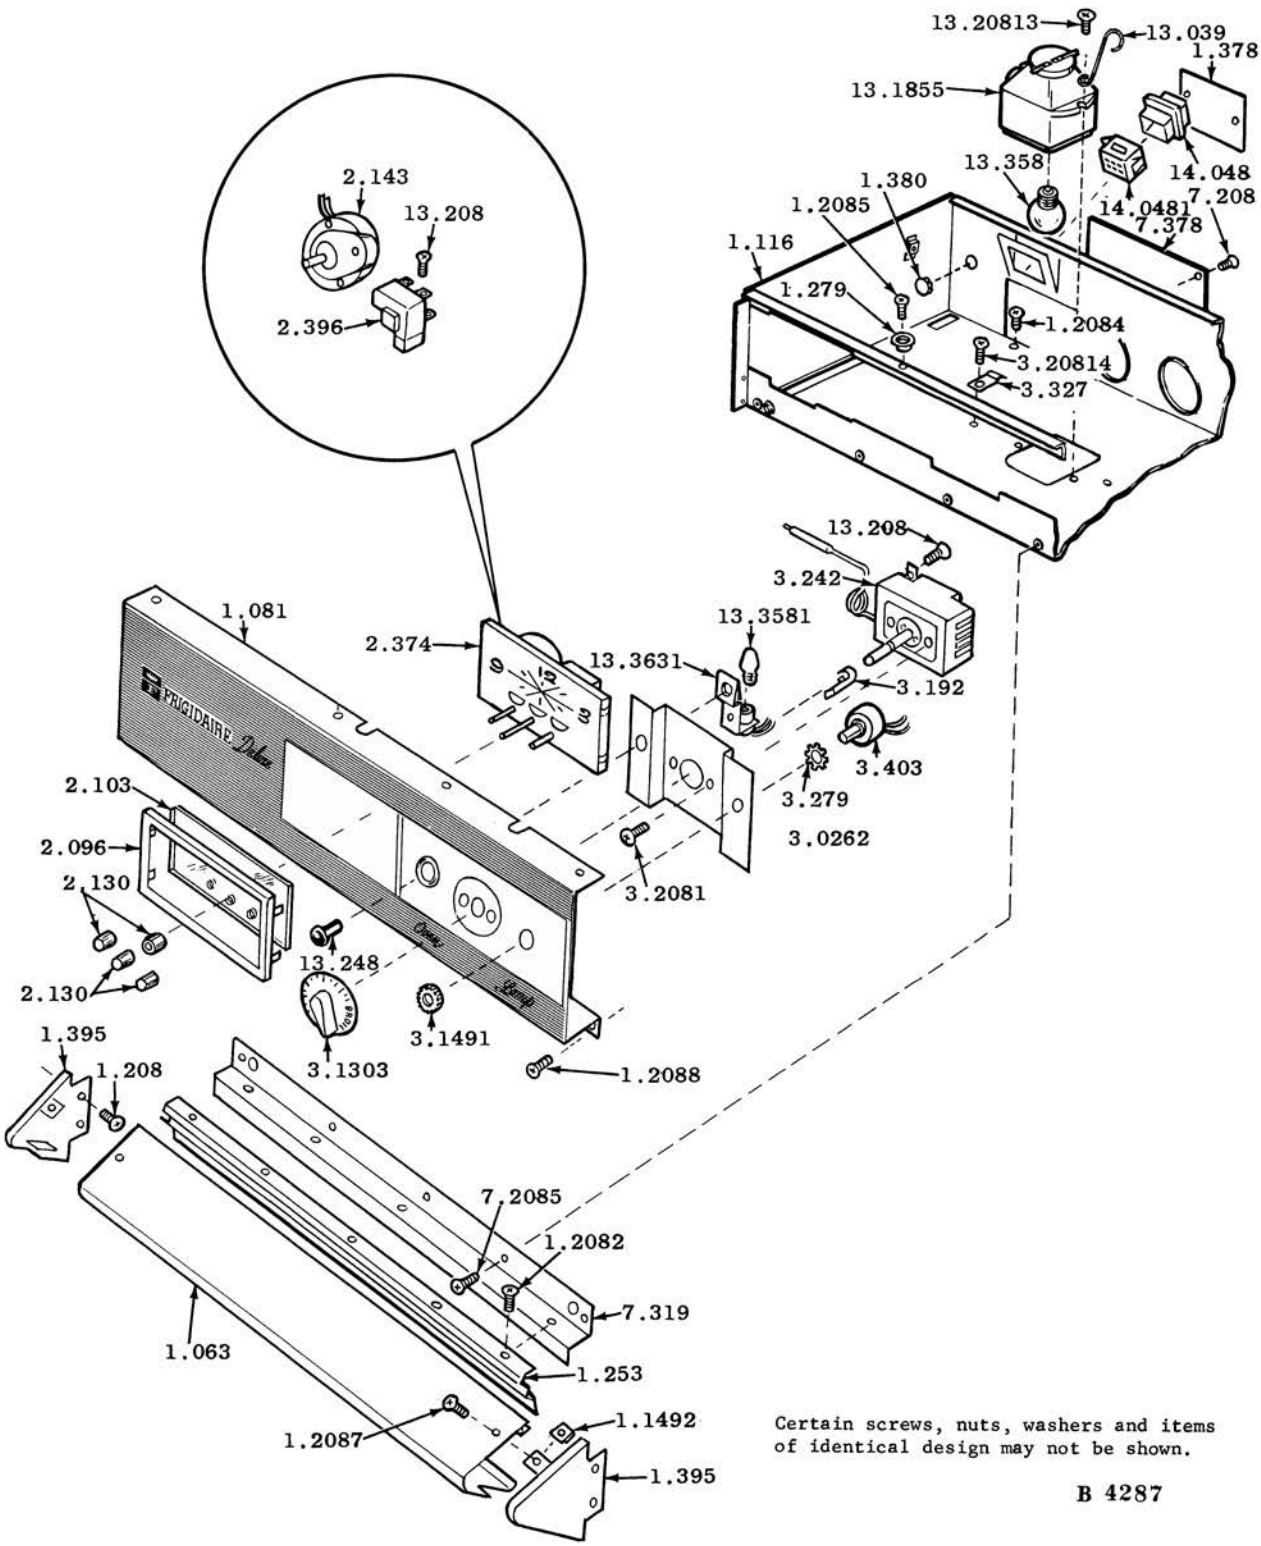


Certain screws, nuts, washers and items of identical design may not be shown.

B 4287

Model RDH-630

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

COOKING TOP, SURFACE UNITS AND PARTS

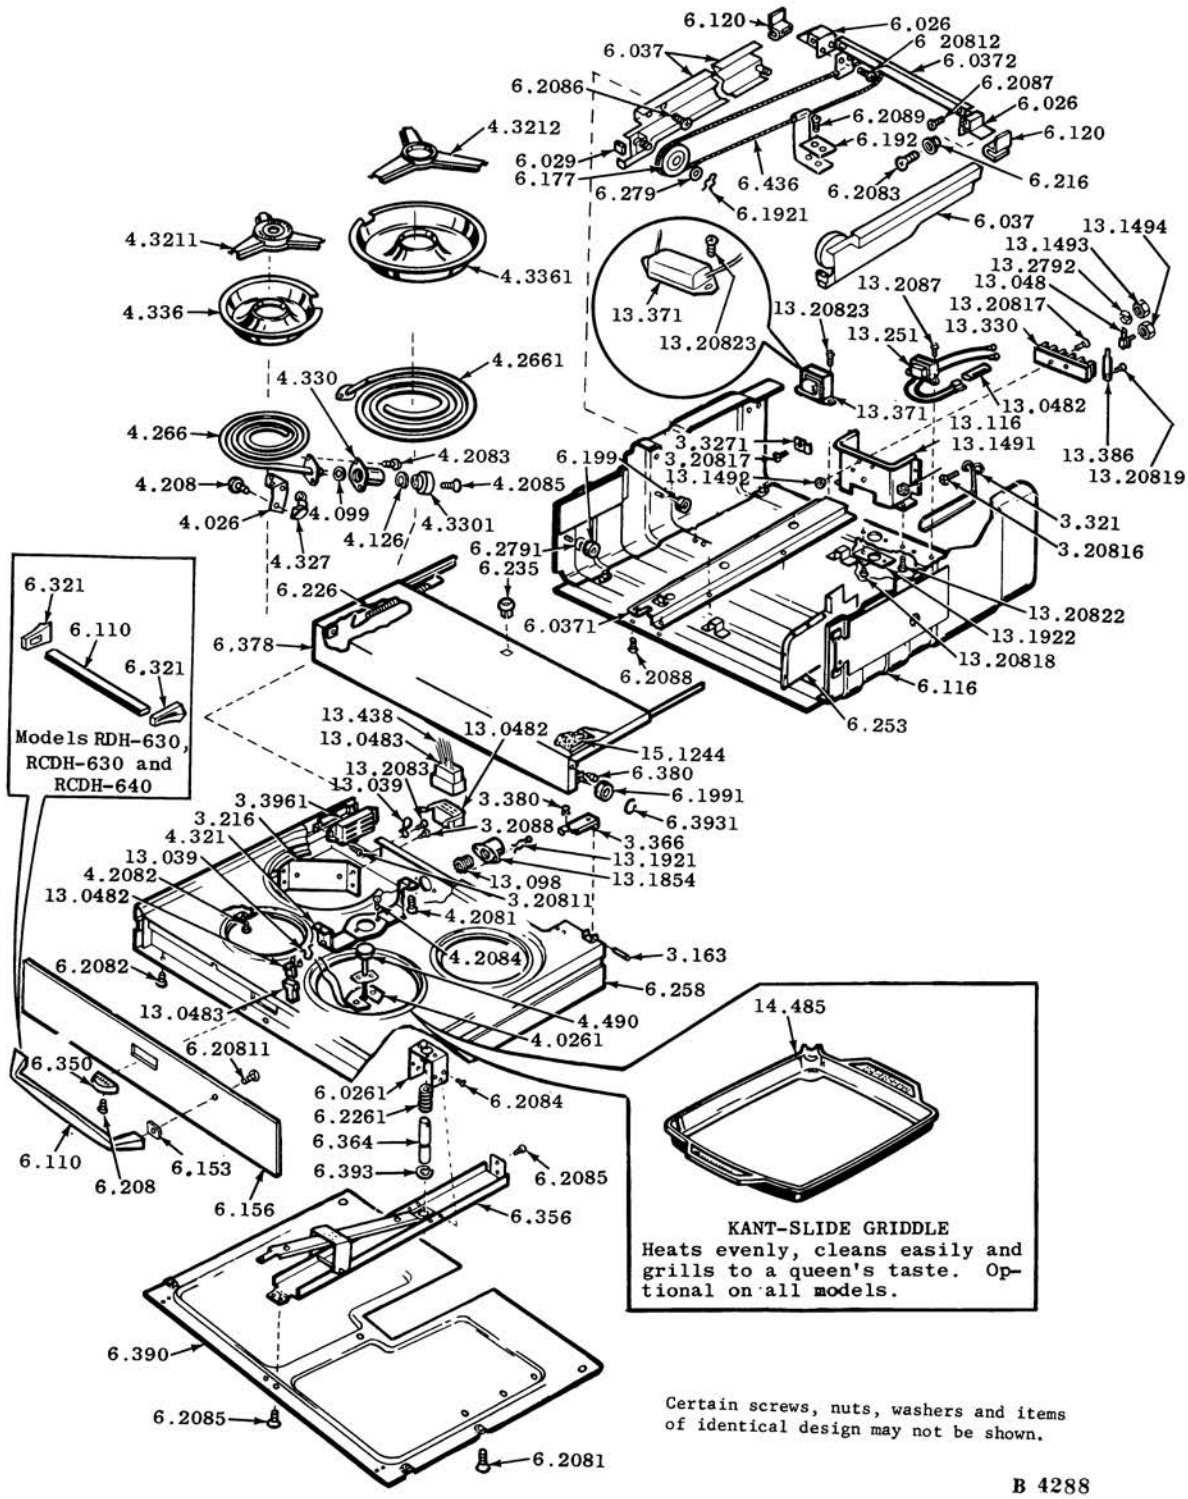

Certain screws, nuts, washers and items of identical design may not be shown.


B 4288

Model RCIH-635

This illustration may also be used for the selection of parts for models RCDH-630, RCDH-640 and RCIH-645, but all parts shown are not used on these models. Models RCDH-630 and RCDH-640 appear the same as models RCIH-635 and RCIH-645, except that they have no speed heat or heat minder units.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

COOKING TOP, SURFACE UNITS AND PARTS

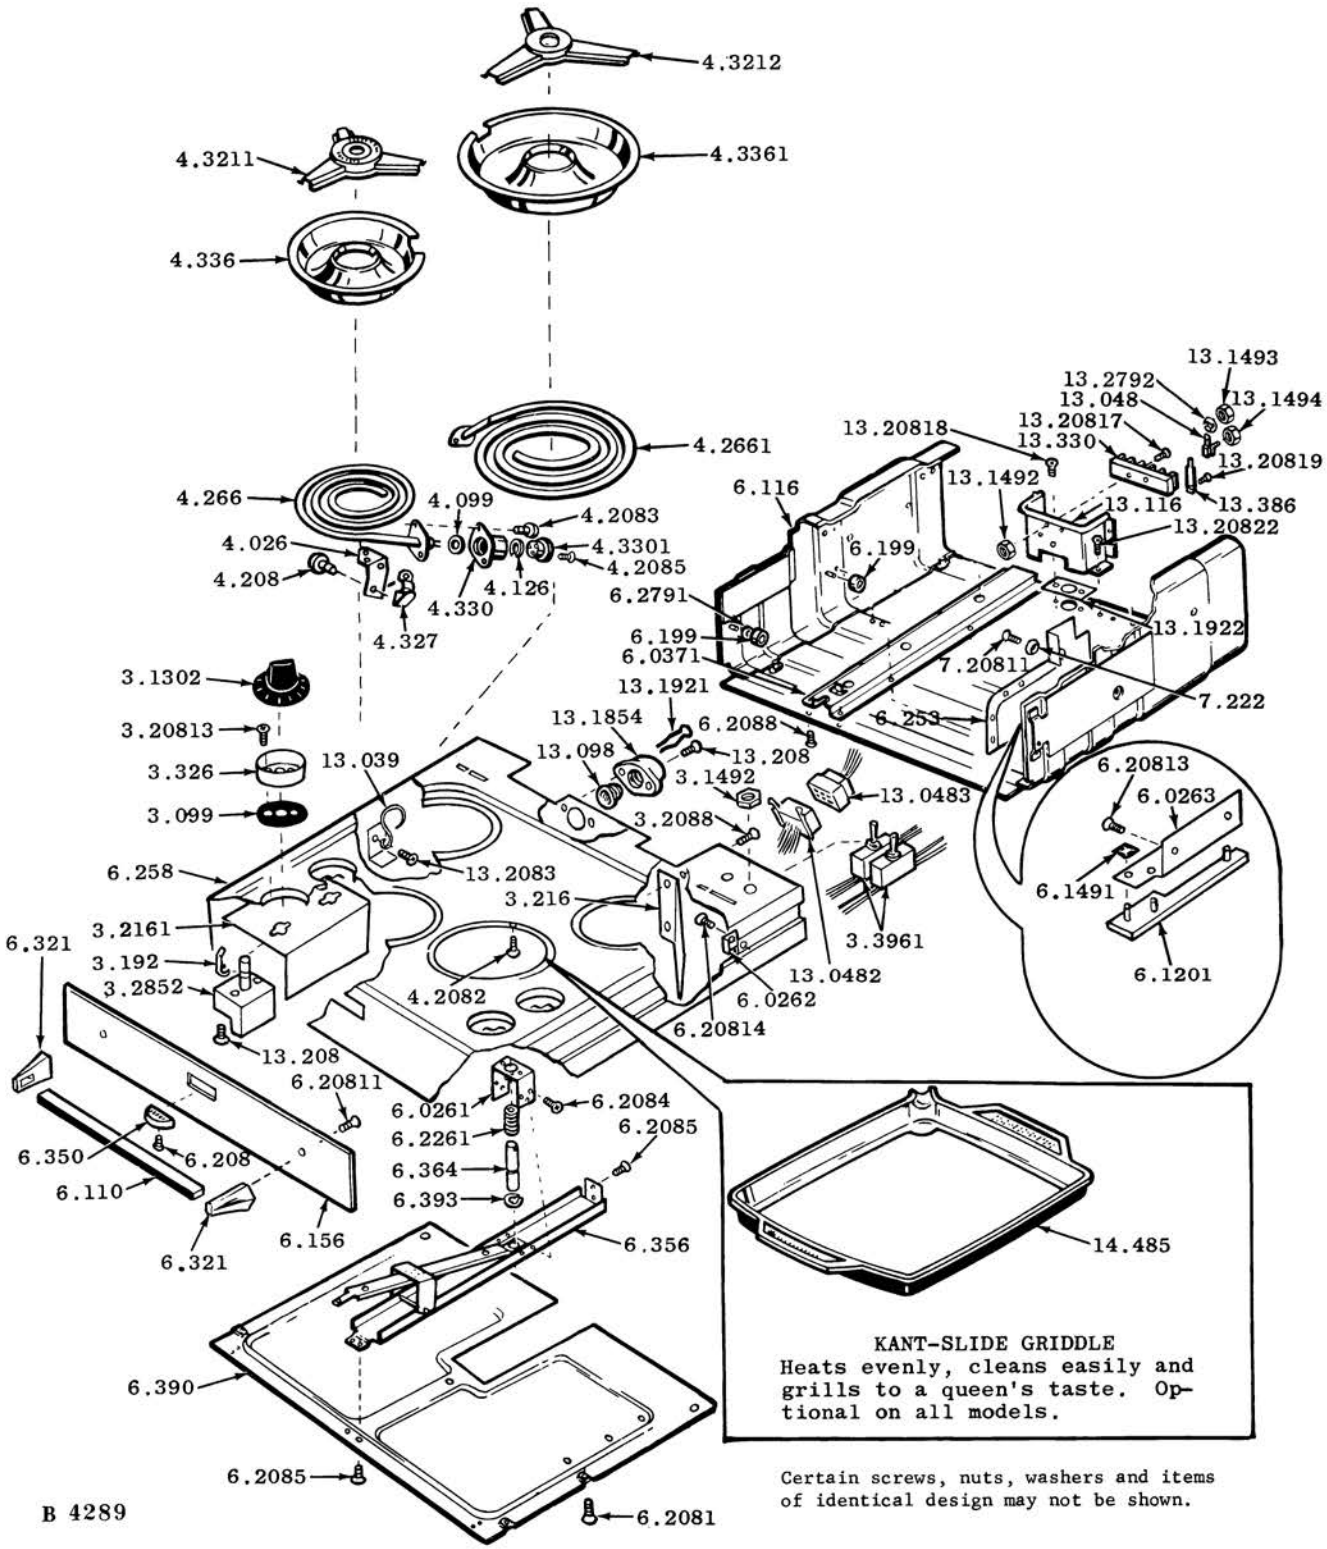


Model RDH-630

1964

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

OVEN LINERS AND INTERIOR PARTS

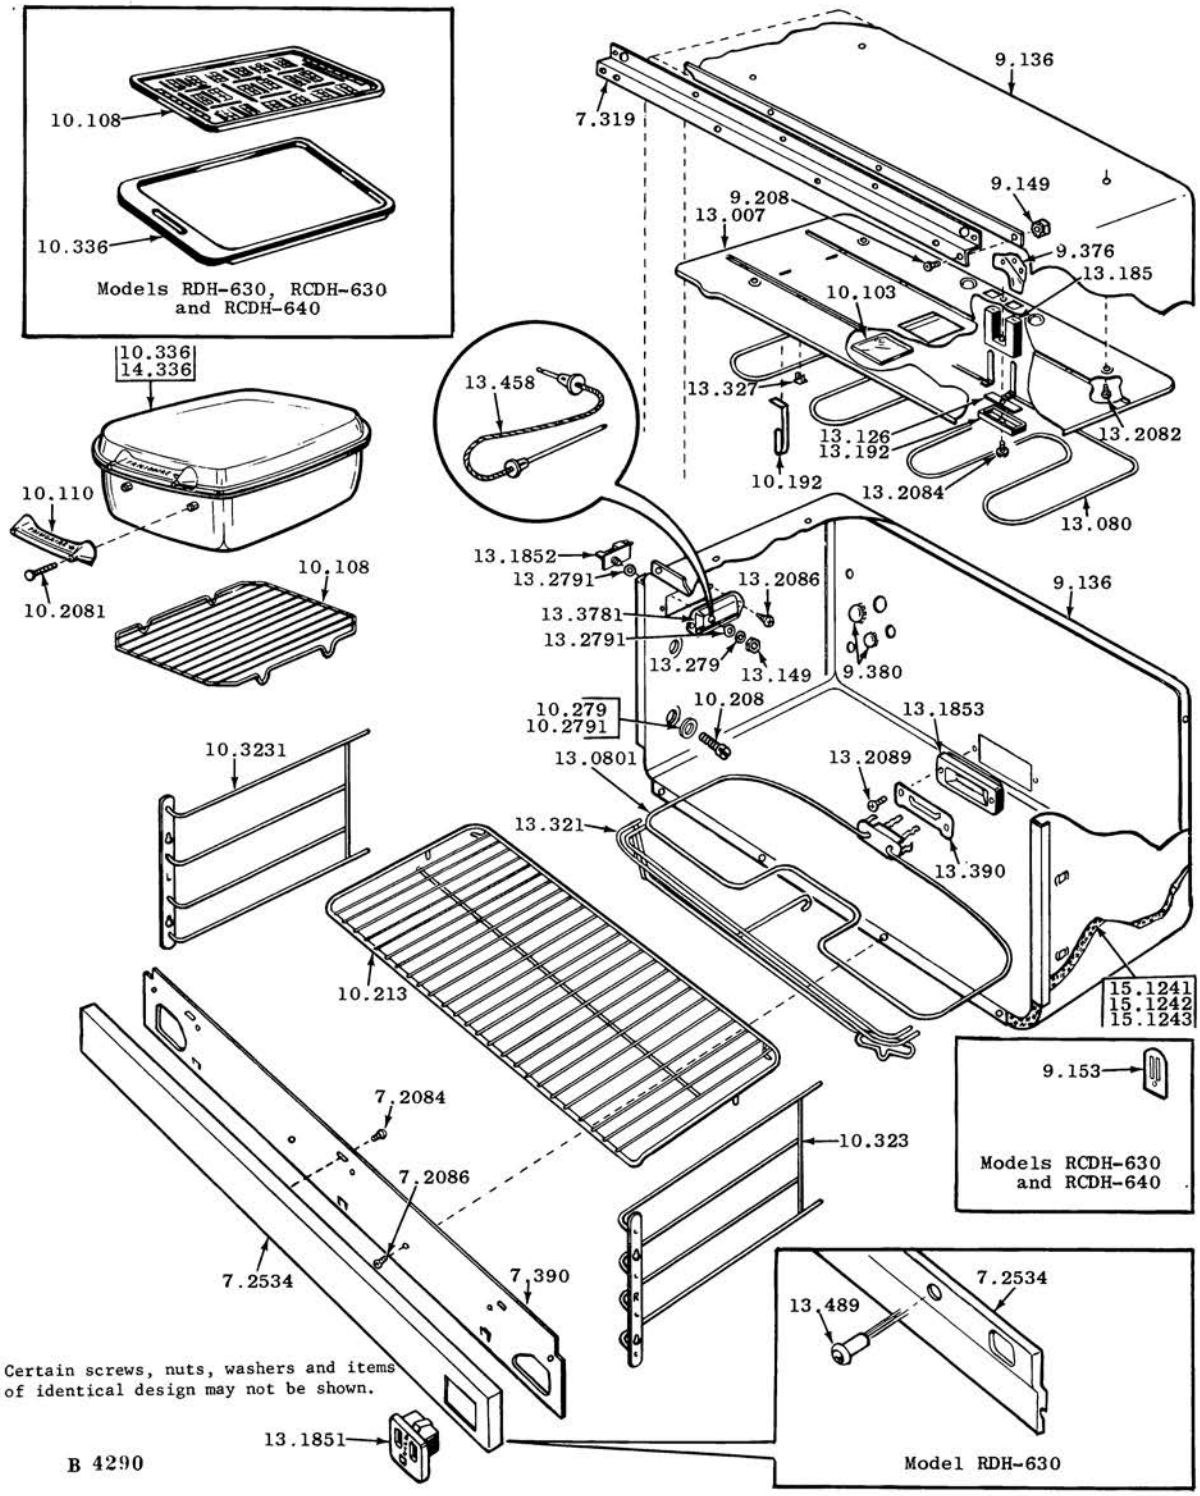


Model RCIH-635

This illustration may be used for the selection of parts for models RDH-630, RCDH-630, RCDH-640 and RCIH-645, but all parts shown are not used on these models. Models RCDH-640 and RCIH-645 have two ovens. Parts are similar for both ovens.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

PANELS, TRIMS AND PARTS

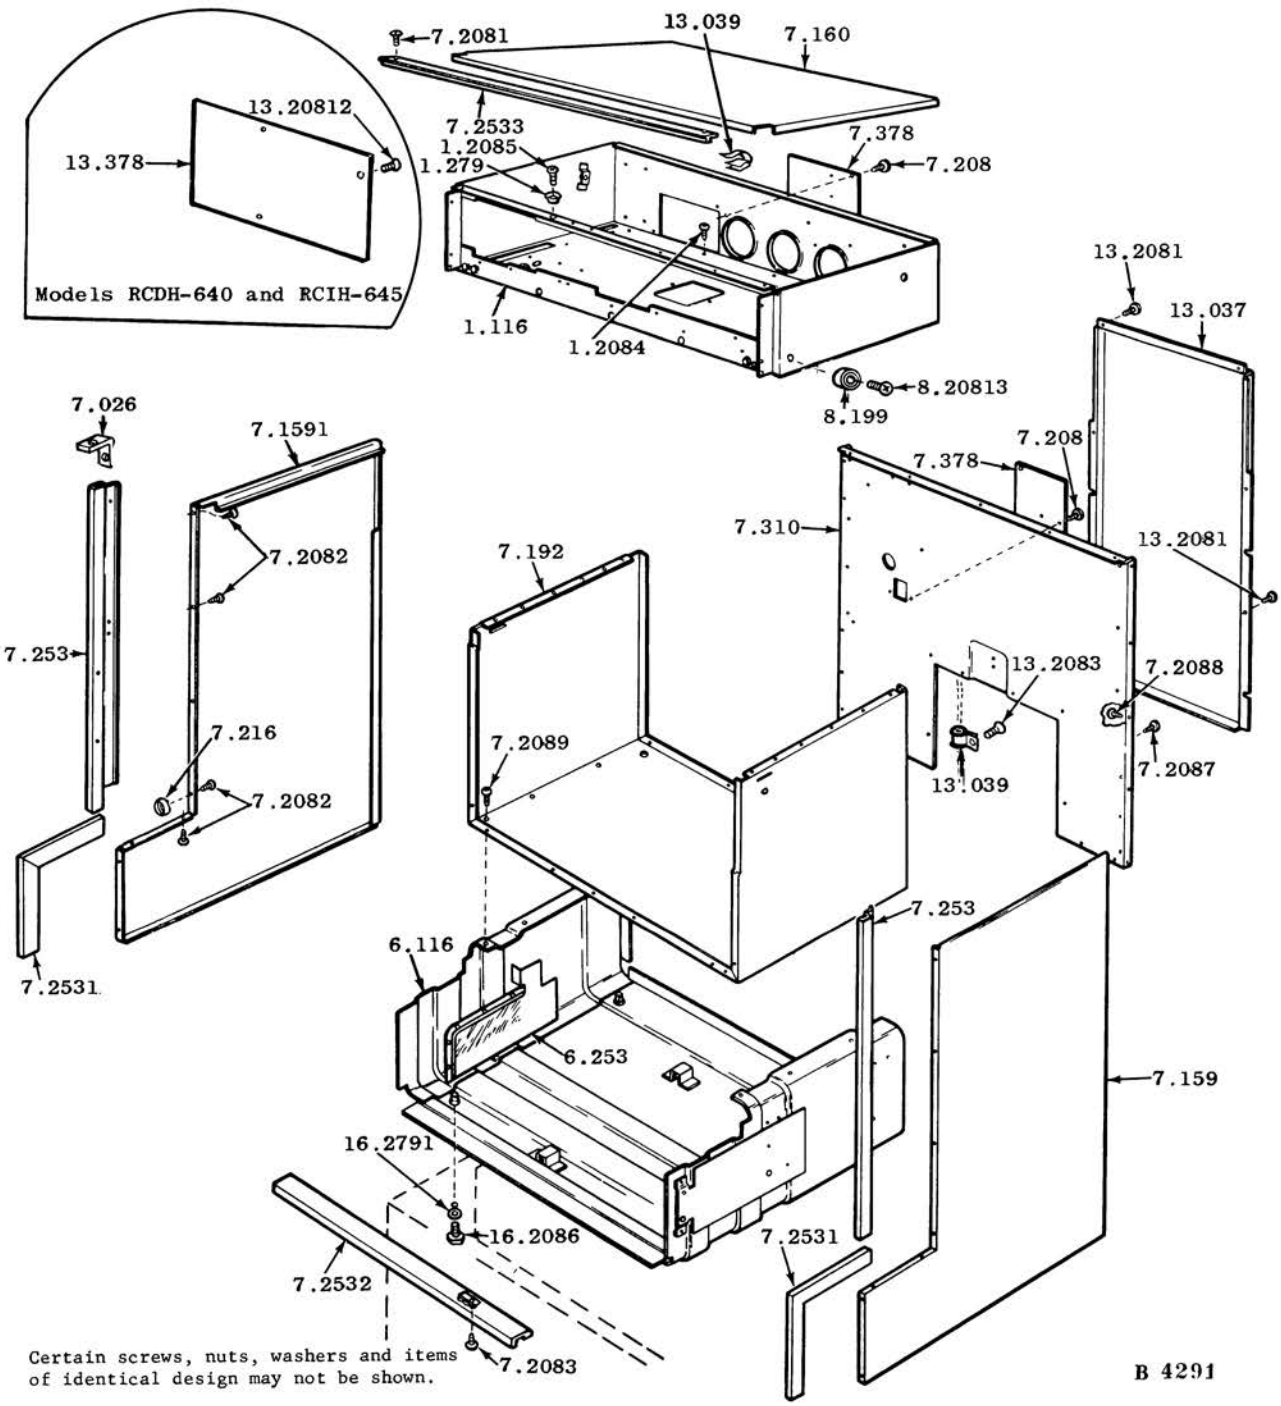


1964

Model RCIH-635

This illustration may also be used for the selection of parts for models RDS RDH-630, RCDH-630, RCDH-640 and RCIH-645, but all parts shown are not used on these models.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

BASE CABINETS AND PARTS

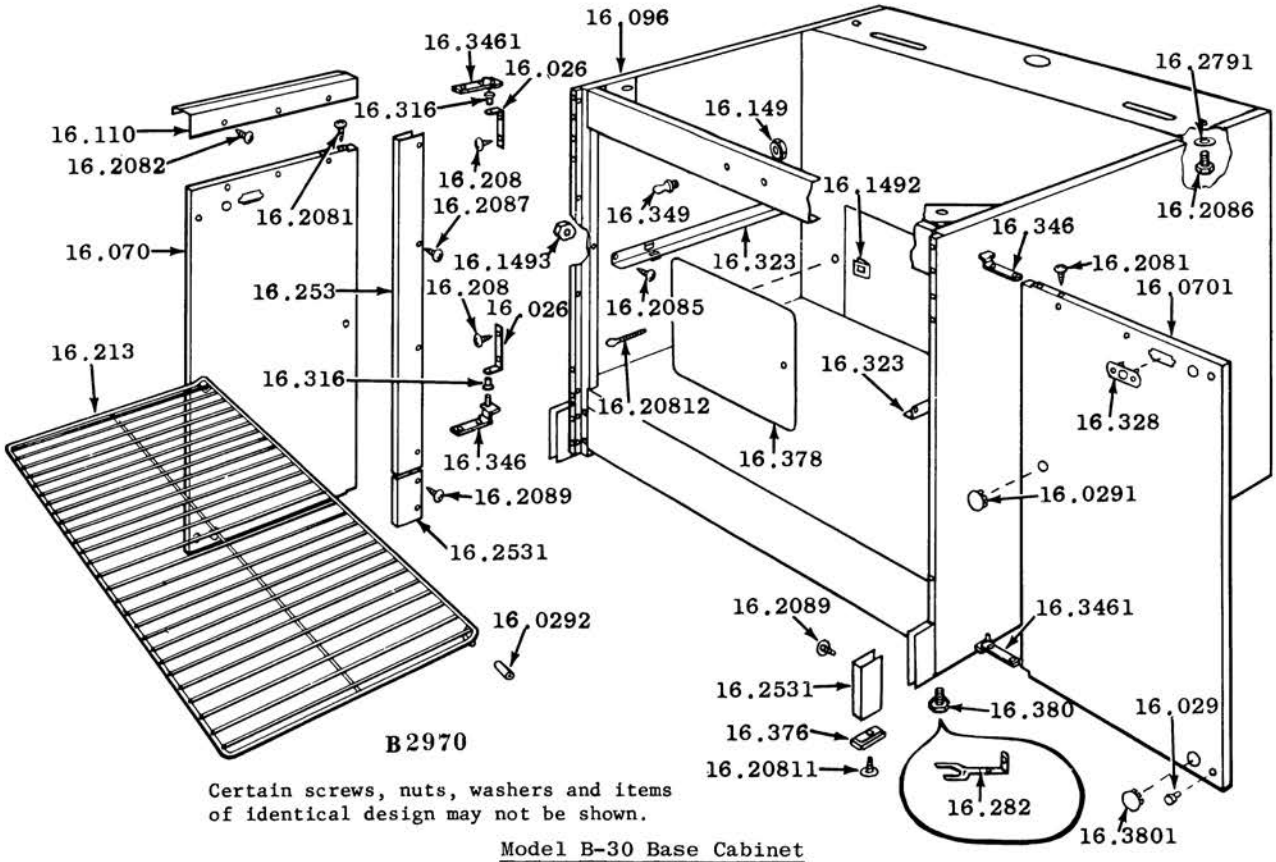


Certain screws, nuts, washers and items of identical design may not be shown.

Model B-30 Base Cabinet

The B-40 Base Cabinet appears the same as the B-30 Base Cabinet except that it has two shelves and is wider.
Use B-30 Base Cabinet illustrated with models RCDH-630, RCIH-635 and RDH-630.
Use B-40 Base Cabinet with models RCDH-640 and RCIH-645.

14.428 ROTISSERIE - ACCESSORY

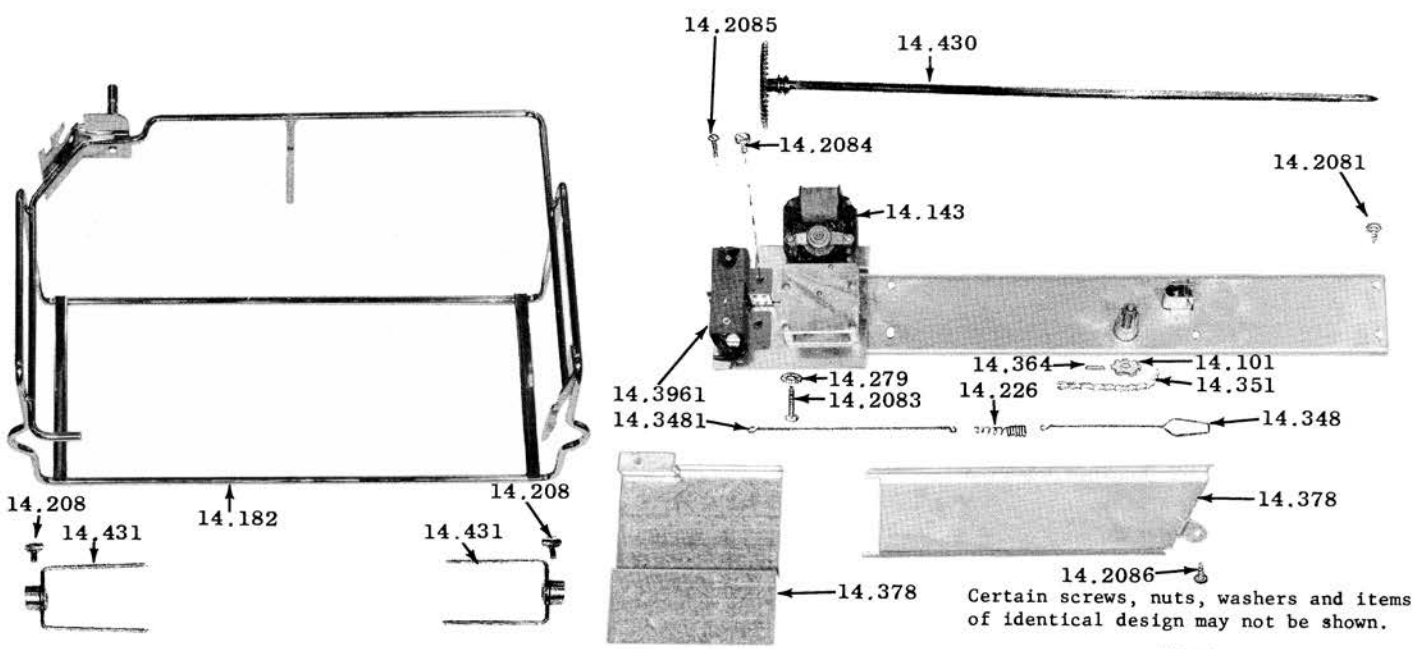


Certain screws, nuts, washers and items of identical design may not be shown.

Models RCDH-630, RCDH-640, RCIH-635 and RCIH-645

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.


14.113 VENT HOOD - ACCESSORY

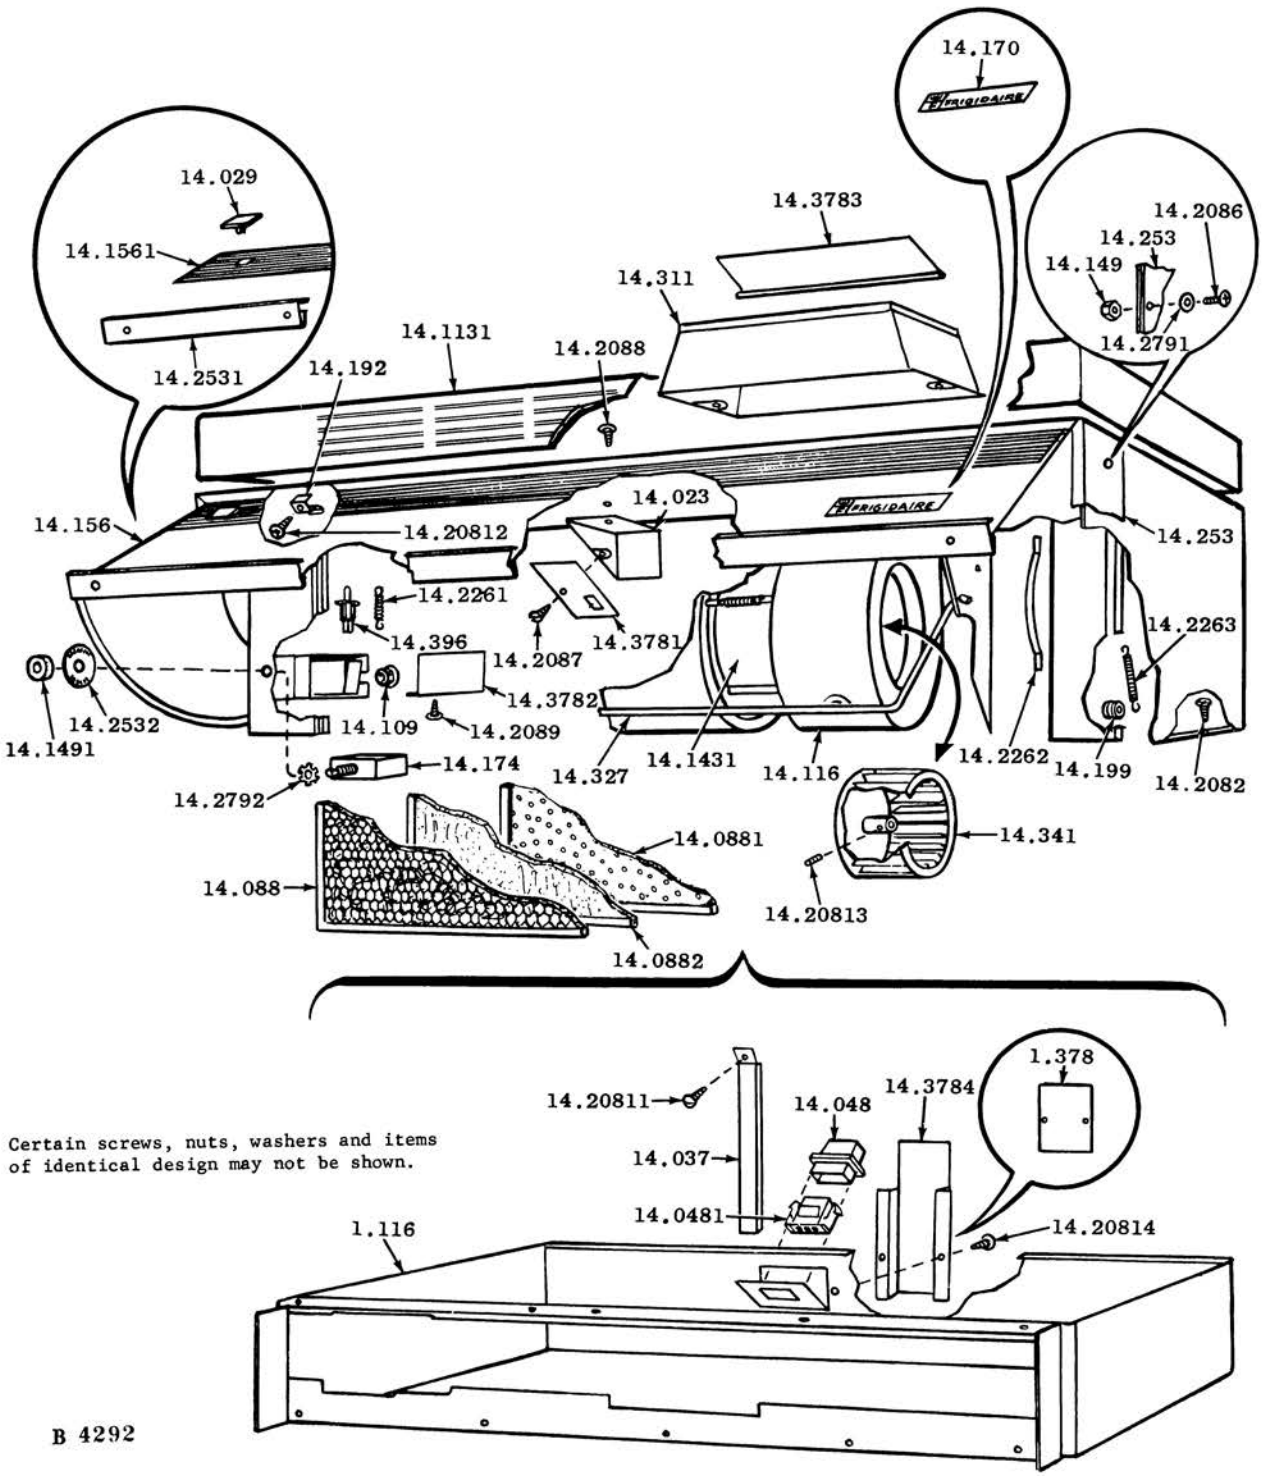


Models RDH-630, RCDH-630, RCDH-640, RCIH-635 and RCIH-645

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

ELECTRICAL CONNECTOR IDENTIFICATION CHART

PIECE	PART NUMBER	DESCRIPTION	DATA
	P 5873786 (10 in Pkg.)	#6 EYELET - COPPER - TIN-VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	P 5873787 (10 in Pkg.)	#8 EYELET - COPPER - TIN-VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	P 5873788 (10 in Pkg.)	#10 EYELET - COPPER - TIN-VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	5428475 628321 5899914 5894191 5427015 5426525 5427014 5894189 5426495 9408527	BDG. HEAD BRASS TERMINAL SCREW	4-36 X 1/4" 4-40 X 5/16" 4-40 X 7/16" 6-32 X 1/4" 8-32 X 1/4" 8-32 X 3/8" 8-32 X 1/2" 8-32 X 5/8" 10-32 X 1/4" 10-32 X 1/2"
	7529602	ST. RECEPTACLE BRASS	#18 TWO WIRE .020 X 3/16" TAB
	P 5875093 (20 in Pkg.)	STEEL - NICKEL LOCK TAB	#14 TO #18 ONE WIRE .030 X 1/4" TAB
	P 6569386 (20 in Pkg.)	BRASS LOCK TAB	#18 TWO WIRE .030 X 1/4" TAB
	P 7535219 (12 in Pkg.)	ST. RECEPTACLE STEEL - NICKEL	#14 TWO WIRE .030 X 1/4" TAB
	7547988	ST. RECEPTACLE BRASS - TIN	#18 TO #22 ONE WIRE .032 X .205 TAB
	6592002	HARNESS HOUSING RECPTL BRASS - TIN	#16 TWO WIRE .030 X 1/4" TAB
	P 5875094 (20 in Pkg.)	ST. PIGGY-BACK RECPTL BRASS - TIN	#14 TO #18 ONE WIRE .030 X 1/4" TAB
	P 5875091 (10 in Pkg.)	FLAG RECEPTACLE BRASS - TIN	#16 TO #20 ONE WIRE .020 X 3/16" TAB
	P 5875092 (10 in Pkg.)	FLAG RECEPTACLE BRASS - TIN	#12 TO #18 ONE WIRE .030 X 1/4" TAB
	7547989	FLAG RECEPTACLE BRASS - TIN	#14 TO #20 ONE WIRE .032 X .205 TAB
	P 7529179 (6 in Pkg.)	ADAPTER - 3 TERMINAL BRASS	.030 X 1/4" TABS
	5223619	RECEPTACLE TERMINAL & SCREW ASSY. BRASS - TIN	.030 X 1/4" TAB #6 - 32 SCREW
	6568735	TAB - TERMINAL BRASS - TIN	#16 TO #18 ONE WIRE .012 X 3/32" TAB
	2973916	TAB-TERMINAL BRONZE-TIN LOCK TAB	#14 TO #16 WIRE .016 X 1/8" TAB
	5438535	TAB TERMINAL ADAPTER-BRASS	.030 X 1/4" TAB TO #8 SCREW
	P 6592122 (12 in Pkg.)	TAB TERMINAL BRASS - TIN	#16 TWO WIRE .016 X 1/4" TAB
	P 5873789 (10 in Pkg.)	BULLET NOSE CONNECTOR COPPER - TIN	#14 TO #16 WIRE

E 245

PIECE	PART NUMBER	DESCRIPTION	DATA
	P 5877822 (10 in Pkg.)	BULLET NOSE TO BLADE CONN. (MALE) BRASS - TIN	.030 X 1/4" TAB
	P 5877823 (20 in Pkg.)	BULLET NOSE TO BLADE CONN. (FEMALE) BRASS - TIN	.030 X 1/4" TAB
	P 5431641 (10 in Pkg.)	SLEEVE BLADE CONNECTOR (MALE) BRASS-NYLON SLEEVE	.030 X 1/4" TAB
	P 5873790 (10 in Pkg.)	SLEEVE SPLICE CONNECTOR-BRASS VINYL SLEEVE	#14 TO #16 ONE WIRE .115 TO .170 INSUL. DIA.
	6569360	GROUND PRESSURE CONNECTOR COPPER-TIN	.132" I.D.
	5423696	INSULATING SLEEVING 37-1/2" LONG FIBERGLASS	FOR #10 WIRE
	6568691	INSULATING SLEEVING VINYL	3/16" I.D. X 1 7/16" LONG
	7529395	SILICONE	3/16" I.D. X 1" LONG
	6566745 7528468 6568794 5438151 2977594 2984780	HOUSING SPLICE -MALE SINGLE LEAD WIRE THREE LEAD WIRES FOUR LEAD WIRES SIX LEAD WIRES SIX LEAD WIRES TWELVE LEAD WIRES	
	6566746 7529998 6568739 6567412 2977593 7537988 2984781	HOUSING SPLICE-FEMALE SINGLE LEAD WIRE THREE LEAD WIRES FOUR LEAD WIRES SIX LEAD WIRES SIX LEAD WIRES NINE LEAD WIRES TWELVE LEAD WIRES	
	P 5851484 (6 in Pkg.)	CONNECTOR (MEDIUM)	#14 TO #18 WIRE 1/8" I.D.
	6585261	SOLDERLESS CONNECTOR (SMALL)	#18 TO #20 WIRE 3/32" I.D.
	P 84514 (6 in Pkg.)	CONNECTOR (LARGE) BRASS-BAKELITE	#14 TO #18 WIRE 3/16" I.D.
	6567957	INSULATOR - FLAG TERMINAL (VINYL)	
	7538803	INSULATOR- FLAG TERMINAL NYLON	
	7536780	FLAG CONTACT (MALE) FOR 7536783 HOUSING BRONZE - TIN	#18 TO #22 WIRE .016 X .180 TAB

LEAD WIRE CHART

COLORS	PLASTIC INSULATED STRANDED		ASBESTOS INSULATED STRANDED		ASBESTOS INSULATED SOLID		SILICONE RUBBER GLASS BRAIDED INSULATED STRANDED	
	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.
Black	12	6594075	--	-------	--	-------	--	-------
Black	14	*5875355	--	-------	12	5874562	--	-------
Black	14	5873791	14	5417736	14	5873614	--	-------
†Black	16	5874583	--	-------	--	-------	--	-------
§Black	16	5874584	--	-------	--	-------	--	-------
Black-Red	14	5875278	--	-------	--	-------	--	-------
Black-White	14	5875271	--	-------	--	-------	--	-------
Blue	14	5873795	14	5873026	14	5873617	--	-------
Blue-White	18	5875283	--	-------	--	-------	--	-------
Brown	14	5874230	--	-------	14	5873619	--	-------
Brown-White	14	5875279	--	-------	--	-------	--	-------
Gray	14	5875276	--	-------	--	-------	--	-------
Green	14	5874238	14	5417738	14	5873615	--	-------
Orange	14	5873794	--	-------	--	-------	--	-------
Orange-Black	14	5875275	--	-------	--	-------	--	-------
Pink	18	5874237	14	5874184	--	-------	--	-------
Purple	14	5874231	14	5874185	--	-------	--	-------
Red	12	6594076	--	-------	--	-------	--	-------
Red	14	5873793	14	5417737	14	5873616	--	-------
Red	--	-------	--	-------	12	5874563	--	-------
Red-Green	14	5875277	--	-------	--	-------	--	-------
Red-White	14	5875270	--	-------	--	-------	--	-------
Tan	14	5875185	--	-------	--	-------	--	-------
White	14	5873792	14	5417735	14	5873620	--	-------
White-Black	14	5875274	--	-------	--	-------	14	#6595597
White-Blue	18	5875282	--	-------	--	-------	14	#6595596
White-Brown	18	5875280	--	-------	--	-------	--	-------
White-Red	14	5875273	--	-------	--	-------	14	#6595598
White-Yellow	18	5875281	--	-------	--	-------	14	#6595599
Yellow	14	5874229	14	5417739	14	5873618	--	-------
Yellow-Black	14	5875269	--	-------	--	-------	--	-------

Bare Wire - Size # 8, Piece No. 5874585

Bare Wire - Size #12, Piece No. 5874561

† Two conductor - ribbed.
§ Three conductor - ribbed.
NOTE: Bulk Wire is available by the foot.

* Use where extreme flexing is required.
High Temperature Application - Nickel Plated.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 1 CONTROL PANELS AND PARTS

	DEFLECTOR-HEAT			
1.063	RDH-630	7529124	1	
	ESCUTCHEON-CONTROL PANEL			
1.081	RDH-630	7535232	1	
	GLASS-CONTROL PANEL			
1.103	RCIH-645	7535221	1	
1.103	RCDH-640	7535261	1	
1.103	RCDH-630	7535276	1	
1.103	RCIH-635	7535277	1	
	GLASS-LAMP HOUSING			
1.1031	RCDH-630 RCIH-635	6567583	1	
1.1031	RCDH-640 RCIH-645	6567584	1	
	HOUSING-CONTROL			
1.116	RDH-630 RCDH-630 RCIH-635	7531345	1	
1.116	RCDH-640 RCIH-645	7531530	1	
	NUT			
1.149	RCDH-630 RCIH-635	5438563	7	SPECIAL-LAMP HOUSING SHIELD
1.149	RCDH-640 RCIH-645	5438563	9	SPECIAL-LAMP HOUSING SHIELD
1.1491	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5433660	2	LAMP HOUSING TOP TRIM
1.1492	RDH-630	5433660	2	HEAT DEFLECTOR
	PAD-CONTROL PANEL GLASS			
1.153	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6569026	AR	1/16X3/16X1-1/2
1.153	RCDH-630 RCIH-635	7528218	1	
1.153	RCDH-640 RCIH-645	7528218	2	
1.153	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7535415	4	1/32X1/2X3/4
1.153	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7538047	3	MOUNT TO SURFACE UNIT SWITCH BRACKET 1/8X3/8X1
	RETAINER,TOP-CONTROL PANEL GLASS			
1.192	RCDH-630 RCIH-635	7537681	1	
1.192	RCDH-640 RCIH-645	7537682	1	
	SEAL,RUBBER-LAMP HOUSING TOP TRIM			
1.204	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6568461	1	
	SCREW			
1.208	ALL MODELS	7528041	4	LAMP HOUSING END 8-18X7/16
1.2081	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6560805	3	CONTROL PANEL GLASS SUPPORT 8-15X3/8
1.2082	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	5	LAMP HOUSING LOWER TRIM 8-15X3/8
1.2082	RDH-630	7528041	5	LAMP HOUSING LOWER TRIM 8-18X7/16
1.2083	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436439	2	LAMP HOUSING TOP TRIM 8-15X5/8
1.2084	RDH-630 RCDH-630 RCIH-635	7528041	8	CONTROL HOUSING 8-18X7/16
1.2084	RCDH-640 RCIH-645	7528041	13	CONTROL HOUSING 8-18X7/16
1.2085	RDH-630 RCDH-630 RCIH-635	7528041	4	TOP SPACER WASHER 8-18X7/16
1.2085	RCDH-640 RCIH-645	7528041	5	TOP SPACER WASHER 8-18X7/16
1.2086	ALL MODELS	7528041	1	CONTROL HOUSING COVER 8-18X7/16
1.2087	RDH-630	5436439	2	HEAT DEFLECTOR 8-15X5/8
1.2088	RDH-630	5436528	3	CONTROL PANEL ESCUTCHEON 8-15X3/8
	SHIELD-LAMP HOUSING			
1.216	RCDH-630 RCIH-635	6567865	1	
1.216	RCDH-640 RCIH-645	6567866	1	
	TRIM,LOWER-LAMP HOUSING			
1.253	RDH-630 RCDH-630 RCIH-635	6567590	1	
1.253	RCDH-640 RCIH-645	6567591	1	
	TRIM,TOP-LAMP HOUSING			
1.2531	RCDH-630 RCIH-635	6567592	1	
1.2531	RCDH-640 RCIH-645	6567593	1	
	TRIM-GLASS CONTROL PANEL END			
1.2532	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567585	2	
	WASHER			
1.279	RDH-630 RCDH-630 RCIH-635	6567860	2	CUP-TOP SPACER
1.279	RCDH-640 RCIH-645	6567860	3	CUP-TOP SPACER
	SUPPORT-CONTROL PANEL GLASS			
1.321	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7529455	3	NYLON BRACKET TYPE

1964

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	COVER-CONTROL HOUSING			
1.378	ALL MODELS	7528458	1	VENT HOOD PLUG IN
	BUTTON,PLUG-CONTROL HOUSING			
1.380	ALL MODELS	432269	1	LEFT REAR-CONDUIT HOLE-7/8 INCH HOLE
	END-LAMP HOUSING			
1.395	ALL MODELS	6569588	1	RH
1.395	ALL MODELS	6569589	1	LH

GROUP 2 COOK-MASTERS AND PARTS

	FRAME-COOKMASTER AND TIME SIGNAL			
2.096	RDH-630	5875454	1	
	GLASS-COOKMASTER AND TIME SIGNAL			
2.103	RDH-630	5875455	1	
	KNOB,CONTROL-COOKMASTER AND TIME SIGNAL			
2.130	ALL MODELS	6568474	1	TIME STOP-BLACK-INNER CENTER
2.130	ALL MODELS	7521201	1	TIME SET-WHITE-OUTER CENTER
2.130	ALL MODELS	7523846	2	HOURS TO COOK AND TIME SIGNAL -BLACK
	MOTOR-COOKMASTER AND TIME SIGNAL			
2.143	ALL MODELS	6592779	1	60 CYCLE 115 VOLT
2.143	ALL MODELS	6592906	1	50 CYCLE 115 VOLT
	SCREW			
2.208	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	4	COOKMASTER & TIME SIGNAL 8-15X3/8
2.2081	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	1	COOKMASTER & TIME SIGNAL TRIM 8-15X3/8
	TRIM-COOKMASTER AND TIME SIGNAL			
2.253	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7535234	1	
	COOKMASTER & TIME SIGNAL			
2.374	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7526351	1	60 CYCLE 115 VOLT
2.374	RDH-630	7526420	1	60 CYCLE 115 VOLT
	SWITCH-COOKMASTER AND TIME SIGNAL TERMINAL			
2.396	ALL MODELS	6592112	1	

GROUP 3 SWITCHES AND PARTS

	BRACKET-ROAST THERMOMETER INDICATOR			
3.026	RCIH-645	7535258	1	
	BRACKET-SURFACE UNIT SWITCH			
3.0261	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7535231	1	
	BRACKET-THERMOSTAT			
3.0262	RDH-630	7529203	1	
3.0262	RCDH-640 RCIH-645	7535233	1	
3.0262	RCDH-630	7535269	1	
3.0262	RCIH-635	7535270	1	
	BRACKET-SELECTOR SWITCH			
3.0263	RCDH-640	7535259	1	
	GASKET-SWITCH WATER SEAL			
3.099	RDH-630	7528627	4	
	KNOB,CONTROL-LAMP SELECTOR SWITCH			
3.130	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7525905	1	
	KNOB,CONTROL-ROAST THERMOMETER			
3.1301	RCIH-635 RCIH-645	7525905	1	
	KNOB,CONTROL-SURFACE UNITS			
3.1302	RDH-630	6564315	4	
3.1302	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7526008	4	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	KNOB,CONTROL-OVEN THERMOSTAT			
3.1303	RDH-630	7524972	1	
3.1303	RCDH-630 RCIH-635	7526008	1	
3.1303	RCDH-640 RCIH-645	7526008	2	
	KNOB,CONTROL-BROILER CONTROL			
3.1304	RCIH-635 RCIH-645	7525905	1	
	NUT			
3.149	RCIH-635 RCIH-645	619078	2	ROAST THERMOMETER INDICATOR
3.1491	RDH-630	5434526	1	KNURLED-LAMP SELECTOR SWITCH
3.1492	RDH-630	5435463	4	SURFACE UNIT DISCONNECT SWITCH
3.1493	RCIH-635	7529851	7	DIAL SHIELD
3.1493	RCIH-645	7529851	8	DIAL SHIELD
	PIN,COTTER-SWITCH OPERATING ARM			
3.163	RCDH-630 RCIH-635 RCDH-640 RCIH-645	-------	2	1-1/8X3/32 PURCHASE LOCALLY
	RETAINER,SPRING-SWITCH			
3.192	ALL MODELS	6568159	AR	9/16 INCHES LONG
3.192	ALL MODELS	6592441	AR	13/16 INCHES LONG
	SCREW			
3.208	RCIH-645	5436528	4	ROAST THERMOMETER INDICATOR BRACKET 8-15X3/8
3.2081	RDH-630 RCDH-630 RCIH-635	6576499	2	OVEN THERMOSTAT 6-32X3/16
3.2081	RCDH-640 RCIH-645	6576499	4	OVEN THERMOSTAT 6-32X3/16
3.2082	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	4	SWITCH BRACKET 8-15X3/8
3.2083	RCIH-635 RCIH-645	5435111	2	SPEED HEAT SWITCH 8-32X1/4
3.2084	RCIH-635 RCIH-645	5435111	6	INFINITE HEAT SURFACE UNIT SWITCH 8-32X1/4
3.2084	RCDH-630 RCDH-640	5435111	8	INFINITE HEAT SURFACE UNIT SWITCH 8-32X1/4
3.2085	RCDH-630 RCIH-635 RCDH-640 RCIH-640	443940	1	LAMP SWITCH 6-32X3/16
3.2086	RCIH-635 RCIH-645	5435111	2	BROILER CONTROL SWITCH 8-32X1/4
3.2087	RCIH-635 RCIH-645	5436528	2	ROAST THERMOMETER INDICATOR 8-15X3/8
3.2088	RDH-630	7528041	2	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2088	RCDH-630 RCIH-635	7528041	4	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2088	RCDH-640 RCIH-645	7528041	5	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2089	RDH-630	5436528	3	THERMOSTAT BRACKET 8-15X3/8
3.2089	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	4	THERMOSTAT BRACKET 8-15X3/8
3.20811	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	4	DISCONNECT SWITCH 8-15X3/8
3.20812	RDH-630	7536987	2	SURFACE UNIT SWITCH SHIELD 8-15X1/2
3.20813	RDH-630	148101	8	SWITCH WATER SEAL CUP 8-32X3/8
3.20814	RCIH-635 RCIH-645	7528041	1	THERMOSTAT CAPILLARY TUBE CLAMP 8-18X7/16
3.20814	RCDH-630 RCIH-635	7536987	1	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X1/2
3.20814	RCDH-640	7536987	4	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X1/2
3.20814	RCIH-645	7536987	5	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X1/2
3.20814	ALL MODELS	5436528	2	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X3/8
3.20815	RCDH-640	5436528	4	SELECTOR SWITCH BRACKET 8-15X3/8
3.20816	RCIH-635 RCIH-645	5436528	2	HEAT MINDER CAPILLARY TUBE SUPPORT 8-15X3/8
3.20817	RCIH-635 RCIH-645	5436528	1	HEAT MINDER CAPILLARY TUBE SUPPORT 8-15X3/8
	SHIELD-DISCONNECT SWITCH			
3.216	RDH-630	6567706	1	
3.216	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567706	2	
	SHIELD-SURFACE UNIT SWITCH			
3.2161	RDH-630	7529759	2	

1964

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SHIELD-DIAL			
3.2162	RCIH-635	7535229	5	THERMOSTAT & SURFACE UNIT SWITCHES
3.2162	RCIH-645	7535229	6	THERMOSTATS & SURFACE UNIT SWITCHES
3.2162	RCIH-635 RCIH-645	7535230	2	BROILER CONTROL & LAMP SELECTOR SWITCH
	THERMOSTAT-OVEN			
3.242	RDH-630	7524968	1	
3.242	RCDH-630 RCIH-635	7526435	1	
3.242	RCDH-640 RCIH-645	7526435	2	
	INDICATOR-ROAST THERMOMETER			
3.248	RCIH-635 RCIH-645	7526352	1	12 VOLT-ALUMINUM FACE
	WASHER			
3.279	RDH-630	5886323	1	LAMP SELECTOR SWITCH
3.2791	RCDH-630	6567692	6	CONTROL KNOB SPACER
3.2791	RCDH-640 RCIH-635	6567692	7	CONTROL KNOB SPACER
3.2791	RCIH-645	6567692	8	CONTROL KNOB SPACER
	SWITCH,SURFACE UNIT-HEAT MINDER			
3.285	RCIH-635 RCIH-645	6563695	1	ELECTRICAL TYPE
3.285	RCIH-635 RCIH-645	7526418	1	HYDRAULIC TYPE
	SWITCH,SURFACE UNIT-SPEED HEAT			
3.2851	RCIH-635 RCIH-645	7524058	1	
	SWITCH,SURFACE UNIT-INFINITE HEAT			
3.2852	RCIH-635 RCIH-645	7521242	1	SMALL 6 INCH
3.2852	RCDH-630 RCDH-640	7521242	2	SMALL 6 INCH
3.2852	RCIH-635 RCIH-645	7521243	1	LARGE 8 INCH
3.2852	RCDH-630 RCDH-640	7521243	2	LARGE 8 INCH
3.2852	RDH-630	7521244	3	SMALL 6 INCH
3.2852	RDH-630	7521370	1	LARGE 8 INCH
	SUPPORT-HEAT MINDER CAPILLARY TUBE			
3.321	RCIH-635 RCIH-645	7536303	1	WIRE TYPE MOUNTING WITH TWO SCREWS
	CUP-SWITCH WATER SEAL			
3.326	RDH-630 RCDH-640	7528628	4	
3.326	RCIH-645	7528628	5	
	CLAMP-THERMOSTAT CAPILLARY TUBE			
3.327	RCDH-630 RCIH-635	5436867	2	
3.327	RCIH-635 RCIH-645	7527865	1	
	CLAMP-HEAT MINDER CAPILLARY TUBE			
3.3271	RCIH-635 RCIH-645	5436867	1	
	ARM,CONTROL-SWITCH OPERATING			
3.366	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567150	2	
	BUTTON-SWITCH ARM GLIDE			
3.380	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567143	2	
	DIAL,SWITCH-INFINITE HEAT SURFACE UNIT			
3.381	RCDH-630 RCDH-640	7526403	4	
3.381	RCIH-635 RCIH-645	7535223	3	
	DIAL,SWITCH-HEAT MINDER			
3.3811	RCIH-635 RCIH-645	7535224	1	
	DIAL-THERMOSTAT			
3.3812	RCDH-630 RCDH-640	7526404	1	ROTISSERIE-RIGHT OVEN
3.3812	RCDH-640	7526405	1	LEFT OVEN
3.3812	RCIH-635	7535225	1	
3.3812	RCIH-645	7535225	1	ROTISSERIE-RIGHT OVEN
3.3812	RCIH-645	7535226	1	LEFT OVEN
	DIAL-BROILER CONTROL			
3.3813	RCIH-635 RCIH-645	7535227	1	
	DIAL-LAMP SELECTOR SWITCH			
3.3814	RCIH-635 RCIH-645	7535228	1	
3.3814	RCDH-630 RCDH-640	7535262	1	
	SWITCH,CONTROL-BROILER			
3.396	RCIH-635 RCIH-645	7526407	1	
	SWITCH,DISCONNECT-SURFACE UNITS			
3.3961	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6564289	2	
3.3961	RDH-630	7524932	2	
	SWITCH,SELECTOR-LAMP			
3.403	RDH-630	7524967	1	
3.403	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7526406	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 4 SURFACE UNITS AND PARTS

	BRACKET-SURFACE UNIT HINGE			
4.026	ALL MODELS	6565251	4	
	BRACKET,RETAINER-SENSOR			
4.0261	RCIH-635 RCIH-645	7528900	1	
	GASKET-SURFACE UNIT TERMINAL BLOCK SEAL			
4.099	ALL MODELS	7535507	4	
	INSULATOR-SURFACE UNIT CONNECTOR			
4.126	ALL MODELS EXCEPT RDH-630	7535070	4	
	SCREW			
4.208	ALL MODELS	5430929	8	SURFACE UNIT CLAMP TO BRACKET 8-32X5/16
4.2081	RCIH-635 RCIH-645	5436528	4	SENSOR SUPPORT 8-15X3/8
4.2082	ALL MODELS	5430929	8	SURFACE UNIT BRACKET 8-32X5/16
4.2083	ALL MODELS	7529180	8	SURFACE UNIT TERMINAL BLOCK 5-40X7/16
4.2084	RCIH-635 RCIH-645	5434896	2	SENSOR RETAINER BRACKET 8-18X1/4
4.2085	ALL MODELS	5899587	4	SURFACE UNIT CONNECTOR BLOCK 8-32X3/8
	UNIT,SURFACE 6-INCH			
4.266	RCIH-635 RCIH-645	6590804	1	1450W 236V-RIGHT REAR
4.266	RCDH-630 RCDH-640	6590804	2	1450W 236V-LEFT FRONT AND RIGHT REAR
4.266	RDH-630	6590804	3	1450W 236V-LEFT FRONT, RIGHT & LEFT REAR
4.266	RCIH-635 RCIH-645	6591863	1	1250W 118V SPEED HEAT-LEFT FRONT-USE ON 208&236 VOLT WITHOUT CHANGE
4.266	RCIH-635 RCIH-645	6591937	1	1450W 208V-RIGHT REAR
4.266	RCDH-630 RCDH-640	6591937	2	1450W 208V-LEFT FRONT AND RIGHT REAR
4.266	RDH-630	6591937	3	1450W 208V-LEFT FRONT, RIGHT & LEFT REAR
	UNIT,SURFACE 8-INCH			
4.2661	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6590805	2	2600W 236V-LEFT REAR AND RIGHT FRONT
4.2661	RDH-630	6591938	1	2600W 208V-RIGHT FRONT
4.2661	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6591938	2	2600W 208V-LEFT REAR AND RIGHT FRONT
4.2661	RDH-630	7521366	1	2050W 236V-RIGHT FRONT
	SUPPORT-HEAT MINDER SENSOR			
4.321	RCIH-635 RCIH-645	6567531	1	
	SUPPORT-SURFACE UNIT SMALL			
4.3211	RCIH-635 RCIH-645	7525863	1	SPEED HEAT-LEFT FRONT
4.3211	RCIH-635 RCIH-645	7529769	1	RIGHT REAR
4.3211	RCDH-630 RCDH-640	7529769	2	LEFT FRONT AND RIGHT REAR
4.3211	RDH-630	7529769	3	LEFT FRONT,RIGHT & LEFT REAR
	SUPPORT-SURFACE UNIT LARGE			
4.3212	RCIH-635 RCIH-645	5435224	1	HEAT MINDER-RIGHT FRONT
4.3212	RDH-630	7529770	1	RIGHT FRONT
4.3212	RCIH-635 RCIH-645	7529770	1	LEFT REAR
4.3212	RCDH-630 RCDH-640	7529770	2	LEFT REAR AND RIGHT FRONT
	CLAMP-SURFACE UNIT HINGE			
4.327	ALL MODELS	6565252	4	
	BLOCK,FEMALE-SURFACE UNIT CONNECTOR			
4.330	RDH-630 RCIH-635 RCIH-645	5438977	3	BLACK
4.330	RCDH-630 RCDH-640	5438977	4	BLACK
4.330	RDH-630	7527656	1	BROWN-USE WITH RIGHT FRONT
4.330	RCIH-635 RCIH-645	7527656	1	BROWN-USE WITH SPEED HEAT SURFACE UNIT SURFACE UNIT
	BLOCK,MALE-SURFACE UNIT CONNECTOR			
4.3301	RDH-630	5438978	4	
4.3301	ALL MODELS EXCEPT RDH-630	7535071	4	BLACK
	PAN,SMALL-SURFACE UNIT DRIP			
4.336	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6565456	2	
4.336	RDH-630	6565456	3	
	PAN,LARGE-SURFACE UNIT DRIP			
4.3361	RDH-630	6565457	1	
4.3361	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6565457	2	
	SENSOR-HEAT MINDER			
4.490	RCIH-635 RCIH-645	6563752	1	ELECTRICAL TYPE
4.490	RCIH-635 RCIH-645	7526418	1	HYDRAULIC TYPE

1964

GROUP 6 TOPS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BRACKET-TOP COVER SLIDE			
6.026	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7529879	2	
	BRACKET-LATCH SPRING RETAINER			
6.0261	ALL MODELS	6569713	1	
	BRACKET-COOKING TOP SAFETY STOP			
6.0262	RDH-630	7529096	1	
	BRACKET-DISCONNECT SWITCH SLIDE			
6.0263	RDH-630	7529051	1	
	BUMPER-PULLEY CHANNEL			
6.029	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567881	2	
	CHANNEL-PULLEY			
6.037	RCDH-640 RCIH-645	7522203	1	RH
6.037	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7522204	1	LH
	CHANNEL-COOKING TOP STOP			
6.0371	ALL MODELS	7529050	1	
	CHANNEL-CABLE SPACER			
6.0372	RCDH-630 RCIH-635	7529880	1	
6.0372	RCDH-640 RCIH-645	7529901	1	
	HANDLE-COOKING TOP			
6.110	RCIH-635 RCIH-645	7526348	1	
6.110	RDH-630 RCDH-630 RCDH-640	7535457	1	
	HOLDER-CABLE SPACER CHANNEL			
6.112	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5432514	2	NEOPRENE
	HOUSING-COOKING TOP			
6.116	RCDH-640 RCIH-645	6564283	1	
6.116	RDH-630 RCDH-630 RCIH-635	7524973	1	
	SLIDE-COOKING TOP COVER			
6.120	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567147	2	
	SLIDE-DISCONNECT SWITCH			
6.1201	RDH-630	7529052	1	
	NUT			
6.149	ALL MODELS	7520910	2	LOCK-COOKING TOP SHIPPING
6.1491	RDH-630	5438563	3	DISCONNECT SWITCH SLIDE
6.1492	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5423225	2	CABLE SPACER CHANNEL
	PAD-COOKING TOP HANDLE			
6.153	RCIH-635 RCIH-645	7536682	2	
	PANEL,FRONT-COOKING TOP			
6.156	RCDH-640 RCIH-645	7535222	1	
6.156	RDH-630 RCDH-630 RCIH-635	7535248	1	
	PULLEY,CABLE-COOKING TOP			
6.177	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6569474	4	
	RETAINER-CABLE BRACKET			
6.192	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7527850	2	UPPER
	RETAINER,SPRING-CABLE PULLEY			
6.1921	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5437128	4	
	ROLLER-COOKING TOP			
6.199	ALL MODELS	6568686	3	
6.199	ALL MODELS	6569100	1	
	ROLLER-TOP COVER			
6.1991	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6568686	2	
	SCREW			
6.208	ALL MODELS	5439072	1	LATCH KNOB 6-32X3/8
6.2081	ALL MODELS	5885072	3	COOKING TOP DRIP PLATE 8-18X3/8
6.2082	ALL MODELS	5885072	3	COOKING TOP FRONT PANEL-LOWER 8-18X3/8
6.2083	ALL MODELS	5885072	2	COOKING TOP STOP CHANNEL SCREW SHIELD 8-18X3/8
6.2084	ALL MODELS	5436528	4	LATCH SPRING RETAINER BRACKET 8-15X3/8
6.2085	ALL MODELS	7528041	4	LATCH OPERATING LEVER 8-18X7/16
6.2086	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5435226	8	PULLEY CHANNEL 10-12X3/8

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
6.2087	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7535565	2	CABLE SPACER CHANNEL 10-32X1-3/4
6.2088	ALL MODELS	5885072	4	COOKING TOP STOP CHANNEL 8-18X3/8
6.2089	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7528041	4	COOKING TOP CABLE 8-18X7/16
6.20811	RCIH-635 RCIH-645	5430790	2	COOKING TOP HANDLE 10-32X1/2
6.20811	RDH-630 RCDH-630 RCDH-640	9418597	2	COOKING TOP HANDLE 12-24X1/2
6.20812	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7536987	4	COOKING TOP COVER SLIDE BRACKET 8-15X1/2
6.20813	RDH-630	5424117	2	DISCONNECT SWITCH SLIDE BRACKET 10-16X3/8
6.20814	RDH-630	5435226	1	COOKING TOP SAFETY STOP BRACKET 10-12X3/8
	SHIELD,SCREW-COOKING TOP STOP CHANNEL			
6.216	RCDH-640 RCIH-645	6566986	2	
	SPRING-TOP COVER			
6.226	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567610	2	
	SPRING-LATCH PIN OPERATING			
6.2261	ALL MODELS	6568818	1	
	STOP-COOKING TOP COVER			
6.235	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7528879	1	
	TRIM-COOKING TOP HOUSING			
6.253	ALL MODELS	7529132	1	RH-CEMENTED
6.253	ALL MODELS	7529133	1	LH-CEMENTED
	TOP-COOKING			
6.258	RCDH-630 RCIH-635	7522207	1	
6.258	RCDH-640 RCIH-645	7522209	1	
6.258	RDH-630	7524931	1	
	WASHER			
6.279	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5427712	4	COOKING TOP CABLE PULLEY
6.2791	ALL MODELS	6565542	AR	PLAIN-ROLLER
6.2792	RDH-630 RCDH-630 RCDH-640	6565542	2	COOKING TOP HANDLE
	SUPPORT,HANDLE-COOKING TOP			
6.321	RDH-630 RCDH-630 RCDH-640	7518418	2	
	KNOB-LATCH OPERATING			
6.350	ALL MODELS	6568810	1	
	LEVER-LATCH OPERATING			
6.356	ALL MODELS	7521097	1	
	PIN-COOKING TOP LATCH			
6.364	ALL MODELS	6568811	1	
	COVER-COOKING TOP			
6.378	RCDH-630 RCIH-635	7524661	1	
6.378	RCDH-640 RCIH-645	7524662	1	
	BUTTON-COOKING TOP COVER			
6.380	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567143	2	
	BUTTON-COOKING TOP FRONT PANEL			
6.3801	ALL MODELS	6566917	2	
	PLATE-COOKING TOP DRIP			
6.390	RDH-630 RCDH-630 RCIH-635	6568842	1	
6.390	RCDH-640 RCIH-645	6568843	1	
	RING,RETAINER-COOKING TOP LATCH PIN			
6.393	ALL MODELS	6586240	1	
	RING,RETAINER-TOP COVER ROLLER			
6.3931	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7537983	2	
	CABLE-COOKING TOP			
6.436	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7522206	2	

1964

GROUP 7 FRAMES, PANELS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BRACKET-SIDE TRIM			
7.026	ALL MODELS	7529048	2	
	CLIP-TOP PANEL TO CONTROL HOUSING			
7.039	ALL MODELS	7528581	2	
	NUT			
7.149	ALL MODELS	5433660	AR	CONDENSATION TRIM SPACER
	PANEL,SIDE-RANGE RH			
7.159	ALL MODELS	7521851	1	WHITE
7.159	ALL MODELS EXCEPT RDH-630	7521852	1	YELLOW
7.159	ALL MODELS EXCEPT RDH-630	7521853	1	PINK
7.159	ALL MODELS EXCEPT RDH-630	7521854	1	TURQUOISE
7.159	ALL MODELS	7521855	1	COPPER
	PANEL,SIDE-RANGE LH			
7.1591	ALL MODELS	7521856	1	WHITE
7.1591	ALL MODELS EXCEPT RDH-630	7521857	1	YELLOW
7.1591	ALL MODELS EXCEPT RDH-630	7521858	1	PINK
7.1591	ALL MODELS EXCEPT RDH-630	7521859	1	TURQUOISE
7.1591	ALL MODELS	7521860	1	COPPER
	PANEL,TOP-RANGE			
7.160	RDH-630 RCDH-630 RCIH-635	7524005	1	WHITE
7.160	RCDH-630 RCIH-635	7524006	1	YELLOW
7.160	RCDH-630 RCIH-635	7524007	1	PINK
7.160	RCDH-630 RCIH-635	7524008	1	TURQUOISE
7.160	RDH-630 RCDH-630 RCIH-635	7524009	1	COPPER
7.160	RCDH-640 RCIH-645	7524012	1	WHITE
7.160	RCDH-640 RCIH-645	7524013	1	YELLOW
7.160	RCDH-640 RCIH-645	7524014	1	PINK
7.160	RCDH-640 RCIH-645	7524015	1	TURQUOISE
7.160	RCDH-640 RCIH-645	7524016	1	COPPER
	RETAINER-INSULATION			
7.192	RDH-630 RCDH-630 RCIH-635	6569530	1	OVEN
7.192	RCDH-640 RCIH-645	6569531	1	RIGHT OVEN
7.192	RCDH-640 RCIH-645	6569532	1	LEFT OVEN
	SCREW			
7.208	ALL MODELS	7528041	4	ROTISSERIE OPENING COVER 8-18X7/16
7.2081	ALL MODELS	148101	2	TOP TRIM
7.2082	ALL MODELS	5436528	2	TRIM-USE WITH SHIELD 8-15X3/8
7.2082	ALL MODELS	6569714	2	TRIM 6-20X3/8-USE WITH SIDE TRIM BRACKET
7.2082	ALL MODELS	6569714	14	TRIM 6-20X3/8
7.2083	ALL MODELS	5435261	4	BOTTOM TRIM 6-20X1/4
7.2083	ALL MODELS	6545038	2	BOTTOM TRIM 8-18X5/8
7.2084	RDH-630 RCDH-630 RCIH-635	5436528	3	CONDENSATION TRIM 8-15X3/8
7.2084	RCDH-640 RCIH-645	5436528	4	CONDENSATION TRIM 8-15X3/8
7.2085	RDH-630	7528041	2	OVEN ANGLE 8-18X7/16
7.2085	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7528041	4	OVEN ANGLE 8-18X7/16
7.2086	RCDH-640 RCIH-645	6567391	3	CONDENSATE TRIM PLATE 8-32X5/16
7.2086	RDH-630 RCDH-630 RCIH-635	7528041	7	CONDENSATE TRIM PLATE 8-18X7/16
7.2086	RCDH-640 RCIH-645	7528041	8	CONDENSATE TRIM PLATE 8-18X7/16
7.2087	RDH-630 RCDH-630 RCIH-635	7528041	19	RANGE BACK PANEL 8-18X7/16
7.2087	RCDH-640 RCIH-645	7528041	27	RANGE BACK PANEL 8-18X7/16
7.2088	ALL MODELS	7528041	10	SIDE PANEL 8-18X7/16
7.2089	ALL MODELS	274920	6	INSULATION RETAINER 10-12X1/2
7.20811	RDH-630	163162	2	CONDENSATION TRIM SPACER 8-18X1/2
	SHIELD,SCREW-TRIM			
7.216	ALL MODELS	6566986	4	
	SPACER-CONDENSATION TRIM			
7.222	RDH-630	7529137	2	
	TRIM,SIDE-UPPER			
7.253	ALL MODELS	7524676	1	RH-SATIN FINISH-RIBBED
7.253	ALL MODELS	7524677	1	LH-SATIN FINISH-RIBBED
	TRIM,SIDE-LOWER			
7.2531	ALL MODELS	7524674	1	RH-SATIN FINISH-RIBBED
7.2531	ALL MODELS	7524675	1	LH-SATIN FINISH-RIBBED
	TRIM,BOTTOM-RANGE			
7.2532	RDH-630 RCDH-630 RCIH-635	6568907	1	SATIN FINISH
7.2532	RCDH-640 RCIH-645	6568909	1	SATIN FINISH

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	TRIM,TOP-RANGE			
7.2533	RDH-630 RCDH-630 RCIH-635	6568908	1	SATIN FINISH
7.2533	RCDH-640 RCIH-645	6568910	1	SATIN FINISH
	TRIM-CONDENSATION			
7.2534	RCDH-630 RCIH-635	6569535	1	
7.2534	RCDH-640 RCIH-645	6569536	1	
7.2534	RDH-630	7535268	1	
	PANEL,BACK			
7.310	RDH-630 RCDH-630 RCIH-635	7535333	1	
7.310	RCDH-640 RCIH-645	7535334	1	
	ANGLE-OVEN			
7.319	RDH-630 RCDH-630 RCIH-635	7537679	1	
7.319	RCDH-640 RCIH-645	7537680	1	
	COVER-ROTISSERIE OPENING			
7.378	ALL MODELS	6567869	2	REAR
	BUTTON-LOWER SIDE TRIM			
7.380	RDH-630 RCDH-630 RCIH-635	454243	2	
	PLATE-CONDENSATE TRIM			
7.390	RDH-630 RCDH-630 RCIH-635	6569533	1	
7.390	RCDH-640 RCIH-645	6569534	1	

GROUP 8 OVEN DOORS AND PARTS

1964

	BASE,HANDLE-OVEN DOOR			
8.009	RCIH-635	7529933	1	
8.009	RCIH-645	7529933	2	
8.009	RDH-630 RCDH-630	7535247	1	
8.009	RCDH-640	7535247	2	
	BEARING,NYLON-TORQUE SHAFT			
8.011	RCDH-640 RCIH-645	6567433	2	LOWER
8.011	RCDH-640 RCIH-645	6567612	2	UPPER
8.011	ALL MODELS	6569567	2	MOUNT TO DOOR SPRING RETAINER
	BRACKET-LOWER ARM			
8.026	RDH-630	6564377	1	
8.026	RCDH-630 RCIH-635	6564377	2	
8.026	RCDH-640 RCIH-645	6564377	4	
	BRACKET-DOOR SPRING RETAINER			
8.0261	RDH-630 RCDH-630 RCIH-635	6569554	2	
	BRACKET-OVEN DOOR LATCH			
8.0262	RCDH-630 RCIH-635	6567380	2	
8.0262	RCDH-640 RCIH-645	6567380	4	
	FRAME,OUTSIDE-OVEN DOOR			
8.096	RCDH-640 RCIH-645	6567405	1	RIGHT
8.096	RCDH-640 RCIH-645	6567406	1	LEFT
8.096	RCDH-630 RCIH-635	6567407	1	
8.096	RDH-630	7529102	1	
	FRAME,INSIDE-OVEN DOOR			
8.0961	RCDH-640 RCIH-645	6567402	1	RIGHT
8.0961	RCDH-640 RCIH-645	6567403	1	LEFT
8.0961	RDH-630 RCDH-630 RCIH-635	6567404	1	
	GASKET-OVEN DOOR HANDLE			
8.099	RDH-630 RCDH-630 RCIH-635	6567685	2	
8.099	RCDH-640 RCIH-645	6567685	4	
	GLASS,OUTER-OVEN DOOR			
8.103	RCDH-640 RCIH-645	7535196	1	RIGHT
8.103	RCDH-640 RCIH-645	7535197	1	LEFT
8.103	RDH-630 RCDH-630 RCIH-635	7535246	1	
	GLASS,INNER-OVEN DOOR			
8.1031	RCDH-640 RCIH-645	6567393	1	RIGHT
8.1031	RCDH-640 RCIH-645	6567394	1	LEFT
8.1031	RDH-630 RCDH-630 RCIH-635	6567395	1	
	HANDLE,DOOR-OVEN			
8.110	RCIH-635	7529932	1	
8.110	RCIH-645	7529932	2	
8.110	RDH-630 RCDH-630	7535456	1	
8.110	RCDH-640	7535456	2	
	NUT			
8.149	ALL MODELS	5887397	2	OVEN DOOR SPRING ADJUSTING
	RETAINER-OVEN DOOR GLASS			
8.192	RCDH-640 RCIH-645	6567399	1	RIGHT
8.192	RCDH-640 RCIH-645	6567400	1	LEFT
8.192	RDH-630 RCDH-630 RCIH-635	6567401	1	
	RETAINER-DOOR SPRING			
8.1921	ALL MODELS	6569566	2	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	ROD,RELEASE-OVEN DOOR			
8.197	RCDH-630 RCIH-635	6567383	2	
8.197	RCDH-640 RCIH-645	6567383	4	
	ROD-OVEN DOOR LATCH PLATE			
8.1971	RDH-630	7529103	1	RH
8.1971	RDH-630	7529104	1	LH
	ROLLER-OVEN DOOR STOP			
8.199	RDH-630 RCDH-630 RCIH-635	5426925	1	
8.199	RCDH-640 RCIH-645	5426925	2	
	SEAL,DOOR-BOTTOM			
8.203	RCDH-640 RCIH-645	7527773	1	RIGHT OVEN
8.203	RCDH-640 RCIH-645	7527774	1	LEFT OVEN
8.203	RDH-630 RCDH-630 RCIH-635	7527775	1	
	SEAL,DOOR-SIDE			
8.2031	RDH-630 RCDH-630 RCIH-635	6590767	1	INCLUDES SEALS FOR BOTH SIDES
8.2031	RCDH-640 RCIH-645	6590767	2	INCLUDES SEALS FOR BOTH SIDES
	SCREW			
8.208	RCIH-635	160069	2	DOOR HANDLE 10-32X1
8.208	RCIH-645	160069	4	DOOR HANDLE 10-32X1
8.208	RDH-630 RCDH-630 RCDH-640	6566301	2	DOOR HANDLE 12-24X1-7/8
8.2081	RCDH-630 RCIH-635	446887	2	SET-OVEN DR RELEASE BUTTON 8-32X1/8
8.2081	RCDH-640 RCIH-645	446887	4	SET-OVEN DR RELEASE BUTTON 8-32X1/8
8.2082	RCDH-630 RCIH-635	6567391	2	OVEN DOOR LATCH BRACKET 8-32X5/16
8.2082	RCDH-640 RCIH-645	6567391	4	OVEN DOOR LATCH BRACKET 8-32X5/16
8.2083	RDH-630 RCDH-630 RCIH-635	6567391	10	INSIDE OVEN DOOR FRAME 8-32X5/16
8.2083	RCDH-640 RCIH-645	6567391	16	INSIDE OVEN DOOR FRAME 8-32X5/16
8.2084	RCDH-640 RCIH-645	5435230	4	TORQUE SHAFT LOWER BEARING 10-12X3/4
8.2085	RCDH-640 RCIH-645	5899607	4	TORQUE SHAFT UPPER BEARING 10-16X5/8
8.2086	RDH-630	274920	1	LOWER ARM BRACKET 10-12X1/2
8.2086	RCDH-630 RCIH-635	274920	2	LOWER ARM BRACKET 10-12X1/2
8.2086	RCDH-640 RCIH-645	274920	4	LOWER ARM BRACKET 10-12X1/2
8.2087	RDH-630 RCDH-630 RCIH-635	5439003	8	OVEN DOOR TORQUE SHAFT 10-32X3/8
8.2087	RCDH-640 RCIH-645	5439003	16	OVEN DOOR TORQUE SHAFT 10-32X3/8
8.2088	RDH-630 RCDH-630 RCIH-635	6546813	2	OVEN DOOR RELEASE ARM 8-32X1/4
8.2088	RCDH-640 RCIH-645	6546813	4	OVEN DOOR RELEASE ARM 8-32X1/4
8.2089	RDH-630 RCDH-630 RCIH-635	6567381	2	LOWER ARM 10-32X31/64
8.2089	RCDH-640 RCIH-645	6567381	4	LOWER ARM 10-32X31/64
8.20811	ALL MODELS	7539817	2	OVEN DOOR SPRING ADJUSTING
8.20812	ALL MODELS	274920	4	TORQUE SHAFT BEARING 10-12X1/2
8.20813	RDH-630 RCDH-630 RCIH-635	5436175	1	OVEN DOOR STOP ROLLER 10-32X1
8.20813	RCDH-640 RCIH-645	5436175	2	OVEN DOOR STOP ROLLER 10-32X1
8.20814	ALL MODELS	274920	12	DOOR SPRING RETAINER 10-12X1/2
8.20815	RDH-630 RCDH-630 RCIH-635	274920	2	BROIL STOP SPRING 10-12X1/2
8.20815	RCDH-640 RCIH-645	274920	4	BROIL STOP SPRING 10-12X1/2
8.20816	RDH-630	6567391	2	OVEN DOOR LATCH PLATE ROD 8-32X5/16
	SHAFT-TORQUE			
8.210	RDH-630 RCDH-630 RCIH-635	7531598	1	
8.210	RCDH-640 RCIH-645	7531599	1	RIGHT OVEN
8.210	RCDH-640 RCIH-645	7531655	1	LEFT OVEN
	SPACER-OVEN DOOR LOWER ARM			
8.222	RDH-630	7529105	1	
	SPRING-OVEN DOOR LATCH			
8.226	RCDH-630 RCIH-635	6567148	2	
8.226	RCDH-640 RCIH-645	6567148	4	
	SPRING-OVEN DOOR COUNTERBALANCE			
8.2261	RDH-630 RCDH-630 RCIH-635	6569574	2	
8.2261	RCDH-640 RCIH-645	6569582	1	RIGHT
8.2261	RCDH-640 RCIH-645	6569583	1	LEFT

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SPRING-BROIL STOP			
8.2262	RDH-630 RCDH-630 RCIH-635	6569568	1	
8.2262	RCDH-640 RCIH-645	6569580	1	RIGHT OVEN
8.2262	RCDH-640 RCIH-645	6569581	1	LEFT OVEN
	WASHER			
8.279	RCDH-640 RCIH-645	629690	2	LOWER TORQUE SHAFT BEARING 3/4 IN OD
8.279	RCDH-640 RCIH-645	5428229	2	LOWER TORQUE SHAFT BEARING 5/8 IN OD
8.2791	ALL MODELS	60002	2	OVEN DOOR SPRING ADJUSTING
8.2792	RDH-630	6565749	1	LOCK-LOWER ARM BRACKET
8.2792	RCDH-630 RCIH-635	6565749	2	LOCK-LOWER ARM BRACKET
8.2792	RCDH-640 RCIH-645	6565749	4	LOCK-LOWER ARM BRACKET
8.2793	RDH-630 RCDH-630	7529152	2	PLAIN-OVEN DOOR HANDLE
8.2793	RCDH-640	7529152	4	PLAIN-OVEN DOOR HANDLE
8.2793	RDH-630 RCDH-630 RCIH-635	6566285	2	CUP-OVEN DOOR HANDLE
8.2793	RCDH-640 RCIH-645	6566285	4	CUP-OVEN DOOR HANDLE
8.2794	RDH-630 RCDH-630 RCIH-635	6567384	2	CUP-OVEN DOOR RELEASE ARM
8.2794	RCDH-640 RCIH-645	6567384	4	CUP-OVEN DOOR RELEASE ARM
8.2795	RDH-630	6566759	1	OVEN DOOR RELEASE ARM
8.2795	RCDH-630 RCIH-635	6566759	2	OVEN DOOR RELEASE ARM
8.2795	RCDH-640 RCIH-645	6566759	4	OVEN DOOR RELEASE ARM
8.2796	RDH-630 RCDH-630 RCIH-635	5438491	1	BROIL STOP SPRING
8.2796	RCDH-640 RCIH-645	5438491	4	BROIL STOP SPRING
	BUSHING-DOOR SPRING			
8.316	ALL MODELS	7528017	2	
	BUSHING-DOOR SPRING SWIVEL			
8.3161	ALL MODELS	6591883	2	
	SUPPORT,HANDLE-OVEN DOOR			
8.321	RDH-630 RCDH-630	7518418	2	
8.321	RCDH-640	7518418	4	
	ARM,LOWER-OVEN DOOR			
8.366	RDH-630	6567435	1	
8.366	RCDH-630 RCIH-635	6567435	2	
8.366	RCDH-640 RCIH-645	6567435	4	
	ARM,UPPER-OVEN DOOR			
8.3661	RDH-630 RCDH-630 RCIH-635	7522327	1	RIGHT
8.3661	RCDH-640 RCIH-645	7522327	2	RIGHT
8.3661	RDH-630 RCDH-630 RCIH-635	7522328	1	LEFT
8.3661	RCDH-640 RCIH-645	7522328	2	LEFT
	ARM,RELEASE-OVEN DOOR			
8.3662	RDH-630 RCDH-630 RCIH-635	6564414	1	RIGHT
8.3662	RCDH-640 RCIH-645	6564414	2	RIGHT
8.3662	RDH-630 RCDH-630 RCIH-635	6564415	1	LEFT
8.3662	RCDH-640 RCIH-645	6564415	2	LEFT
	BUTTON,RELEASE-OVEN DOOR			
8.380	RCDH-630 RCIH-635	6567382	2	
8.380	RCDH-640 RCIH-645	6567382	4	
	BUTTON-BROIL STOP			
8.3801	RDH-630 RCDH-630 RCIH-635	6569572	1	
8.3801	RCDH-640 RCIH-645	6569572	2	
	RING,RETAINER-LOWER ARM BRACKET			
8.393	RDH-630	6567241	1	
8.393	RCDH-630 RCIH-635	6567241	2	
8.393	RCDH-640 RCIH-645	6567241	4	

1964

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 9 OVEN LINERS AND PARTS

	LINER-OVEN			
9.136	RDH-630 RCDH-630	7526480	1	PORCELAIN
9.136	RCDH-640	7526481	1	RIGHT-PORCELAIN
9.136	RCDH-640	7526482	1	LEFT-PORCELAIN
9.136	RCIH-635	7526483	1	CHROMIUM
9.136	RCIH-645	7526484	1	RIGHT-CHROMIUM
9.136	RCIH-645	7526485	1	LEFT-CHROMIUM
	NUT			
9.149	RDH-630 RCDH-630 RCIH-635	7524744	4	OVEN LINER
9.149	RCDH-640 RCIH-645	7524744	8	OVEN LINER
	PAD-OVEN LINER			
9.153	RCDH-630	6569427	2	
9.153	RCDH-640	6569427	4	
	SCREW			
9.208	ALL MODELS	6567391	5	OVEN LINER 8-18X7/16
9.208	RDH-630 RCDH-630 RCIH-635	7528041	2	OVEN LINER 8-18X7/16
9.208	RCDH-640 RCIH-645	7528041	7	OVEN LINER 8-18X7/16
	CAP-OVEN LINER CORNER			
9.376	RDH-630 RCDH-630	7528414	2	
9.376	RCDH-640	7528414	4	
	BUTTON,PLUG-ROTISSERIE			
9.380	ALL MODELS	6567525	1	LOWER RIGHT-1/2 INCH HOLE
9.380	ALL MODELS	6567526	1	UPPER LEFT-3/4 INCH HOLE

GROUP 10 OVEN INTERIOR PARTS

	GLASS-OVEN LIGHT			
10.103	RDH-630 RCDH-630 RCIH-635	6567295	1	
10.103	RCDH-640 RCIH-645	6567295	2	
	GRILL-BROILER PAN			
10.108	RDH-630 RCDH-630 RCDH-640	6565589	1	
10.108	RCIH-635 RCIH-645	7532503	1	PART OF SPATTER FREE BRL PAN
	HANDLE-BROILER PAN			
10.110	RCIH-635 RCIH-645	5437919	4	PART OF SPATTER FREE BRL PAN
	RETAINER-THERMOSTAT BULB			
10.192	RDH-630 RCDH-630 RCIH-635	6568792	2	
10.192	RCDH-640	6568792	4	
10.192	RCIH-645	6569993	4	
	SCREW			
10.208	RDH-630 RCDH-630 RCIH-635	6567501	4	SHELF GUIDE
10.208	RCDH-640 RCIH-645	6567501	8	SHELF GUIDE
10.2081	RCIH-635 RCIH-645	5438261	8	HANDLE-PART OF SPATTER FREE BROILER PAN
	SHELF-OVEN			
10.213	RDH-630 RCDH-630 RCIH-635	631204	2	
10.213	RCDH-640 RCIH-645	7532548	2	RIGHT
10.213	RCDH-640 RCIH-645	7532549	2	LEFT
	WASHER			
10.279	RDH-630 RCDH-630 RCIH-635	6567604	4	PLAIN-SHELF GUIDE
10.279	RCDH-640 RCIH-645	6567604	8	PLAIN-SHELF GUIDE
10.2791	ALL MODELS	5426173	AR	SPACER-SHELF GUIDE
	GUIDE-SHELF RH			
10.323	RDH-630 RCDH-630 RCIH-635	6564481	1	
10.323	RCDH-640 RCIH-645	6564481	2	
	GUIDE-SHELF LH			
10.3231	RDH-630 RCDH-630 RCIH-635	6564482	1	
10.3231	RCDH-640 RCIH-645	6564482	2	
	PAN-BROILER			
10.336	RCIH-635 RCIH-645	6561567	1	SPATTER FREE-COMPLETE
10.336	RDH-630 RCDH-630 RCDH-640	6569846	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 13 ELECTRICAL PARTS

	ADAPTER-ELECTRICAL			
13.001	ALL MODELS	7529179	AR	THREE TERMINAL .030X1/4 INCH TAB
	BAFFLE-BROIL ELEMENT			
13.007	RCDH-640 RCIH-645	6567291	1	LEFT OVEN
13.007	RDH-630 RCDH-630 RCIH-635	7535362	1	
13.007	RCDH-640 RCIH-645	7535362	1	RIGHT OVEN
	BASE-STARTER			
13.009	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6562260	1	
	BRACKET-LAMPHOLDER			
13.026	RCDH-640 RCIH-645	6567582	2	
13.026	RCDH-630 RCIH-635	6567862	2	
	BRACKET-SPEED HEAT UNIT FUSE			
13.0261	RCIH-635 RCIH-645	6568925	1	
	BRACKET-PILOT LIGHT			
13.0262	RCIH-645	7535235	1	
13.0262	RCDH-640	7535263	1	
13.0262	RCDH-630 RCIH-635	7535264	1	
	CHANNEL-LEAD COVER			
13.037	RDH-630 RCDH-630 RCIH-635	6567831	1	
13.037	RCDH-640 RCIH-645	6567831	2	
	CLIP-LEAD WIRE			
13.039	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5435256	1	WIRE TYPE
13.039	RCDH-640 RCIH-645	5435256	2	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
13.039	RCIH-635 RCIH-645	5437814	1	WIRE SNAP IN TYPE-SURFACE UNIT-MOUNTS TO SENSOR SUPPORT
13.039	RCIH-635 RCIH-645	5438956	3	MOUNT WITH SCREW,1/4 IN DIA HEAT MINDER LINE
13.039	RDH-630	6565889	1	MOUNT WITH SCREW,3/8 IN DIA
13.039	RCDH-630	6566117	1	
13.039	RDH-630	6567490	2	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
13.039	RCDH-630 RCIH-635	6568051	2	WIRE TYPE MOUNTING WITH SCREW
13.039	RCDH-640 RCIH-645	6568051	3	WIRE TYPE MOUNTING WITH SCREW
13.039	RDH-630	6568051	4	WIRE TYPE MOUNTING WITH SCREW
13.039	RDH-630	6568052	2	WIRE TYPE MOUNTING WITH SCREW
	CONNECTOR-LINE TERMINAL			
13.048	ALL MODELS	5429035	3	COPPER-PLAIN
	CONNECTOR,LINE-TER RECEPTACLE JUMPER			
13.0481	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7532005	2	
	CONNECTOR,MALE-LEAD WIRE SPLICE			
13.0482	ALL MODELS	5438151	AR	NATURAL COLOR-ROTISSERIE-SIX LEAD WIRES
13.0482	ALL MODELS	6566745	AR	WHITE-SINGLE LEAD WIRE
	CONNECTOR,FEMALE-LEAD WIRE SPLICE			
13.0483	ALL MODELS	6566746	AR	WHITE-SINGLE LEAD WIRE
13.0483	ALL MODELS	6567412	AR	NATURAL COLOR-SIX LEAD WIRES
	CONNECTOR,MALE-ELECTRICAL			
13.0484	ALL MODELS	5877822	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	CONNECTOR,FEMALE-ELECTRICAL			
13.0485	ALL MODELS	5877823	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	CONNECTOR,SOLDERLESS			
13.0486	ALL MODELS	84514	AR	LARGE-SET SCREW TYPE NO 14 TO 18 WIRE-3/16 IN ID
13.0486	ALL MODELS	5851484	AR	MEDIUM-SET SCREW TYPE NO 14 TO 18 WIRE-1/8 IN ID
13.0486	ALL MODELS	6585261	AR	SMALL-SET SCREW TYPE NO 18 TO 20 WIRE-3/32 IN ID
	CONNECTOR,SLEEVE			
13.0487	ALL MODELS	5873790	AR	CRIMP TYPE #14 TO #16 1 WIRE

1964

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	ELEMENT,HEATING-BROIL			
13.080	RDH-630 RCDH-630 RCIH-635	6564765	1	3200W 236V
13.080	RCDH-640 RCIH-645	6564765	1	RIGHT OVEN 3200W 236V
13.080	RCDH-640 RCIH-645	6564823	1	LEFT OVEN 1750W 236V
13.080	RDH-630 RCDH-630 RCIH-635	7520982	1	2800W 208V
13.080	RCDH-640 RCIH-645	7520982	1	RIGHT OVEN 2800W 208V
13.080	RCDH-640 RCIH-645	7520986	1	LEFT OVEN 1750W 208V
	ELEMENT,HEATING-BAKE			
13.0801	RDH-630 RCDH-630 RCIH-635	7526489	1	2400W 236V
13.0801	RDH-630 RCDH-630 RCIH-635	7526490	1	2330W 208V
13.0801	RCDH-640 RCIH-645	7532554	1	LEFT OVEN 1600W 236V
13.0801	RCDH-640 RCIH-645	7532555	1	LEFT OVEN 1600W 208V
13.0801	RCDH-640 RCIH-645	7532556	1	RIGHT OVEN 2200W 236V
13.0801	RCDH-640 RCIH-645	7532557	1	RIGHT OVEN 2200W 208V
	FUSE			
13.098	RDH-630 RCDH-630 RCDH-640 RCIH-635 RCIH-645	-------	1	15 AMP-APPLIANCE RECEPTACLE-PURCHASE LOCALLY
13.098	RCIH-635 RCIH-645	-------	1	20 AMP-SPEED HEAT UNIT-PURCHASE LOCALLY
	HOUSING-TERMINAL BLOCK			
13.116	ALL MODELS	6567245	1	
	INSULATOR,ELECTRICAL-BROIL RECEPTACLE			
13.126	RDH-630 RCDH-630 RCIH-635	6567294	1	
13.126	RCDH-640 RCIH-645	6567294	2	
	INSULATOR,SLEEVE			
13.1262	ALL MODELS	5423696	AR	37-1/2 INCHES-FOR NO 10 WIRE
13.1262	ALL MODELS	6567957	AR	VINYL-TERMINAL
13.1262	ALL MODELS	6568691	AR	VINYL 1-7/16 INCHES LONG 3/16 IN ID
	LAMP,FLUORESCENT			
13.132	RCDH-630 RCIH-635	-------	1	25 WATT GE F25T12/CW-28 INCH PURCHASE LOCALLY
13.132	RCDH-640 RCIH-645	-------	1	30 WATT GE F30T8/CW-36 INCH PURCHASE LOCALLY
	NUT			
13.149	RCIH-635 RCIH-645	5438020	1	ROAST THERMOMETER PROBE RECEPTACLE
13.1491	ALL MODELS	5898589	2	TERMINAL BLOCK HOUSING
13.1492	ALL MODELS	619078	2	TERMINAL BLOCK
13.1493	RDH-630	619078	6	TERMINAL BLOCK TERMINAL
13.1493	RCDH-630 RCIH-635 RCDH-640 RCIH-645	619078	9	TERMINAL BLOCK TERMINAL
13.1494	ALL MODELS	5855706	3	LINE TERMINAL CONNECTOR
13.1495	RDH-630	5895869	1	PILOT LAMP INDICATOR
	RECEPTACLE-BROIL ELEMENT TERMINAL			
13.185	RDH-630 RCDH-630 RCIH-635	6567292	1	
13.185	RCDH-640 RCIH-645	6567292	2	
	RECEPTACLE-APPLIANCE			
13.1851	ALL MODELS	7526570	1	
	RECEPTACLE-ROAST THERMOMETER PROBE			
13.1852	RCIH-635 RCIH-645	6560804	1	
	RECEPTACLE-BAKE ELEMENT TERMINAL			
13.1853	RDH-630 RCDH-630 RCIH-635	7535332	1	
13.1853	RCDH-640 RCIH-645	7535332	2	
	RECEPTACLE-FUSE			
13.1854	RDH-630 RCDH-630 RCDH-640	7531422	1	
13.1854	RCIH-635 RCIH-645	7531422	2	
	RECEPTACLE,LAMP-OVEN			
13.1855	RDH-630 RCDH-630 RCIH-635	6564356	1	
13.1855	RCDH-630 RCIH-645	6564356	2	
	RETAINER-BROIL RECEPTACLE			
13.192	RDH-630 RCDH-630 RCIH-635	6567293	1	
13.192	RCDH-640 RCIH-645	6567293	2	
	RETAINER-FUSE RECEPTACLE			
13.1921	RDH-630 RCDH-630 RCDH-640	7520171	2	
13.1921	RCIH-635 RCIH-645	7520171	4	
	RETAINER-CONDUIT			
13.1922	ALL MODELS	5425684	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
13.208	ALL MODELS	628321	AR	TERMINAL 4-40X5/16 INCH
13.208	ALL MODELS	5426495	AR	TERMINAL 10-32X1/4 INCH
13.208	ALL MODELS	5426525	AR	TERMINAL 8-32X3/8 INCH
13.208	ALL MODELS	5427014	AR	TERMINAL 8-32X1/2 INCH
13.208	ALL MODELS	5427015	AR	TERMINAL 8-32X1/4 INCH
13.208	ALL MODELS	5894189	AR	TERMINAL 8-32X5/8 INCH
13.208	ALL MODELS	5894191	AR	TERMINAL 6-32X1/4 INCH
13.208	ALL MODELS	5899914	AR	TERMINAL 4-40X7/16 INCH
13.208	ALL MODELS	9408527	AR	TERMINAL 10-32X1/2 INCH
13.2081	RDH-630 RCDH-640 RCIH-635	7528041	4	LEAD COVER CHANNEL 8-18X7/16
13.2081	RCDH-640 RCIH-645	7528041	6	LEAD COVER CHANNEL 8-18X7/16
13.2082	RDH-630 RCDH-630 RCIH-635	6567885	2	BROIL ELEMENT 10-32X2
13.2082	RCDH-640 RCIH-645	6567885	4	BROIL ELEMENT 10-32X2
13.2082	RDH-630 RCDH-630 RCIH-635	7528041	2	BROIL ELEMENT 8-18X7/16
13.2082	RCDH-640 RCIH-645	7528041	4	BROIL ELEMENT 8-18X7/16
13.2083	RDH-630	5424117	1	LEAD WIRE CLIP 10-16X3/8
13.2083	RDH-630	5436287	7	LEAD WIRE CLIP 8-18X3/8
13.2083	RCDH-630 RCIH-635	7528041	3	LEAD WIRE CLIP 8-18X7/16
13.2083	RCDH-640 RCIH-645	7528041	6	LEAD WIRE CLIP 8-18X7/16
13.2083	RDH-630	7536987	1	LEAD WIRE CLIP 8-15X1/2
13.2084	RDH-630 RCDH-630 RCIH-635	6565857	1	BROIL RECEPTACLE RETAINER 10-12X1
13.2084	RCDH-640 RCIH-645	6565857	2	BROIL RECEPTACLE RETAINER 10-12X1
13.2085	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	2	PILOT LIGHT BRACKET 8-15X3/8
13.2086	RCIH-635 RCIH-645	5436528	2	ROAST THERMOMETER PROBE RECEPTACLE COVER 8-15X3/8
13.2087	RCIH-635 RCIH-645	6567391	2	TRANSFORMER 8-32X5/16
13.2088	RCIH-635 RCIH-645	5436528	2	ROAST THERMOMETER SIGNAL 8-15X3/8
13.2089	RDH-630 RCDH-630 RCIH-635	5435346	2	BAKE ELEMENT HINGE PLATE 10-12X1-1/2
13.2089	RCDH-640 RCIH-645	5435346	4	BAKE ELEMENT HINGE PLATE 10-12X1-1/2
13.20811	RCIH-635 RCIH-645	7528041	1	SPEED HEAT UNIT FUSE BRACKET 8-18X7/16
13.20812	RCDH-640 RCIH-645	7528041	3	TERMINAL BLOCK COVER 8-18X7/16
13.20813	RDH-630 RCDH-630 RCIH-635	6565857	2	OVEN LAMP RECEPTACLE 10-12X1
13.20813	RCDH-640 RCIH-645	6565857	4	OVEN LAMP RECEPTACLE 10-12X1
13.20814	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	2	FLUOR LAMP HOLDER BRACKET 8-15X3/8
13.20815	RCDH-630 RCIH-635 RCDH-640 RCIH-645	163102	2	FLUOR LAMP HOLDER 6-20X1/2
13.20816	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436528	2	STARTER BASE 8-15X3/8
13.20817	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6546560	2	TERMINAL BLOCK 10-12X3/4
13.20817	ALL MODELS	6566861	2	TERMINAL BLOCK 10-32X3/4
13.20818	RDH-630 RCDH-630 RCIH-635 RCDH-640 RCIH-645	5436724	2	CONDUIT RETAINER 10-32X3/8
13.20819	ALL MODELS	5424117	1	GROUND STRAP 10-12X3/8
13.20821	RDH-630 RCDH-630 RCDH-640	6569059	2	FUSE RECEPTACLE TERMINAL 8-32X1/4
13.20821	RCIH-635 RCIH-645	6569059	4	FUSE RECEPTACLE TERMINAL 8-32X1/4
13.20822	ALL MODELS	5436724	2	TERMINAL BLOCK HOUSING 10-32X3/8
13.20823	RCDH-640 RCIH-645	5436724	2	FLUORESCENT LAMP BALLAST 10-32X3/8
13.20823	RCDH-630 RCIH-635	6567391	2	FLUORESCENT LAMP BALLAST 8-32X5/16
	STARTER-FLUORESCENT LAMP			
13.230	RCDH-640 RCIH-645	5432429	1	
13.230	RCDH-630 RCIH-635	6560637	1	
	INDICATOR-OVEN PILOT LAMP			
13.248	RDH-630	7529130	1	
	TRANSFORMER-ROAST THERMOMETER			
13.251	RCIH-635 RCIH-645	7520845	1	12 VOLT-60 CYCLE
13.251	RCIH-635 RCIH-645	7520886	1	12 VOLT-50 CYCLE

1964

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	WASHER			
13.279	RCIH-635 RCIH-645	5918758	1	LOCK-ROAST THERMOMETER PROBE RECEPTACLE
13.2791	RCIH-635 RCIH-645	5438491	2	PLAIN-ROAST THERMOMETER PROBE RECEPTACLE
13.2792	RDH-630 RCDH-630 RCIH-635	633591	3	TERMINAL-PLAIN
13.2792	RDH-630 RCDH-630 RCIH-635	5433842	1	TERMINAL-CUP
13.2792	RCDH-640 RCIH-645	5433842	5	TERMINAL-CUP
	SUPPORT-BAKE ELEMENT			
13.321	RDH-630 RCDH-630 RCIH-635	6597604	1	
13.321	RCDH-640 RCIH-645	6597604	1	RIGHT OVEN
13.321	RCDH-640 RCIH-645	6597604	1	LEFT OVEN
	CLAMP,BROIL ELEMENT RETAINER-OVEN			
13.327	RDH-630 RCDH-630 RCIH-635	5436951	12	
13.327	RCDH-640 RCIH-645	5436951	16	
	CLAMP-LEAD WIRE			
13.3271	RCDH-630 RCIH-635	6566245	1	MOUNT WITH SCREW 1/2 IN ID
13.3271	RDH-630 RCDH-640 RCIH-645	7527865	1	TWO WIRE
13.3271	RCDH-630 RCIH-635	7527865	2	TWO WIRE
	CLAMP-TERMINAL			
13.3272	RDH-630 RCDH-630 RCIH-635	7536768	3	
	TERMINAL,ELECTRIC			
13.329	ALL MODELS	6568735	3	TAB-USE WITH VENT HOODS
13.3293	ALL MODELS	5873786	AR	EYELET-LEAD WIRE #6 SCREW
13.3293	ALL MODELS	5873787	AR	EYELET-LEAD WIRE #8 SCREW
13.3293	ALL MODELS	5873788	AR	EYELET-LEAD WIRE #10 SCREW
13.3294	ALL MODELS	5873789	AR	BULLET NOSE-NO 14 TO 16 WIRE
13.3295	ALL MODELS	5875093	AR	BLADE RECEPTACLE-1 WIRE STR .030X1/4 INCH TAB
13.3295	ALL MODELS	6569386	AR	BLADE RECEPTACLE-2 WIRE STR .030X1/4 INCH TAB
13.3295	ALL MODELS	7529602	AR	BLADE RECEPTACLE-1 WIRE STR .020X3/16 INCH TAB
13.3296	ALL MODELS	5875091	AR	BLADE RECEPTACLE-FLAG-1 WIRE .020X3/16 INCH TAB
13.3296	ALL MODELS	5875092	AR	BLADE RECEPTACLE-FLAG-1 WIRE .030X1/4 INCH TAB
13.3297	ALL MODELS	6592122	AR	TAB-.016X1/4 INCH-2 WIRE STR
13.3298	ALL MODELS	5875094	AR	BLADE RECEPTACLE-PIGGY BACK-1WIRE STRAIGHT .030X1/4 TAB
13.3299	ALL MODELS	6592002	AR	RECEPTACLE-HARNESS HOUSING 2 WIRE STR-.030X1/4 INCH TAB
	BLOCK-TERMINAL			
13.330	RDH-630	6563359	1	
13.330	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6563359	2	
	BULB,LAMP-OVEN ILLUMINATING			
13.358	RDH-630 RCDH-630 RCIH-635	-------	1	MEDIUM BASE-40 WATT PURCHASE LOCALLY
13.358	RCDH-640 RCIH-645	-------	2	MEDIUM BASE-40 WATT-PURCHASE LOCALLY
	BULB,LAMP-OVEN PILOT			
13.3581	RDH-630	-------	1	CANDELABRA BASE-10 WATT-PURCHASE LOCALLY
	HOLDER,LAMP-FLUORESCENT			
13.363	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6564594	2	
	HOLDER,LAMP-OVEN PILOT			
13.3631	RDH-630	7524966	1	
	BALLAST-FLUORESCENT LAMP			
13.371	RCDH-640 RCIH-645	5432344	1	30 WATT
13.371	RCDH-630 RCIH-635	6562489	1	25 WATT
	COVER-TERMINAL BLOCK			
13.378	RCDH-640 RCIH-645	6567870	1	
	COVER-ROAST THERMOMETER PROBE RECEPTACLE			
13.3781	RCIH-635 RCIH-645	6567436	1	
	STRAP,GROUND			
13.386	ALL MODELS	7539367	1	
	PLATE-BAKE ELEMENT HINGE			
13.390	RDH-630 RCDH-630 RCIH-635	7529639	1	
13.390	RCDH-640 RCIH-645	7529639	2	
	SPLICE,MALE-ELECTRICAL			
13.394	ALL MODELS	5431641	AR	BLADE TO BLADE .030X1/4 INCH TAB
	EXTENSION,TERMINAL			
13.429	RDH-630	7529819	3	1/2X1-1/2 INCHES

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	HARNESS,ELECTRICAL			
13.438	RCDH-640 RCIH-645	7523998	1	COOKING TOP
13.438	RCDH-630 RCIH-635	7524002	1	COOKING TOP
13.438	RDH-630	7524975	1	LINE AND THERMOSTAT
13.438	RCDH-640	7526410	1	RIGHT THERMOSTAT
13.438	RCDH-640 RCIH-645	7526411	1	COOKMASTER AND THERMOSTAT
13.438	RCDH-640	7526412	1	SWITCHES AND LEFT THERMOSTAT
13.438	RCIH-645	7526416	1	LEFT THERMOSTAT
13.438	RCIH-645	7526417	1	SWITCHES AND RIGHT THERMOSTAT
13.438	RDH-630	7526429	1	COOKING TOP
13.438	RCIH-635	7526431	1	SWITCHES
13.438	RCIH-635	7526432	1	LINE AND THERMOSTAT
13.438	RCDH-630	7526443	1	SWITCHES
13.438	RCDH-630	7526444	1	LINE AND THERMOSTAT
	SIGNAL-ROAST THERMOMETER			
13.457	RCIH-635 RCIH-645	6562432	1	12 VOLT
	PROBE-ROAST THERMOMETER			
13.458	RCIH-635 RCIH-645	6560817	1	
	LIGHT,PILOT-SURFACE UNIT			
13.489	RCDH-630 RCDH-640 RCIH-635 RCIH-645	7526157	1	
13.489	RDH-630	7526324	1	
	LIGHT,PILOT-OVEN			
13.4891	RCDH-630	7526157	1	
13.4891	RCIH-635	7526157	1	BROIL
13.4891	RCIH-635	7533270	1	BAKE
13.4891	RCDH-640	7526157	2	
13.4891	RCIH-645	7533270	2	BAKE
13.4891	RCIH-645	7526157	2	BROIL

1964

GROUP 14 ACCESSORIES AND PARTS

	BOX-JUNCTION			
14.023	ALL MODELS	5879987	1	PART OF EH-30H,EH-40H, EH-35H &EH-45H VENT HOODS
	BUMPER-FRONT PANEL			
14.029	RDH-630 RCDH-630 RCIH-635	6592262	2	PART OF ED-30H AND EH-35H VENT HOODS
14.029	RCDH-640 RCIH-645	6592262	4	PART OF EH-40H & EH-45H VENT HOODS
	CHANNEL-WIRING			
14.037	ALL MODELS	6592480	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	CLIP-FILTER			
14.039	ALL MODELS	6592128	2	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	CONNECTOR,FEMALE-LEAD WIRE SPLICE			
14.048	ALL MODELS	7529998	2	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	CONNECTOR,MALE-LEAD WIRE SPLICE			
14.0481	ALL MODELS	7528468	2	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
14.0481	ALL MODELS	7528468	2	VENT HOOD PLUG IN-MOUNTS TO CONTROL HOUSING-3 WIRE
	FILTER,AIR			
14.088	RDH-630 RCDH-630 RCIH-635	5879979	1	PART OF EH-30H&EH-35H VENT HOODS
14.088	RCDH-640 RCIH-645	5879980	1	PART OF EH-40H&EH-45H VENT HOODS
14.0881	RDH-630 RCDH-630 RCIH-635	6592487	1	CARBON-PART OF EH-35H VENT HOOD
14.0881	RCDH-640 RCIH-645	6592488	1	CARBON-PART OF EH-45H VENT HOOD
14.0882	RDH-630 RCDH-630 RCIH-635	6592489	1	SMOKE-PART OF EH-35H VENT HOOD
14.0882	RCDH-640 RCIH-645	6592490	1	SMOKE-PART OF EH-45H VENT HOOD
	GEAR-SPROCKET			
14.101	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6592135	2	PART OF 6590486 ROTISSERIE
	GROMMET,NEOPRENE-CONDUIT			
14.109	ALL MODELS	5428782	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	HOOD,VENT			
14.113	RDH-630 RCDH-630 RCIH-635	--------	1	EH-30&EH-35 FINISHED PRODUCTS
14.113	RCDH-640 RCIH-645	--------	1	EH-40&EH-45 FINISHED PRODUCTS
	HOOD,TOP-VENTLESS			
14.1131	RDH-630 RCDH-630 RCIH-635	6592837	1	PART OF EH-35H VENT HOOD
14.1131	RCDH-640 RCIH-645	6592838	1	PART OF EH-45H VENT HOOD
	HOUSING-BLOWER			
14.116	ALL MODELS	5879984	1	RH PART OF EH-30H,EH-40H, EH-35H&EH-45H VENT HOODS
14.116	ALL MODELS	5879985	1	LH PART OF EH-30H,EH-40H, EH-35H&EH-45H VENT HOODS
	MOTOR-ROTISSERIE			
14.143	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7524935	1	PART OF ROTISSERIE KIT
	MOTOR-BLOWER			
14.1431	ALL MODELS	6592484	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	NUT			
14.149	ALL MODELS	6569014	AR	TRIM-PART OF EH-30H,EH-40H, EH-35H&EH-45H VENT HOODS
14.1491	ALL MODELS	5434526	1	CIRCUIT BREAKER-PART OF EH-30H,EH-40H,EH-35H&EH-45H VENT HOODS
	PANEL,FRONT-VENT HOOD			
14.156	RDH-630 RCDH-630 RCIH-635	6593105	1	COMPLETE-PART OF EH-30H& EH-35H VENT HOODS
14.156	RCDH-640 RCIH-645	6593106	1	COMPLETE-PART OF EH-40H& EH-45H VENT HOODS
	PANEL,FRONT-HOOD TRIM			
14.1561	RDH-630 RCDH-630 RCIH-635	6592263	1	PART OF EH-30H&EH-35H VENT HOODS
14.1561	RCDH-640 RCIH-645	6592264	1	PART OF EH-40H&EH-45H VENT HOODS
	PLATE,NAME-HOOD			
14.170	ALL MODELS	6592127	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	PROTECTOR,ELECTRICAL-CIRCUIT BREAKER			
14.174	ALL MODELS	5432132	1	15AMP-PART OF EH-30H,EH-40H, EH-35H&EH-45H VENT HOODS
	RACK-ROTISSERIE			
14.182	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7520920	1	PART OF ROTISSERIE KIT
	RACK-ROASTER SIDE			
14.1821	ALL MODELS	6597531	2	FOR SPATTER FREE BROILER PAN
	RETAINER-FRONT PANEL			
14.192	ALL MODELS	6592481	2	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	ROLLER-FRONT PANEL			
14.199	ALL MODELS	6592482	2	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	SCREW			
14.208	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5435817	2	THUMB-ROTISSERIE FORK-PART OF ROTISSERIE KIT
14.2081	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6562048	5	ROTISSERIE-PART OF ROTISSERIE KIT 10-12X1/2
14.2082	ALL MODELS	5879992	4	VENT HOOD
14.2083	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5430929	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT 8-32X3/8
14.2084	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5879944	2	SWITCH INSULATOR-PART OF ROTISSERIE KIT 6-32X1/4
14.2085	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6592138	2	SWITCH-PART OF ROTISSERIE KIT 2-56X1-3/8
14.2086	ALL MODELS	5855529	AR	TRIM-PART OF EH-30H,EH-40H, EH-35H&EH-45H VENT HOODS
14.2087	ALL MODELS	5885238	1	JUNCTION BOX COVER-PART OF EH-30H,EH-40H,EH-35H&EH-45H VENT HOODS
14.2088	ALL MODELS	5885238	3	JUNCTION BOX-PART OF EH-30H, EH-40H,EH-35H&EH-45H VENT HOODS
14.2089	ALL MODELS	5885238	1	SWITCH BOX COVER-PART OF EH-30H,EH-40H,EH-35H&EH-45H VENT HOODS
14.20811	ALL MODELS	5885238	1	WIRING CHANNEL-PART OF EH-30H,EH-40H,EH-35H&EH-45H VENT HOODS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
14.20812	ALL MODELS	5887721	2	FRONT PANEL RETAINER-PART OF EH-30H,EH-40H,EH-35H&EH-45H VENT HOODS
14.20813	ALL MODELS	639383	2	SET-BLOWER WHEEL-PART OF EH-30H,EH-40H,EH-35H&EH-45H VENT HOODS
14.20814	ALL MODELS	7528041	2	PLUG IN COVER-PART OF EH-30H, EH-40H,EH-35H&EH-45H VENT HOODS
	SPRING-LINK WIRE			
14.226	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6592136	1	PART OF ROTISSERIE KIT
	SPRING-SWITCH			
14.2261	ALL MODELS	6592124	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	SPRING-FILTER			
14.2262	ALL MODELS	6592475	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	SPRING-FRONT PANEL ROLLER			
14.2263	ALL MODELS	6592483	2	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	TRIM-HOOD HOUSING			
14.253	RDH-630 RCDH-630 RCIH-635	6592123	1	PART OF EH-30H&EH-35H VENT HOODS
14.253	RCDH-640 RCIH-645	6592129	1	PART OF EH-40H&EH-45H VENT HOODS
	TRIM,FRONT-HOOD			
14.2531	RDH-630 RCDH-630 RCIH-635	6592125	1	PART OF EH-30H&EH-35H VENT HOODS
14.2531	RCDH-640 RCIH-645	6592130	1	PART OF EH-40H&EH-45H VENT HOODS
	TRIM-CIRCUIT BREAKER			
14.2532	ALL MODELS	6565962	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	WASHER			
14.279	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5879591	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT
14.2791	ALL MODELS	5898148	AR	TRIM-PART OF EH-30H,EH-40H, EH-35H&EH-45H VENT HOODS
14.2792	ALL MODELS	5886323	1	LOCK-CIRCUIT BREAKER-PART OF EH-30H,EH-40H,EH-35H&EH-45H VENT HOODS
	DUCT,AIR			
14.311	ALL MODELS	5879977	1	PART OF EH-30H&EH-40H VENT HOODS
	CLAMP-BLOWER HOUSING			
14.327	ALL MODELS	5879978	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	PAN-BROILER			
14.336	RDH-630 RCDH-630 RCDH-640	6561567	1	SPATTER FREE-COMPLETE
14.336	RCDH-640 RCIH-645	7526124	1	SMALL FOR LEFT OVEN-COMPLETE
	WHEEL,BLOWER			
14.341	ALL MODELS	5879981	1	RH-PART OF EH-30H,EH-40H, EH-35H&EH-45H VENT HOODS
14.341	ALL MODELS	5879982	1	LH-PART OF EH-30H,EH-40H, EH-35H&EH-45H VENT HOODS
	LINK-TRIGGER TO SPRING			
14.348	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6592132	1	PART OF ROTISSERIE KIT
	LINK-ACTUATING ARM TO PLATE			
14.3481	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6592134	1	PART OF ROTISSERIE KIT
	CHAIN-DRIVE			
14.351	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6592133	1	PART OF ROTISSERIE KIT
	PIN-GEAR			
14.364	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6592137	2	PART OF ROTISSERIE KIT
	COVER-ROTISSERIE			
14.378	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6568762	1	UPPER
14.378	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6568763	1	LOWER
	COVER-JUNCTION BOX			
14.3781	ALL MODELS	6592477	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS

1964

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	COVER-SWITCH BOX			
14.3782	ALL MODELS	6592476	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	COVER-AIR DUCT			
14.3783	ALL MODELS	6592486	1	PART OF EH-30H&EH-40H VENT HOODS
	COVER-PLUG IN			
14.3784	ALL MODELS	6592485	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	SWITCH-BLOWER OPERATING			
14.396	ALL MODELS	5432253	1	PART OF EH-30H,EH-40H,EH-35H& EH-45H VENT HOODS
	SWITCH-ROTISSERIE			
14.3961	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7520919	1	PART OF ROTISSERIE KIT
	ROTISSERIE KIT			
14.428	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6590486	1	
	SPIT-ROTISSERIE			
14.430	RCDH-630 RCIH-635 RCDH-640 RCIH-645	7520921	1	PART OF ROTISSERIE KIT
	FORK,TURNING-ROTISSERIE			
14.431	RCDH-630 RCIH-635 RCDH-640 RCIH-645	5432586	2	PART OF ROTISSERIE KIT
	GRIDDLE,KANT SLIDE			
14.485	ALL MODELS	630794	1	USE ON 8 INCH SURFACE UNITS

GROUP 15 INSULATION

	INSULATION,BULK			
15.124	ALL MODELS	5873771	AR	1X18X30 INCHES
15.124	ALL MODELS	5873772	AR	2X24X90 INCHES
15.124	ALL MODELS	5873773	AR	2-1/2X42X90 INCHES
15.124	ALL MODELS	5873774	AR	3X38X90 INCHES
15.1241	RDH-630 RCDH-630 RCIH-635	-------	1	OVEN SIDES AND BOTTOM 2X15X59 INCHES
15.1241	RCDH-640 RCIH-645	-------	1	LEFT OVEN SIDES AND BOTTOM 2X15X49 INCHES
15.1241	RCDH-640 RCIH-645	-------	1	RIGHT OVEN SIDES AND BOTTOM 2X15X57 INCHES
15.1242	RDH-630 RCDH-630 RCIH-635	-------	1	OVEN TOP 3X16X28 INCHES
15.1242	RCDH-640 RCIH-645	-------	1	LEFT OVEN TOP 3X14X16 INCHES
15.1242	RCDH-640 RCIH-645	-------	1	RIGHT OVEN TOP 3X16X22 INCHES
15.1243	RDH-630 RCDH-630 RCIH-635	-------	1	OVEN BACK 2X16X28 INCHES
15.1243	RCDH-640 RCIH-645	-------	1	LEFT OVEN BACK 2X14X16 INCHES
15.1243	RCDH-640 RCIH-645	-------	1	RIGHT OVEN BACK 2X16X22 IN
	INSULATION,ASBESTOS-COOKING TOP COVER			
15.1244	RCDH-630 RCIH-635 RCDH-640 RCIH-645	6567916	1	SOUND 8-7/16X18 INCHES-CUT TO SIZE REQUIRED

GROUP 16 BASE CABINETS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BRACKET-HINGE PIVOT			
16.026	ALL MODELS	6567649	4	PART OF B-30&B-40 BASE CABINETS
	BUMPER-DOOR			
16.029	ALL MODELS	6568980	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUMPER-SHELF			
16.0291	ALL MODELS	6569025	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUMPER,SLEEVE-SHELF			
16.0292	RDH-630 RCDH-630 RCIH-635	6569022	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.0292	RCDH-640 RCIH-645	6569022	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	DOOR-BASE CABINET LH			
16.070	RDH-630 RCDH-630 RCIH-635	7521951	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RDH-630 RCDH-630 RCIH-635	7521972	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RDH-630 RCDH-630 RCIH-635	7521973	1	PINK-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RDH-630 RCDH-630 RCIH-635	7521974	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RDH-630 RCDH-630 RCIH-635	7521975	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCDH-640 RCIH-645	7521978	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDH-640 RCIH-645	7521999	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDH-640 RCIH-645	7522000	1	PINK-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDH-640 RCIH-645	7522001	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCDH-640 RCIH-645	7522002	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	DOOR-BASE CABINET RH			
16.0701	RDH-630 RCDH-630 RCIH-635	7521950	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RDH-630 RCDH-630 RCIH-635	7521964	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RDH-630 RCDH-630 RCIH-635	7521965	1	PINK-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RDH-630 RCDH-630 RCIH-635	7521966	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RDH-630 RCDH-630 RCIH-635	7521967	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCDH-640 RCIH-645	7521977	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDH-640 RCIH-645	7521991	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDH-640 RCIH-645	7521992	1	PINK-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDH-640 RCIH-645	7521993	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCDH-640 RCIH-645	7521994	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	FRAME-BASE CABINET			
16.096	RDH-630 RCDH-630 RCIH-635	-------	1	PART OF B-30 BASE CABINET
16.096	RCDH-640 RCIH-645	-------	1	PART OF B-40 BASE CABINET
	HANDLE,DOOR-BASE CABINET			
16.110	RDH-630 RCDH-630 RCIH-635	6568979	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.110	RCDH-640 RCIH-645	6568996	2	PART OF B-40 BASE CABINET MODEL NO 6560106

1964

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	NUT			
16.149	ALL MODELS	5439337	2	DOOR STRIKE-PART OF B-30& B-40 BASE CABINETS
16.1492	ALL MODELS	447014	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.1493	RDH-630 RCDH-630 RCIH-635	7524744	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105
16.1493	RCDH-640 RCIH-645	7524744	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106
	SCREW			
16.208	ALL MODELS	5887109	8	HINGE PIVOT BRACKET-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
16.2081	ALL MODELS	5909850	8	DOOR HINGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
16.2082	ALL MODELS	6568999	6	DOOR HANDLE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-18X3/8
16.2085	RDH-630 RCDH-630 RCIH-635	5909850	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-32X1/2
16.2085	RCDH-640 RCIH-645	5909850	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-32X1/2
16.2085	RDH-630 RCDH-630 RCIH-635	7536987	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-15X1/2
16.2085	RCDH-640 RCIH-645	7536987	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-15X1/2
16.2086	ALL MODELS	5415118	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 3/8-16X5/8
16.2087	ALL MODELS	455508	4	UPPER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
16.2089	ALL MODELS	455508	4	LOWER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
16.20811	ALL MODELS	6569714	2	LOWER TRIM CAP-PART OF B-30& B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 6-20X3/8
16.20812	ALL MODELS	5427288	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	SHELF-CABINET			
16.213	RDH-630 RCDH-630 RCIH-635	7521343	1	PART OF B-30 BASE CABINET MODEL NO 6560105
16.213	RCDH-640 RCIH-645	7521344	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	TRIM,SIDE-UPPER			
16.253	ALL MODELS	6568982	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106-SATIN FINISH-RIBBED
	TRIM,SIDE-LOWER			
16.2531	ALL MODELS	6568983	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	WASHER			
16.2791	ALL MODELS	640152	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	WRENCH-GLIDER BUTTON ADJUSTING			
16.282	ALL MODELS	6568988	1	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BUSHING-HINGE PIVOT			
16.316	ALL MODELS	6567650	4	PART OF B-30&B-40 BASE CABINETS
	GUIDE-SHELF			
16.323	RDH-630 RCDH-630 RCIH-635	6569021	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.323	RCDH-640 RCIH-645	6569021	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	CATCH,SPRING-DOOR			
16.328	ALL MODELS	6567662	2	PART OF B-30&B-40 BASE CABINETS
	HINGE,DOOR-RH TOP AND LH BOTTOM			
16.346	ALL MODELS	6564643	2	PART OF B-30&B-40 BASE CABINETS
	HINGE,DOOR-LH TOP AND RH BOTTOM			
16.3461	ALL MODELS	6564644	2	PART OF B-30&B-40 BASE CABINETS
	STRIKE-DOOR			
16.349	ALL MODELS	6568984	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	CAP-LOWER TRIM			
16.376	ALL MODELS	6569067	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	COVER-REAR ACCESS			
16.378	ALL MODELS	7522003	2	WHITE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	ALL MODELS	7522004	2	YELLOW-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	ALL MODELS	7522005	2	PINK-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	ALL MODELS	7522006	2	TURQUOISE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	ALL MODELS	7522007	2	COPPER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUTTON,GLIDER-CABINET			
16.380	ALL MODELS	6568985	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUTTON,PLUG-DOOR			
16.3801	ALL MODELS	6567526	4	PART OF B-30&B-40 BASE CABINETS

1964


GM
MARK OF EXCELLENCE

FRIGIDAIRE
FLAIR RANGES
PARTS CATALOG

1965 MODELS

INDEX

ILLUSTRATIONS

DESCRIPTION	PAGES
1965 PRODUCT VIEWS	1
CONTROL PANEL, MEAL MINDER, SWITCHES AND PARTS	2
CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS	3
OVEN DOORS AND ACTUATING PARTS	4
COOKING TOP, SURFACE UNITS AND PARTS	5
OVEN LINERS AND INTERIOR PARTS	6
PANELS, TRIMS AND PARTS	7
BASE CABINETS AND PARTS	8
ROTISSERIE - ACCESSORY	8
VENT HOOD - ACCESSORY	9
ELECTRICAL TERMINALS AND CONNECTORS	10
LEAD WIRE CHART	10

PARTS GROUPS

GROUPS	DESCRIPTION	PAGES
1	CONTROL PANELS AND PARTS	11
2	COOK-MASTERS AND PARTS	12
3	SWITCHES AND PARTS	12
4	SURFACE UNITS AND PARTS	15
6	TOPS AND PARTS	16
7	FRAMES, PANELS AND PARTS	18
8	OVEN DOORS AND PARTS	19
9	OVEN LINERS AND PARTS	21
10	OVEN INTERIOR PARTS	22
13	ELECTRICAL PARTS	22
14	ACCESSORIES AND PARTS	26
15	INSULATION	29
16	BASE CABINETS AND PARTS	30

1965

ALPHABETICAL INDEX

DESCRIPTION	CODE
ADAPTER - Electrical	13.001
ANGLE - Oven	7.319
ARM, CONTROL - Switch Operating	3.366
ARM, LOWER - Oven Door	8.366
ARM, RELEASE - Oven Door	8.3662
ARM, Upper - Oven Door	8.3661
BAFFLE - Broil Element	13.007
BALLAST - Fluorescent Lamp	13.371
BASE, HANDLE - Oven Door	8.009
BASE - Starter	13.009
BEARING, NYLON - Torque Shaft	8.011
BLOCK, FEMALE - Surface Unit Connector	4.330
BLOCK, MALE - Surface Unit Connector	4.3301
BLOCK - Terminal	13.330
BOX - Junction	14.023
BRACKET - Door Spring Retainer	8.0261
BRACKET - Hinge Pivot	16.026
BRACKET - Lampholder	13.026
BRACKET - Latch Spring Retainer	6.026
BRACKET - Lower Arm	8.026
BRACKET - Oven Door Latch	8.0262
BRACKET - Pilot Light	13.0262
BRACKET, RETAINER - Sensor	4.0261
BRACKET - Side Trim	7.026
BRACKET - Speed Heat Unit Fuse	13.0261
BRACKET - Surface Unit Hinge	4.026
BRACKET - Surface Unit Switch	3.0261
BRACKET - Switch	3.026
BRACKET - Thermostat	3.0262
BULB, LAMP - Oven Illuminating	13.358
BULB, LAMP - Oven Pilot	13.3581
PUMPER - Door	16.029
BUMPER - Front Panel	14.029
BUMPER - Pulley Channel	6.029
BUMPER - Shelf	16.0291
BUMPER, SLEEVE - Shelf	16.0292
BUSHING - Door Spring	8.316
BUSHING - Door Spring Swivel	8.3161
BUSHING - Hinge Pivot	16.316
BUSHING, RUBBER - Surface Unit Switch Seal	3.030
BUTTON - Broil Stop	8.3801
BUTTON - Cooking Top Cover	6.380
BUTTON, GLIDER - Cabinet	16.380
BUTTON, PLUG - Control Housing	1.380
BUTTON, PLUG - Door	16.3801
BUTTON, PLUG - Rotisserie	9.380
BUTTON, RELEASE - Oven Door	8.380
BUTTON - Switch Arm Glide	3.380
CABLE - Cooking Top	6.436
CAP - Lower Trim	16.376
CAP - Oven Liner Corner	9.376
CATCH, SPRING - Door	16.328
CHAIN - Drive	14.351
CHANNEL - Cable Spacer	6.0372
CHANNEL - Cooking Top Stop	6.0371
CHANNEL - Lead Cover	13.037
CHANNEL - Pulley	6.037
CHANNEL - Wiring	14.037
CLAMP - Blower Housing	14.327
CLAMP, BROIL ELEMENT RETAINER - Oven	13.327
CLAMP - Lead Wire	13.3271
CLAMP - Surface Unit Hinge	4.327
CLAMP - Terminal	13.3272
CLAMP - Thermostat Capillary Tube	3.327
CLIP - Filter	14.039
CLIP - Lead Wire	13.039
CONNECTOR, FEMALE - Electrical	13.0485
CONNECTOR, FEMALE - Lead Wire Splice	13.0483
CONNECTOR - Line Terminal	13.048
CONNECTOR, LINE - Terminal Receptacle Jumper	13.0481
CONNECTOR, MALE - Electrical	13.0484
CONNECTOR, MALE - Lead Wire Splice	13.0482
CONNECTOR, SLEEVE	13.0487
CONNECTOR, SOLDERLESS	13.0486
COOKMASTER AND TIME SIGNAL	2.374
COVER - Air Duct	14.3783
COVER - Control Housing	1.378
COVER - Cooking Top	6.378
COVER - Junction Box	14.3781
COVER - Plug In	14.3784
COVER - Rear Access	16.378
COVER - Rotisserie	14.378
COVER - Rotisserie Opening	7.378
COVER - Switch Box	14.3782
COVER - Terminal Block	13.378
DIAL - Broil Control	3.3813
DIAL - Lamp Selector Switch	3.3814
DIAL, SWITCH - Heat Minder	3.3811
DIAL, SWITCH - Infinite Heat Surface Unit	3.381
DIAL - Tender-matic Control	3.3815
DIAL - Thermostat	3.3812
DOOR - Base Cabinet LH	16.070
DOOR - Base Cabinet RH	16.0701
DUCT, AIR	14.311
ELEMENT, HEATING - Bake	13.0801
ELEMENT, HEATING - Broil	13.080
END - Lamp Housing	1.395
ESCUTCHEON - Control Panel	1.081
FILTER, AIR	14.088
FORK, TURNING - Rotisserie	14.431
FRAME - Base Cabinet	16.096
FRAME - Cookmaster And Time Signal	2.096
FRAME, INSIDE - Oven Door	8.0961
FRAME, OUTSIDE - Oven Door	8.096
FUSE	13.098
GASKET - Oven Control Sensor	3.099
GASKET - Oven Door Handle	8.099
GASKET - Surface Unit Terminal Block Seal	4.099
GEAR - Sprocket	14.101
GLASS - Control Panel	1.103
GLASS - Cookmaster And Time Signal	2.103
GLASS, INNER - Oven Door	8.1031
GLASS - Lamp Housing	1.1031
GLASS, OUTER - Oven Door	8.103
GLASS - Oven Light	10.103
GRIDDLE, KANT SLIDE	14.485
GRILL - Broiler Pan	10.108
GROMMET, NEOPRENE - Conduit	14.109
GUIDE - Shelf (Base Cabinet)	16.323
GUIDE - Shelf LH	10.3231
GUIDE - Shelf RH	10.323
HANDLE - Broiler Pan	10.110
HANDLE - Cooking Top	6.110
HANDLE, DOOR - Base Cabinet	16.110
HANDLE, DOOR - Oven	8.110
HARNESS, ELECTRICAL	13.438
HINGE, DOOR - LH Top And RH Bottom	16.3461
HINGE, DOOR - RH Top And LH Bottom	16.346
HOLDER - Cable Spacer Channel	6.112
HOLDER, LAMP - Fluorescent	13.363
HOLDER, LAMP - Oven Pilot	13.3631
HOOD, TOP - Ventless	14.1131
HOOD, VENT	14.113
HOUSING - Blower	14.116
HOUSING - Control	1.116
HOUSING - Cooking Top	6.116
HOUSING - Terminal Block	13.116
INDICATOR - Oven Pilot Lamp	13.248
INSULATION, ASBESTOS - Cooking Top Cover	15.1244
INSULATION, BULK	15.124
INSULATOR, ELECTRICAL - Broil Receptacle	13.126
INSULATOR, SLEEVE	13.1262
INSULATOR - Surface Unit Connector	4.126
INSULATOR, TERMINAL	13.1261

ALPHABETICAL INDEX - Continued


DESCRIPTION	CODE
KNOB, CONTROL - Broil	3.1304
KNOB, CONTROL - Cookmaster And Time Signal	2.130
KNOB, CONTROL - Lamp Selector Switch	3.130
KNOB, CONTROL - Meal Minder	2.1301
KNOB, CONTROL - Oven Thermostat	3.1303
KNOB, CONTROL - Surface Units	3.1302
KNOB, CONTROL - Tender-matic	3.1301
KNOB - Latch Operating	6.350
LAMP, FLUORESCENT	13.132
LEVER - Latch Operating	6.356
LIGHT, PILOT - Oven	13.4891
LIGHT, PILOT - Surface Unit	13.489
LINER - Oven	9.136
LINK - Actuating Arm To Plate	14.3481
LINK - Trigger To Spring	14.348
MEAL MINDER	2.528
MOTOR - Blower	14.1431
MOTOR - Cookmaster And Time Signal	2.143
MOTOR - Meal Minder	2.1431
MOTOR - Oven Control	3.143
MOTOR - Rotisserie	14.143
NUT - Cable Spacer Channel	6.1491
NUT - Circuit Breaker	14.1491
NUT - Condensation Trim Spacer	7.149
NUT - Door Strike	16.149
NUT - Knurled - Lamp Switch	3.1491
NUT - Lamp Housing Shield	1.149
NUT - Lamp Housing Top Trim	1.1491
NUT - Line Terminal Connector	13.1494
NUT - Load Resistor	13.149
NUT, LOCK - Cooking Top Shipping	6.149
NUT - Oven Door Spring Adjusting	8.149
NUT - Oven Liner	9.149
NUT - Pilot Lamp Indicator	13.1495
NUT - Rear Access Cover	16.1492
NUT - Shelf Guide	16.1493
NUT - Tender-matic Control Switch	3.149
NUT - Terminal Block	13.1492
NUT - Terminal Block Housing	13.1491
NUT - Terminal Block Terminal	13.1493
NUT - Trim	14.149
PAD - Control Panel Glass	1.153
PAD - Cooking Top Handle	6.153
PAD - Oven Liner	9.153
PAN - Broiler	10.336
PAN, LARGE - Surface Unit Drip	4.3361
PAN, SMALL - Surface Unit Drip	4.336
PANEL, BACK	7.310
PANEL, FRONT - Cooking Top	6.156
PANEL, FRONT - Hood Trim	14.1561
PANEL, FRONT - Vent Hood	14.156
PANEL, SIDE - Range LH	7.1591
PANEL, SIDE - Range RH	7.159
PANEL, TOP - Range	7.160
PIN - Cooking Top Latch	6.364
PIN, COTTER - Switch Operating Arm	3.163
PIN - Gear	14.364
PLATE - Bake Element Hinge	13.390
PLATE - Condensate Trim	7.390
PLATE - Cooking Top Drip	6.390
PLATE, NAME - Hood	14.170
PLATE - Surface Unit Switch	3.390
PROTECTOR, ELECTRICAL - Circuit Breaker	14.174
PULLEY, CABLE - Cooking Top	6.177
RACK - Roaster Side	14.1821
RACK - Rotisserie	14.182
RECEPTACLE - Appliance	13.1851
RECEPTACLE - Bake Element Terminal	13.1853
RECEPTACLE - Broil Element Terminal	13.185
RECEPTACLE - Fuse	13.1854
RECEPTACLE, LAMP - Oven	13.1852
RELAY	13.188
RESISTOR - Load	13.190
RETAINER - Broil Receptacle	13.192
RETAINER - Cable Bracket	6.192
RETAINER - Conduit	13.1922
RETAINER - Door Spring	8.1921
RETAINER - Front Panel	14.192
RETAINER - Fuse Receptacle	13.1921
RETAINER - Insulation	7.192
RETAINER - Oven Door Glass	8.192
RETAINER, SPRING - Cable Pulley	6.1921
RETAINER, SPRING - Switch	3.192
RETAINER - Thermostat Bulb	10.192
RETAINER, TOP - Control Panel Glass	1.192
RING, RETAINER - Cooking Top Latch Pin	6.393
RING, RETAINER - Lower Arm Bracket	8.393
RING, RETAINER - Top Cover Roller	6.3931
ROD - Oven Door Latch Plate	8.1971
ROD, RELEASE - Oven Door	8.197
ROLLER - Cooking Top	6.199
ROLLER - Front Panel	14.199
ROLLER - Oven Door Stop	8.199
ROLLER - Top Cover	6.1991
ROTISSERIE KIT	14.428
SCREW - Bake Element Hinge Plate	13.2089
SCREW - Bottom Trim	7.2083
SCREW - Broil Control Switch	3.2086
SCREW - Broil Element	13.2082
SCREW - Broil Receptacle Retainer	13.2084
SCREW - Broil Stop Spring	8.20815
SCREW - Cable Spacer Channel	6.2087
SCREW - Condensate Trim Plate	7.2086
SCREW - Condensation Trim	7.2084
SCREW - Conduit Retainer	13.20818
SCREW - Control Housing	1.2084
SCREW - Control Housing Cover	1.2086
SCREW - Control Panel Escutcheon	1.2087
SCREW - Control Panel Glass Support	1.2081
SCREW - Cooking Top Cable	6.2089
SCREW - Cooking Top Cover Slide Bracket	6.20812
SCREW - Cooking Top Drip Plate	6.2081
SCREW - Cooking Top Front Panel	6.2082
SCREW - Cooking Top Handle	6.20811
SCREW - Cooking Top Stop Channel	6.2088
SCREW - Cooking Top Stop Channel Screw Shield	6.2083
SCREW - Cookmaster And Time Signal	2.208
SCREW - Disconnect Switch	3.20811
SCREW - Disconnect Switch Shield	3.2088
SCREW - Door Handle	8.208
SCREW - Door Handle (Base Cabinets)	16.2082
SCREW - Door Hinge	16.2081
SCREW - Door Spring Retainer	8.20814
SCREW - Double Relay	13.2088
SCREW - Flair Range	16.2086
SCREW - Fluorescent Lamp Ballast	13.20823
SCREW - Fluorescent Lamp Holder	13.20815
SCREW - Fluorescent Lamp Holder Bracket	13.20814
SCREW - Front Panel Retainer	14.20812
SCREW - Fuse Receptacle Terminal	13.20821
SCREW - Gears And Motor	14.2083
SCREW - Ground Strap	13.20819
SCREW - Handle	10.2081
SCREW - Hinge Pivot Bracket	16.208
SCREW - Infinite Heat Surface Unit Sw	3.2084
SCREW - Inside Oven Door Frame	8.2083
SCREW - Insulation Retainer	7.2089
SCREW - Junction Box	14.2088
SCREW - Junction Box Cover	14.2087
SCREW - Lamp Housing End	1.208
SCREW - Lamp Housing Lower Trim	1.2082
SCREW - Lamp Housing Top Trim	1.2083
SCREW - Lamp Switch	3.2085
SCREW - Latch Knob	6.208
SCREW - Latch Operating Lever	6.2085
SCREW - Latch Spring Retainer Bracket	6.2084
SCREW - Lead Cover Channel	13.2081
SCREW - Lead Wire Clip	13.2083
SCREW - Lower Arm	8.2089
SCREW - Lower Arm Bracket	8.2086

1965

ALPHABETICAL INDEX - Continued


DESCRIPTION	CODE
SCREW - Lower Side Trim	16.2089
SCREW - Lower Trim Cap	16.20811
SCREW - Meal Minder	2.2081
SCREW - Meal Minder Trim	2.2082
SCREW - Oven Angle	7.2085
SCREW - Oven Control	3.20813
SCREW - Oven Control Sensor	3.20816
SCREW - Oven Control Transfer Switch	3.20815
SCREW - Oven Door Latch Bracket	8.2082
SCREW - Oven Door Release Arm	8.2088
SCREW - Oven Door Spring Adjusting	8.20811
SCREW - Oven Door Stop Roller	8.20813
SCREW - Oven Door Torque Shaft	8.2087
SCREW - Oven Lamp Receptacle	13.20813
SCREW - Oven Liner	9.208
SCREW - Oven Switch	3.2087
SCREW - Oven Thermostat	3.2081
SCREW - Pilot Light Bracket	13.2085
SCREW - Plug In Cover	14.20814
SCREW - Power Relay	13.2086
SCREW - Pulley Channel	6.2086
SCREW - Range Back Panel	7.2087
SCREW - Rear Access Cover	16.20812
SCREW - Rotisserie	14.2081
SCREW - Rotisserie Opening Cover	7.208
SCREW - Sensor Retainer Bracket	4.2084
SCREW - Sensor Support	4.2081
SCREW, SET - Blower Wheel	14.20813
SCREW, SET - Oven Door Release Button	8.2081
SCREW - Shelf Guide	10.208
SCREW - Shelf Guide - Base Cabinet	16.2085
SCREW - Side Panel	7.2088
SCREW - Speed Heat Switch	3.2083
SCREW - Speed Heat Unit Fuse Bracket	13.20811
SCREW - Starter Base	13.20816
SCREW - Surface Unit Bracket	4.2082
SCREW - Surface Unit Clamp To Bracket	4.208
SCREW - Surface Unit Connector Block	4.2085
SCREW - Surface Unit Switch Bracket	3.2082
SCREW - Surface Unit Switch Shield	3.20812
SCREW - Surface Unit Terminal Block	4.2083
SCREW - Switch	14.2085
SCREW - Switch Box Cover	14.2089
SCREW - Switch Bracket	3.208
SCREW - Switch Insulator	14.2084
SCREW - Terminal	13.208
SCREW - Terminal Block Cover	13.20812
SCREW - Terminal Block Housing	13.20822
SCREW - Thermostat Bracket	3.2089
SCREW - Thermostat Capillary Tube Clamp	3.20814
SCREW - Thermostat Capillary Tube Support	3.20817
SCREW - Thumb - Rotisserie Fork	14.208
SCREW - Top Spacer Washer	1.2085
SCREW - Top Trim	7.2081
SCREW - Torque Shaft Bearing	8.20812
SCREW - Torque Shaft Lower Bearing	8.2084
SCREW - Torque Shaft Upper Bearing	8.2085
SCREW - Transformer	13.2087
SCREW - Trim	7.2082
SCREW - Trim - Vent Hoods	14.2086
SCREW - Upper Side Trim	16.2087
SCREW - Vent Hood	14.2082
SCREW - Wiring Channel	14.20811
SEAL, DOOR - Bottom	8.203
SEAL, DOOR - Side	8.2031
SEAL, RUBBER - Lamp Housing Top Trim	1.204
SEAL, SHAFT - Surface Unit Switch	3.205
SENSOR - Heat Minder	4.490
SENSOR - Oven Control	3.490
SHAFT - Torque	8.210
SHELF - Cabinet	16.213
SHELF - Oven	10.213
SHIELD - Disconnect Switch	3.216
SHIELD - Lamp Housing	1.216
SHIELD, SCREW - Cooking Top Stop Channel	6.216
SHIELD, SCREW - Trim	7.216
SHIELD - Surface Unit Switch	3.2161
SLIDE - Cooking Top Cover	6.120
SPACER - Oven Door Lower Arm	8.222
SPIT - Rotisserie	14.430
SPLICE, MALE - Electrical	13.394
SPRING - Broil Stop	8.2262
SPRING - Filter	14.2262
SPRING - Front Panel Roller	14.2263
SPRING - Latch Pin Operating	6.2261
SPRING - Link Wire	14.226
SPRING - Oven Door Counterbalance	8.2261
SPRING - Oven Door Latch	8.226
SPRING - Switch	14.2261
SPRING - Top Cover	6.226
STARTER - Fluorescent Lamp	13.230
STOP - Cooking Top Cover	6.235
STRAP, GROUND	13.386
STRIKE - Door	16.349
SUPPORT - Bake Element	13.321
SUPPORT - Control Panel Glass	1.321
SUPPORT, HANDLE - Cooking Top	6.321
SUPPORT, HANDLE - Oven Door	8.321
SUPPORT - Heat Minder Sensor	4.321
SUPPORT - Surface Unit Large	4.3212
SUPPORT - Surface Unit Small	4.3211
SUPPORT - Thermostat Capillary Tube	3.321
SWITCH - Blower Operating	14.396
SWITCH, CONTROL - Broil	3.396
SWITCH - Cookmaster And Time Signal Terminal	2.396
SWITCH, DISCONNECT - Surface Units	3.3961
SWITCH, OVEN CONTROL	3.387
SWITCH - Rotisserie	14.3961
SWITCH, SELECTOR - Lamp	3.403
SWITCH, SURFACE UNIT - Heat Minder	3.285
SWITCH, SURFACE UNIT - Infinite Heat	3.2852
SWITCH, SURFACE UNIT - Speed Heat	3.2851
SWITCH - Tender-matic Control	3.3962
SWITCH, TRANSFER - Oven Control	3.3963
TERMINAL, ELECTRIC	13.329
THERMOSTAT - Oven	3.242
TOP - Cooking	6.258
TRANSFORMER - Tender-matic Control	13.251
TRIM, BOTTOM - Range	7.2532
TRIM - Circuit Breaker	14.2532
TRIM - Condensation	7.2534
TRIM - Cooking Top Housing	6.253
TRIM, FRONT - Hood	14.2531
TRIM - Glass Control Panel End	1.2532
TRIM - Hood Housing	14.253
TRIM, LOWER - Lamp Housing	1.253
TRIM - Meal Minder	2.253
TRIM, SIDE - Lower	7.2531
TRIM, SIDE - Lower (Base Cabinet)	16.2531
TRIM, SIDE - Upper	7.253
TRIM, SIDE - Upper (Base Cabinet)	16.253
TRIM, TOP - Lamp Housing	1.2531
TRIM, TOP - Range	7.2533
UNIT, SURFACE - 6 Inch	4.266
UNIT, SURFACE - 8 Inch	4.2661
WASHER - Broil Stop Spring	8.2796
WASHER - Circuit Breaker	14.2792
WASHER - Cooking Top Cable Pulley	6.279
WASHER - Cooking Top Handle	6.2792
WASHER, CUP - Oven Door Release Arm	8.2794
WASHER, CUP - Top Spacer	1.279
WASHER - Flair Range	16.2791
WASHER - Gears And Motor	14.279
WASHER - Lamp Switch	3.279
WASHER - Lower Arm Bracket	8.2792
WASHER - Lower Torque Shaft Bearing	8.279
WASHER - Oven Door Handle	8.2793
WASHER - Oven Door Release Arm	8.2795
WASHER - Oven Door Spring Adjusting	8.2791
WASHER - Roller	6.2791
WASHER - Shelf Guide	10.279
WASHER - Switch Shafts	3.2791
WASHER - Terminal	13.279
WASHER - Trim	14.2791
WHEEL, BLOWER	14.341
WRENCH - Glider Button Adjusting	16.282

1965 PRODUCT VIEWS

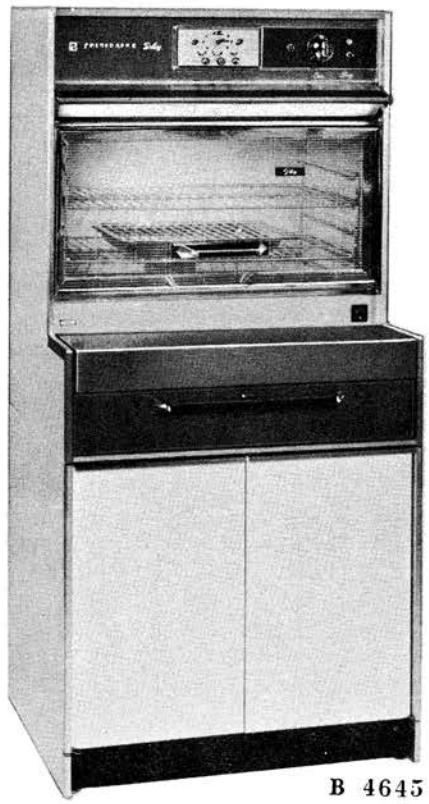


B 4645

Model RCD-630J with B-30 Base Cabinet.

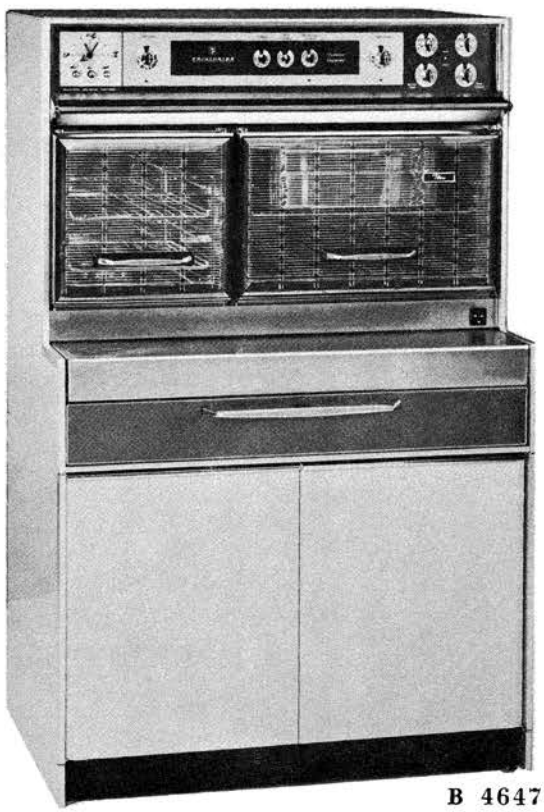

B 4647


Model RCI-645J with B-40 Base Cabinet.

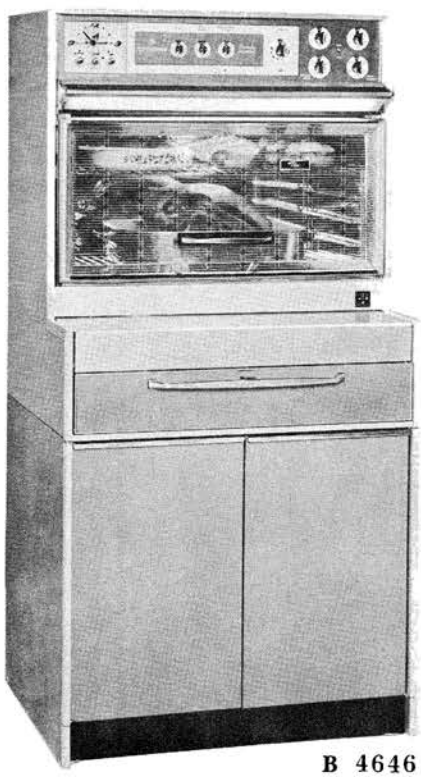

B 4646

Model RCI-635J with B-30 Base Cabinet.

CONTROL PANEL, MEAL MINDER, SWITCHES AND PARTS

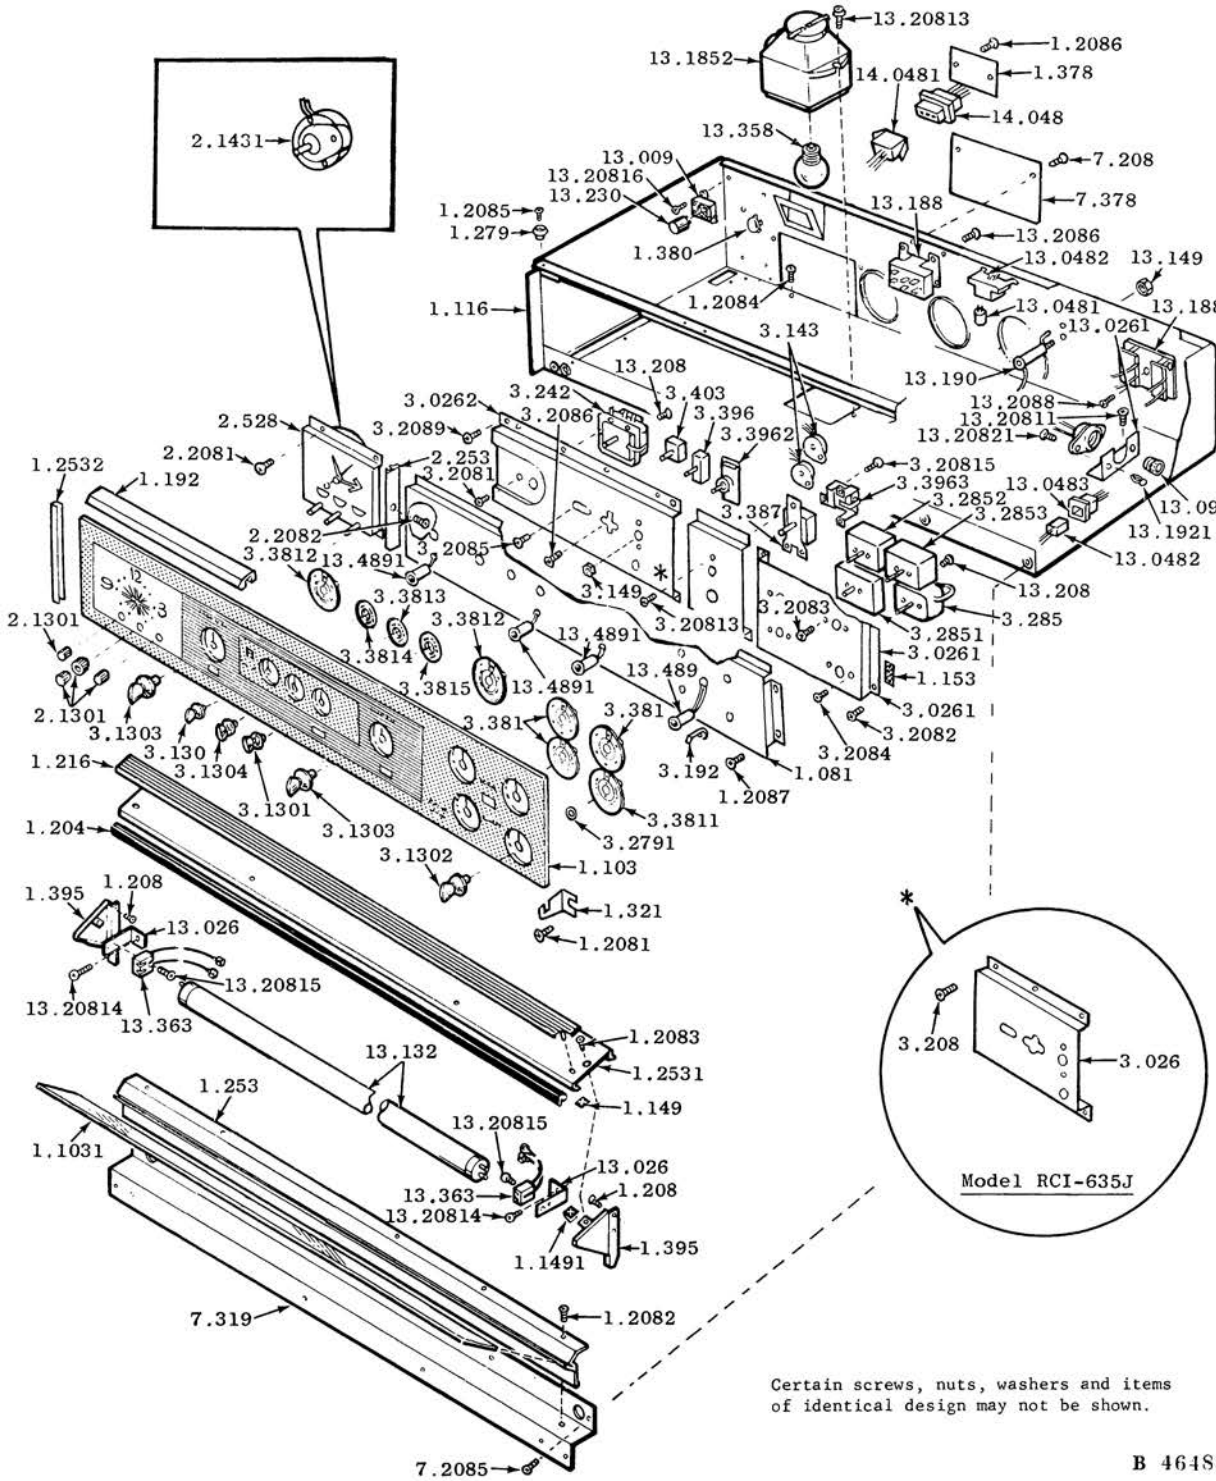

Certain screws, nuts, washers and items of identical design may not be shown.


B 4648

The appearance of the Control Panel will vary depending upon the Roast Thermometer, location of Lamp Selector Switch and number of Thermostats required for the particular product.

Model RCI-645J

This illustration may also be used for the selection of parts for model RCI-635J, but all parts shown are not used on this model.

CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS

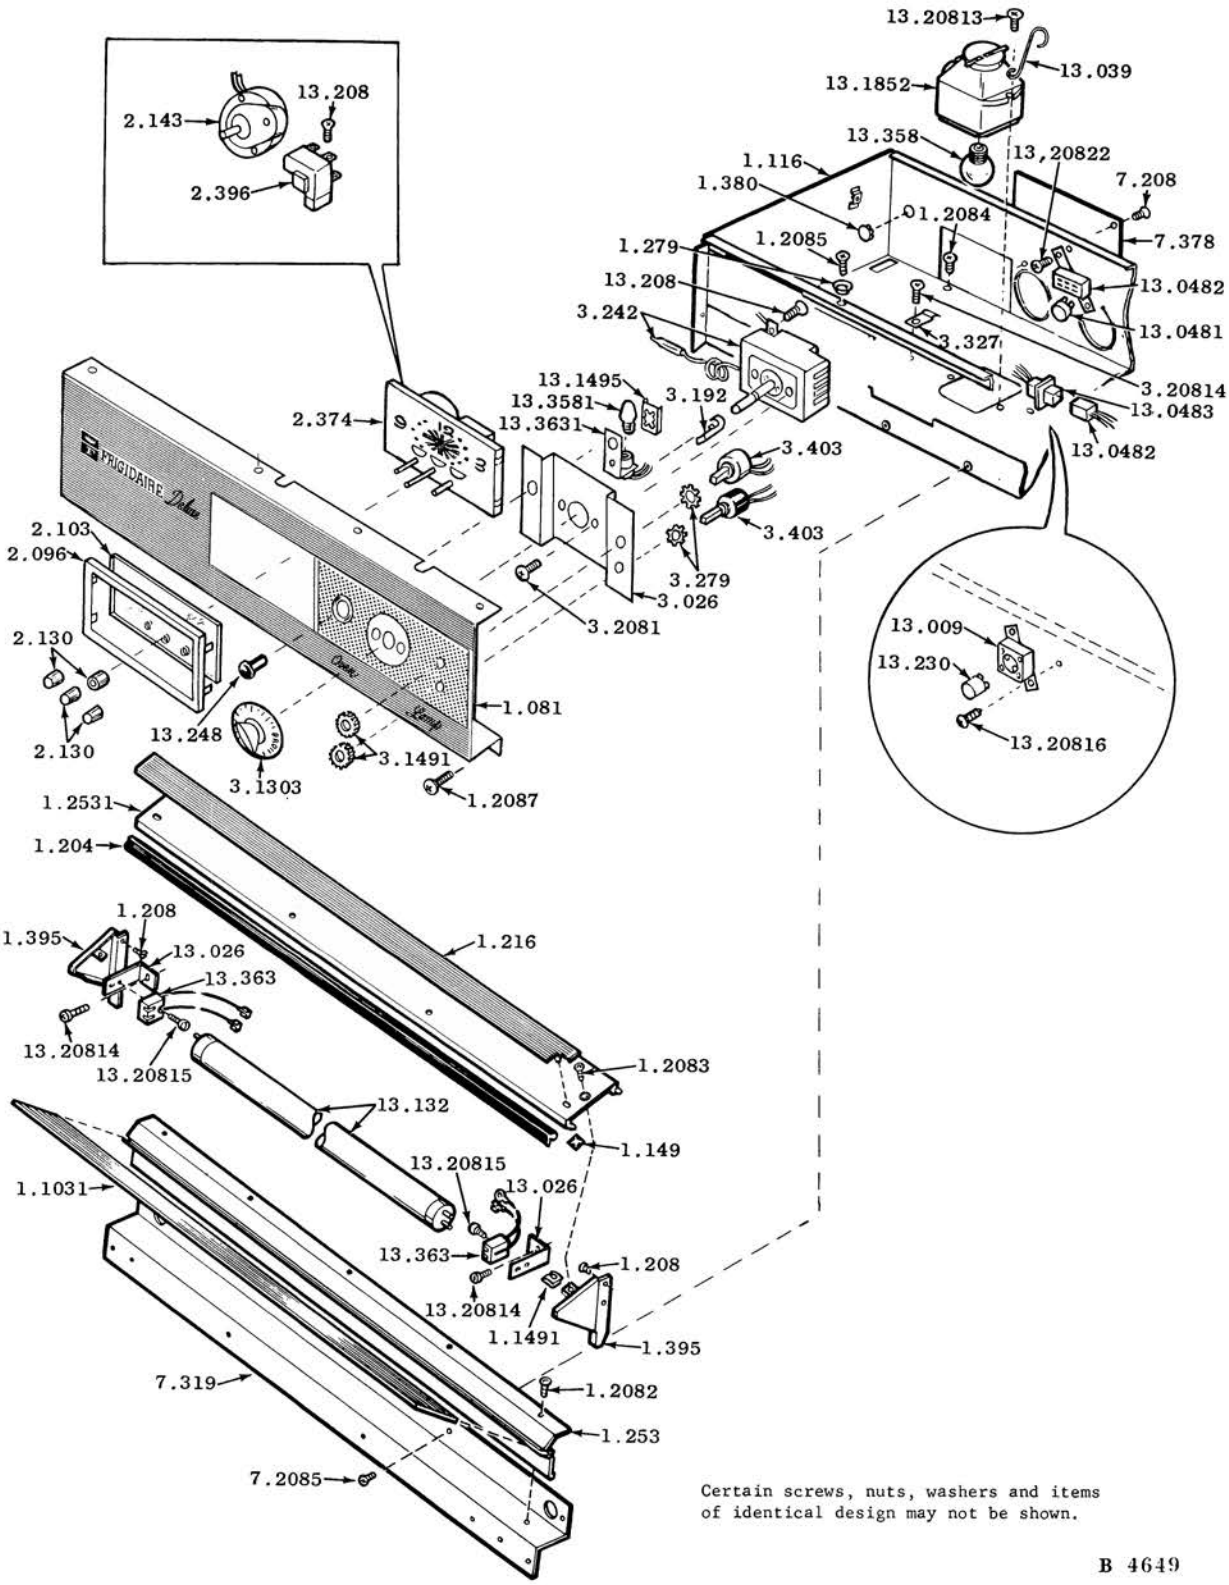


Certain screws, nuts, washers and items of identical design may not be shown.

B 4649

1965

Model RCD-630J

OVEN DOORS AND ACTUATING PARTS

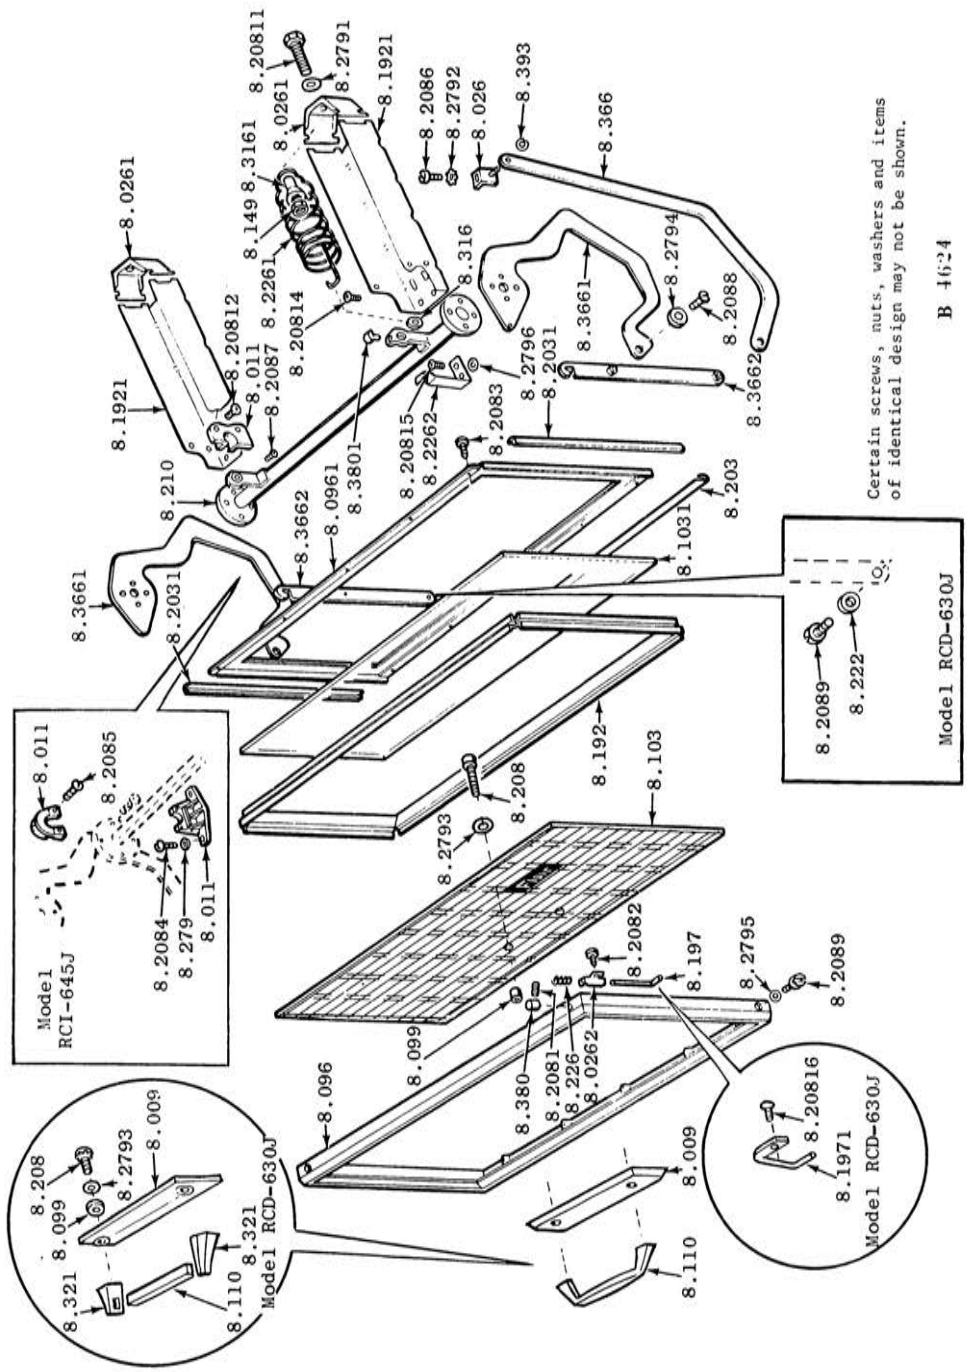


Model RCI-635J

This illustration may also be used for the selection of parts for models RCD-630J and RCI-645J, but all parts shown are not used on these models.

Model RCI-645J has two oven doors. Parts are similar for both doors.

COOKING TOP, SURFACE UNITS AND PARTS

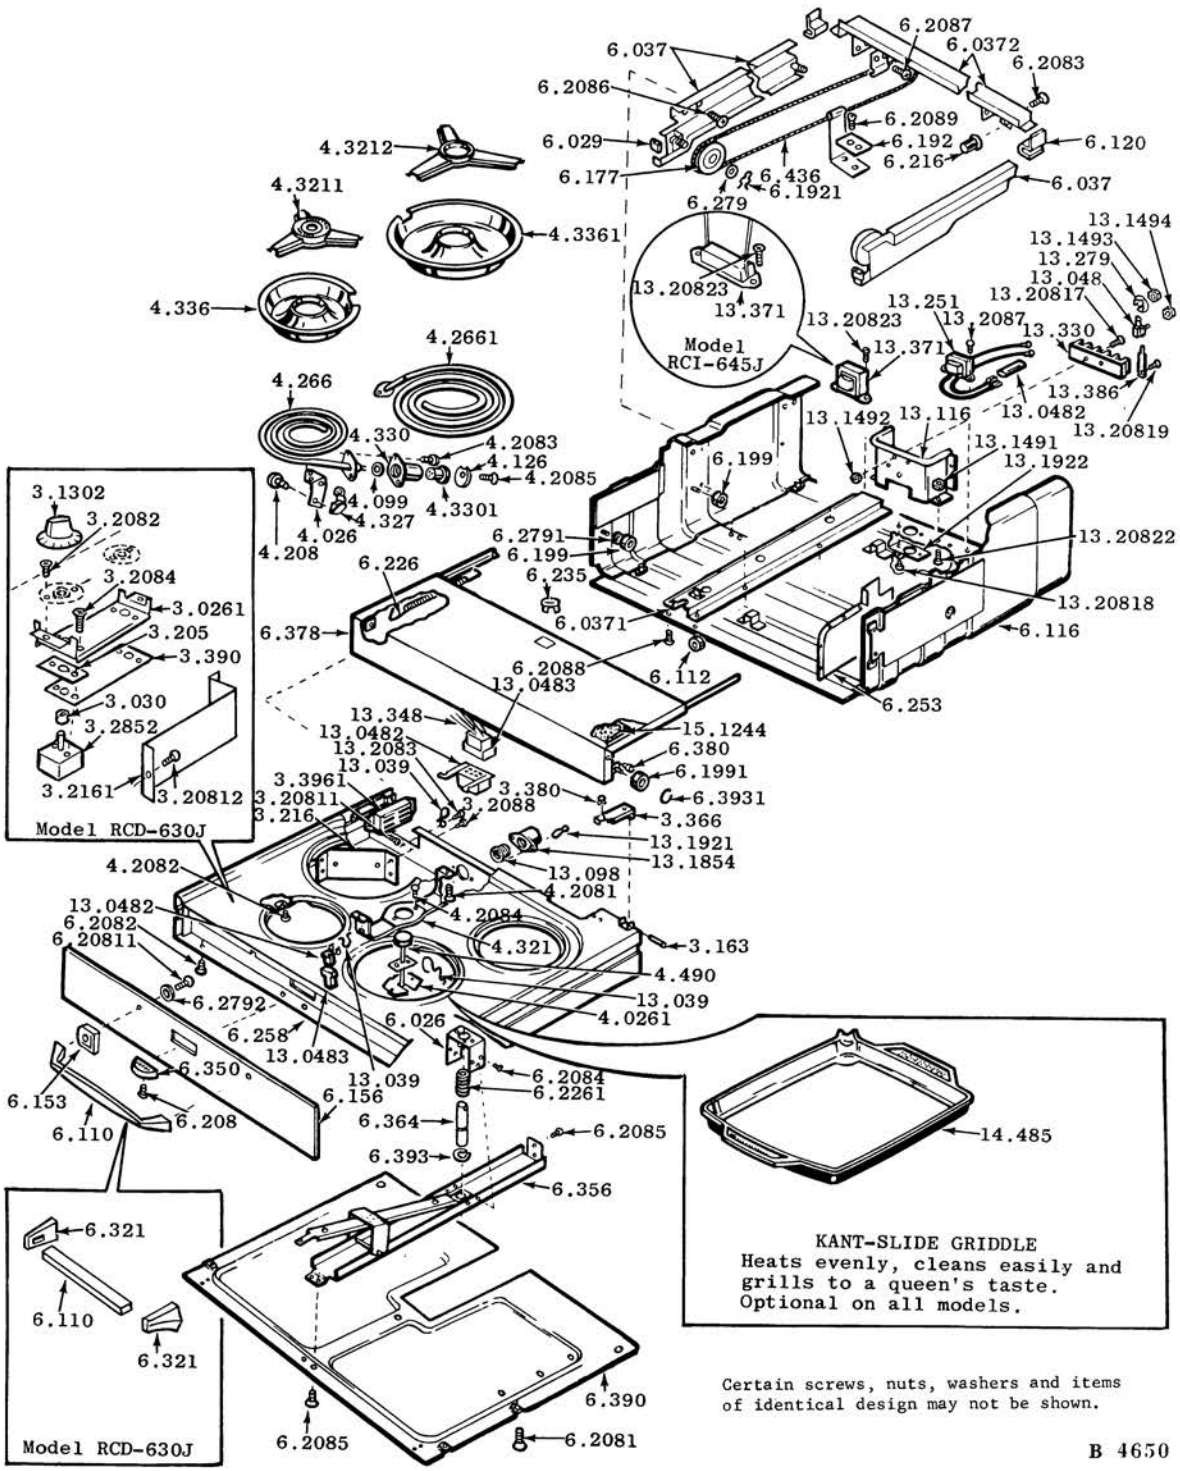

Certain screws, nuts, washers and items of identical design may not be shown.

B 4650


1965

Model RCI-635J

This illustration may also be used for the selection of parts for models RCD-630J and RCI-645J, but all parts shown are not used on these models.

Model RCD-630J appears the same as models RCI-635J and RCI-645J, except that model RCD-630J has no speed heat or heat minder units.

OVEN LINERS AND INTERIOR PARTS

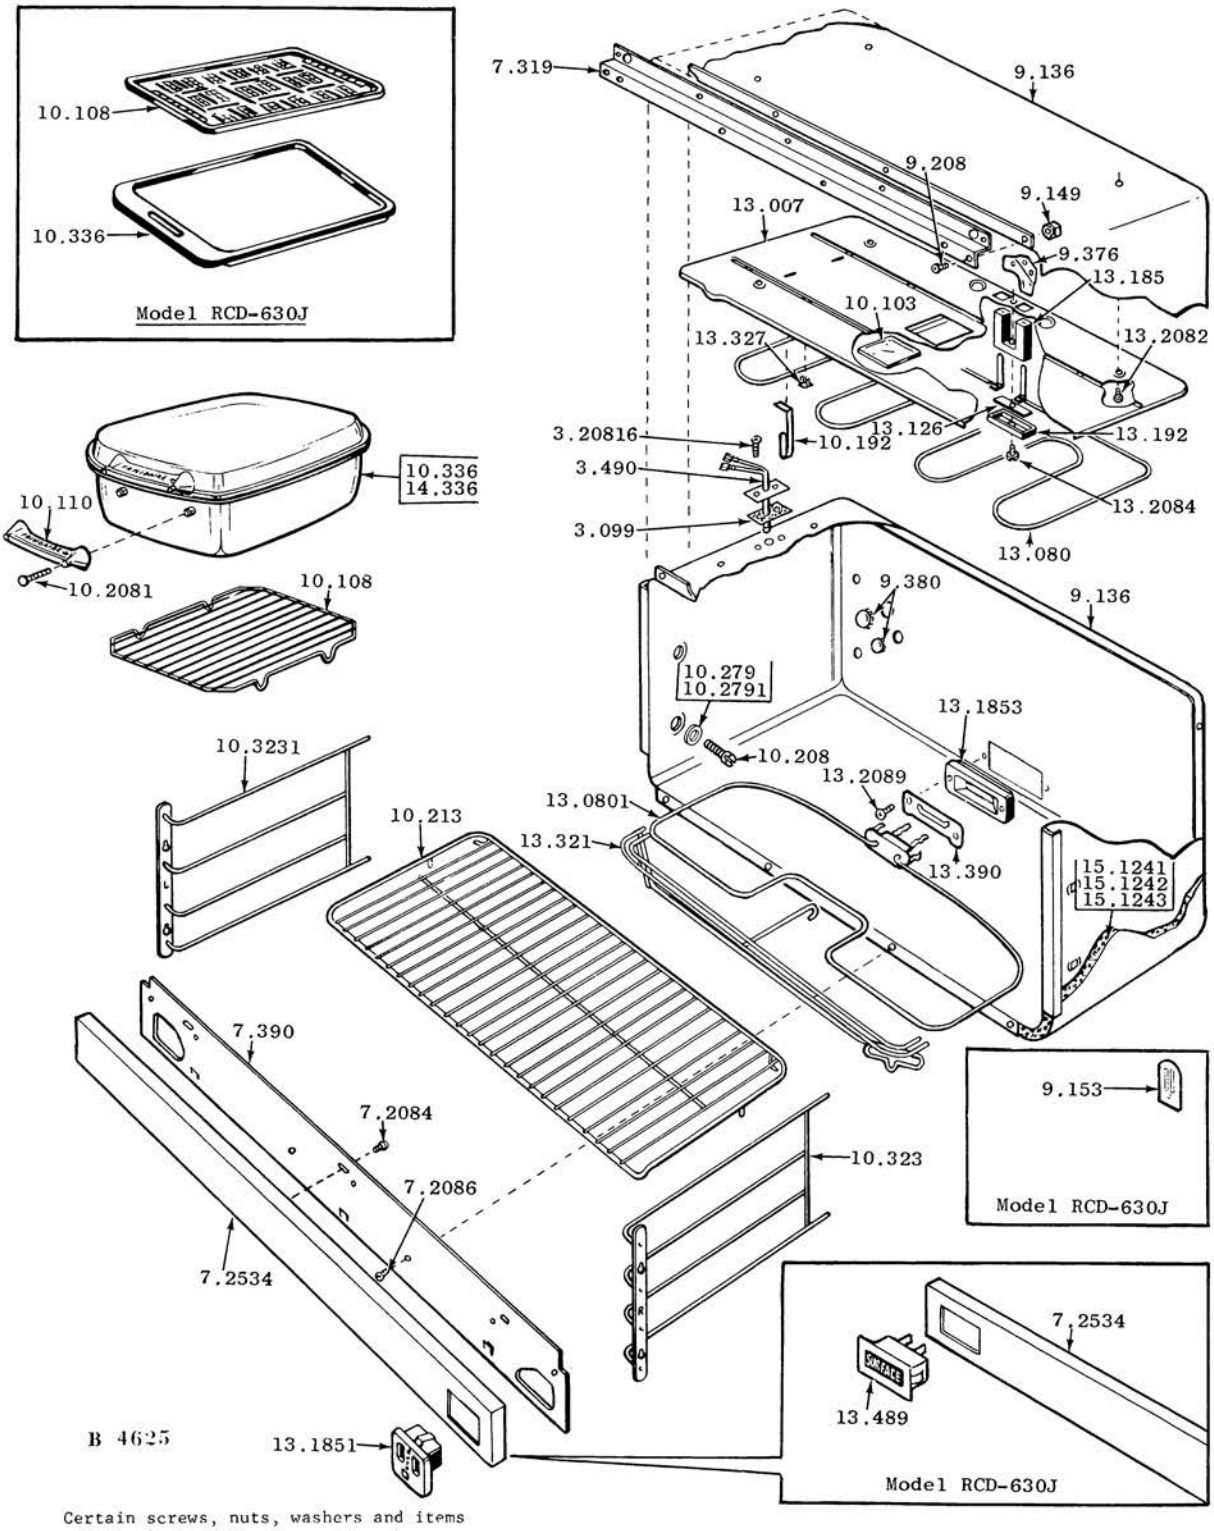


Certain screws, nuts, washers and items of identical design may not be shown.

Model RCI-635J

This illustration may be used for the selection of parts for models RCD-630J and RCI-645J, but all parts shown are not used on these models.

NOTE: Model RCI-645J has two ovens. Parts are similar for both ovens.

PANELS, TRIMS AND PARTS

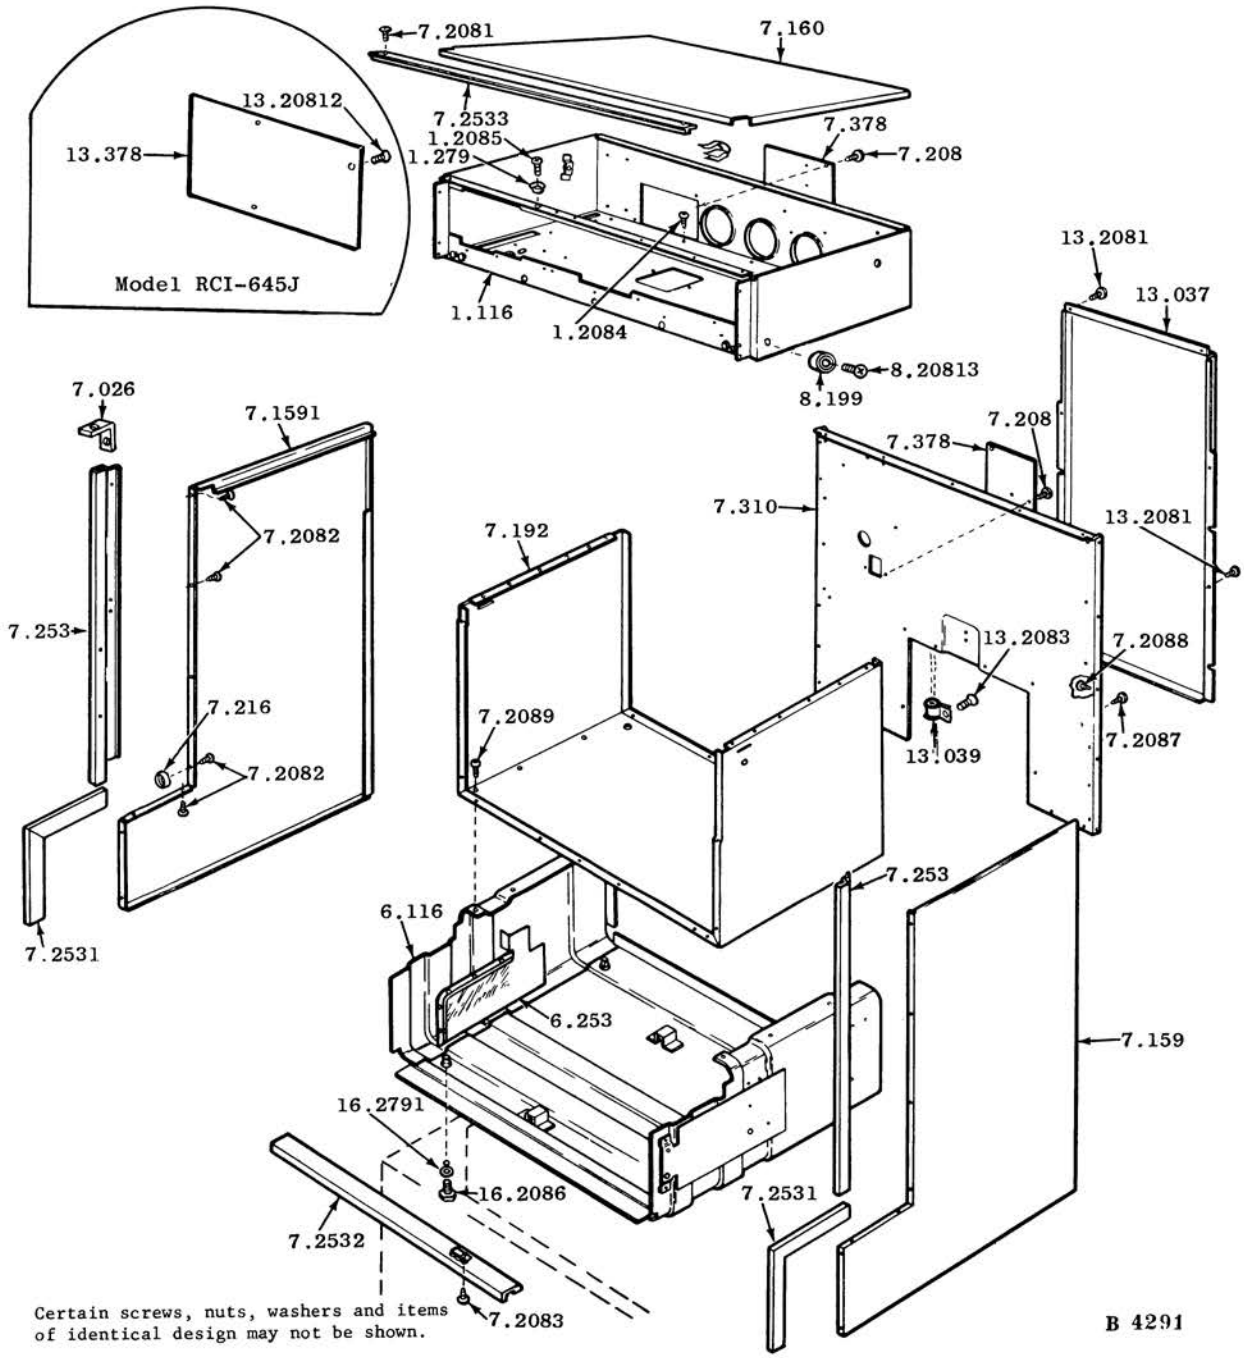


1965

Model RCI-635J

This illustration may also be used for the selection of parts for models RCD-630J and RCI-645J, but all parts shown are not used on these models.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

BASE CABINETS AND PARTS

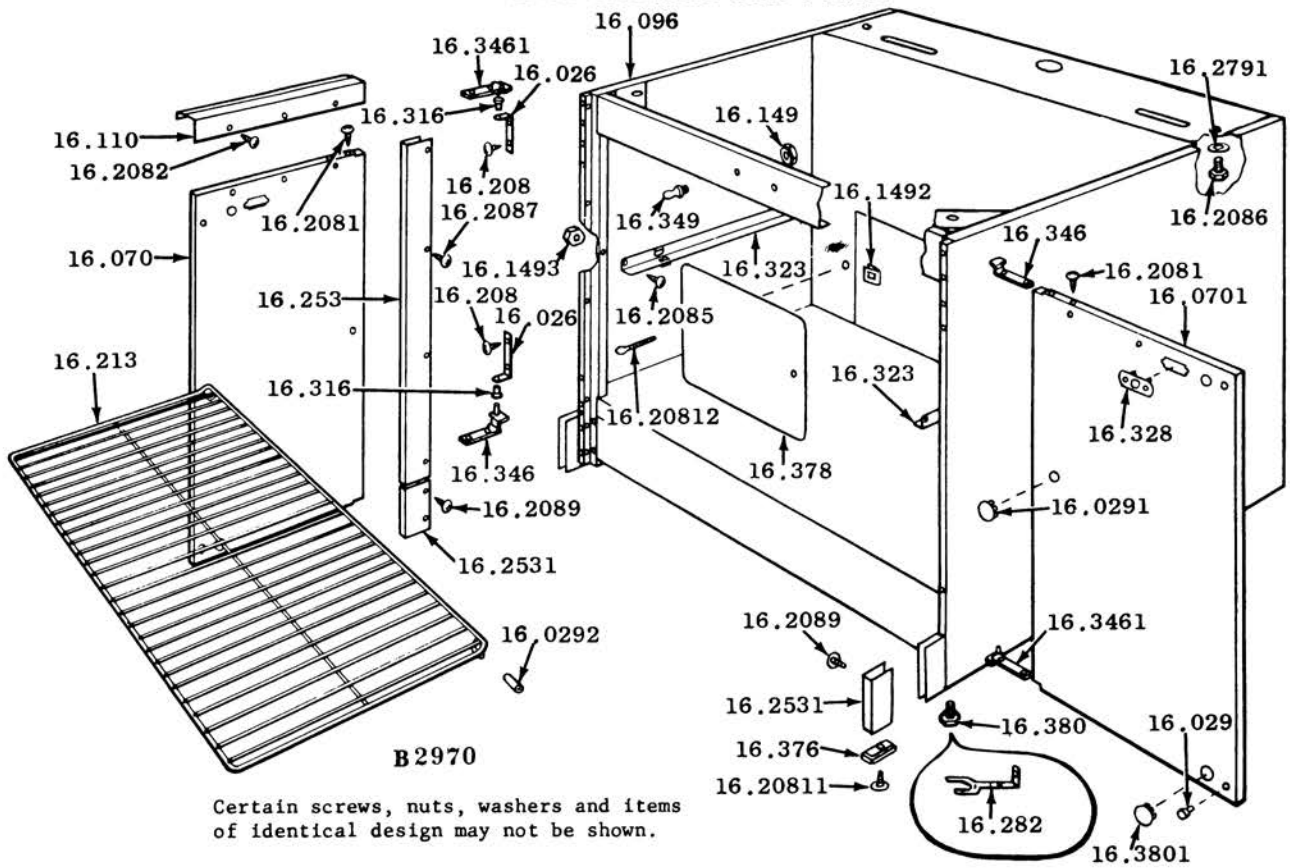


Certain screws, nuts, washers and items of identical design may not be shown.

Model B-30 Base Cabinet

The B-40 Base Cabinet appears the same as the B-30 Base Cabinet except that it has two shelves and is wider.
Use B-30 Base Cabinet illustrated with models RCD-630J and RCI-635J.
Use B-40 Base Cabinet with model RCI-645J.


14.428 ROTISSERIE - ACCESSORY

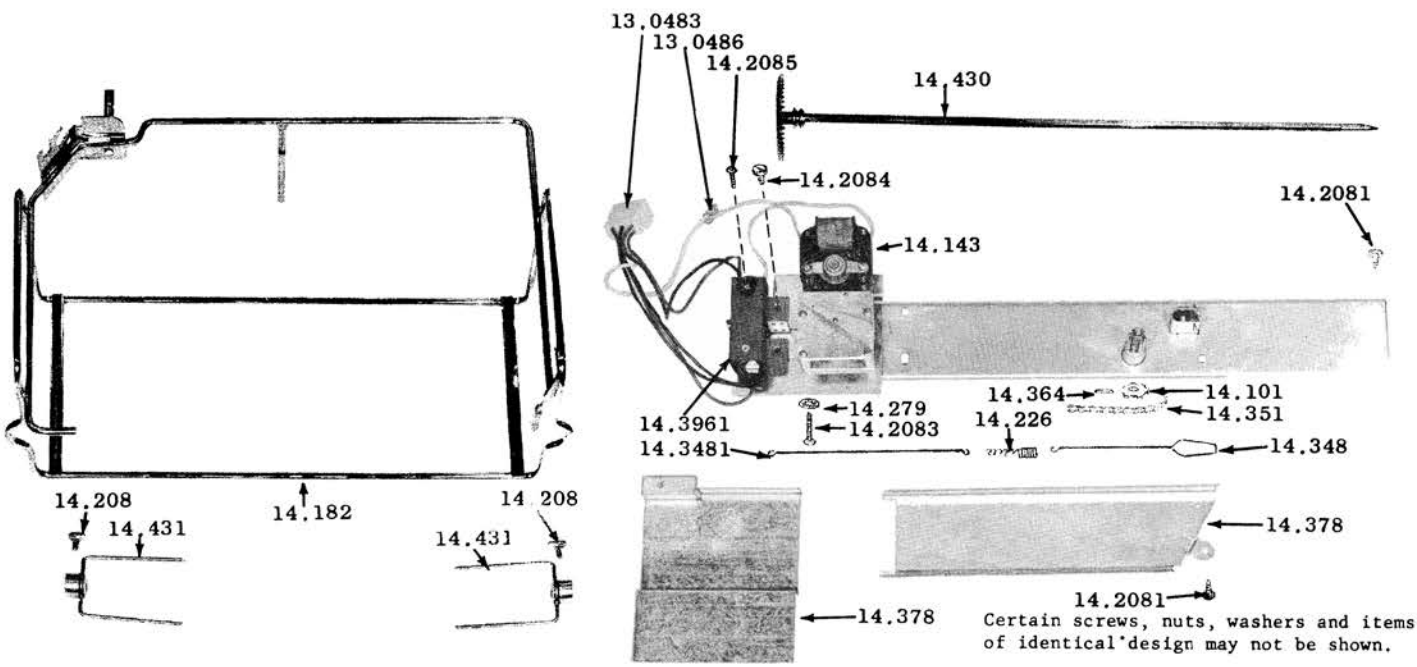


Certain screws, nuts, washers and items of identical design may not be shown.

Models RCI-635J and RCI-645J

14.113 VENT HOOD - ACCESSORY

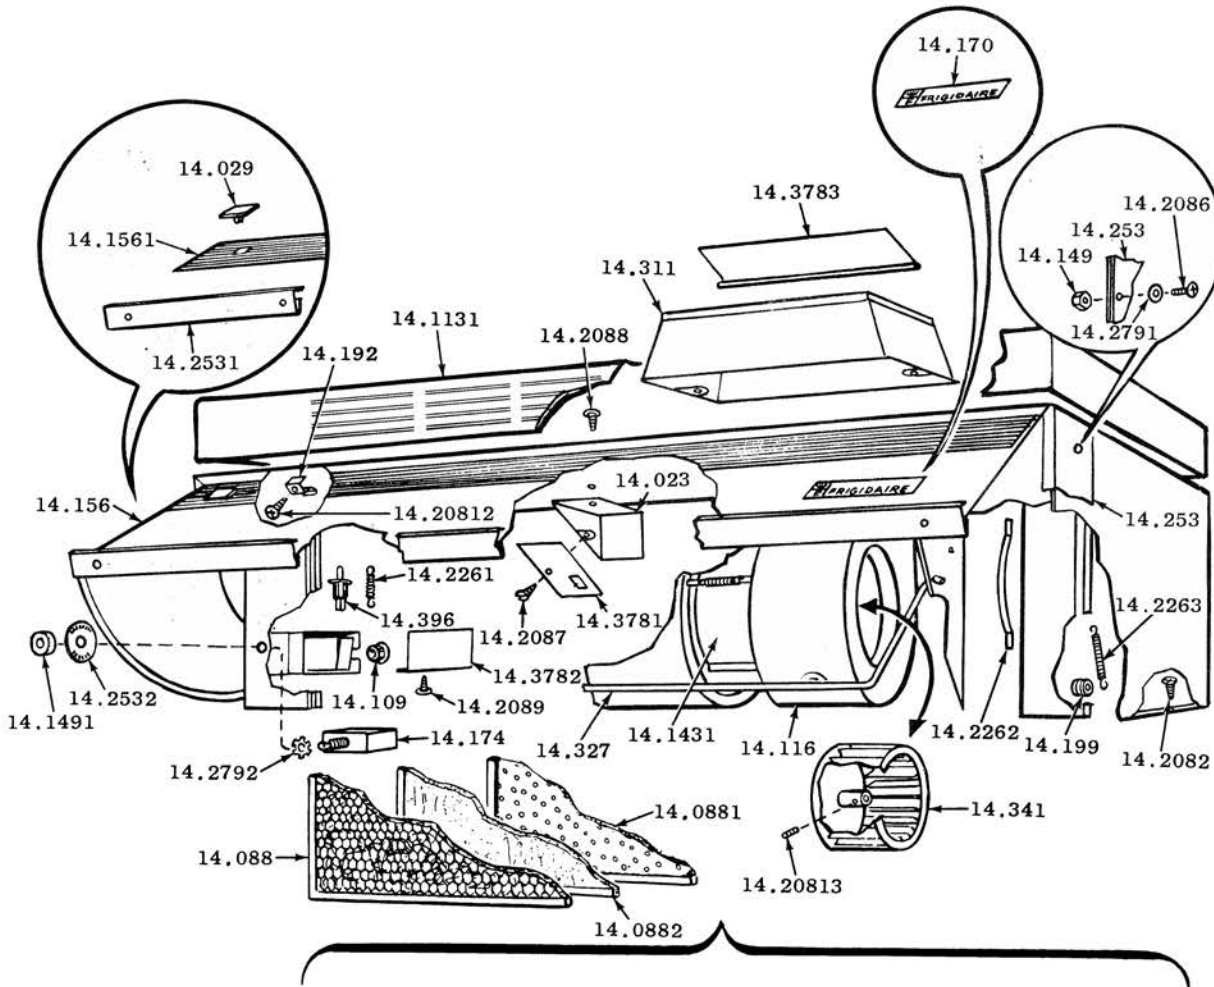

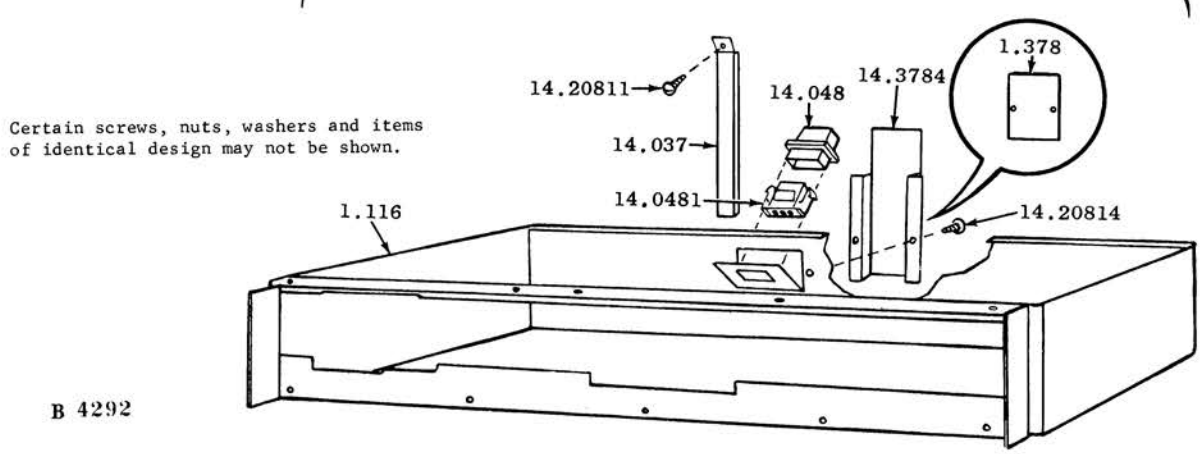

Certain screws, nuts, washers and items of identical design may not be shown.


B 4292

Models RCD-630J, RCI-635J and RCI-645J

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

1965

ELECTRICAL TERMINALS AND CONNECTORS

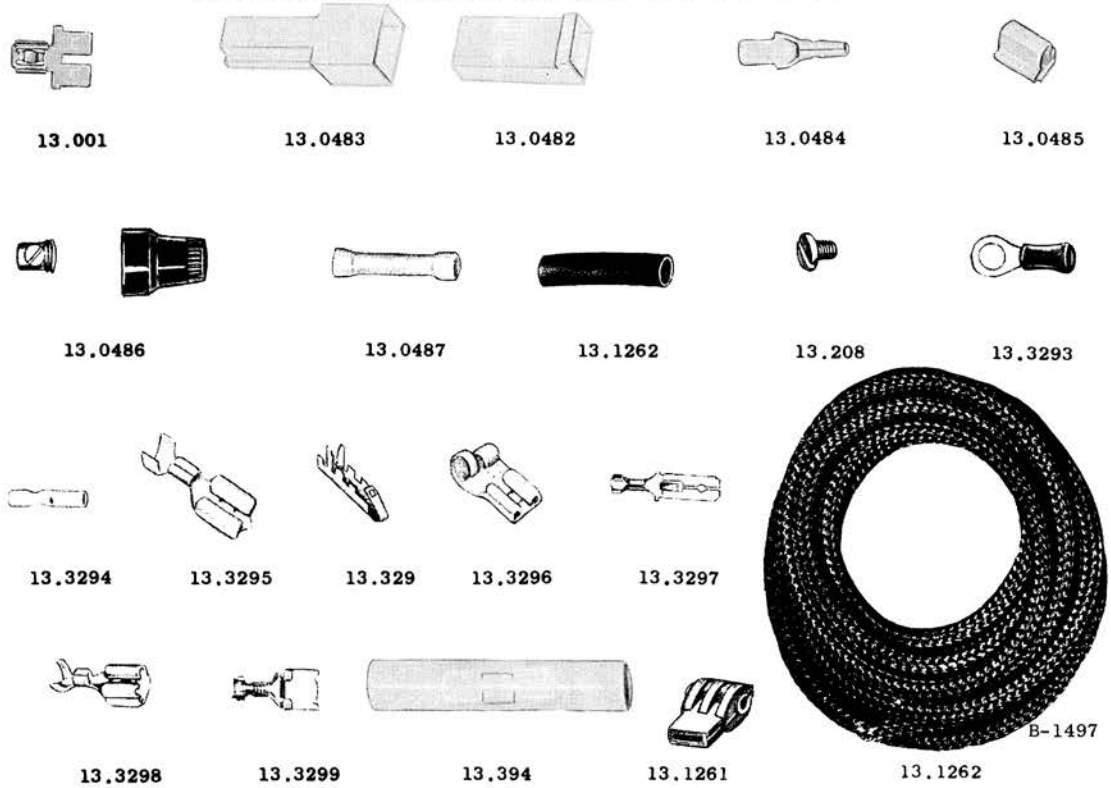

LEAD WIRE CHART

COLORS	PLASTIC INSULATED STRANDED		ASBESTOS INSULATED STRANDED		ASBESTOS INSULATED SOLID		BARE SOLID	
	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.
Bare	--	-------	--	-------	--	-------	8	5874585
Bare	--	-------	--	-------	--	-------	12	5874561
Black	14	*5875355	--	-------	12	5874562	--	-------
Black	14	5873791	14	5417736	14	5873614	--	-------
†Black	16	5874583	--	-------	--	-------	--	-------
§Black	16	5874584	--	-------	--	-------	--	-------
Black-Red	14	5875278	--	-------	--	-------	--	-------
Black-White	14	5875271	--	-------	--	-------	--	-------
Blue	14	5873795	14	5873026	14	5873617	--	-------
Blue-White	18	5875283	--	-------	--	-------	--	-------
Brown	14	5874230	--	-------	14	5873619	--	-------
Brown-White	14	5875279	--	-------	--	-------	--	-------
Gray	14	5875276	--	-------	--	-------	--	-------
Green	14	5874238	14	5417738	14	5873615	--	-------
Orange	14	5873794	--	-------	--	-------	--	-------
Orange-Black	14	5875275	--	-------	--	-------	--	-------
Orange-White	14	5875272	--	-------	--	-------	--	-------
Pink	18	5874237	14	5874184	--	-------	--	-------
Purple	14	5874231	14	5874185	--	-------	--	-------
Red	14	5873793	14	5417737	14	5873616	--	-------
Red	--	-------	--	-------	12	5874563	--	-------
Red-Green	14	5875277	--	-------	--	-------	--	-------
Red-White	14	5875270	--	-------	--	-------	--	-------
Tan	14	5875185	--	-------	--	-------	--	-------
White	14	5873792	14	5417735	14	5873620	--	-------
White-Black	14	5875274	--	-------	--	-------	--	-------
White-Blue	18	5875282	--	-------	--	-------	--	-------
White-Brown	18	5875280	--	-------	--	-------	--	-------
White-Red	14	5875273	--	-------	--	-------	--	-------
White-Yellow	18	5875281	--	-------	--	-------	--	-------
Yellow	14	5874229	14	5417739	14	5873618	--	-------
Yellow-Black	14	5875269	--	-------	--	-------	--	-------

† Two conductor - ribbed.
§ Three conductor - ribbed.
* Use where extreme flexing is required.

NOTE: Bulk wire is available by the foot.

1/25/63

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 1 CONTROL PANELS AND PARTS

	1.081 ESCUTCHEON-CONTROL PANEL			
1.081	RCD-630J	7536611	1	
1.081	RCI-635J	7536751	1	
1.081	RCI-645J	7536760	1	
	1.103 GLASS-CONTROL PANEL			
1.103	RCI-635J	7536749	1	
1.103	RCI-645J	7536762	1	
	1.1031 GLASS-LAMP HOUSING			
1.1031	RCD-630J RCI-635J	6567583	1	
1.1031	RCI-645J	6567584	1	
	1.116 HOUSING-CONTROL			
1.116	RCD-630J RCI-635J	7531345	1	
1.116	RCI-645J	7531530	1	
	1.149 NUT			
1.149	RCD-630J RCI-635J	5438563	7	SPECIAL-LAMP HOUSING SHIELD
1.149	RCI-645J	5438563	9	SPECIAL-LAMP HOUSING SHIELD
1.1491	RCD-630J RCI-635J RCI-645J	5433660	2	LAMP HOUSING TOP TRIM
	1.153 PAD-CONTROL PANEL GLASS			
1.153	RCI-635J RCI-645J	6567539	3	MOUNT TO SURFACE UNIT SWITCH BRACKET 1/8X3/8X1
	1.192 RETAINER,TOP-CONTROL PANEL GLASS			
1.192	RCI-635J	7535587	1	
1.192	RCI-645J	7535588	1	
	1.204 SEAL,RUBBER-LAMP HOUSING TOP TRIM			
1.204	RCD-630J RCI-635J	6568460	1	
1.204	RCI-645J	6568461	1	
	1.208 SCREW			
1.208	RCD-630J RCI-635J RCI-645J	7528041	4	LAMP HOUSING END 8-18X7/16
1.2081	RCI-635J RCI-645J	6560805	3	CONTROL PANEL GLASS SUPPORT 8-15X3/8
1.2082	RCD-630J RCI-635J RCI-645J	5436528	5	LAMP HOUSING LOWER TRIM 8-15X3/8
1.2083	RCD-630J RCI-635J RCI-645J	5436439	2	LAMP HOUSING TOP TRIM 8-15X5/8
1.2084	RCD-630J RCI-635J	7528041	8	CONTROL HOUSING 8-18X7/16
1.2084	RCI-645J	7528041	13	CONTROL HOUSING 8-18X7/16
1.2085	RCD-630J RCI-635J	7528041	4	TOP SPACER WASHER 8-18X7/16
1.2085	RCI-645J	7528041	5	TOP SPACER WASHER 8-18X7/16
1.2086	RCD-630J RCI-635J RCI-645J	7528041	1	CONTROL HOUSING COVER 8-18X7/16
1.2087	RCD-630J	5436528	3	CONTROL PANEL ESCUTCHEON 8-15X3/8
1.2087	RCI-635J RCI-645J	5436528	6	CONTROL PANEL ESCUTCHEON 8-15X3/8
	1.216 SHIELD-LAMP HOUSING			
1.216	RCD-630J RCI-635	6567865	1	
1.216	RCI-645J	6567866	1	
	1.253 TRIM,LOWER-LAMP HOUSING			
1.253	RCD-630J RCI-635J	6567590	1	
1.253	RCI-645J	6567591	1	
	1.2531 TRIM,TOP-LAMP HOUSING			
1.2531	RCD-630J RCI-635J	6567592	1	
1.2531	RCI-645J	6567593	1	
	1.2532 TRIM-GLASS CONTROL PANEL END			
1.2532	RCI-635J RCI-645J	6567585	2	
	1.279 WASHER			
1.279	RCD-630J RCI-635J	6567860	2	CUP-TOP SPACER
1.279	RCI-645J	6567860	3	CUP-TOP SPACER
	1.321 SUPPORT-CONTROL PANEL GLASS			
1.321	RCI-635J RCI-645J	7529455	3	NYLON BRACKET TYPE
	1.378 COVER-CONTROL HOUSING			
1.378	RCD-630J RCI-635J RCI-645J	7528458	1	VENT HOOD PLUG IN
	1.380 BUTTON,PLUG-CONTROL HOUSING			
1.380	RCD-630J RCI-635J	454243	2	CONDUIT HOLE-1-7/16 INCH HOLE
1.380	RCI-635J RCI-645J	432269	1	LEFT REAR CONDUIT HOLE-7/8 INCH HOLE
	1.395 END-LAMP HOUSING			
1.395	RCD-630J RCI-635J RCI-645J	6569589	1	LH
1.395	RCD-630J RCI-635J RCI-645J	6569588	1	RH

1965

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 2 MEAL MINDER AND PARTS

	2.096 FRAME-COOKMASTER & TIME SIGNAL			
2.096	RCD-630J	5875454	1	
	2.103 GLASS-COOKMASTER & TIME SIGNAL			
2.103	RCD-630J	5875455	1	
	2.130 KNOB,CONTROL-COOKMASTER AND TIME SIGNAL			
2.130	RCD-630J	7523846	2	HOURS TO COOK AND TIME SIGNAL -BLACK
2.130	RCD-630J	6568474	1	TIME STOP-BLACK-INNER CENTER
2.130	RCD-630J	7521201	1	TIME SET-WHITE-OUTER CENTER
	2.1301 KNOB,CONTROL-MEAL MINDER			
2.1301	RCI-635J RCI-645J	7523846	2	MINUTE TIMER AND OUTLET TIMER -BLACK
2.1301	RCI-635J RCI-645J	6568474	1	MEAL MINDER-BLACK-INNER CENTER
2.1301	RCI-635J RCI-645J	7521201	1	TIME SET-WHITE-OUTER CENTER
	2.143 MOTOR-COOKMASTER AND TIME SIGNAL			
2.143	RCD-630J	6592779	1	60 CYCLE 125 VOLT
	2.1431 MOTOR-MEAL MINDER			
2.1431	RCI-635J RCI-645J	6592779	1	60 CYCLE 125 VOLT
	2.208 SCREW			
2.208	RCD-630J	5436528	3	COOKMASTER & TIME SIGNAL 8-15X3/8
2.2081	RCI-635J RCI-645J	5436528	4	MEAL MINDER 8-15X3/8
2.2082	RCI-645J	5436528	1	MEAL MINDER TRIM 8-15X3/8
	2.253 TRIM-MEAL MINDER			
2.253	RCI-645J	7535234	1	
	2.374 COOKMASTER & TIME SIGNAL			
2.374	RCD-630J	7531344	1	60 CYCLE 115 VOLT
	2.396 SWITCH-COOKMASTER AND TIME SIGNAL TERMINAL			
2.396	RCD-630J	6592112	1	
	2.528 MEAL MINDER			
2.528	RCI-635J RCI-645J	7531374	1	

GROUP 3 SWITCHES AND PARTS

	3.026 BRACKET-SWITCH			
3.026	RCD-630J	7536644	1	LAMP AND THERMOSTAT
3.026	RCI-635J	7536742	1	LAMP, BROIL CONTROL AND TENDER-MATIC
	3.0261 BRACKET-SURFACE UNIT SWITCH			
3.0261	RCD-630J	7536645	2	
3.0261	RCI-635J RCI-645J	7536743	1	
	3.0262 BRACKET-THERMOSTAT			
3.0262	RCI-645J	7536765	1	LEFT OVEN
	3.030 BUSHING,RUBBER-SURFACE UNIT SWITCH SEAL			
3.030	RCD-630J	7536251	4	
	3.099 GASKET-OVEN CONTROL SENSOR			
3.099	RCI-635J RCI-645J	7536848	1	
	3.130 KNOB,CONTROL-LAMP SELECTOR SWITCH			
3.130	RCI-635J RCI-645J	7531512	1	
	3.1301 KNOB,CONTROL-TENDER-MATIC			
3.1301	RCI-635J RCI-645J	7531512	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	3.1302 KNOB, CONTROL-SURFACE UNITS			
3.1302	RCD-630J	7531370	4	
3.1302	RCI-635J RCI-645J	7531511	4	
	3.1303 KNOB,CONTROL-OVEN THERMOSTAT			
3.1303	RCD-630J	7535846	1	
3.1303	RCI-635J	7531511	1	
3.1303	RCI-645J	7531511	2	
	3.1304 KNOB,CONTROL-BROIL			
3.1304	RCI-635J RCI-645J	7531512	1	
	3.143 MOTOR-OVEN CONTROL			
3.143	RCI-635J RCI-645J	7531519	1	INCLUDES TWO MOTORS AND DRIVE
	3.149 NUT			
3.149	RCI-635J RCI-645J	7536226	1	TENDER-MATIC CONTROL SWITCH
3.1491	RCD-630J	5434526	2	KNURLED-LAMP SWITCH
	3.163 PIN,COTTER-SWITCH OPERATING ARM			
3.163	RCD-630J RCI-635J RCI-645J	-------	2	1-1/8X3/32 PURCHASE LOCALLY
	3.192 RETAINER,SPRING-SWITCH			
3.192	ALL MODELS	6568159	AR	9/16 INCHES LONG
3.192	ALL MODELS	6592441	AR	13/16 INCHES LONG
	3.205 SEAL,SHAFT-SURFACE UNIT SWITCH			
3.205	RCD-630J	7527679	4	
	3.208 SCREW			
3.208	RCI-635J	5436528	4	SWITCH BRACKET 8-15X3/8
3.2081	RCD-630J	6576499	2	OVEN THERMOSTAT 6-32X3/16
3.2081	RCI-645J	6576499	2	OVEN THERMOSTAT-LEFT OVEN 6-32X3/16
3.2082	RCD-630J	5885238	4	SURFACE UNIT SWITCH BRACKET 6-20X3/8
3.2082	RCI-635J RCI-645J	5436528	4	SURFACE UNIT SWITCH BRACKET 8-15X3/8
3.2083	RCI-635J RCI-645J	5435111	2	SPEED HEAT SWITCH 8-32X1/4
3.2084	RCD-630J	5435111	8	INFINITE HEAT SURFACE UNIT SWITCH 8-32X1/4
3.2084	RCI-635J RCI-645J	5435111	6	INFINITE HEAT SURFACE UNIT SWITCH 8-32X1/4
3.2085	RCI-635J RCI-6454	443940	1	LAMP SWITCH 6-32X3/16
3.2086	RCI-635J RCI-645J	5435111	2	BROIL CONTROL SWITCH 8-32X1/4
3.2087	RCI-635J RCI-645J	156750	3	OVEN SWITCH 8-32X5/16
3.2088	RCD-630J RCI-635J	7528041	4	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2088	RCI-645J	7528041	5	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2089	RCI-645J	5436528	4	THERMOSTAT BRACKET-LEFT OVEN 8-15X3/8
3.20811	RCD-630J RCI-635J RCI-645J	5436528	4	DISCONNECT SWITCH 8-15X3/8
3.20812	RCD-630J	5435827	2	SURFACE UNIT SWITCH SHIELD 8-15X1/2
3.20813	RCI-635J RCI-645J	5436528	4	OVEN CONTROL 8-15X3/8
3.20814	RCD-630J	5435827	2	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X1/2
3.20814	RCI-635J	5435827	5	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X1/2
3.20814	RCI-645J	5435827	9	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X1/2
3.20815	RCI-635J RCI-645J	6564547	3	OVEN CONTROL TRANSFER SWITCH 8-32X5/16
3.20816	RCI-635J RCI-645J	7528041	2	OVEN CONTROL SENSOR 8-18X7/16
3.20817	RCI-635J RCI-645J	5436528	2	THERMOSTAT CAPILLARY TUBE SUPPORT 8-15X3/8
	3.216 SHIELD-DISCONNECT SWITCH			
3.216	RCD-630J RCI-635J RCI-645J	6567706	2	
	3.2161 SHIELD-SURFACE UNIT SWITCH			
3.2161	RCD-630J	7529759	2	
	3.242 THERMOSTAT-OVEN			
3.242	RCD-630J	7531595	1	
3.242	RCI-645J	7531595	1	LEFT OVEN
	3.279 WASHER			
3.279	RCD-630J	5886323	2	LAMP SWITCH
3.2791	RCI-635J	6567692	8	SWITCH SHAFTS-NEOPRENE
3.2791	RCI-645J	6567692	9	SWITCH SHAFTS-NEOPRENE
	3.285 SWITCH,SURFACE UNIT-HEAT MINDER			
3.285	RCI-635J RCI-645J	7526418	1	

1965

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	3.2851 SWITCH,SURFACE UNIT-SPEED HEAT			
3.2851	RCI-635J RCI-645J	7531515	1	
	3.2852 SWITCH,SURFACE UNIT-INFINITE HEAT			
3.2852	RCD-630J	7521244	3	SMALL 6 INCH
3.2852	RCI-635J RCI-645J	7521242	1	SMALL 6 INCH
3.2852	RCD-630J	7521370	1	LARGE 8 INCH
3.2852	RCI-635J RCI-645J	7521243	1	LARGE 8 INCH
	3.321 SUPPORT-THERMOSTAT CAPILLARY TUBE			
3.321	RCI-635J RCI-645J	7536303	1	WIRE TYPE MOUNTING WITH SCREW
	3.327 CLAMP-THERMOSTAT CAPILLARY TUBE			
3.327	RCD-630J	5436867	2	
3.327	RCI-635J	5436867	3	
3.327	RCI-645J	5436867	5	
3.327	RCI-645J	7527865	1	
	3.366 ARM,CONTROL-SWITCH OPERATING			
3.366	RCD-630J RCI-635J RCI-645J	6567150	2	
	3.380 BUTTON-SWITCH ARM GLIDE			
3.380	RCD-630J RCI-635J RCI-645J	6567143	2	
	3.381 DIAL,SWITCH-INFINITE HEAT SURFACE UNIT			
3.381	RCI-635J RCI-645J	7536736	3	
	3.3811 DIAL,SWITCH-HEAT MINDER			
3.3811	RCI-635J RCI-645J	7536737	1	
	3.3812 DIAL-THERMOSTAT			
3.3812	RCI-635J	7536738	1	ROTISSERIE
3.3812	RCI-645J	7536764	1	LEFT OVEN
3.3812	RCI-645J	7536738	1	ROTISSERIE-RIGHT OVEN
	3.3813 DIAL-BROIL CONTROL			
3.3813	RCI-635J RCI-645J	7536739	1	
	3.3814 DIAL-LAMP SELECTOR SWITCH			
3.3814	RCI-635J RCI-645J	7536740	1	
	3.3815 DIAL-TENDER-MATIC CONTROL			
3.3815	RCI-635J RCI-645J	7536741	1	
	3.387 SWITCH,OVEN CONTROL			
3.387	RCI-635J RCI-645J	7531518	1	
	3.390 PLATE-SURFACE UNIT SWITCH			
3.390	RCD-630J	7536779	2	
	3.396 SWITCH,CONTROL-BROIL			
3.396	RCI-635J RCI-645J	7531876	1	
	3.3961 SWITCH,DISCONNECT-SURFACE UNITS			
3.3961	RCD-630J RCI-635J RCI-645J	6564289	2	
	3.3962 SWITCH-TENDER-MATIC CONTROL			
3.3962	RCI-635J RCI-645J	7531516	1	
	3.3963 SWITCH,TRANSFER-OVEN CONTROL			
3.3963	RCI-635J RCI-645J	7531520	1	INCLUDES BRACKET AND TWO PRESSURE SWITCHES
	3.403 SWITCH,SELECTOR-LAMP			
3.403	RCD-630J	7531948	1	BLACK-OVEN LAMP
3.403	RCD-630J	7524967	1	WHITE-FLUORESCENT LAMP
3.403	RCI-635J RCI-645J	7531514	1	
	3.490 SENSOR-OVEN CONTROL			
3.490	RCI-635J RCI-645J	7531652	1	

GROUP 4 SURFACE UNITS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	4.026 BRACKET-SURFACE UNIT HINGE			
4.026	RCD-630J RCI-635J RCI-645J	6565251	4	
	4.0261 BRACKET,RETAINER-SENSOR			
4.0261	RCI-635J RCI-645J	7528900	1	
	4.099 GASKET-SURFACE UNIT TERMINAL BLOCK SEAL			
4.099	RCD-630J RCI-635J RCI-645J	7535507	4	
	4.126 INSULATOR-SURFACE UNIT CONNECTOR			
4.126	RCD-630J RCI-635J RCI-645J	7535070	4	
	4.208 SCREW			
4.208	RCD-630J RCI-635J RCI-645J	6564547	8	SURFACE UNIT CLAMP TO BRACKET 8-32X5/16
4.2081	RCI-635J RCI-645J	5436528	4	SENSOR SUPPORT 8-15X3/8
4.2082	RCD-630J RCI-635J RCI-645J	6564547	8	SURFACE UNIT BRACKET 8-32X5/16
4.2083	RCD-630J RCI-635J RCI-645J	7529180	8	SURFACE UNIT TERMINAL BLOCK 5-40X7/16
4.2084	RCI-635J RCI-645J	5434896	2	SENSOR RETAINER BRACKET 8-18X1/4
4.2085	RCD-630J RCI-635J RCI-645J	5899587	4	SURFACE UNIT CONNECTOR BLOCK 8-32X3/8
	4.266 UNIT,SURFACE 6-INCH			
4.266	RCI-635J RCI-645J	6590381	1	1250W 118V SPEED HEAT-LEFT FRONT-USE ON 208&236 VOLT WITHOUT CHANGE
4.266	RCD-630J	7531295	3	1250W 236V-1400W 250V-LEFT FRONT, RIGHT & LEFT REAR
4.266	RCI-635J RCI-645J	6590373	1	1450W 236V-RIGHT REAR
4.266	RCD-630J	6590374	3	1450W 208V-LEFT FRONT, RIGHT &LEFT REAR
4.266	RCI-635J RCI-645J	6590374	1	1450W 208V-RIGHT REAR
	4.2661 UNIT,SURFACE 8-INCH			
4.2661	RCD-630J	7521366	1	2050W 236V-RIGHT FRONT
4.2661	RCI-635J RCI-645J	6590379	2	2600W 236V-LEFT REAR AND RIGHT FRONT
4.2661	RCD-630J	6590380	1	2600W 208V-RIGHT FRONT
4.2661	RCI-635J RCI-645J	6590380	2	2600W 208V-LEFT REAR AND RIGHT FRONT
	4.321 SUPPORT-HEAT MINDER SENSOR			
4.321	RCI-635J RCI-645J	6567531	1	
	4.3211 SUPPORT-SURFACE UNIT SMALL			
4.3211	RCD-630J	7529769	3	LEFT FRONT,RIGHT & LEFT REAR
4.3211	RCI-635J RCI-645J	7529831	1	RIGHT REAR
4.3211	RCI-635J RCI-645J	7525903	1	SPEED HEAT-LEFT FRONT
	4.3212 SUPPORT-SURFACE UNIT LARGE			
4.3212	RCD-630J	7529770	1	RIGHT FRONT
4.3212	RCI-635J RCI-645J	7529832	1	LEFT REAR
4.3212	RCI-635J RCI-645J	7529833	1	HEAT MINDER-RIGHT FRONT
	4.327 CLAMP-SURFACE UNIT HINGE			
4.327	RCD-630J RCI-635J RCI-645J	6565252	4	
	4.330 BLOCK,FEMALE-SURFACE UNIT CONNECTOR			
4.330	RCD-630J RCI-635J RCI-645J	7535428	3	BLACK
4.330	RCD-630J	7535427	1	BROWN-USE WITH RIGHT FRONT SURFACE UNIT
4.330	RCI-635J RCI-645J	7527656	1	BROWN-USE WITH SPEED HEAT SURFACE UNIT
	4.3301 BLOCK,MALE-SURFACE UNIT CONNECTOR			
4.3301	RCD-630J RCI-635J RCI-645J	7535071	3	BLACK
4.3301	RCD-630J RCI-635J RCI-645J	7535429	1	BROWN
	4.336 PAN,SMALL-SURFACE UNIT DRIP			
4.336	RCD-630J	6565456	3	
4.336	RCI-635J RCI-645J	6565456	2	
	4.3361 PAN,LARGE-SURFACE UNIT DRIP			
4.3361	RCD-630J	6565457	1	
4.3361	RCI-635J RCI-645J	6565457	2	
	4.490 SENSOR-HEAT MINDER			
4.490	RCI-635J RCI-645J	7526418	1	

1965

GROUP 6 TOPS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.026 BRACKET-LATCH SPRING RETAINER			
6.026	RCD-630J RCI-635J RCI-645J	6569713	1	
	6.029 BUMPER-PULLEY CHANNEL			
6.029	RCD-630J RCI-635J RCI-645J	6567881	2	
	6.037 CHANNEL-PULLEY			
6.037	RCD-630J RCI-635J RCI-645J	7522204	1	LH
6.037	RCD-630J RCI-635J RCI-645J	7522203	1	RH
	6.0371 CHANNEL-COOKING TOP STOP			
6.0371	RCD-630J RCI-635J RCI-645J	7529050	1	
	6.0372 CHANNEL-CABLE SPACER			
6.0372	RCD-630J RCI-635J	7529880	1	
6.0372	RCI-645J	7529901	1	
	6.110 HANDLE-COOKING TOP			
6.110	RCD-630J	7535457	1	
6.110	RCI-635J RCI-645J	7536681	1	
	6.112 HOLDER-CABLE SPACER CHANNEL			
6.112	RCD-630J RCI-635J RCI-645J	5432514	2	NEOPRENE
	6.116 HOUSING-COOKING TOP			
6.116	RCD-630J RCI-635J	7524973	1	
6.116	RCI-645J	6564283	1	
	6.120 SLIDE-COOKING TOP COVER			
6.120	RCD-630J RCI-635J RCI-645J	6567147	2	
	6.149 NUT			
6.149	RCD-630J RCI-635J RCI-645J	7520910	2	LOCK-COOKING TOP SHIPPING
6.1491	RCD-630J RCI-635J RCI-645J	5423225	2	CABLE SPACER CHANNEL
	6.153 PAD-COOKING TOP HANDLE			
6.153	RCI-635J RCI-645J	7536682	2	
	6.156 PANEL,FRONT-COOKING TOP			
6.156	RCD-630J RCI-635J	7536610	1	
6.156	RCI-645J	7536763	1	
	6.177 PULLEY,CABLE-COOKING TOP			
6.177	RCD-630J RCI-635J RCI-645J	6569474	4	
	6.192 RETAINER-CABLE BRACKET			
6.192	RCD-630J RCI-635J RCI-645J	7527850	2	UPPER
	6.1921 RETAINER,SPRING-CABLE PULLEY			
6.1921	RCD-630J RCI-635J RCI-645J	5437128	4	
	6.199 ROLLER-COOKING TOP			
6.199	RCD-630J RCI-635J RCI-645J	6569100	1	
6.199	RCD-630J RCI-635J RCI-645J	6568686	3	
	6.1991 ROLLER-TOP COVER			
6.1991	RCD-630J RCI-635J RCI-645J	6568686	2	
	6.208 SCREW			
6.208	RCD-630J RCI-635J RCI-645J	5439072	1	LATCH KNOB 6-32X3/8
6.2081	RCD-630J RCI-635J RCI-645J	5885072	3	COOKING TOP DRIP PLATE 8-18X3/8
6.2082	RCD-630J RCI-635J RCI-645J	5885072	3	COOKING TOP FRONT PANEL-LOWER 8-18X3/8
6.2083	RCD-630J RCI-635J RCI-645J	5885072	2	COOKING TOP STOP CHANNEL SCREW SHIELD 8-18X3/8
6.2084	RCD-630J RCI-635J RCI-645J	5436528	4	LATCH SPRING RETAINER BRACKET 8-15X3/8
6.2085	RCD-630J RCI-635J RCI-645J	7528041	4	LATCH OPERATING LEVER 8-18X7/16
6.2086	RCD-630J RCI-635J RCI-645J	5435226	8	PULLEY CHANNEL 10-12X3/8
6.2087	RCD-630J RCI-635J RCI-645J	7535565	2	CABLE SPACER CHANNEL 10-32X7/8
6.2088	RCD-630J RCI-635J RCI-645J	5885072	4	COOKING TOP STOP CHANNEL 8-18X3/8
6.2089	RCD-630J RCI-635J RCI-645J	7528041	4	COOKING TOP CABLE 8-18X7/16
6.20811	RCD-630J	187987	2	COOKING TOP HANDLE 12-24X1/2
6.20811	RCI-635J RCI-645J	5430790	2	COOKING TOP HANDLE 10-32X1/2
6.20812	RCD-630J RCI-635J RCI-645J	5435827	4	COOKING TOP COVER SLIDE BRACKET 8-15X1/2
	6.216 SHIELD,SCREW-COOKING TOP STOP CHANNEL			
6.216	RCD-630J RCI-635J RCI-645J	6566986	2	
	6.226 SPRING-TOP COVER			
6.226	RCD-630J RCI-635J RCI-645J	6567610	2	
	6.2261 SPRING-LATCH PIN OPERATING			
6.2261	RCD-630J RCI-635J RCI-645J	6568818	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.235 STOP-COOKING TOP COVER			
6.235	RCD-630J RCI-635J RCI-645J	7528879	1	
	6.253 TRIM-COOKING TOP HOUSING			
6.253	RCD-630J RCI-635J RCI-645J	7529133	1	LH-CEMENTED
6.253	RCD-630J RCI-635J RCI-645J	7529132	1	RH-CEMENTED
	6.258 TOP-COOKING			
6.258	RCD-630J	7531551	1	
6.258	RCI-635J	7522207	1	
6.258	RCI-645J	7522209	1	
	6.279 WASHER			
6.279	RCD-630J RCI-635J RCI-645J	5427712	4	COOKING TOP CABLE PULLEY
6.2791	RCD-630J RCI-635J RCI-645J	6565542	AR	PLAIN-ROLLER
6.2792	RCD-630J	6565542	4	COOKING TOP HANDLE
6.2792	RCI-635J RCI-645J	6565542	2	COOKING TOP HANDLE
	6.321 SUPPORT,HANDLE-COOKING TOP			
6.321	RCD-630J	7518418	2	
	6.350 KNOB-LATCH OPERATING			
6.350	RCD-630J RCI-635J RCI-645J	6568810	1	
	6.356 LEVER-LATCH OPERATING			
6.356	RCD-630J RCI-635J RCI-645J	7521097	1	
	6.364 PIN-COOKING TOP LATCH			
6.364	RCD-630J RCI-635J RCI-645J	6568811	1	
	6.378 COVER-COOKING TOP			
6.378	RCD-630J RCI-635J	7524661	1	
6.378	RCI-645J	7524662	1	
	6.380 BUTTON-COOKING TOP COVER			
6.380	RCD-630J RCI-635J RCI-645J	6567143	2	
	6.390 PLATE-COOKING TOP DRIP			
6.390	RCD-630J RCI-635J	6568842	1	
6.390	RCI-645J	6568843	1	
	6.393 RING,RETAINER-COOKING TOP LATCH PIN			
6.393	RCD-630J RCI-635J RCI-645J	6586240	1	
	6.3931 RING,RETAINER-TOP COVER ROLLER			
6.3931	RCD-630J RCI-635J RCI-645J	5434944	2	
	6.436 CABLE-COOKING TOP			
6.436	RCD-630J RCI-635J RCI-645J	7522206	2	

1965

GROUP 7 FRAMES, PANELS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	7.026 BRACKET-SIDE TRIM			
7.026	RCD-630J RCI-635J RCI-645J	7529048	2	
	7.149 NUT			
7.149	RCD-630J RCI-635J RCI-645J	5433660	AR	CONDENSATION TRIM SPACER
	7.159 PANEL,SIDE-RANGE RH			
7.159	RCD-630J RCI-635J RCI-645J	7521851	1	WHITE
7.159	RCI-635J RCI-645J	7521852	1	YELLOW
7.159	RCI-635J RCI-645J	7521854	1	TURQUOISE
7.159	RCD-630J RCI-635J RCI-645J	7521855	1	COPPER
	7.1591 PANEL,SIDE-RANGE LH			
7.1591	RCD-630J RCI-635J RCI-645J	7521856	1	WHITE
7.1591	RCI-635J RCI-645J	7521857	1	YELLOW
7.1591	RCI-635J RCI-645J	7521859	1	TURQUOISE
7.1591	RCD-630J RCI-635J RCI-645J	7521860	1	COPPER
	7.160 PANEL,TOP-RANGE			
7.160	RCD-630J RCI-635J	7524005	1	WHITE
7.160	RCI-635J	7524006	1	YELLOW
7.160	RCI-635J	7524008	1	TURQUOISE
7.160	RCD-630J RCI-635J	7524009	1	COPPER
7.160	RCI-645J	7524012	1	WHITE
7.160	RCI-645J	7524013	1	YELLOW
7.160	RCI-645J	7524015	1	TURQUOISE
7.160	RCI-645J	7524016	1	COPPER
	7.192 RETAINER-INSULATION			
7.192	RCD-630J RCI-635J	6569530	1	OVEN
7.192	RCI-645J	6569532	1	LEFT OVEN
7.192	RCI-645J	6569531	1	RIGHT OVEN
	7.208 SCREW			
7.208	RCD-630J RCI-635J RCI-645J	7528041	4	ROTISSERIE OPENING COVER 8-18X7/16
7.2081	RCD-630J RCI-635J RCI-645J	148101	2	TOP TRIM
7.2082	RCD-630J RCI-635J RCI-645J	6569714	14	TRIM 6-20X3/8
7.2082	RCD-630J RCI-635J RCI-645J	6569714	2	TRIM 6-20X3/8-USE WITH SIDE TRIM BRACKET
7.2082	RCD-630J RCI-635J RCI-645J	5436528	2	TRIM-USE WITH SHIELD 8-15X3/8
7.2083	RCD-630J RCI-635J RCI-645J	5435828	2	BOTTOM TRIM 8-18X5/8
7.2083	RCD-630J RCI-635J RCI-645J	5435261	4	BOTTOM TRIM 6-20X1/4
7.2084	RCD-630J RCI-635J	5436528	3	CONDENSATION TRIM 8-15X3/8
7.2084	RCI-645J	5436528	4	CONDENSATION TRIM 8-15X3/8
7.2085	RCD-630J RCI-635J RCI-645J	7528041	4	OVEN ANGLE 8-18X7/16
7.2086	RCD-630J RCI-635J	7528041	7	CONDENSATE TRIM PLATE 8-18X7/16
7.2086	RCI-645J	7528041	11	CONDENSATE TRIM PLATE 8-18X7/16
7.2087	RCD-630J RCI-635J	7528041	19	RANGE BACK PANEL 8-18X7/16
7.2087	RCI-645J	7528041	27	RANGE BACK PANEL 8-18X7/16
7.2088	RCD-630J RCI-635J RCI-645J	7528041	10	SIDE PANEL 8-18X7/16
7.2089	RCD-630J RCI-635J RCI-645J	274920	6	INSULATION RETAINER 10-12X1/2
	7.216 SHIELD,SCREW-TRIM			
7.216	RCD-630J RCI-635J RCI-645J	6566986	4	
	7.253 TRIM,SIDE-UPPER			
7.253	RCD-630J RCI-635J RCI-645J	7524677	1	LH-SATIN FINISH-RIBBED
7.253	RCD-630J RCI-635J RCI-645J	7524676	1	RH-SATIN FINISH-RIBBED
	7.2531 TRIM,SIDE-LOWER			
7.2531	RCD-630J RCI-635J RCI-645J	7524675	1	LH-SATIN FINISH-RIBBED
7.2531	RCD-630J RCI-635J RCI-645J	7524674	1	RH-SATIN FINISH-RIBBED
	7.2532 TRIM,BOTTOM-RANGE			
7.2532	RCD-630J RCI-635J	6568907	1	SATIN FINISH
7.2532	RCI-645J	6568909	1	SATIN FINISH
	7.2533 TRIM,TOP-RANGE			
7.2533	RCD-630J RCI-635J	6568908	1	SATIN FINISH
7.2533	RCI-645J	6568910	1	SATIN FINISH
	7.2534 TRIM-CONDENSATION			
7.2534	RCD-630J	7536781	1	
7.2534	RCI-635J	6569535	1	
7.2534	RCI-645J	6569536	1	
	7.310 PANEL,BACK			
7.310	RCD-630J RCI-635J	7535333	1	
7.310	RCI-645J	7535334	1	
	7.319 ANGLE-OVEN			
7.319	RCD-630J RCI-635J	6567345	1	
7.319	RCI-645J	6567346	1	
	7.378 COVER-ROTISSERIE OPENING			
7.378	RCD-630J RCI-635J RCI-645J	6567869	2	REAR
	7.390 PLATE-CONDENSATE TRIM			
7.390	RCD-630J RCI-635J	6569533	1	
7.390	RCI-645J	6569534	1	

GROUP 8 OVEN DOORS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.009 BASE,HANDLE-OVEN DOOR			
8.009	RCD-630J	7535247	1	
8.009	RCI-635J	7529933	1	
8.009	RCI-645J	7529933	2	
	8.011 BEARING,NYLON-TORQUE SHAFT			
8.011	RCD-630J RCI-635J RCI-645J	6569567	2	MOUNT TO DOOR SPRING RETAINER
8.011	RCI-645J	6567433	2	LOWER
8.011	RCI-645J	6567612	2	UPPER
	8.026 BRACKET-LOWER ARM			
8.026	RCD-630J RCI-635J	6564377	2	
8.026	RCI-645J	6564377	4	
	8.0261 BRACKET-DOOR SPRING RETAINER			
8.0261	RCD-630J RCI-635J RCI-645J	6569554	2	
	8.0262 BRACKET-OVEN DOOR LATCH			
8.0262	RCI-635J	6567380	2	
8.0262	RCI-645J	6567380	4	
	8.096 FRAME,OUTSIDE-OVEN DOOR			
8.096	RCD-630J	7529102	1	
8.096	RCI-635J	6567407	1	
8.096	RCI-645J	6567406	1	LEFT
8.096	RCI-645J	6567405	1	RIGHT
	8.0961 FRAME,INSIDE-OVEN DOOR			
8.0961	RCD-630J RCI-635J	6567404	1	
8.0961	RCI-645J	6567403	1	LEFT
8.0961	RCI-645J	6567402	1	RIGHT
	8.099 GASKET-OVEN DOOR HANDLE			
8.099	RCD-630J RCI-635J	6567685	2	
8.099	RCI-645J	6567685	4	
	8.103 GLASS,OUTER-OVEN DOOR			
8.103	RCD-630J RCI-635J	7536601	1	
8.103	RCI-645J	7536614	1	LEFT
8.103	RCI-645J	7536606	1	RIGHT
	8.1031 GLASS,INNER-OVEN DOOR			
8.1031	RCD-630J RCI-635J	6567395	1	
8.1031	RCI-645J	6567394	1	LEFT
8.1031	RCI-645J	6567393	1	RIGHT
	8.110 HANDLE,DOOR-OVEN			
8.110	RCD-630J	7535456	1	
8.110	RCI-635J	7529932	1	
8.110	RCI-645J	7529932	2	
	8.149 NUT			
8.149	RCD-630J RCI-635J RCI-645J	134559	2	OVEN DOOR SPRING ADJUSTING
	8.192 RETAINER-OVEN DOOR GLASS			
8.192	RCD-630J RCI-635J	6567401	1	
8.192	RCI-645J	6567400	1	LEFT
8.192	RCI-645J	6567399	1	RIGHT
	8.1921 RETAINER-DOOR SPRING			
8.1921	RCD-630J RCI-635J RCI-645J	6569566	2	
	8.197 ROD,RELEASE-OVEN DOOR			
8.197	RCI-635J	6567383	2	
8.197	RCI-645J	6567383	4	
	8.1971 ROD-OVEN DOOR LATCH PLATE			
8.1971	RCD-630J	7529104	1	LH
8.1971	RCD-630J	7529103	1	RH
	8.199 ROLLER-OVEN DOOR STOP			
8.199	RCD-630J RCI-635J	5426925	1	
8.199	RCI-645J	5426925	2	
	8.203 SEAL,DOOR-BOTTOM			
8.203	RCD-630J RCI-635J	7527775	1	
8.203	RCI-645J	7527774	1	LEFT OVEN
8.203	RCI-645J	7527773	1	RIGHT OVEN
	8.2031 SEAL,DOOR-SIDE			
8.2031	RCD-630J RCI-635J	6590767	1	INCLUDES SEALS FOR BOTH SIDES
8.2031	RCI-645J	6590767	2	INCLUDES SEALS FOR BOTH SIDES

1965

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.208 SCREW			
8.208	RCD-630J	6566301	2	DOOR HANDLE 12-24X7/8
8.208	RCI-635J	160069	2	DOOR HANDLE 10-32X1
8.208	RCI-645J	160069	4	DOOR HANDLE 10-32X1
8.2081	RCI-635J	446887	2	SET-OVEN DR RELEASE BUTTON 8-32X1/8
8.2081	RCI-645J	446887	4	SET-OVEN DR RELEASE BUTTON 8-32X1/8
8.2082	RCI-635J	6567391	2	OVEN DOOR LATCH BRACKET 8-32X5/16
8.2082	RCI-645J	6567391	4	OVEN DOOR LATCH BRACKET 8-32X5/16
8.2083	RCD-630J RCI-635J	6567391	10	INSIDE OVEN DOOR FRAME 8-32X5/16
8.2083	RCI-645J	6567391	16	INSIDE OVEN DOOR FRAME 8-32X5/16
8.2084	RCI-645J	5435230	4	TORQUE SHAFT LOWER BEARING 10-12X3/4
8.2085	RCI-645J	5899607	4	TORQUE SHAFT UPPER BEARING 10-16X5/8
8.2086	RCD-630J	274920	1	LOWER ARM BRACKET 10-12X1/2
8.2086	RCI-635J	274920	2	LOWER ARM BRACKET 10-12X1/2
8.2086	RCI-645J	274920	4	LOWER ARM BRACKET 10-12X1/2
8.2087	RCD-630J RCI-635J	5439003	8	OVEN DOOR TORQUE SHAFT 10-32X3/8
8.2087	RCI-645J	5439003	16	OVEN DOOR TORQUE SHAFT 10-32X3/8
8.2088	RCD-630J RCI-635J	6546813	2	OVEN DOOR RELEASE ARM 8-32X1/4
8.2088	RCI-645J	6546813	4	OVEN DOOR RELEASE ARM 8-32X1/4
8.2089	RCD-630J RCI-635J	6567381	2	LOWER ARM 10-32X31/64
8.2089	RCI-645J	6567381	4	LOWER ARM 10-32X31/64
8.20811	RCD-630J RCI-635J RCI-645J	6569576	2	OVEN DOOR SPRING ADJUSTING
8.20812	RCD-630J RCI-635J RCI-645J	274920	4	TORQUE SHAFT BEARING 10-12X1/2
8.20813	RCD-630J RCI-635J	5436175	1	OVEN DOOR STOP ROLLER 10-32X1
8.20813	RCI-645J	5436175	2	OVEN DOOR STOP ROLLER 10-32X1
8.20814	RCD-630J RCI-635J RCI-645J	274920	12	DOOR SPRING RETAINER 10-12X1/2
8.20815	RCD-630J RCI-635J	274920	2	BROIL STOP SPRING 10-12X1/2
8.20815	RCI-645J	274920	4	BROIL STOP SPRING 10-12X1/2
8.20816	RCD-630J	6567391	2	OVEN DOOR LATCH PLATE ROD 8-32X5/16
	8.210 SHAFT-TORQUE			
8.210	RCD-630J RCI-635J	7531598	1	
8.210	RCI-645J	7531655	1	LEFT OVEN
8.210	RCI-645J	7531599	1	RIGHT OVEN
	8.222 SPACER-OVEN DOOR LOWER ARM			
8.222	RCD-630J	7529105	1	
	8.226 SPRING-OVEN DOOR LATCH			
8.226	RCI-635J	6567148	2	
8.226	RCI-645J	6567148	4	
	8.2261 SPRING-OVEN DOOR COUNTERBALANCE			
8.2261	RCD-630J RCI-635J	6569574	2	
8.2261	RCI-645J	6569583	1	LEFT
8.2261	RCI-645J	6569582	1	RIGHT
	8.2262 SPRING-BROIL STOP			
8.2262	RCD-630J RCI-635J	6569568	1	
8.2262	RCI-645J	6569581	1	LEFT OVEN
8.2262	RCI-645J	6569580	1	RIGHT OVEN
	8.279 WASHER			
8.279	RCI-645J	5428229	2	LOWER TORQUE SHAFT BEARING 5/8 IN OD
8.279	RCI-645J	629690	2	LOWER TORQUE SHAFT BEARING 3/4 IN OD
8.2791	RCD-630J RCI-635J RCI-645J	60002	2	OVEN DOOR SPRING ADJUSTING
8.2792	RCD-630J	6565749	1	LOCK-LOWER ARM BRACKET
8.2792	RCI-635J	6565749	2	LOCK-LOWER ARM BRACKET
8.2792	RCI-645J	6565749	4	LOCK-LOWER ARM BRACKET
8.2793	RCD-630J	7529152	2	OVEN DOOR HANDLE-PLAIN
8.2793	RCI-635J	6566285	2	OVEN DOOR HANDLE-CUP
8.2793	RCI-645J	6566285	4	OVEN DOOR HANDLE-CUP
8.2794	RCD-630J RCI-635J	6567384	2	CUP-OVEN DOOR RELEASE ARM
8.2794	RCI-645J	6567384	4	CUP-OVEN DOOR RELEASE ARM
8.2795	RCD-630J	6566759	1	OVEN DOOR RELEASE ARM
8.2795	RCI-635J	6566759	2	OVEN DOOR RELEASE ARM
8.2795	RCI-645J	6566759	4	OVEN DOOR RELEASE ARM
8.2796	RCD-630J RCI-635J	5438491	1	BROIL STOP SPRING
8.2796	RCI-645J	5438491	4	BROIL STOP SPRING

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.316 BUSHING-DOOR SPRING			
8.316	RCD-630J RCI-635J RCI-645J	7528017	2	
	8.3161 BUSHING-DOOR SPRING SWIVEL			
8.3161	RCD-630J RCI-635J RCI-645J	7535598	2	
	8.321 SUPPORT,HANDLE-OVEN DOOR			
8.321	RCD-630J	7518418	2	
	8.366 ARM,LOWER-OVEN DOOR			
8.366	RCD-630J	6567435	1	
8.366	RCI-635J	6567435	2	
8.366	RCI-645J	6567435	4	
	8.3661 ARM,UPPER-OVEN DOOR			
8.3661	RCD-630J RCI-635J	7522328	1	LEFT
8.3661	RCD-630J RCI-635J	7522327	1	RIGHT
8.3661	RCI-645J	7522328	2	LEFT
8.3661	RCI-645J	7522327	2	RIGHT
	8.3662 ARM,RELEASE-OVEN DOOR			
8.3662	RCD-630J RCI-635J	6564415	1	LEFT
8.3662	RCD-630J RCI-635J	6564414	1	RIGHT
8.3662	RCI-645J	6564415	2	LEFT
8.3662	RCI-645J	6564414	2	RIGHT
	8.380 BUTTON,RELEASE-OVEN DOOR			
8.380	RCI-635J	6567382	2	
8.380	RCI-645J	6567382	4	
	8.3801 BUTTON-BROIL STOP			
8.3801	RCD-630J RCI-635J	6569572	1	
8.3801	RCI-645J	6569572	2	
	8.393 RING,RETAINER-LOWER ARM BRACKET			
8.393	RCD-630J	6567241	1	
8.393	RCI-635J	6567241	2	
8.393	RCI-645J	6567241	4	

1965

GROUP 9 OVEN LINERS AND PARTS

	9.136 LINER-OVEN			
9.136	RCD-630J	7526480	1	
9.136	RCI-635J	7531525	1	
9.136	RCI-645J	7526485	1	LEFT
9.136	RCI-645J	7531526	1	RIGHT
	9.149 NUT			
9.149	RCD-630J RCI-635J	271163	4	OVEN LINER
9.149	RCI-645J	271163	8	OVEN LINER
	9.153 PAD-OVEN LINER			
9.153	RCD-630J	6569427	2	
	9.208 SCREW			
9.208	RCD-630J RCI-635J RCI-645J	6567391	5	OVEN LINER 8-18X7/16
9.208	RCD-630J RCI-635J	7528041	2	OVEN LINER 8-18X7/16
9.208	RCI-645J	7528041	7	OVEN LINER 8-18X7/16
	9.376 CAP-OVEN LINER CORNER			
9.376	RCD-630J	7528414	2	
	9.380 BUTTON,PLUG-ROTISSERIE			
9.380	RCD-630J RCI-635J RCI-645J	6567525	1	LOWER RIGHT
9.380	RCD-630J RCI-635J RCI-645J	6567526	1	UPPER LEFT

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 10 OVEN INTERIOR PARTS

	10.103 GLASS-OVEN LIGHT			
10.103	RCD-630J RCI-635J	6567295	1	
10.103	RCI-645J	6567295	2	
	10.108 GRILL-BROILER PAN			
10.108	RCD-630J	6565589	1	
10.108	RCI-635J RCI-645J	6561009	1	PART OF SPATTER FREE BRL PAN
	10.110 HANDLE-BROILER PAN			
10.110	RCI-635J RCI-645J	5437919	4	PART OF SPATTER FREE BRL PAN
	10.192 RETAINER-THERMOSTAT BULB			
10.192	RCD-630J RCI-635J	6568792	2	
10.192	RCI-645J	6569993	4	
	10.208 SCREW			
10.208	RCD-630J RCI-635J	6567501	4	SHELF GUIDE
10.208	RCI-645J	6567501	8	SHELF GUIDE
10.2081	RCI-635J RCI-645J	5438261	8	HANDLE-PART OF SPATTER FREE BROILER PAN
	10.213 SHELF-OVEN			
10.213	RCD-630J RCI-635J	7529003	2	
10.213	RCI-645J	7529005	2	LEFT
10.213	RCI-645J	7529004	2	RIGHT
	10.279 WASHER			
10.279	RCD-630J RCI-635J	6567604	4	PLAIN-SHELF GUIDE
10.279	RCI-645J	6567604	8	PLAIN-SHELF GUIDE
10.2791	RCD-630J RCI-635J RCI-645J	5426173	AR	SPACER-SHELF GUIDE
	10.323 GUIDE-SHELF RH			
10.323	RCD-630J RCI-635J	6564481	1	
10.323	RCI-645J	6564481	2	
	10.3231 GUIDE-SHELF LH			
10.3231	RCD-630J RCI-635J	6564482	1	
10.3231	RCI-645J	6564482	2	
	10.336 PAN-BROILER			
10.336	RCD-630J	6569846	1	
10.336	RCI-635J RCI-645J	6561567	1	SPATTER FREE-COMPLETE

GROUP 13 ELECTRICAL PARTS

	13.001 ADAPTER-ELECTRICAL			
13.001	ALL MODELS	5875048	AR	THREE TERMINAL .030X1/4 INCH TAB
	13.007 BAFFLE-BROIL ELEMENT			
13.007	RCD-630J RCI-635J	7535362	1	
13.007	RCI-645J	6567291	1	LEFT OVEN
13.007	RCI-645J	7535362	1	RIGHT OVEN
	13.009 BASE-STARTER			
13.009	RCD-630J RCI-635J RCI-645J	6562260	1	
	13.026 BRACKET-LAMPHOLDER			
13.026	RCI-635J	6567862	2	
13.026	RCI-645J	6567582	2	
	13.0261 BRACKET-SPEED HEAT UNIT FUSE			
13.0261	RCI-635J RCI-645J	6568925	1	
	13.0262 BRACKET-PILOT LIGHT			
13.0262	RCI-635J	7535264	1	
13.0262	RCI-645J	7535235	1	
	13.037 CHANNEL-LEAD COVER			
13.037	RCD-630J RCI-635J	6567831	1	
13.037	RCI-645J	6567831	2	
	13.039 CLIP-LEAD WIRE			
13.039	RCI-645J	6569719	1	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
13.039	RCD-630J RCI-635J	6566117	1	WIRE TYPE MOUNTING WITH SCREW 1-1/4 IN DIA
13.039	RCI-645J	6566117	2	WIRE TYPE MOUNTING WITH SCREW 1-1/4 IN DIA
13.039	RCI-635J	6568051	3	WIRE TYPE MOUNTING WITH SCREW
13.039	RCD-630J RCI-645J	6568051	4	WIRE TYPE MOUNTING WITH SCREW
13.039	RCD-630J RCI-635J	7527865	2	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
13.039	RCI-635J RCI-645J	5437814	1	WIRE SNAP IN TYPE-SURFACE UNIT-MOUNTS TO SENSOR SUPPORT
13.039	RCI-635J RCI-645J	6566168	1	MOUNT WITH SCREW,1/4 IN DIA-HEAT MINDER CAP TUBE
13.039	RCI-645J	7535609	2	WIRE TYPE MOUNTING WITH SCREW 1 IN OD
13.039	RCD-630J RCI-635J RCI-645J	7528581	2	SPECIAL SNAP ON TYPE-CONTROL HOUSING

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.048 CONNECTOR-LINE TERMINAL			
13.048	RCI-645J	5429035	3	COPPER-PLAIN
	13.0481 CONNECTOR,LINE-TER RECEPTACLE JUMPER			
13.0481	RCD-630J RCI-635J RCI-645J	6561562	2	
	13.0482 CONNECTOR,MALE-LEAD WIRE SPLICE			
13.0482	ALL MODELS	5438151	AR	NATURAL COLOR-SIX LEAD WIRES
13.0482	ALL MODELS	6566745	AR	WHITE-SINGLE LEAD WIRE
	13.0483 CONNECTOR,FEMALE-LEAD WIRE SPLICE			
13.0483	ALL MODELS	6567412	AR	NATURAL COLOR-SIX LEAD WIRES
13.0483	ALL MODELS	6566746	AR	WHITE-SINGLE LEAD WIRE
	13.0484 CONNECTOR,MALE-ELECTRICAL			
13.0484	ALL MODELS	P5877822	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	13.0485 CONNECTOR,FEMALE-ELECTRICAL			
13.0485	ALL MODELS	P5877823	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	13.0486 CONNECTOR,SOLDERLESS			
13.0486	ALL MODELS	6585261	AR	SMALL-SET SCREW TYPE NO 18 TO 20 WIRE-3/32 IN ID
13.0486	ALL MODELS	5851484	AR	MEDIUM-SET SCREW TYPE NO 14 TO 18 WIRE-1/8 IN ID
13.0486	ALL MODELS	84514	AR	LARGE-SET SCREW TYPE NO 14 TO 18 WIRE-3/16 IN ID
	13.0487 CONNECTOR,SLEEVE			
13.0487	ALL MODELS	P5873790	AR	CRIMP TYPE #14 TO #16 1 WIRE
	13.080 ELEMENT,HEATING-BROIL			
13.080	RCD-630J RCI-635J	6564765	1	3200W 236V
13.080	RCI-645J	6564823	1	LEFT OVEN 1750W 236V
13.080	RCI-645J	6564765	1	RIGHT OVEN 3200W 236V
13.080	RCD-630J RCI-635J	7520982	1	2800W 208V
13.080	RCI-645J	7520986	1	LEFT OVEN 1750W 208V
13.080	RCI-645J	7520982	1	RIGHT OVEN 2800W 208V
	13.0801 ELEMENT,HEATING-BAKE			
13.0801	RCD-630J RCI-635J	7526489	1	2400W 236V
13.0801	RCI-645J	7526493	1	LEFT OVEN 1600W 236V
13.0801	RCI-645J	7526491	1	RIGHT OVEN 2200W 236V
13.0801	RCD-630J RCI-635J	7526490	1	2330W 208V
13.0801	RCI-645J	7526494	1	LEFT OVEN 1600W 208V
13.0801	RCI-645J	7526492	1	RIGHT OVEN 2200W 208V
	13.098 FUSE			
13.098	RCD-630J RCI-635J RCI-645J	-------	1	15 AMP-APPLIANCE RECEPTACLE-PURCHASE LOCALLY
13.098	RCI-635J RCI-645J	-------	1	20 AMP-SPEED HEAT UNIT-
	13.116 HOUSING-TERMINAL BLOCK			
13.116	RCD-630J RCI-635J RCI-645J	6567245	1	
	13.126 INSULATOR,ELECTRICAL-BROIL RECEPTACLE			
13.126	RCD-630J RCI-635J	6567294	1	
13.126	RCI-645J	6567294	2	
	13.1261 INSULATOR,TERMINAL			
13.1261	ALL MODELS	6567957	AR	VINYL FOR FLAG TERMINALS
	13.1262 INSULATOR,SLEEVE			
13.1262	ALL MODELS	7529395	AR	SILICONE RUBBER-1 INCH LONG 3/16 IN ID
13.1262	ALL MODELS	6568691	AR	VINYL 1-7/16 INCHES LONG 3/16 IN ID
13.1262	ALL MODELS	5423696	AR	37-1/2 INCHES-FOR NO 10 WIRE
	13.132 LAMP,FLUORESCENT			
13.132	RCD-630J RCI-635J	-------	1	25 WATT GE F25T12/CW-28 INCH PURCHASE LOCALLY
13.132	RCI-645J	-------	1	30 WATT GE F30T8/CW-36 INCH PURCHASE LOCALLY
	13.149 NUT			
13.149	RCI-635J RCI-645J	7524744	1	LOAD RESISTOR
13.1491	RCD-630J RCI-635J RCI-645J	5898589	2	TERMINAL BLOCK HOUSING
13.1492	RCD-630J RCI-635J RCI-645J	619078	2	TERMINAL BLOCK
13.1493	RCD-630J RCI-635J RCI-645J	619078	9	TERMINAL BLOCK TERMINAL
13.1494	RCI-645J	5855706	3	LINE TERMINAL CONNECTOR
13.1495	RCD-630J	5895869	1	PILOT LAMP INDICATOR
	13.185 RECEPTACLE-BROIL ELEMENT TERMINAL			
13.185	RCD-630J RCI-635J	6567292	1	
13.185	RCI-645J	6567292	2	

1965

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.1851 RECEPTACLE-APPLIANCE			
13.1851	RCD-630J RCI-635J RCI-645J	7522292	1	
	13.1852 RECEPTACLE,LAMP-OVEN			
13.1852	RCD-630J RCI-635J	6564356	1	
13.1852	RCI-645J	6564356	2	
	13.1853 RECEPTACLE-BAKE ELEMENT TERMINAL			
13.1853	RCD-630J RCI-635J	7535332	1	
13.1853	RCI-645J	7535332	2	
	13.1854 RECEPTACLE-FUSE			
13.1854	RCI-635J RCI-645J	7531422	1	SPEED HEAT
13.1854	RCD-630J RCI-635J RCI-645J	7531141	1	APPLIANCE
	13.188 RELAY			
13.188	RCI-635J RCI-645J	7531651	1	POWER-120 VOLTS 60 CYCLE
13.188	RCI-635J RCI-645J	7531654	1	DOUBLE TYPE-21 AMPS 236 VOLTS
	13.190 RESISTOR-LOAD			
13.190	RCI-635J RCI-645J	7531758	1	R-21-10 OHMS+-5%
	13.192 RETAINER-BROIL RECEPTACLE			
13.192	RCD-630J RCI-635J	6567293	1	
13.192	RCI-645J	6567293	2	
	13.1921 RETAINER-FUSE RECEPTACLE			
13.1921	RCD-630J	7520171	2	
13.1921	RCI-635J RCI-645J	7520171	4	
	13.1922 RETAINER-CONDUIT			
13.1922	RCD-630J RCI-635J RCI-645J	5425684	1	
	13.208 SCREW			
13.208	ALL MODELS	628321	AR	TERMINAL 4-40X5/16 INCH
13.208	ALL MODELS	5899914	AR	TERMINAL 4-40X7/16 INCH
13.208	ALL MODELS	5894191	AR	TERMINAL 6-32X1/4 INCH
13.208	ALL MODELS	5427015	AR	TERMINAL 8-32X1/4 INCH
13.208	ALL MODELS	5426525	AR	TERMINAL 8-32X3/8 INCH
13.208	ALL MODELS	5427014	AR	TERMINAL 8-32X1/2 INCH
13.208	ALL MODELS	5894189	AR	TERMINAL 8-32X5/8 INCH
13.208	ALL MODELS	5426495	AR	TERMINAL 10-32X1/4 INCH
13.208	ALL MODELS	9408527	AR	TERMINAL 10-32X1/2 INCH
13.2081	RCD-630J RCI-635J	7528041	4	LEAD COVER CHANNEL 8-18X7/16
13.2081	RCI-645J	7528041	6	LEAD COVER CHANNEL 8-18X7/16
13.2082	RCD-630J RCI-635J	161867	2	BROIL ELEMENT 8-15X1/2
13.2082	RCD-630J RCI-635J	6567885	2	BROIL ELEMENT 10-32X2
13.2082	RCI-645J	161867	4	BROIL ELEMENT 8-15X1/2
13.2082	RCI-645J	6567885	4	BROIL ELEMENT 10-32X2
13.2083	RCD-630J RCI-635J RCI-645J	5436528	4	LEAD WIRE CLIP 8-15X3/8
13.2083	RCD-630J	7528041	3	LEAD WIRE CLIP 8-18X7/16
13.2083	RCI-635J	7528041	4	LEAD WIRE CLIP 8-18X7/16
13.2083	RCI-645J	7528041	6	LEAD WIRE CLIP 8-18X7/16
13.2084	RCD-630J RCI-635J	6565857	1	BROIL RECEPTACLE RETAINER 10-12X1
13.2084	RCI-645J	6565857	2	BROIL RECEPTACLE RETAINER 10-12X1
13.2085	RCI-635J RCI-645J	5436528	2	PILOT LIGHT BRACKET 8-15X3/8
13.2086	RCI-635J RCI-645J	5435226	2	POWER RELAY 10-12X3/8
13.2087	RCI-635J RCI-645J	5436528	2	TRANSFORMER 8-15X3/8
13.2088	RCI-635J RCI-645J	5435827	2	DOUBLE RELAY 8-15X1/2
13.2089	RCD-630J RCI-635J	5435346	2	BAKE ELEMENT HINGE PLATE 10-12X1-1/2
13.2089	RCI-645J	5435346	4	BAKE ELEMENT HINGE PLATE 10-12X1-1/2
13.20811	RCI-635J RCI-645J	7528041	1	SPEED HEAT UNIT FUSE BRACKET 8-18X7/16
13.20812	RCI-645J	7528041	3	TERMINAL BLOCK COVER 8-18X7/16
13.20813	RCD-630J RCI-635J	6565857	2	OVEN LAMP RECEPTACLE 10-12X1
13.20813	RCI-645J	6565857	4	OVEN LAMP RECEPTACLE 10-12X1
13.20814	RCI-635J RCI-645J	5436528	2	FLUOR LAMP HOLDER BRACKET 8-15X3/8
13.20815	RCD-630J RCI-635J RCI-645J	163102	2	FLUOR LAMP HOLDER 6-20X1/2
13.20816	RCD-630J RCI-635J RCI-645J	5436528	2	STARTER BASE 8-15X3/8
13.20817	RCD-630J RCI-635J RCI-645J	6546560	2	TERMINAL BLOCK 10-12X3/4
13.20817	RCD-630J RCI-635J RCI-645J	6566861	2	TERMINAL BLOCK 10-32X3/4
13.20818	RCD-630J RCI-635J RCI-645J	5436724	2	CONDUIT RETAINER 10-32X3/8
13.20819	RCD-630J RCI-635J RCI-645J	5424117	1	GROUND STRAP 10-12X3/8
13.20821	RCD-630J	6569059	2	FUSE RECEPTACLE TERMINAL 8-32X1/4
13.20821	RCI-635J RCI-645J	6569059	4	FUSE RECEPTACLE TERMINAL 8-32X1/4
13.20822	RCD-630J RCI-635J RCI-645J	5436724	2	TERMINAL BLOCK HOUSING 10-32X3/8
13.20823	RCD-630J RCI-635J	6567391	2	FLUORESCENT LAMP BALLAST 8-32X5/16
13.20823	RCI-645J	5436724	2	FLUORESCENT LAMP BALLAST 10-32X3/8

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.230 STARTER-FLUORESCENT LAMP			
13.230	RCD-630J RCI-635J	6560637	1	
13.230	RCI-645J	5432429	1	
	13.248 INDICATOR-OVEN PILOT LAMP			
13.248	RCD-630J	7529130	1	
	13.251 TRANSFORMER-TENDER-MATIC CONTROL			
13.251	RCI-635J RCI-645J	7531653	1	11 VOLT
	13.279 WASHER			
13.279	RCD-630J RCI-635J	633591	3	TERMINAL-PLAIN
13.279	RCD-630J RCI-635J	5433842	1	TERMINAL-CUP
13.279	RCI-645J	5433842	5	TERMINAL-CUP
	13.321 SUPPORT-BAKE ELEMENT			
13.321	RCD-630J RCI-635J	7526501	1	
13.321	RCI-645J	7526503	1	LEFT OVEN
13.321	RCI-645J	7526502	1	RIGHT OVEN
	13.327 CLAMP,BROIL ELEMENT RETAINER-OVEN			
13.327	RCD-630J RCI-635J	5436951	12	
13.327	RCI-645J	5436951	16	
	13.3271 CLAMP-LEAD WIRE			
13.3271	RCI-645J	7527865	1	
	13.3272 CLAMP-TERMINAL			
13.3272	RCD-630J RCI-635J	7536768	3	
	13.329 TERMINAL,ELECTRIC			
13.329	ALL MODELS	6568735	6	TAB-USE WITH VENT HOODS
13.3291	ALL MODELS	5438535	AR	LEAD CONNECTOR-BRASS ANGLE WITH HOLE TO CONNECT BLADE RECEPTACLE AND EYELET TYPE TERMINAL LEADS
13.3292	ALL MODELS	5223619	AR	LEAD CONNECTOR TO CONNECT TAB AND EYELET TYPE TERMINAL LEADS
13.3293	ALL MODELS	P5873786	AR	EYELET-LEAD WIRE #6 SCREW
13.3293	ALL MODELS	P5873787	AR	EYELET-LEAD WIRE #8 SCREW
13.3293	ALL MODELS	P5873788	AR	EYELET-LEAD WIRE #10 SCREW
13.3294	ALL MODELS	P5873789	AR	BULLET NOSE-NO 14 TO 16 WIRE
13.3295	ALL MODELS	P5875093	AR	BLADE RECEPTACLE-1 WIRE STR .030X1/4 INCH TAB
13.3295	ALL MODELS	P6569386	AR	BLADE RECEPTACLE-2 WIRE STR .030X1/4 INCH TAB-BRASS
13.3295	ALL MODELS	7535219	AR	BLADE RECEPTACLE-2 WIRE STR .030X1/4 INCH TAB-STEEL NICKEL
13.3295	ALL MODELS	6566627	AR	BLADE RECEPTACLE-1 WIRE STR .020X3/16 INCH TAB
13.3295	ALL MODELS	7529602	AR	BLADE RECEPTACLE-2 WIRE STR .020X3/16 INCH TAB
13.3295	ALL MODELS	7547988	AR	BLADE RECEPTACLE-1 WIRE STR .030X.205 INCH TAB-BRASS
13.3296	ALL MODELS	P5875091	AR	BLADE RECEPTACLE-FLAG-1 WIRE .020X3/16 INCH TAB
13.3296	ALL MODELS	P5875092	AR	BLADE RECEPTACLE-FLAG-1 WIRE .030X1/4 INCH TAB
13.3296	ALL MODELS	7547989	AR	BLADE RECEPTACLE-FLAG-1 WIRE .030X.205 INCH TAB-BRASS
13.3297	ALL MODELS	6592122	AR	TAB-.016X1/4 INCH-2 WIRE STR
13.3298	ALL MODELS	P5875094	AR	BLADE RECEPTACLE-PIGGY BACK-1 WIRE STRAIGHT .030X1/4 TAB
13.3299	ALL MODELS	6592002	AR	RECEPTACLE-HARNESS HOUSING 2 WIRE STR-.030X1/4 INCH TAB
	13.330 BLOCK-TERMINAL			
13.330	RCD-630J RCI-635J RCI-645J	6563359	2	
	13.358 BULB,LAMP-OVEN ILLUMINATING			
13.358	RCD-630J RCI-635J	-------	1	MEDIUM BASE-40 WATT-PURCHASE LOCALLY
13.358	RCI-645J	-------	2	MEDIUM BASE-40 WATT-PURCHASE LOCALLY
	13.3581 BULB,LAMP-OVEN PILOT			
13.3581	RCD-630J	-------	1	CANDELABRA BASE-10 WATT-PURCHASE LOCALLY
	13.363 HOLDER,LAMP-FLUORESCENT			
13.363	RCD-630J RCI-635J RCI-645J	6564594	2	
	13.3631 HOLDER,LAMP-OVEN PILOT			
13.3631	RCD-630J	7524966	1	

1965

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.371 BALLAST-FLUORESCENT LAMP			
13.371	RCD-630J RCI-635J	6562489	1	25 WATT
13.371	RCI-645J	5432344	1	30 WATT
	13.378 COVER-TERMINAL BLOCK			
13.378	RCI-645J	6567870	1	
	13.386 STRAP,GROUND			
13.386	RCD-630J RCI-635J	7536767	1	
13.386	RCI-645J	5426989	1	
	13.390 PLATE-BAKE ELEMENT HINGE			
13.390	RCD-630J RCI-635J	7529639	1	
13.390	RCI-645J	7529639	2	
	13.394 SPLICE,MALE-ELECTRICAL			
13.394	ALL MODELS	P5431641	AR	BLADE TO BLADE .030X1/4 INCH TAB
	13.438 HARNESS,ELECTRICAL			
13.438	RCD-630J	7531594	1	COOKING TOP
13.438	RCI-635J	7530771	1	COOKING TOP
13.438	RCI-645J	7530772	1	COOKING TOP
13.438	RCD-630J	7531593	1	LINE AND THERMOSTAT
13.438	RCI-645J	7531577	1	OVEN CONTROL
13.438	RCI-635J	7531527	1	SWITCHES
13.438	RCI-645J	7531588	1	SWITCHES
13.438	RCI-645J	7531585	1	LEFT THERMOSTAT
13.438	RCI-635J	7531576	1	OVEN CONTROL TO MEAL MINDER
13.438	RCD-630J	7531947	1	TERMINAL BLOCK TO COOKING TOP
	13.489 LIGHT,PILOT-SURFACE UNIT			
13.489	RCD-630J	7526449	1	
13.489	RCI-635J RCI-645J	7525909	1	
	13.4891 LIGHT,PILOT-OVEN			
13.4891	RCI-635J	7525908	2	
13.4891	RCI-645J	7525908	3	

GROUP 14 ACCESSORIES AND PARTS

	14.023 BOX-JUNCTION			
14.023	RCD-630J RCI-635J RCI-645J	5879987	1	PART OF EH-30J,EH-40J,EH-35J &EH-45J VENT HOODS
	14.029 BUMPER-FRONT PANEL			
14.029	RCD-630J RCI-635J	6592262	2	PART OF ED-30J AND EH-35J VENT HOODS
14.029	RCI-645J	6592262	4	PART OF EH-40J & EH-45J VENT HOODS
	14.037 CHANNEL-WIRING			
14.037	RCD-630J RCI-635J RCI-645J	6592480	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.039 CLIP-FILTER			
14.039	RCD-630J RCI-635J RCI-645J	6592128	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.048 CONNECTOR,FEMALE-LEAD WIRE SPLICE			
14.048	RCD-630J RCI-635J RCI-645J	7529998	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.0481 CONNECTOR,MALE-LEAD WIRE SPLICE			
14.0481	RCD-630J RCI-635J RCI-645J	7528468	2	VENT HOOD PLUG IN-MOUNTS TO CONTROL HOUSING-3 WIRE
14.0481	RCD-630J RCI-635J RCI-645J	6592478	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS-SAME AS 7528468 WITH WIRE
	14.088 FILTER,AIR			
14.088	RCD-630J RCI-635J	5879979	1	PART OF EH-30J&EH-35J VENT HOODS
14.088	RCI-645J	5879980	1	PART OF EH-40J&EH-45J VENT HOODS
14.0881	RCD-630J RCI-635J	6592487	1	CARBON-PART OF EH-35J VENT HOOD
14.0881	RCI-645J	6592488	1	CARBON-PART OF EH-45J VENT HOOD
14.0882	RCD-630J RCI-635J	6592489	1	SMOKE-PART OF EH-35J VENT HOOD
14.0882	RCI-645J	6592490	1	SMOKE-PART OF EH-45J VENT HOOD
	14.101 GEAR-SPROCKET			
14.101	RCI-635J RCI-645J	6592135	2	PART OF 6590486 ROTISSERIE
	14.109 GROMMET,NEOPRENE-CONDUIT			
14.109	RCD-630J RCI-635J RCI-645J	5875949	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.113 HOOD,VENT			
14.113	RCD-630J RCI-635J	-------	1	EH-30J&EH-35J FINISHED PRODUCTS
14.113	RCI-645J	-------	1	EH-40J&EH-45J FINISHED PRODUCTS
	14.1131 HOOD,TOP-VENTLESS			
14.1131	RCD-630J RCI-635J	6592837	1	PART OF EH-35J VENT HOOD
14.1131	RCI-645J	6592838	1	PART OF EH-45J VENT HOOD
	14.116 HOUSING-BLOWER			
14.116	RCD-630J RCI-635J RCI-645J	5879985	1	LH PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.116	RCD-630J RCI-635J RCI-645J	5879984	1	RH PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
	14.143 MOTOR-ROTISSERIE			
14.143	RCI-635J RCI-645J	7524935	1	PART OF ROTISSERIE KIT
	14.1431 MOTOR-BLOWER			
14.1431	RCD-630J RCI-635J RCI-645J	6592484	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.149 NUT			
14.149	RCD-630J RCI-635J RCI-645J	95142	AR	TRIM-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.1491	RCD-630J RCI-635J RCI-645J	5434526	1	CIRCUIT BREAKER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
	14.156 PANEL,FRONT-VENT HOOD			
14.156	RCD-630J RCI-635J	6593105	1	COMPLETE-PART OF EH-30J& EH-35J VENT HOODS
14.156	RCI-645J	6593106	1	COMPLETE-PART OF EH-40J& EH-45J VENT HOODS
	14.1561 PANEL,FRONT-HOOD TRIM			
14.1561	RCD-630J RCI-635J	6592263	1	PART OF EH-30J&EH-35J VENT HOODS
14.1561	RCI-645J	6592264	1	PART OF EH-40J&EH-45J VENT HOODS
	14.170 PLATE,NAME-HOOD			
14.170	RCD-630J RCI-635J RCI-645J	6592127	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.174 PROTECTOR,ELECTRICAL-CIRCUIT BREAKER			
14.174	RCD-630J RCI-635J RCI-645J	5432132	1	15AMP-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
	14.182 RACK-ROTISSERIE			
14.182	RCI-635J RCI-645J	7520920	1	PART OF ROTISSERIE KIT
	14.1821 RACK-ROASTER SIDE			
14.1821	RCD-630J RCI-635J RCI-645J	6560779	2	FOR SPATTER FREE BROILER PAN
	14.192 RETAINER-FRONT PANEL			
14.192	RCD-630J RCI-635J RCI-645J	6592481	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.199 ROLLER-FRONT PANEL			
14.199	RCD-630J RCI-635J RCI-645J	6592482	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS

1965

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.208 SCREW			
14.208	RCI-635J RCI-645J	5435817	2	THUMB-ROTISSERIE FORK-PART OF ROTISSERIE KIT
14.2081	RCI-635J RCI-645J	6562048	5	ROTISSERIE-PART OF ROTISSERIE KIT 10-12X1/2
14.2082	RCD-630J RCI-635J RCI-645J	5879992	4	VENT HOOD
14.2083	RCI-635J RCI-645J	5430929	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT 8-32X3/8
14.2084	RCI-635J RCI-645J	5879944	2	SWITCH INSULATOR-PART OF ROTISSERIE KIT 6-32X1/4
14.2085	RCI-635J RCI-645J	6592138	2	SWITCH-PART OF ROTISSERIE KIT 2-56X1-3/8
14.2086	RCD-630J RCI-635J RCI-645J	5855529	AR	TRIM-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.2087	RCD-630J RCI-635J RCI-645J	5885238	1	JUNCTION BOX COVER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.2088	RCD-630J RCI-635J RCI-645J	5885238	3	JUNCTION BOX-PART OF EH-30J, EH-40J,EH-35J&EH-45J VENT HOODS
14.2089	RCD-630J RCI-635J RCI-645J	5885238	1	SWITCH BOX COVER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.20811	RCD-630J RCI-635J RCI-645J	5885238	1	WIRING CHANNEL-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.20812	RCD-630J RCI-635J RCI-645J	5887721	2	FRONT PANEL RETAINER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.20813	RCD-630J RCI-635J RCI-645J	443778	2	SET-BLOWER WHEEL-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.20814	RCD-630J RCI-635J RCI-645J	7528041	2	PLUG IN COVER-PART OF EH-30J, EH-40J,EH-35J&EH-45J VENT HOODS
	14.226 SPRING-LINK WIRE			
14.226	RCI-635J RCI-645J	6592136	1	PART OF ROTISSERIE KIT
	14.2261 SPRING-SWITCH			
14.2261	RCD-630J RCI-635J RCI-645J	6592124	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.2262 SPRING-FILTER			
14.2262	RCD-630J RCI-635J RCI-645J	6592475	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.2263 SPRING-FRONT PANEL ROLLER			
14.2263	RCD-630J RCI-635J RCI-645J	6592483	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.253 TRIM-HOOD HOUSING			
14.253	RCD-630J RCI-635J	6592123	1	PART OF EH-30J&EH-35J VENT HOODS
14.253	RCI-645J	6592129	1	PART OF EH-40J&EH-45J VENT HOODS
	14.2531 TRIM,FRONT-HOOD			
14.2531	RCD-630J RCI-635J	6592125	1	PART OF EH-30J&EH-35J VENT HOODS
14.2531	RCI-645J	6592130	1	PART OF EH-40J&EH-45J VENT HOODS
	14.2532 TRIM-CIRCUIT BREAKER			
14.2532	RCD-630J RCI-635J RCI-645J	6565962	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.279 WASHER			
14.279	RCI-635J RCI-645J	5879591	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT
14.2791	RCD-630J RCI-635J RCI-645J	5898148	AR	TRIM-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.2792	RCD-630J RCI-635J RCI-645J	5886323	1	LOCK-CIRCUIT BREAKER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
	14.311 DUCT,AIR			
14.311	RCD-630J RCI-635J RCI-645J	5879977	1	PART OF EH-30J&EH-40J VENT HOODS
	14.327 CLAMP-BLOWER HOUSING			
14.327	RCD-630J RCI-635J RCI-645J	5879978	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.336 PAN-BROILER			
14.336	RCD-630J	6561567	1	SPATTER FREE-COMPLETE
14.336	RCI-645J	6591106	1	SMALL FOR LEFT OVEN-COMPLETE
	14.341 WHEEL,BLOWER			
14.341	RCD-630J RCI-635J RCI-645J	5879982	1	LH-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.341	RCD-630J RCI-635J RCI-645J	5879981	1	RH-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.348 LINK-TRIGGER TO SPRING			
14.348	RCI-635J RCI-645J	6592132	1	PART OF ROTISSERIE KIT
	14.3481 LINK-ACTUATING ARM TO PLATE			
14.3481	RCI-635J RCI-645J	6592134	1	PART OF ROTISSERIE KIT
	14.351 CHAIN-DRIVE			
14.351	RCI-635J RCI-645J	6592133	1	PART OF ROTISSERIE KIT
	14.364 PIN-GEAR			
14.364	RCI-635J RCI-645J	6592137	2	PART OF ROTISSERIE KIT
	14.378 COVER-ROTISSERIE			
14.378	RCI-635J RCI-645J	6568763	1	LOWER
14.378	RCI-635J RCI-645J	6568762	1	UPPER
	14.3781 COVER-JUNCTION BOX			
14.3781	RCD-630J RCI-635J RCI-645J	6592477	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.3782 COVER-SWITCH BOX			
14.3782	RCD-630J RCI-635J RCI-645J	6592476	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.3783 COVER-AIR DUCT			
14.3783	RCD-630J RCI-635J RCI-645J	6592486	1	PART OF EH-30J&EH-40J VENT HOODS
	14.3784 COVER-PLUG IN			
14.3784	RCD-630J RCI-635J RCI-645J	6592485	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.396 SWITCH-BLOWER OPERATING			
14.396	RCD-630J RCI-635J RCI-645J	5432253	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.3961 SWITCH-ROTISSERIE			
14.3961	RCI-635J RCI-645J	7520919	1	PART OF ROTISSERIE KIT
	14.428 ROTISSERIE KIT			
14.428	RCI-635J RCI-645J	6590486	1	
	14.430 SPIT-ROTISSERIE			
14.430	RCI-635J RCI-645J	7520921	1	PART OF ROTISSERIE KIT
	14.431 FORK,TURNING-ROTISSERIE			
14.431	RCI-635J RCI-645J	5432586	2	PART OF ROTISSERIE KIT
	14.485 GRIDDLE,KANT SLIDE			
14.485	RCD-630J RCI-635J RCI-645J	6563250	1	USE ON 8 INCH SURFACE UNITS

1965

GROUP 15 INSULATION

	15.124 INSULATION,BULK			
15.124	ALL MODELS	*5873771	AR	1X18X30 INCHES
15.124	ALL MODELS	*5873772	AR	2X24X90 INCHES
15.124	ALL MODELS	*5873773	AR	2-1/2X42X90 INCHES
15.124	ALL MODELS	*5873774	AR	3X38X90 INCHES
15.1241	RCD-630J RCI-635J	-------	1	OVEN SIDES AND BOTTOM 2X15X59 INCHES
15.1241	RCI-645J	-------	1	LEFT OVEN SIDES AND BOTTOM 2X15X49 INCHES
15.1241	RCI-645J	-------	1	RIGHT OVEN SIDES AND BOTTOM 2X15X57 INCHES
15.1242	RCD-630J	-------	1	OVEN TOP 3X16X28 INCHES
15.1242	RCI-645J	-------	1	LEFT OVEN TOP 3X14X16 INCHES
15.1242	RCI-645J	-------	1	RIGHT OVEN TOP 3X16X22 INCHES
15.1243	RCD-630J	-------	1	OVEN BACK 2X16X28 INCHES
15.1243	RCI-645J	-------	1	LEFT OVEN BACK 2X14X16 INCHES
15.1243	RCI-645J	-------	1	RIGHT OVEN BACK 2X16X22 IN
	15.1244 INSULATION,ASBESTOS-COOKING TOP COVER			
15.1244	RCD-630J RCI-635J RCI-645J	6567916	1	SOUND 8-7/16X18 INCHES-CUT TO SIZE REQUIRED

*CUT TO SIZE FROM BULK PIECES

GROUP 16 BASE CABINETS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.026 BRACKET-HINGE PIVOT			
16.026	RCD-630J RCI-635J RCI-645J	6567649	4	PART OF B-30&B-40 BASE CABINETS
	16.029 BUMPER-DOOR			
16.029	RCD-630J RCI-635J RCI-645J	6568980	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.0291 BUMPER-SHELF			
16.0291	RCD-630J RCI-635J RCI-645J	6569025	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.0292 BUMPER,SLEEVE-SHELF			
16.0292	RCD-630J RCI-635J	6569022	2	PART OF B-30 BASE CABINET
16.0292	RCI-645J	6569022	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.070 DOOR-BASE CABINET LH			
16.070	RCD-630J RCI-635J	7521951	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCI-635J	7521972	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCI-635J	7521974	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCD-630J RCI-635J	7521975	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCI-645J	7521978	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCI-645J	7521999	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCI-645J	7522001	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCI-645J	7522002	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	16.0701 DOOR-BASE CABINET RH			
16.0701	RCD-630J RCI-635J	7521950	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCI-635J	7521964	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCI-635J	7521966	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCD-630J RCI-635J	7521967	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCI-645J	7521977	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCI-645J	7521991	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCI-645J	7521993	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCI-645J	7521994	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	16.096 FRAME-BASE CABINET			
16.096	RCD-630J RCI-635J	-------	1	PART OF B-30 BASE CABINET NOT AVAILABLE
16.096	RCI-645J	-------	1	PART OF B-40 BASE CABINET NOT AVAILABLE
	16.110 HANDLE,DOOR-BASE CABINET			
16.110	RCD-630J RCI-635J	6568979	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.110	RCI-645J	6568996	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.149 NUT			
16.149	RCD-630J RCI-635J RCI-645J	5439337	2	DOOR STRIKE-PART OF B-30& B-40 BASE CABINETS
16.1492	RCD-630J RCI-635J RCI-645J	447014	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.1493	RCD-630J RCI-635J	7524744	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105
16.1493	RCI-645J	7524744	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.208 SCREW			
16.208	RCD-630J RCI-635J RCI-645J	5887109	8	HINGE PIVOT BRACKET-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
16.2081	RCD-630J RCI-635J RCI-645J	5909850	8	DOOR HINGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
16.2082	RCD-630J RCI-635J RCI-645J	6568999	6	DOOR HANDLE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-18X3/8
16.2085	RCD-630J RCI-635J	5909850	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-32X1/2
16.2085	RCD-630J RCI-635J	5435827	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-15X1/2
16.2085	RCI-645J	5909850	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-32X1/2
16.2085	RCI-645J	5435827	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-15X1/2
16.2086	RCD-630J RCI-635J RCI-645J	5415118	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 3/8-16X5/8
16.2087	RCD-630J RCI-635J RCI-645J	455508	4	UPPER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
16.2089	RCD-630J RCI-635J RCI-645J	455508	4	LOWER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
16.20811	RCD-630J RCI-635J RCI-645J	6569714	2	LOWER TRIM CAP-PART OF B-30& B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 6-20X3/8
16.20812	RCD-630J RCI-635J RCI-645J	6574035	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.213 SHELF-CABINET			
16.213	RCD-630J RCI-635J	7521343	1	PART OF B-30 BASE CABINET MODEL NO 6560105
16.213	RCI-645J	7521344	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.253 TRIM,SIDE-UPPER			
16.253	RCD-630J RCI-635J RCI-645J	6568982	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106-SATIN FINISH-RIBBED
	16.2531 TRIM,SIDE-LOWER			
16.2531	RCD-630J RCI-635J RCI-645J	6568983	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.279 WASHER			
16.2791	RCD-630J RCI-635J RCI-645J	640152	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.282 WRENCH-GLIDER BUTTON ADJUSTING			
16.282	RCD-630J RCI-635J RCI-645J	6568988	1	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.316 BUSHING-HINGE PIVOT			
16.316	RCD-630J RCI-635J RCI-645J	6567650	4	PART OF B-30&B-40 BASE CABINETS
	16.323 GUIDE-SHELF			
16.323	RCD-630J RCI-635J	6569021	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.323	RCI-645J	6569021	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.328 CATCH,SPRING-DOOR			
16.328	RCD-630J RCI-635J RCI-645J	6567662	2	PART OF B-30&B-40 BASE CABINETS
	16.346 HINGE,DOOR-RH TOP AND LH BOTTOM			
16.346	RCD-630J RCI-635J RCI-645J	6564643	2	PART OF B-30&B-40 BASE CABINETS
	16.3461 HINGE,DOOR-LH TOP AND RH BOTTOM			
16.3461	RCD-630J RCI-635J RCI-645J	6564644	2	PART OF B-30&B-40 BASE CABINETS

1965

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.349 STRIKE-DOOR			
16.349	RCD-630J RCI-635J RCI-645J	6568984	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.376 CAP-LOWER TRIM			
16.376	RCD-630J RCI-635J RCI-645J	6569067	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.378 COVER-REAR ACCESS			
16.378	RCD-630J RCI-635J RCI-645J	7522003	2	WHITE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCI-635J RCI-645J	7522004	2	YELLOW-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCI-635J RCI-645J	7522006	2	TURQUOISE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCD-630J RCI-635J RCI-645J	7522007	2	COPPER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.380 BUTTON,GLIDER-CABINET			
16.380	RCD-630J RCI-635J RCI-645J	6568985	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.3801 BUTTON,PLUG-DOOR			
16.3801	RCD-630J RCI-635J RCI-645J	432608	4	PART OF B-30&B-40 BASE CABINETS

FRIGIDAIRE
FLAIR RANGES
PARTS CATALOG

1966 MODELS

INDEX

ILLUSTRATIONS

DESCRIPTION	PAGES
1966 PRODUCT VIEWS	1
CONTROL PANEL, MEAL MINDER, SWITCHES AND PARTS	2
CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS	3
OVEN DOORS AND ACTUATING PARTS	4
COOKING TOP, SURFACE UNITS AND PARTS	5
OVEN LINERS AND INTERIOR PARTS	6
PANELS, TRIMS AND PARTS	7
BASE CABINETS AND PARTS	8
ROTISSERIE - ACCESSORY	8
VENT HOOD - ACCESSORY	9
ELECTRICAL TERMINALS AND CONNECTORS	10
LEAD WIRE CHART	10

PARTS GROUPS

GROUPS	DESCRIPTION	PAGES
1	CONTROL PANELS AND PARTS	11
2	COOK-MASTERS AND PARTS	12
3	SWITCHES AND PARTS	12
4	SURFACE UNITS AND PARTS	14
6	TOPS AND PARTS	15
7	FRAMES, PANELS AND PARTS	17
8	OVEN DOORS AND PARTS	18
9	OVEN LINERS AND PARTS	20
10	OVEN INTERIOR PARTS	20
13	ELECTRICAL PARTS	21
14	ACCESSORIES AND PARTS	25
15	INSULATION	28
16	BASE CABINETS AND PARTS	28

1966

ALPHABETICAL INDEX

DESCRIPTION	CODE
ADAPTER - Electrical	13.001
ANGLE - Oven	7.319
ARM, CONTROL - Switch Operating	3.366
ARM, LOWER - Oven Door	8.366
ARM, RELEASE - Oven Door	8.3662
ARM, UPPER - Oven Door	8.3661
BAFFLE - Broil Element	13.007
BALLAST - Fluorescent Lamp	13.371
BASE, HANDLE - Oven Door	8.009
BASE - Starter	13.009
BEARING, NYLON - Torque Shaft	8.011
BLOCK, FEMALE - Surface Unit Connector	4.330
BLOCK, MALE - Surface Unit Connector	4.3301
BLOCK - Terminal	13.330
BOX - Junction	14.023
BRACKET - Door Spring Retainer	8.0261
BRACKET - Hinge Pivot	16.026
BRACKET - Lampholder	13.026
BRACKET - Latch Spring Retainer	6.026
BRACKET - Lower Arm	8.026
BRACKET - Oven Door Latch	8.0262
BRACKET, RETAINER - Sensor	4.0261
BRACKET - Side Trim	7.026
BRACKET - Surface Unit Hinge	4.026
BRACKET - Surface Unit Switch	3.0261
BRACKET - Switch	3.026
BRACKET - Thermostat	3.0262
BRACKET - Top Cover Slide	6.0261
BULB, LAMP - Oven Illuminating	13.358
BULB, LAMP - Oven Pilot	13.3581
BUMPER - Door	16.029
BUMPER - Front Panel	14.029
BUMPER - Pulley Channel	6.029
BUMPER - Shelf	16.0291
BUMPER, SLEEVE - Shelf	16.0292
BUSHING - Door Spring	8.316
BUSHING - Door Spring Swivel	8.3161
BUSHING - Hinge Pivot	16.316
BUSHING, RUBBER - Surface Unit Switch Seal	3.030
BUTTON - Broil Stop	8.3801
BUTTON - Cooking Top Cover	6.380
BUTTON, GLIDER - Cabinet	16.380
BUTTON, PLUG - Control Housing	1.380
BUTTON, PLUG - Door	16.3801
BUTTON, PLUG - Rotisserie	9.380
BUTTON, RELEASE - Oven Door	8.380
BUTTON - Switch Arm Glide	3.380
CABLE - Cooking Top	6.436
CAP - Lower Trim	16.376
CAP - Oven Liner Corner	9.376
CATCH, SPRING - Door	16.328
CHAIN - Drive	14.351
CHANNEL - Cable Spacer	6.0372
CHANNEL - Cooking Top Stop	6.0371
CHANNEL - Lead Cover	13.037
CHANNEL - Pulley	6.037
CHANNEL - Wiring	14.037
CLAMP - Blower Housing	14.327
CLAMP, BROIL ELEMENT RETAINER - Oven	13.327
CLAMP - Surface Unit Hinge	4.327
CLAMP - Terminal	13.3272
CLAMP - Thermostat Capillary Tube	3.327
CLIP - Filter	14.039
CLIP - Lead Wire	13.039
CONNECTOR, FEMALE - Electrical	13.0485
CONNECTOR, FEMALE - Lead Wire Splice	13.0483
CONNECTOR - Line Terminal	13.048
CONNECTOR, LINE - Terminal Receptacle Jumper	13.0481
CONNECTOR, MALE - Electrical	13.0484
CONNECTOR, MALE - Lead Wire Splice	13.0482
CONNECTOR, SLEEVE	13.0487
CONNECTOR, SOLDERLESS	13.0486
COOKMASTER AND TIME SIGNAL	2.374
COVER - Air Duct	14.3783
COVER - Control Housing	1.378
COVER - Cooking Top	6.378
COVER - Junction Box	14.3781
COVER - Plug In	14.3784
COVER - Rear Access	16.378
COVER - Rotisserie	14.378
COVER - Rotisserie Opening	7.378
COVER - Switch Box	14.3782
COVER - Terminal Block	13.378
DIAL - Broil Control	3.3813
DIAL - Lamp Selector Switch	3.3814
DIAL, SWITCH - Heat Minder	3.3811
DIAL, SWITCH - Infinite Heat Surface Unit	3.381
DIAL - Tender-matic Control	3.3815
DIAL - Thermostat	3.3812
DOOR - Base Cabinet LH	16.070
DOOR - Base Cabinet RH	16.0701
DUCT, AIR	14.311
ELEMENT, HEATING - Bake	13.0801
ELEMENT, HEATING - Broil	13.080
END - Lamp Housing	1.395
ESCUTCHEON - Control Panel	1.081
FILTER, AIR	14.088
FORK, TURNING - Rotisserie	14.431
FRAME - Base Cabinet	16.090
FRAME - Cookmaster And Time Signal	2.096
FRAME, INSIDE - Oven Door	8.0961
FRAME, OUTSIDE - Oven Door	8.096
FUSE	13.098
GASKET - Oven Door Handle	8.099
GASKET - Surface Unit Terminal Block Seal	4.099
GEAR - Sprocket	14.101
GLASS - Control Panel	1.103
GLASS - Cookmaster And Time Signal	2.103
GLASS, INNER - Oven Door	8.1031
GLASS - Lamp Housing	1.1031
GLASS, OUTER - Oven Door	8.103
GLASS - Oven Light	10.103
GRIDDLE, KANT SLIDE	14.485
GRILL - Broiler Pan	10.108
GROMMET, NEOPRENE - Conduit	14.109
GUIDE - Shelf (Base Cabinet)	16.323
GUIDE - Shelf LH	10.3231
GUIDE - Shelf RH	10.323
HANDLE - Broiler Pan	10.110
HANDLE - Cooking Top	6.110
HANDLE, DOOR - Base Cabinet	16.110
HANDLE, DOOR - Oven	8.110
HARNESS, ELECTRICAL	13.438
HINGE, DOOR - LH Top And RH Bottom	16.3461
HINGE, DOOR - RH Top And LH Bottom	16.346
HOLDER - Cable Spacer Channel	6.112
HOLDER, LAMP - Fluorescent	13.363
HOLDER, LAMP - Oven Pilot	13.3631
HOOD, TOP - Ventless	14.1131
HOOD, VENT	14.113
HOUSING - Blower	14.116
HOUSING - Control	1.116
HOUSING - Cooking Top	6.116
HOUSING - Terminal Block	13.116
INDICATOR - Oven Pilot Lamp	13.248
INSULATION, ASBESTOS - Cooking Top Cover	15.1244
INSULATION, BULK	15.124
INSULATION - Lamp Housing Lower Trim	1.124
INSULATOR, ELECTRICAL - Broil Receptacle	13.126
INSULATOR, SLEEVE	13.1262
INSULATOR - Surface Unit Connector	4.126
INSULATOR, TERMINAL	13.1261
KNOB, CONTROL - Broil	3.1304

ALPHABETICAL INDEX - Continued


DESCRIPTION	CODE
KNOB, CONTROL - Cookmaster And Time Signal	2.130
KNOB, CONTROL - Lamp Selector Switch	3.130
KNOB, CONTROL - Meal Minder	2.1301
KNOB, CONTROL - Oven Thermostat	3.1303
KNOB, CONTROL - Surface Units	3.1302
KNOB, CONTROL - Tender-matic	3.1301
KNOB - Latch Operating	6.350
LAMP, FLUORESCENT	13.132
LEVER - Latch Operating	6.356
LIGHT, PILOT - Oven	13.4891
LIGHT, PILOT - Surface Unit	13.489
LINER - Oven	9.136
LINK - Actuating Arm To Plate	14.3481
LINK - Trigger To Spring	14.348
MEAL MINDER	2.528
MOTOR - Blower	14.1431
MOTOR - Cookmaster And Time Signal	2.143
MOTOR - Meal Minder	2.1431
MOTOR - Oven Control	3.143
MOTOR - Rotisserie	14.143
NUT - Cable Spacer Channel	6.1491
NUT - Circuit Breaker	14.1491
NUT - Condensation Trim Spacer	7.149
NUT - Connector Terminal Block Terminal	13.149
NUT - Door Strike	16.149
NUT - Knurled - Lamp Switch	3.149
NUT - Lamp Housing Shield	1.149
NUT - Lamp Housing Top Trim	1.1491
NUT - Line Terminal Connector	13.1494
NUT, LOCK - Cooling Top Shipping	6.149
NUT - Oven Door Spring Adjusting	8.149
NUT - Oven Liner	9.149
NUT - Pilot Lamp Indicator	13.1495
NUT - Rear Access Cover	16.1492
NUT - Shelf Guide	16.1493
NUT - Tender-matic Control Switch	3.149
NUT - Terminal Block	13.1492
NUT - Terminal Block Housing	13.1491
NUT - Terminal Block Terminal	13.1493
NUT - Trim	14.149
PAD - Control Panel Glass	1.153
PAN - Broiler	10.336
PAN, LARGE - Surface Unit Drip	4.3361
PAN, SMALL - Surface Unit Drip	4.336
PANEL, BACK	7.310
PANEL, FRONT - Cooking Top	6.156
PANEL, FRONT - Hood Trim	14.1561
PANEL, FRONT - Vent Hood	14.156
PANEL, SIDE - Range LH	7.1591
PANEL, SIDE - Range RH	7.159
PANEL, TOP - Range	7.160
PIN - Cooking Top Latch	6.364
PIN, COTTER - Switch Operating Arm	3.163
PIN - Gear	14.364
PLATE - Bake Element Hinge	13.390
PLATE - Condensate Trim	7.390
PLATE - Cooking Top Drip	6.390
PLATE, NAME - Hood	14.170
PLATE - Surface Unit Switch	3.390
PROTECTOR, ELECTRICAL - Circuit Breaker	14.174
PULLEY, CABLE - Cooking Top	6.177
RACK - Roaster Side	14.1821
RACK - Rotisserie	14.182
RECEPTACLE - Appliance	13.1851
RECEPTACLE - Bake Element Terminal	13.1853
RECEPTACLE - Broil Element Terminal	13.185
RECEPTACLE - Fuse	13.1854
RECEPTACLE, LAMP -Oven	13.1852
REINFORCEMENT - Cooking Top Handle	6.320
RETAINER - Broil Receptacle	13.192
RETAINER - Cable Bracket	6.192
RETAINER - Conduit	13.1922
RETAINER - Door Spring	8.1921
RETAINER - Front Panel	14.192
RETAINER - Fuse Receptacle	13.1921
RETAINER - Insulation	7.192
RETAINER - Oven Door Glass	8.192
RETAINER, SPRING - Cable Pulley	6.1921
RETAINER, SPRING - Switch	3.192
RETAINER - Switch Dial	3.1921
RETAINER - Thermostat Bulb	10.192
RETAINER, TOP - Control Panel Glass	1.192
RING, RETAINER - Cooking Top Latch Pin	6.393
RING, RETAINER - Lower Arm Bracket	8.393
RING, RETAINER - Top Cover Roller	6.3931
ROD - Oven Door Latch Plate	8.1971
ROD, RELEASE - Oven Door	8.197
ROLLER - Cooking Top	6.199
ROLLER - Front Panel	14.199
ROLLER - Oven Door Stop	8.199
ROLLER - Top Cover	6.1991
ROTISSERIE KIT	14.428
SCREW - Bake Element Hinge Plate	13.2089
SCREW - Bottom Trim	7.2083
SCREW - Broil Control Switch	3.2086
SCREW - Broil Element	13.2082
SCREW - Broil Receptacle Retainer	13.2084
SCREW - Broil Stop Spring	8.20815
SCREW - Cable Spacer Channel	6.2087
SCREW - Condensate Trim Plate	7.2086
SCREW - Condensation Trim	7.2084
SCREW - Conduit Retainer	13.208
SCREW - Control Housing	1.2084
SCREW - Control Housing Cover	1.2086
SCREW - Control Panel Escutcheon	1.2087
SCREW - Control Panel Glass Support	1.2081
SCREW - Cooking Top Cable	6.2089
SCREW - Cooking Top Cover Slide Bracket	6.20812
SCREW - Cooking Top Drip Plate	6.2081
SCREW - Cooking Top Front Panel	6.2082
SCREW - Cooking Top Handle	6.20811
SCREW - Cooking Top Stop Channel	6.2088
SCREW - Cooking Top Stop Channel Screw Shield	6.2083
SCREW - Disconnect Switch	3.20811
SCREW - Disconnect Switch Shield	3.2088
SCREW - Door Handle	8.208
SCREW - Door Handle (Base Cabinets)	16.2082
SCREW - Door Hinge	16.2081
SCREW - Door Spring Retainer	8.20814
SCREW - Flair Range	16.2086
SCREW - Fluorescent Lamp Ballast	13.2085
SCREW - Fluorescent Lamp Holder	13.20815
SCREW - Fluorescent Lamp Holder Bracket	13.20814
SCREW - Front Panel Retainer	14.20812
SCREW - Fuse Receptacle Terminal	13.2087
SCREW - Gears And Motor	14.2083
SCREW - Ground Strap	13.2088
SCREW - Handle For Spatter Free Broiler	10.208
SCREW - Heat Minder Switch	3.2087
SCREW - Hinge Pivot Bracket	16.208
SCREW - Infinite Heat Surface Unit Switch	3.2084
SCREW - Inside Oven Door Frame	8.2083
SCREW - Insulation Retainer	7.2089
SCREW - Junction Box	14.2088
SCREW - Junction Box Cover	14.2087
SCREW - Lamp Housing End	1.208
SCREW - Lamp Housing Lower Trim	1.2082
SCREW - Lamp Housing Top Trim	1.2083
SCREW - Lamp Switch	3.2085
SCREW - Latch Knob	6.208
SCREW - Latch Operating Lever	6.2085
SCREW - Latch Spring Retainer Bracket	6.2084
SCREW - Lead Cover Channel	13.2081
SCREW - Lead Wire Clip	13.2083
SCREW - Lower Arm	8.2089
SCREW - Lower Arm Bracket	8.2086
SCREW - Lower Side Trim	16.2089
SCREW - Lower Trim Cap	16.20811
SCREW - Meal Minder	2.208

1966

ALPHABETICAL INDEX - Continued

DESCRIPTION	CODE
SCREW - Oven Angle	7.2085
SCREW - Oven Control	3.20813
SCREW - Oven Door Latch Bracket	8.2082
SCREW - Oven Door Release Arm	8.2088
SCREW - Oven Door Spring Adjusting	8.20811
SCREW - Oven Door Stop Roller	8.20813
SCREW - Oven Door Torque Shaft	8.2087
SCREW - Oven Lamp Receptacle	13.20813
SCREW - Oven Liner	9.208
SCREW - Oven Thermostat	3.2081
SCREW - Plug In Cover	14.20814
SCREW - Pulley Channel	6.2086
SCREW - Range Back Panel	7.2087
SCREW - Rear Access Cover	16.20812
SCREW - Rotisserie	14.2081
SCREW - Rotisserie Opening Cover	7.208
SCREW - Sensor Retainer Bracket	4.2084
SCREW - Sensor Support	4.2081
SCREW, SET - Blower Wheel	14.20813
SCREW, SET - Oven Door Release Button	8.2081
SCREW - Shelf Guide	10.208
SCREW - Shelf Guide - Base Cabinet	16.2085
SCREW - Side Panel	7.2088
SCREW - Speed Heat Switch	3.2083
SCREW - Starter Base	13.20816
SCREW - Surface Unit Bracket	4.2082
SCREW - Surface Unit Clamp To Bracket	4.208
SCREW - Surface Unit Connector Block	4.2085
SCREW - Surface Unit Switch Bracket	3.2082
SCREW - Surface Unit Switch Shield	3.20812
SCREW - Surface Unit Terminal Block	4.2083
SCREW - Switch	14.2085
SCREW - Switch Box Cover	14.2089
SCREW - Switch Bracket	3.208
SCREW - Switch Insulator	14.2084
SCREW - Terminal	13.208
SCREW - Terminal Block Cover	13.20812
SCREW - Terminal Block Housing	13.2086
SCREW - Thermostat Bracket	3.2089
SCREW - Thermostat Capillary Tube Clamp	3.20814
SCREW - Thermostat Capillary Tube Support	3.20815
SCREW, THUMB - Rotisserie Fork	14.208
SCREW - Top Spacer Washer	1.2085
SCREW - Top Trim	7.2081
SCREW - Torque Shaft Bearing	8.20812
SCREW - Torque Shaft Lower Bearing	8.2084
SCREW - Torque Shaft Upper Bearing	8.2085
SCREW - Trim	7.2082
SCREW - Trim - Vent Hoods	14.2086
SCREW - Upper Side Trim	16.2087
SCREW - Vent Hood	14.2082
SCREW - Wiring Channel	14.20811
SEAL, DOOR - Bottom	8.203
SEAL, DOOR - Side	8.2031
SEAL, RUBBER - Lamp Housing Top Trim	1.204
SEAL, SHAFT - Surface Unit Switch	3.205
SENSOR - Heat Minder	4.490
SHAFT - Torque	8.210
SHELF - Cabinet	16.213
SHELF - Oven	10.213
SHIELD - Disconnect Switch	3.216
SHIELD - Lamp Housing	1.216
SHIELD, SCREW - Cooking Top Stop Channel	6.216
SHIELD, SCREW - Trim	7.216
SHIELD - Surface Unit Switch	3.2161
SLIDE - Cooking Top Cover	6.120
SPACER - Oven Door Lower Arm	8.222
SPIT - Rotisserie	14.430
SPLICE, MALE - Electrical	13.394
SPRING - Broil Stop	8.2262
SPRING - Filter	14.2262
SPRING - Front Panel Roller	14.2263
SPRING - Latch Pin Operating	6.2261
SPRING - Link Wire	14.226
SPRING - Oven Door Counterbalance	8.2261
SPRING - Oven Door Latch	8.226
SPRING - Switch	14.2261
SPRING - Top Cover	6.226
STARTER - Fluorescent Lamp	13.230
STOP - Cooking Top Cover	6.235
STRAP, GROUND	13.386
STRIKE - Door	16.349
SUPPORT - Bake Element	13.321
SUPPORT - Control Panel Glass	1.321
SUPPORT, HANDLE - Cooking Top	6.321
SUPPORT, HANDLE - Oven Door	8.321
SUPPORT - Heat Minder Sensor	4.321
SUPPORT - Surface Unit Large	4.3212
SUPPORT - Surface Unit Small	4.3211
SUPPORT - Thermostat Capillary Tube	3.321
SWITCH - Blower Operating	14.396
SWITCH, CONTROL - Broil	3.387
SWITCH - Cookmaster And Time Signal Terminal	2.396
SWITCH, DISCONNECT - Surface Units	3.3961
SWITCH - Rotisserie	14.3961
SWITCH, SELECTOR - Lamp	3.403
SWITCH, SURFACE UNIT - Heat Minder	3.285
SWITCH, SURFACE UNIT - Infinite Heat	3.2852
SWITCH, SURFACE UNIT - Speed Heat	3.2851
TERMINAL, ELECTRIC	13.329
THERMOSTAT - Oven	3.242
THERMOSTAT - Tender-matic Control	3.2421
TOP - Cooking	6.258
TRIM, BOTTOM - Range	7.2532
TRIM - Circuit Breaker	14.2532
TRIM - Condensation	7.2534
TRIM - Cooking Top Housing	6.253
TRIM, FRONT - Hood	14.2531
TRIM - Glass Control Panel End	1.2532
TRIM - Hood Housing	14.253
TRIM, LOWER - Lamp Housing	1.253
TRIM, SIDE - Lower	7.2531
TRIM, SIDE - Lower (Base Cabinet)	16.2531
TRIM, SIDE - Upper	7.253
TRIM, SIDE - Upper (Base Cabinet)	16.253
TRIM, TOP - Lamp Housing	1.2531
TRIM, TOP - Range	7.2533
UNIT, SURFACE - 6 Inch	4.266
UNIT, SURFACE - 8 Inch	4.2661
WASHER - Broil Stop Spring	8.2796
WASHER - Circuit Breaker	14.2792
WASHER - Cooking Top Cable Pulley	6.279
WASHER - Cooking Top Handle	6.2792
WASHER, CUP - Oven Door Release Arm	8.2794
WASHER, CUP - Top Spacer	1.279
WASHER - Flair Range	16.2791
WASHER - Gears And Motor	14.279
WASHER - Lamp Switch	3.279
WASHER - Lower Arm Bracket	8.2792
WASHER - Lower Torque Shaft Bearing	8.279
WASHER - Oven Door Handle	8.2793
WASHER - Oven Door Release Arm	8.2795
WASHER - Oven Door Spring Adjusting	8.2791
WASHER - Roller	6.2791
WASHER - Terminal	13.279
WASHER - Trim	14.2791
WHEEL, BLOWER	14.341
WRENCH - Glider Button Adjusting	16.282


1966 PRODUCT VIEWS

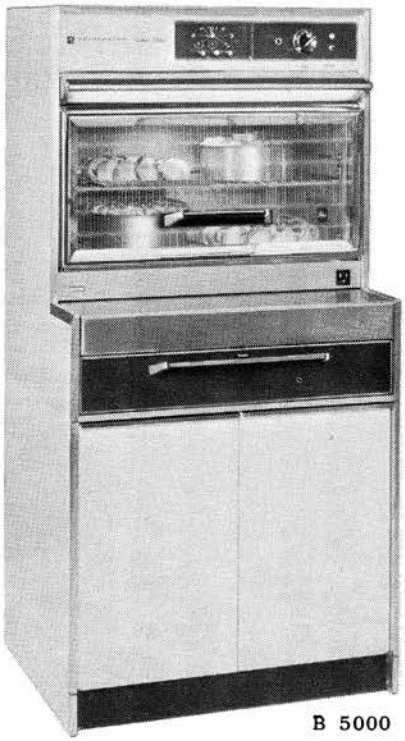

B 5000


Model RCD-630K
With B-30 Base Cabinet.

1966

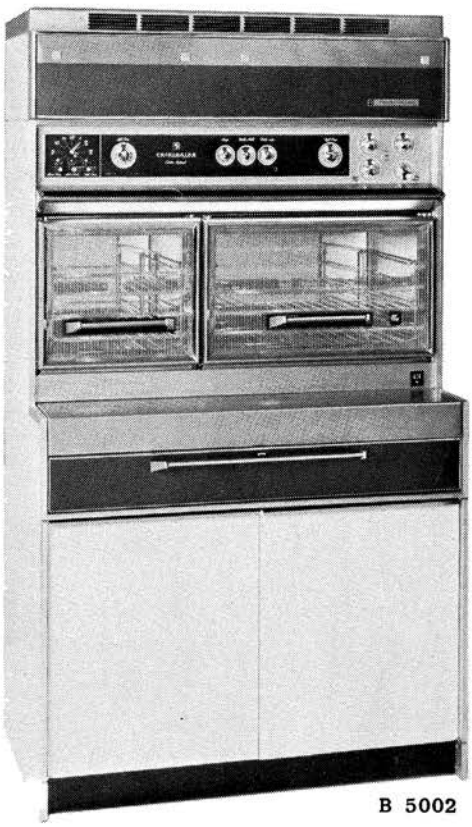

B 5002

Model RCI-645K
With B-40 Base Cabinet
and EH-45J Vent Hood.

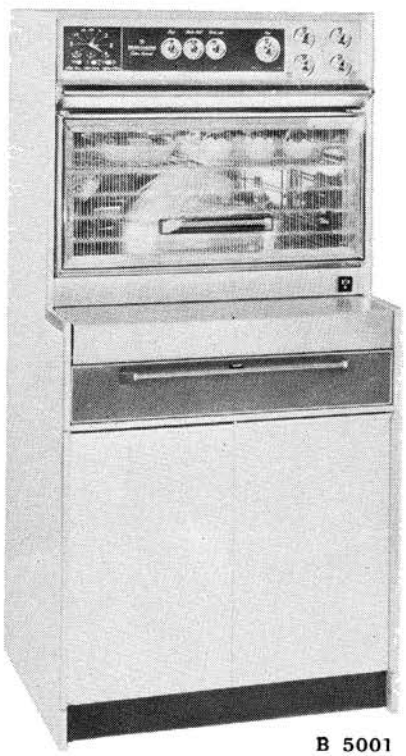


B 5001

Model RCI-635K
With B-30 Base Cabinet.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

CONTROL PANEL, MEAL MINDER, SWITCHES AND PARTS

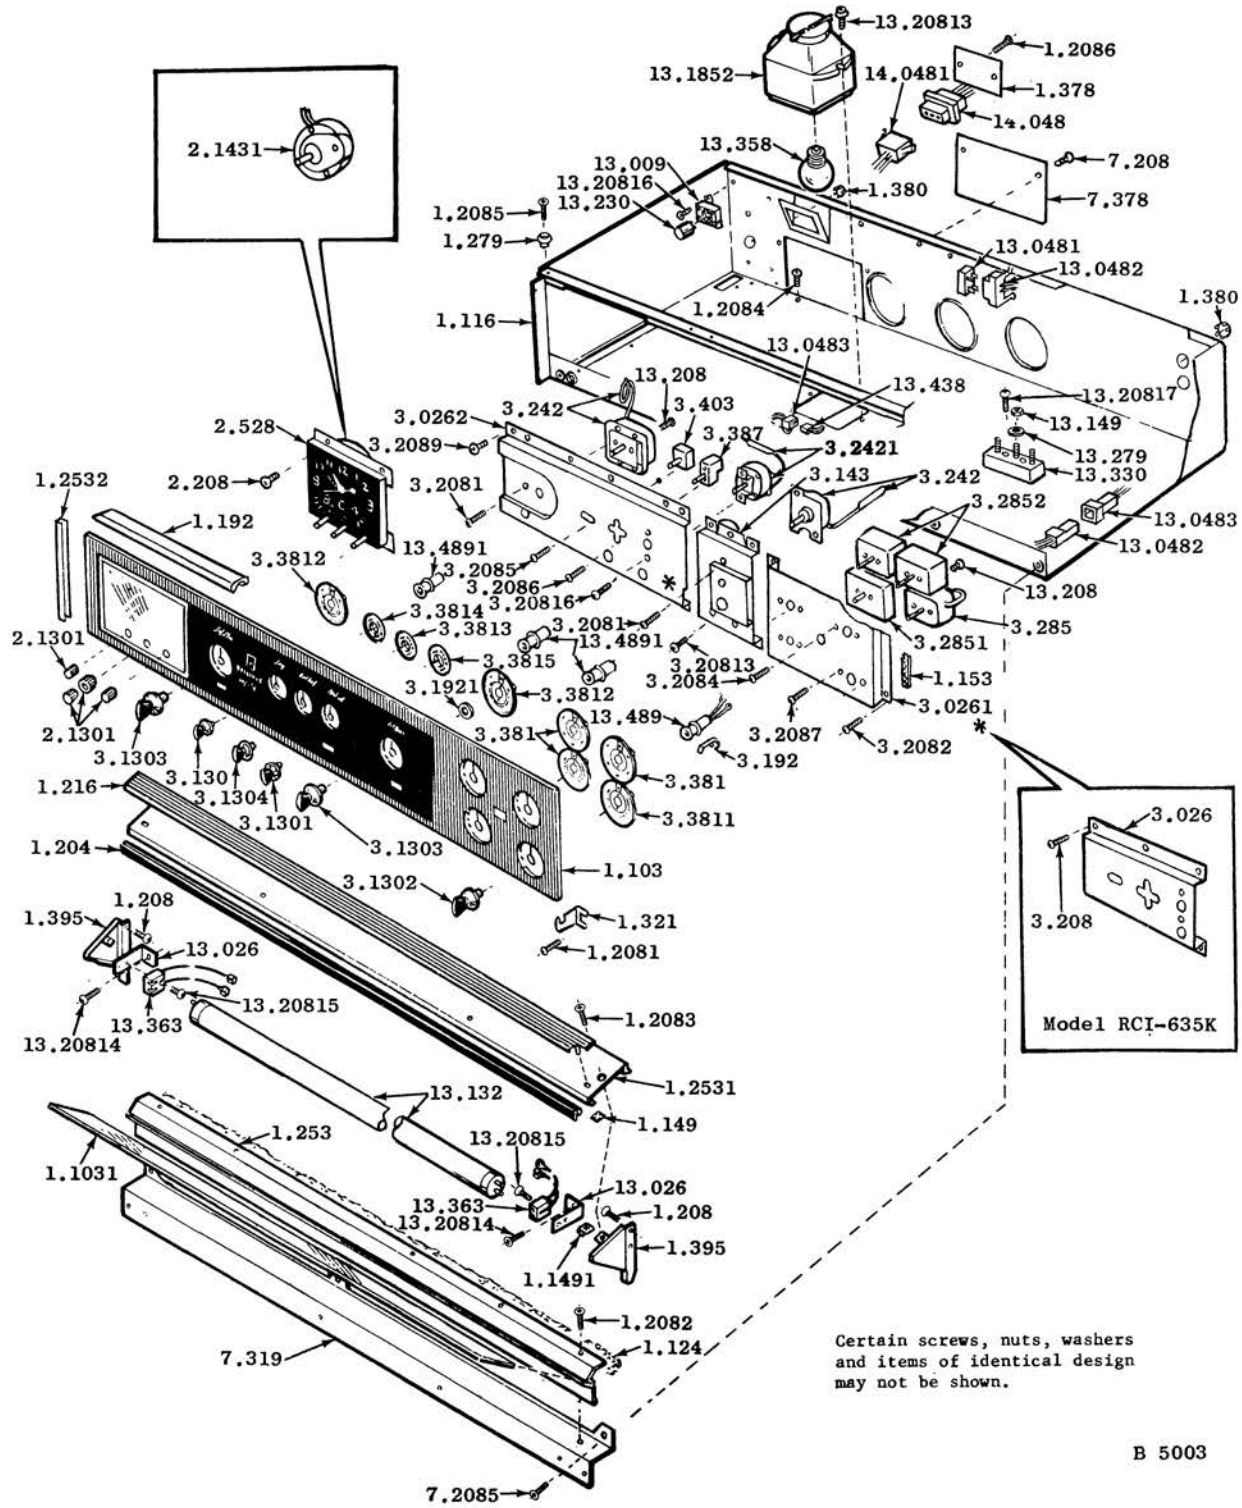


The appearance of the Control Panel will vary depending upon the location of the Oven Thermostats.

Model RCI-645K

This illustration may also be used for the selection of parts for model RCI-635K, but all parts shown are not used on this model.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS

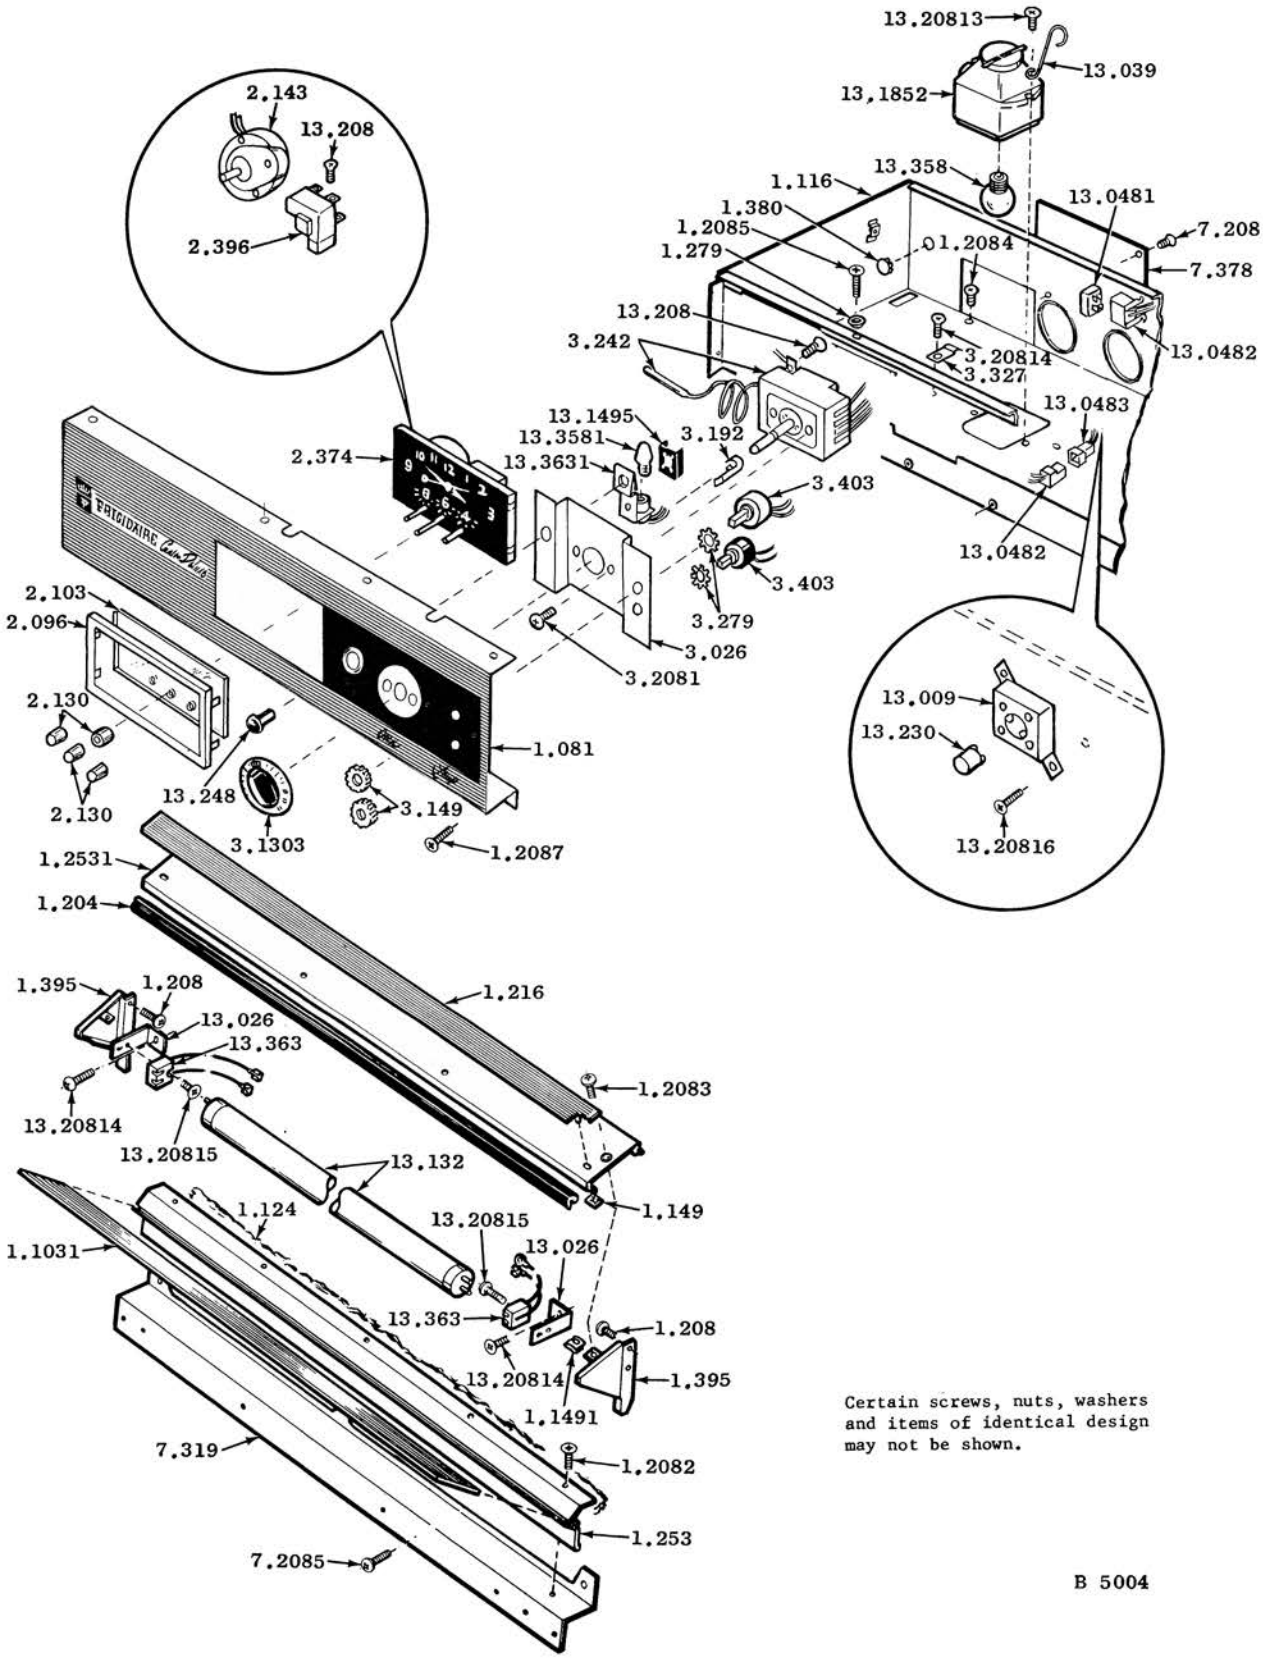


Certain screws, nuts, washers and items of identical design may not be shown.

B 5004

Model RCD-630K

1966

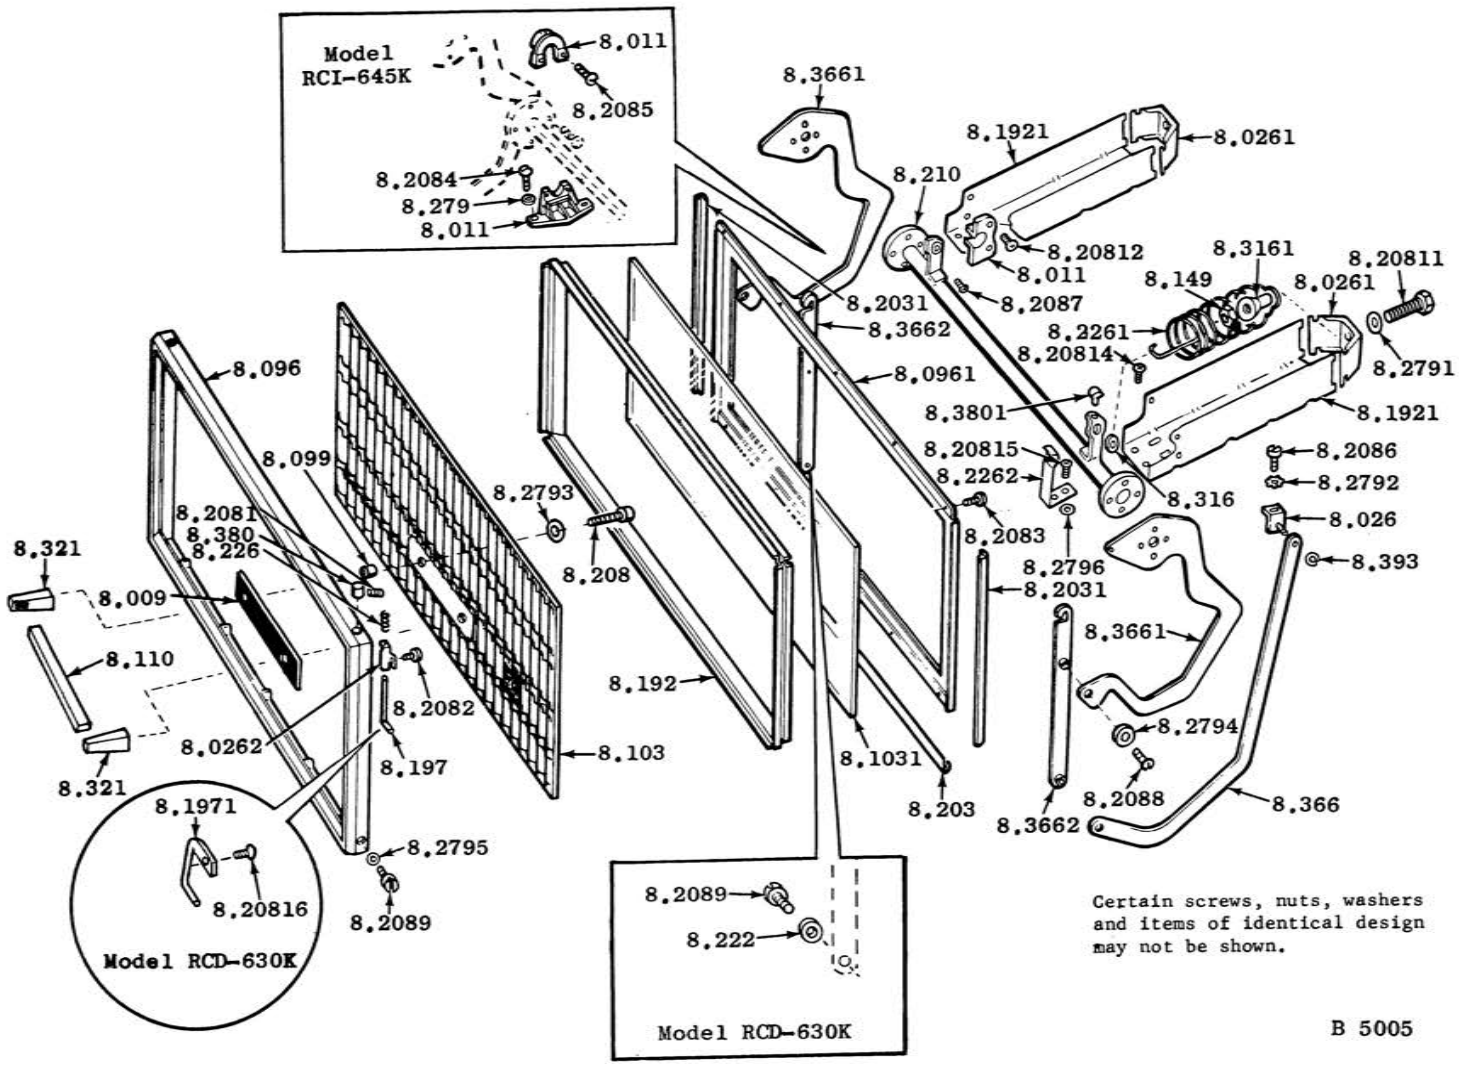


Model RCI-635K

This illustration may also be used for the selection of parts for models RCD-630K and RCI-645K, but all parts shown are not used on these models.

Model RCI-645K has two oven doors. Parts are similar for both doors

COOKING TOP, SURFACE UNITS AND PARTS

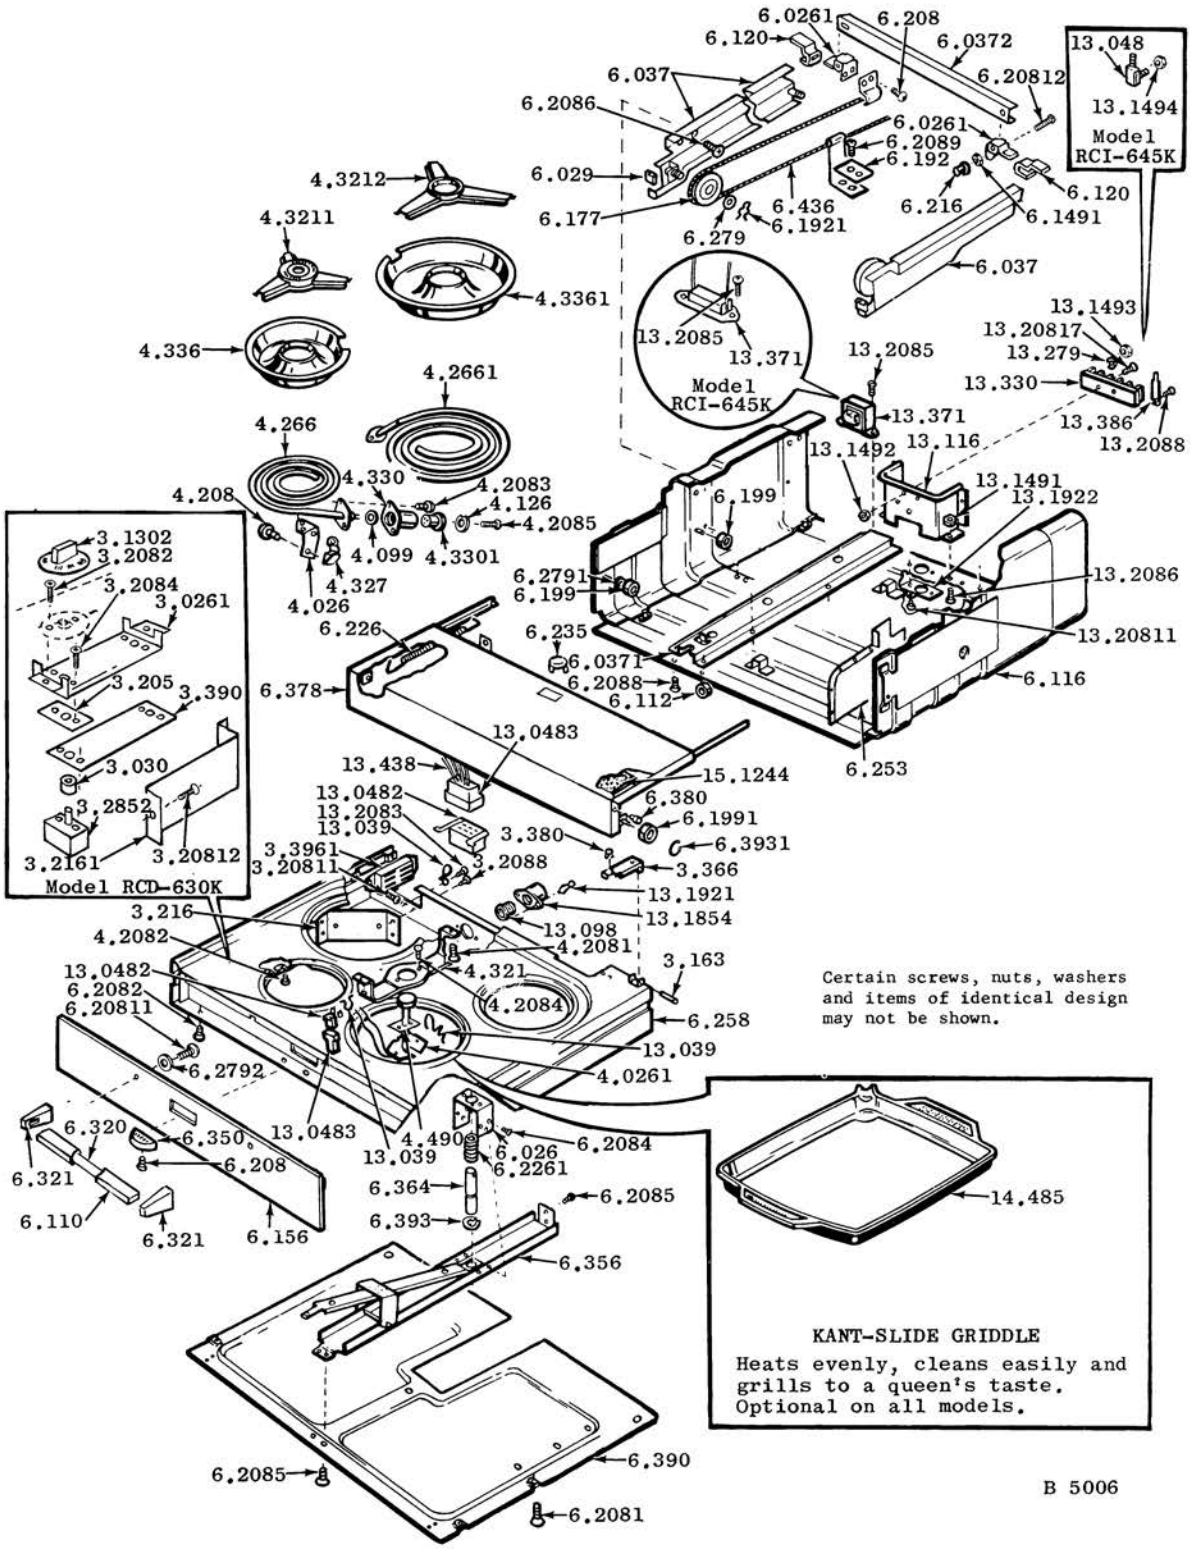

Certain screws, nuts, washers and items of identical design may not be shown.

KANT-SLIDE GRIDDLE

Heats evenly, cleans easily and grills to a queen's taste. Optional on all models.

1966


Model RCI-635K

This illustration may also be used for the selection of parts for models RCD-630K and RCI-645K, but all parts shown are not used on these models.

Model RCD-630K appears the same as models RCI-635K and RCI-645K, except, that model RCD-630K has no speed heat or heat minder units.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

OVEN LINERS AND INTERIOR PARTS

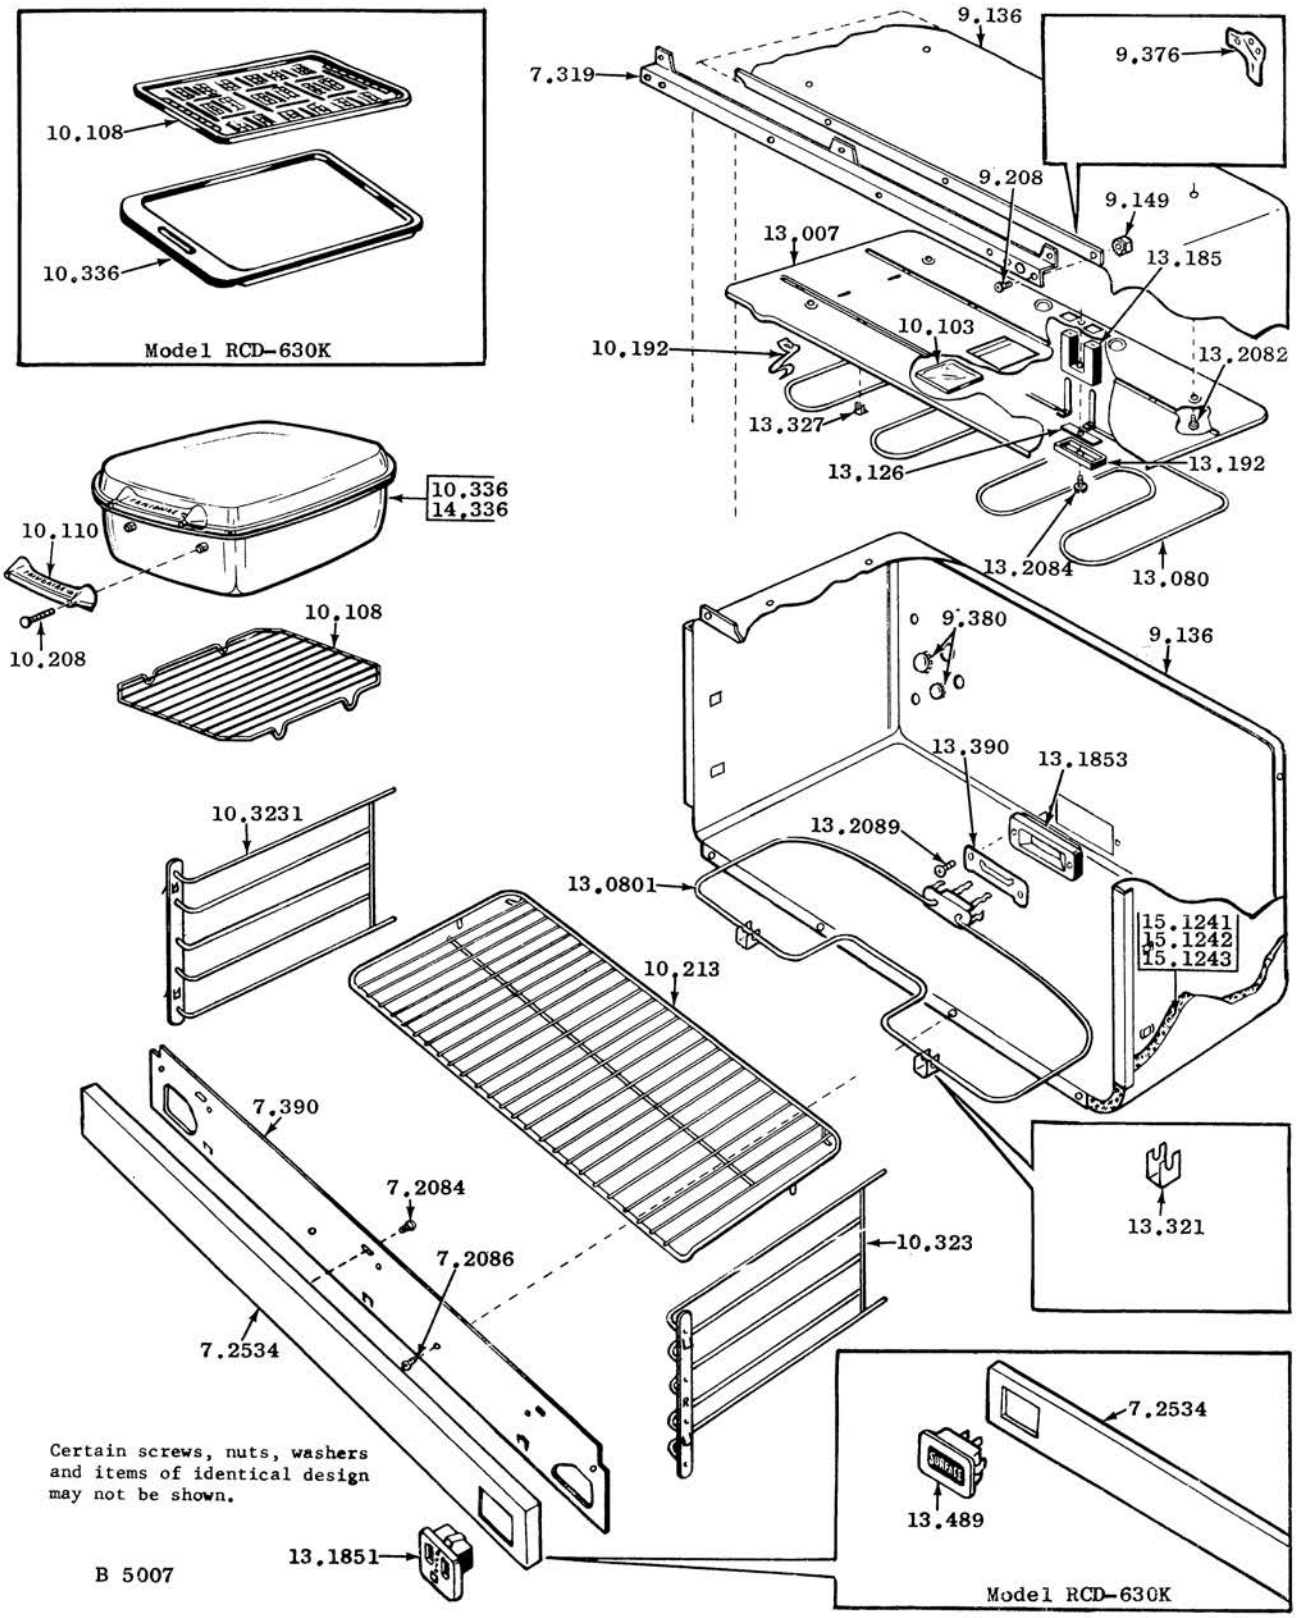


Model RCI-635K

This illustration may also be used for the selection of parts for models RCD-630K and RCI-645K, but all parts shown are not used on these models.

Model RCI-645K has two ovens. Parts are similar for both ovens.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

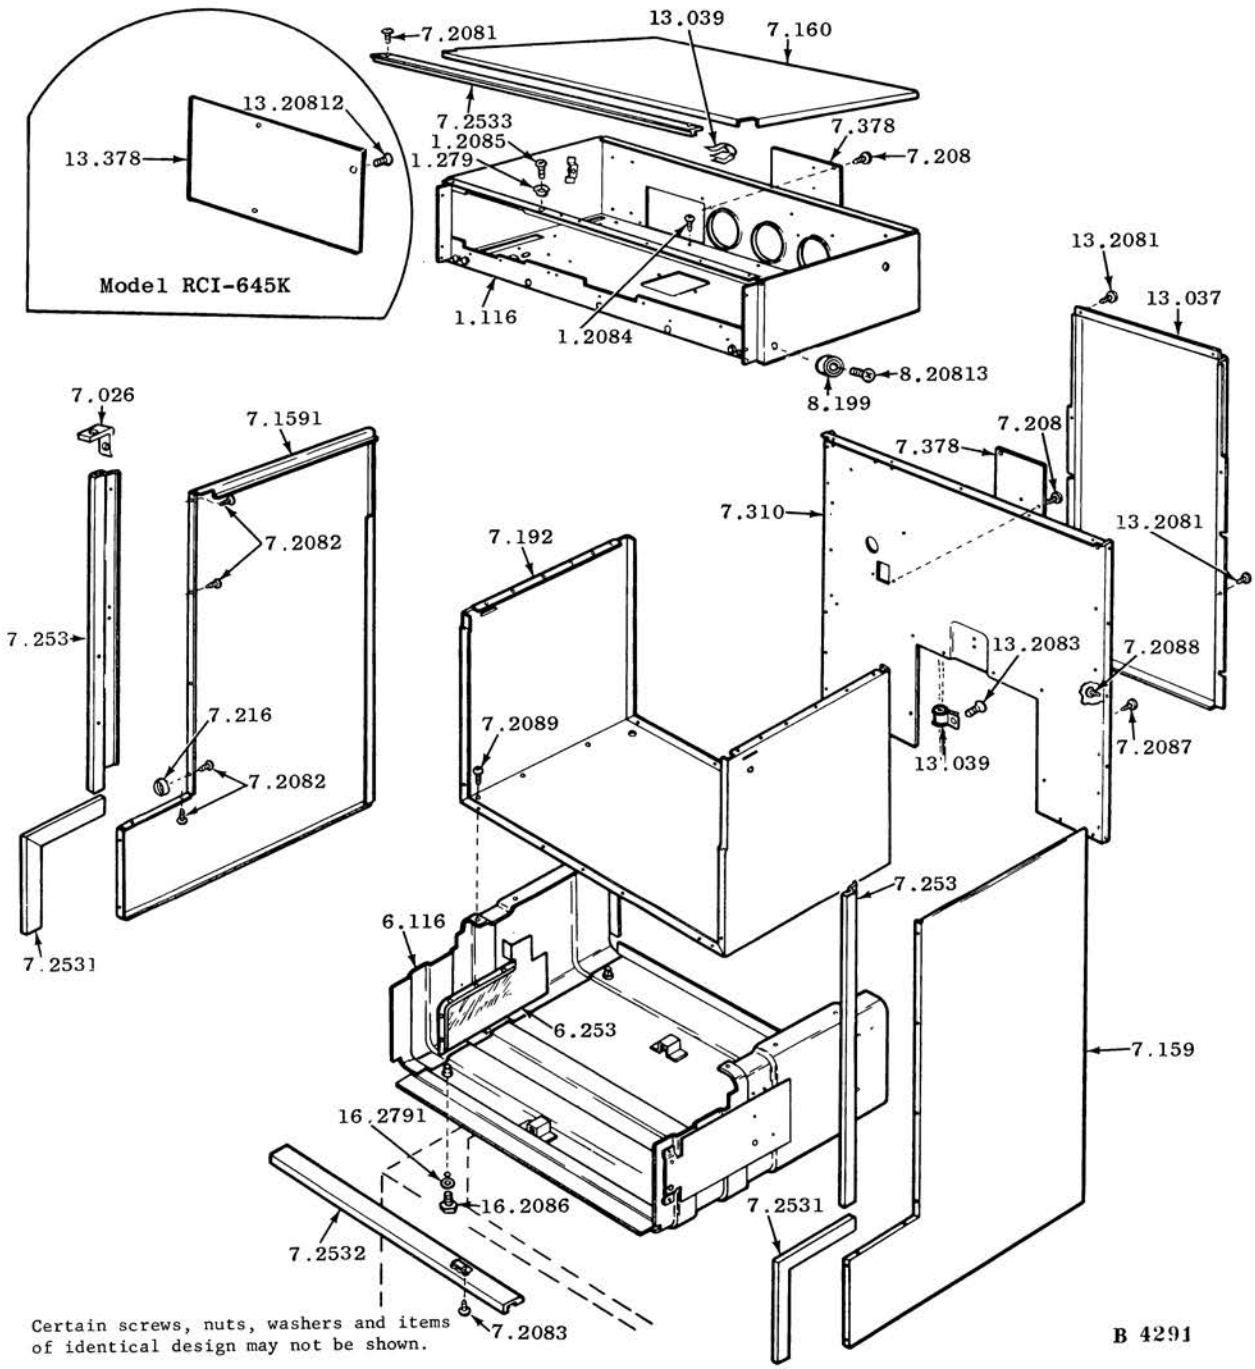


1966

Model RCI-635K

This illustration may also be used for the selection of parts for models RCD-630K and RCI-645K, but all parts shown are not used on these models.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

BASE CABINETS AND PARTS

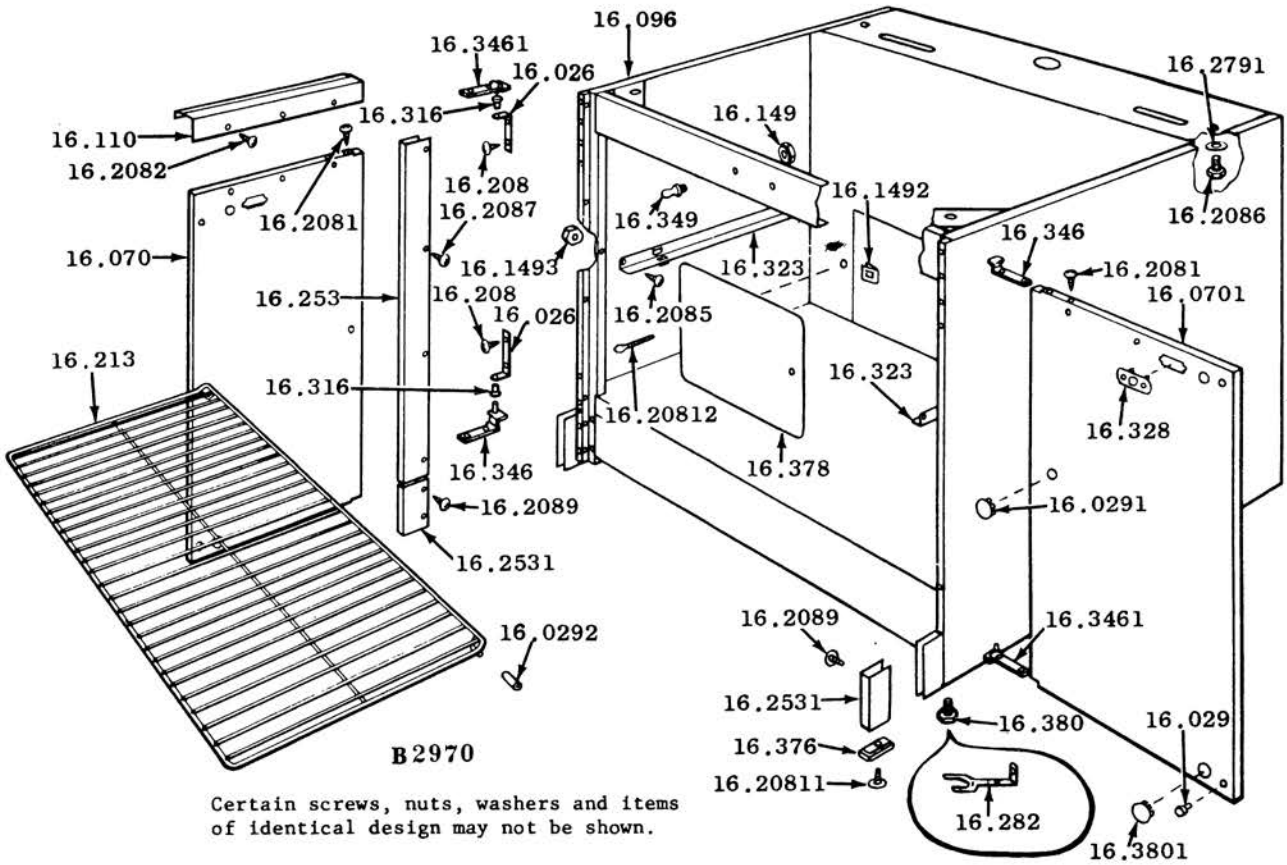


Certain screws, nuts, washers and items of identical design may not be shown.

Model B-30 Base Cabinet

The B-40 Base Cabinet appears the same as the B-30 Base Cabinet except that the B-40 has two shelves and is wider.
Use B-30 Base Cabinet illustrated with models ECD-630K and RCI-635K.
Use B-40 Base Cabinet with model RCI-645K.

14.428 ROTISSERIE - ACCESSORY

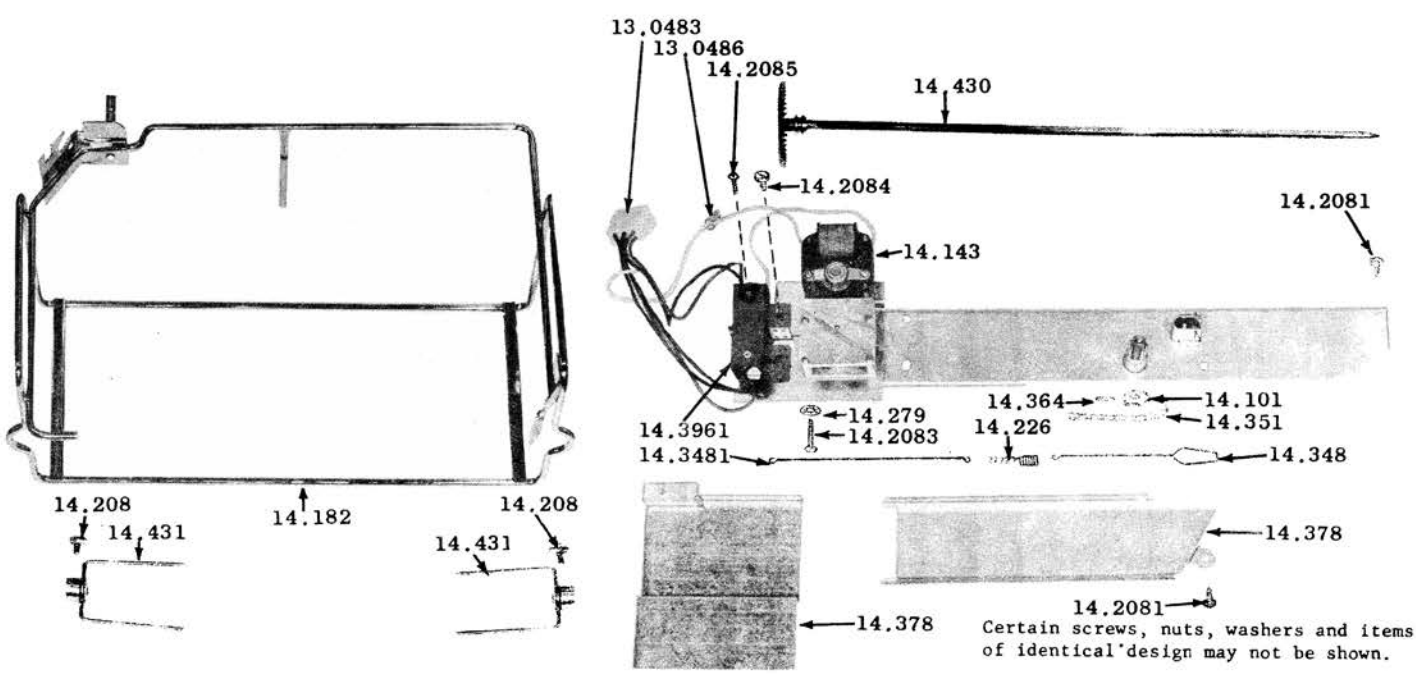


Certain screws, nuts, washers and items of identical design may not be shown.

Models RCI-635K and RCI-645K

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

14.113 VENT HOOD - ACCESSORY

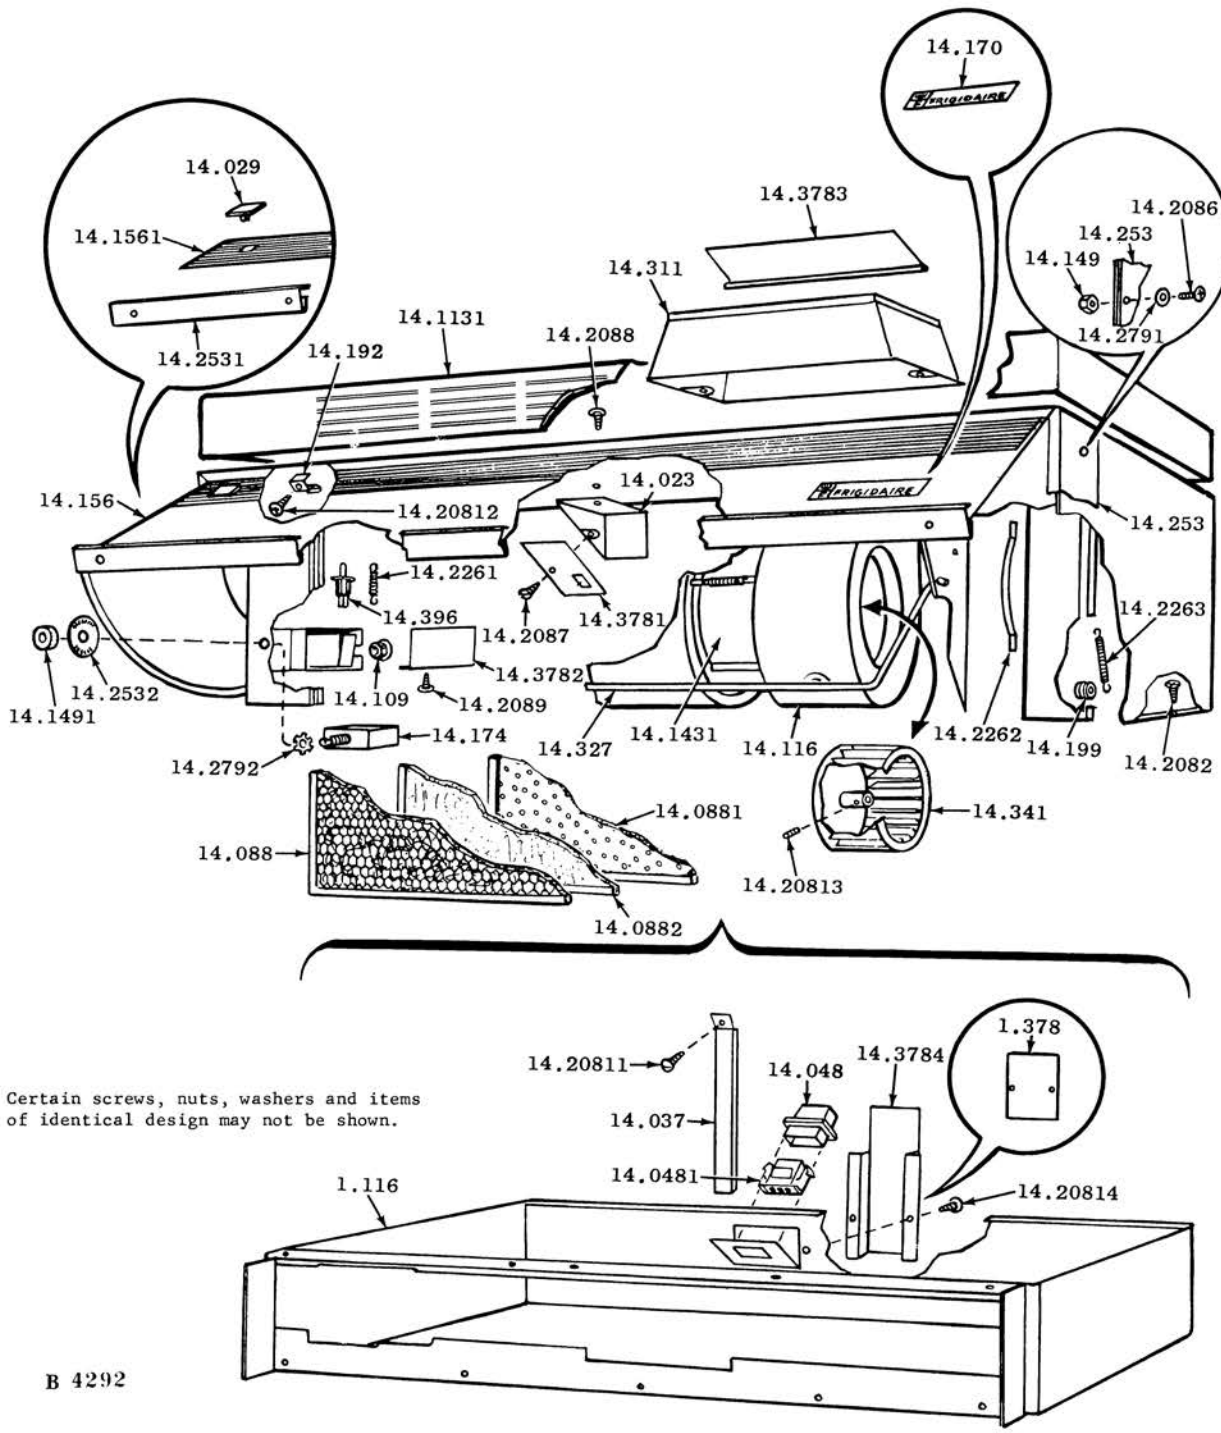


Certain screws, nuts, washers and items of identical design may not be shown.

1966

Models RCD-630K, RCI-635K and RCI-645K

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

ELECTRICAL TERMINALS AND CONNECTORS

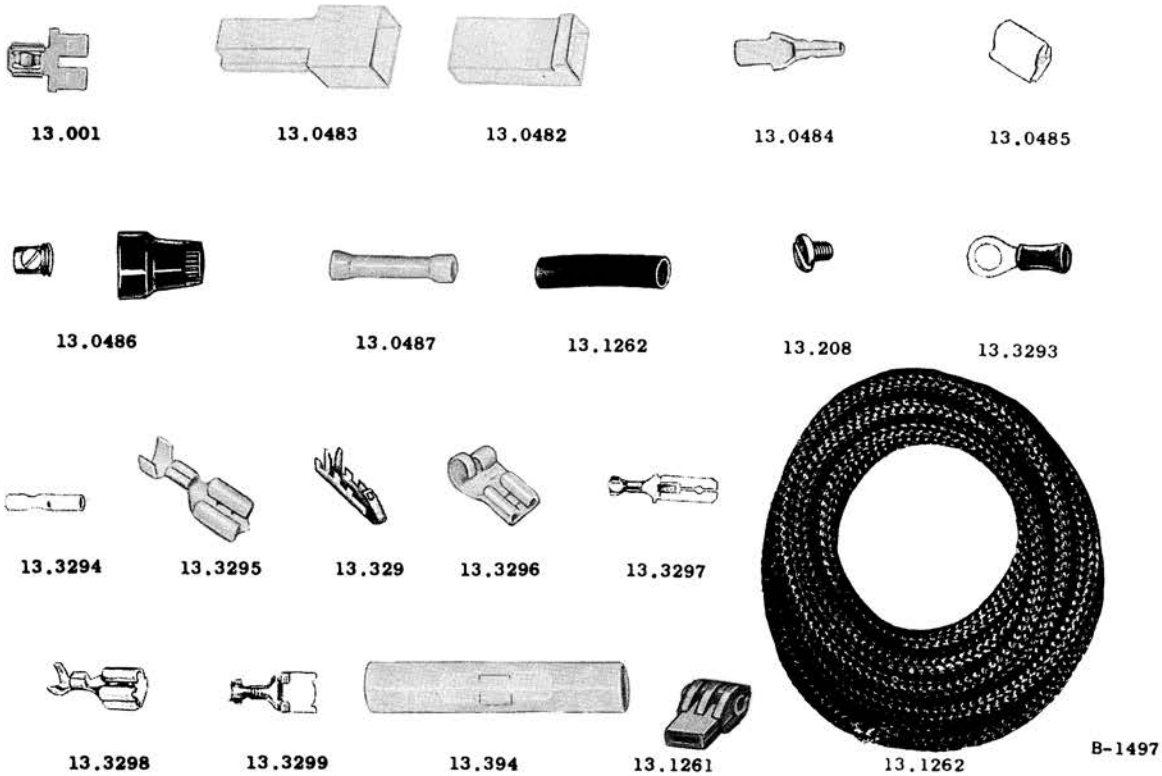

LEAD WIRE CHART

COLORS	PLASTIC INSULATED STRANDED		ASBESTOS INSULATED STRANDED		ASBESTOS INSULATED SOLID		SILICONE RUBBER GLASS BRAIDED INSULATED STRANDED	
	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.
Black	14	*5875355	--	-------	12	5874562	--	-------
Black	14	5873791	14	5417736	14	5873614	--	-------
†Black	16	5874583	--	-------	--	-------	--	-------
§Black	16	5874584	--	-------	--	-------	--	-------
Black-Red	14	5875278	--	-------	--	-------	--	-------
Black-White	14	5875271	--	-------	--	-------	--	-------
Blue	14	5873795	14	5873026	14	5873617	--	-------
Blue-White	18	5875283	--	-------	--	-------	--	-------
Brown	14	5874230	--	-------	14	5873619	--	-------
Brown-White	14	5875279	--	-------	--	-------	--	-------
Gray	14	5875276	--	-------	--	-------	--	-------
Green	14	5874238	14	5417738	14	5873615	--	-------
Orange	14	5873794	--	-------	--	-------	--	-------
Orange-Black	14	5875275	--	-------	--	-------	--	-------
Orange-White	14	5875272	--	-------	--	-------	--	-------
Pink	18	5874237	14	5874184	--	-------	--	-------
Purple	14	5874231	14	5874185	--	-------	--	-------
Red	14	5873793	14	5417737	14	5873616	--	-------
Red	--	-------	--	-------	12	5874563	--	-------
Red-Green	14	5875277	--	-------	--	-------	--	-------
Red-White	14	5875270	--	-------	--	-------	--	-------
Tan	14	5875185	--	-------	--	-------	--	-------
White	14	5873792	14	5417735	14	5873620	--	-------
White-Black	14	5875274	--	-------	--	-------	14	#6595597
White-Blue	18	5875282	--	-------	--	-------	14	#6595596
White-Brown	18	5875280	--	-------	--	-------	--	-------
White-Red	14	5875273	--	-------	--	-------	14	#6595598
White-Yellow	18	5875281	--	-------	--	-------	14	#6595599
Yellow	14	5874229	14	5417739	14	5873618	--	-------
Yellow-Black	14	5875269	--	-------	--	-------	--	-------

Bare Wire - Size # 8, Piece No. 5874585

Bare Wire - Size #12, Piece No. 5374561

† Two conductor - ribbed.
§ Three conductor - ribbed.

* Use where extreme flexing is required.
High Temperature Application - Nickel Plated.

NOTE: Bulk Wire is available by the foot.

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 1 CONTROL PANELS AND PARTS

	1.081 ESCUTCHEON-CONTROL PANEL			
1.081	RCD-630K	7537974	1	
	1.103 GLASS-CONTROL PANEL			
1.103	RCI-635K	7537977	1	
1.103	RCI-645K	7537981	1	
	1.1031 GLASS-LAMP HOUSING			
1.1031	RCD-630K RCI-635K	6567583	1	
1.1031	RCI-645K	6567584	1	
	1.116 HOUSING-CONTROL			
1.116	RCD-630K RCI-635K	7531345	1	
1.116	RCI-645K	7531530	1	
	1.124 INSULATION-LAMP HOUSING LOWER TRIM			
1.124	RCI-635K	7537678	1	CUT TO SIZE
1.124	RCI-645K	7537678	1	
	1.149 NUT			
1.149	RCD-630K RCI-635K	5438563	7	SPECIAL-LAMP HOUSING SHIELD
1.149	RCI-645K	5438563	9	SPECIAL-LAMP HOUSING SHIELD
1.1491	RCD-630K RCI-635K RCI-645K	5433660	2	LAMP HOUSING TOP TRIM
	1.153 PAD-CONTROL PANEL GLASS			
1.153	RCI-635K RCI-645K	6567539	1	MOUNT TO SURFACE UNIT SWITCH BRACKET 1/8X3/8X1
1.153	RCI-635K RCI-645K	7537200	2	MOUNT 9 INCHES FROM END OF TOP RETAINER
	1.192 RETAINER,TOP-CONTROL PANEL GLASS			
1.192	RCI-635K	7537681	1	
1.192	RCI-645K	7537682	1	
	1.204 SEAL,RUBBER-LAMP HOUSING TOP TRIM			
1.204	RCD-630K RCI-635K	6568460	1	
1.204	RCI-645K	6568461	1	
	1.208 SCREW			
1.208	RCD-630K RCI-635K RCI-645K	7528041	4	LAMP HOUSING END 8-18X7/16
1.2081	RCI-635K RCI-645K	6560805	3	CONTROL PANEL GLASS SUPPORT 8-15X3/8
1.2082	RCD-630K RCI-635K RCI-645K	5436528	5	LAMP HOUSING LOWER TRIM 8-15X3/8
1.2083	RCD-630K RCI-635K	5436439	2	LAMP HOUSING TOP TRIM 8-15X5/8
1.2084	RCD-630K RCI-635K	7528041	8	CONTROL HOUSING 8-18X7/16
1.2084	RCI-645K	7528041	13	CONTROL HOUSING 8-18X7/16
1.2085	RCD-630K RCI-635K	7528041	4	TOP SPACER WASHER 8-18X7/16
1.2085	RCI-645K	7528041	5	TOP SPACER WASHER 8-18X7/16
1.2086	RCD-630K RCI-635K RCI-645K	7528041	1	CONTROL HOUSING COVER 8-18X7/16
1.2087	RCD-630K	5436528	3	CONTROL PANEL ESCUTCHEON 8-15X3/8
	1.216 SHIELD-LAMP HOUSING			
1.216	RCD-630K RCI-635K	6567865	1	
1.216	RCI-645K	6567866	1	
	1.253 TRIM,LOWER-LAMP HOUSING			
1.253	RCD-630K RCI-635K	6567590	1	
1.253	RCI-645K	6567591	1	
	1.2531 TRIM,TOP-LAMP HOUSING			
1.2531	RCD-630K RCI-635K	6567592	1	
1.2531	RCI-645K	6567593	1	
	1.2532 TRIM-GLASS CONTROL PANEL END			
1.2532	RCI-635K RCI-645K	6567585	2	
	1.279 WASHER			
1.279	RCD-630K RCI-635K	6567860	2	CUP-TOP SPACER
1.279	RCI-645K	6567860	3	CUP-TOP SPACER
	1.321 SUPPORT-CONTROL PANEL GLASS			
1.321	RCI-635K RCI-645K	7529455	3	NYLON BRACKET TYPE
	1.378 COVER-CONTROL HOUSING			
1.378	RCD-630K RCI-635K RCI-645K	7528458	1	VENT HOOD PLUG IN
	1.380 BUTTON,PLUG-CONTROL HOUSING			
1.380	RCD-630K RCI-635K	454243	2	CONDUIT HOLE-1-7/16 INCH HOLE
1.380	RCD-630K RCI-635K RCI-645K	432269	1	LEFT REAR CONDUIT HOLE-7/8 INCH HOLE
	1.395 END-LAMP HOUSING			
1.395	RCD-630K RCI-635K RCI-645K	6569589	1	LH
1.395	RCD-630K RCI-635K RCI-645K	6569588	1	RH

1966

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 2 COOK-MASTERS AND PARTS

	2.096 FRAME-COOKMASTER & TIME SIGNAL			
2.096	RCD-630K	5875454	1	
	2.103 GLASS-COOKMASTER & TIME SIGNAL			
2.103	RCD-630K	5875455	1	
	2.130 KNOB,CONTROL-COOKMASTER AND TIME SIGNAL			
2.130	RCD-630K	7523846	2	HOURS TO COOK AND TIME SIGNAL -BLACK
2.130	RCD-630K	6568474	1	TIME STOP-BLACK-INNER CENTER
2.130	RCD-630K	7521201	1	TIME SET-WHITE-OUTER CENTER
	2.1301 KNOB,CONTROL-MEAL MINDER			
2.1301	RCI-635K RCI-645K	7523846	2	MINUTE TIMER AND OUTLET TIMER -BLACK
2.1301	RCI-635K RCI-645K	6568474	1	MEAL MINDER-BLACK-INNER CENTER
2.1301	RCI-635K RCI-645K	7521201	1	TIME SET-WHITE-OUTER CENTER
	2.143 MOTOR-COOKMASTER AND TIME SIGNAL			
2.143	RCD-630K	6592779	1	60 CYCLE 115 VOLT
	2.1431 MOTOR-MEAL MINDER			
2.1431	RCI-635K RCI-645K	6592779	1	60 CYCLE 115 VOLT
	2.208 SCREW			
2.208	RCI-635K RCI-645K	5436528	4	MEAL MINDER 8-15X3/8
	2.374 COOKMASTER & TIME SIGNAL			
2.374	RCD-630K	7533343	1	60 CYCLE 115 VOLT
	2.396 SWITCH-COOKMASTER AND TIME SIGNAL TERMINAL			
2.396	RCD-630K	6592112	1	
	2.528 MEAL MINDER			
2.528	RCI-635K RCI-645K	7533346	1	

GROUP 3 SWITCHES AND PARTS

	3.026 BRACKET-SWITCH			
3.026	RCD-630K	7536644	1	LAMP AND THERMOSTAT
3.026	RCI-635K	7537674	1	LAMP, BROIL CONTROL AND TENDER-MATIC
	3.0261 BRACKET-SURFACE UNIT SWITCH			
3.0261	RCD-630K	7536645	2	
3.0261	RCI-635K RCI-645K	7537676	1	
	3.0262 BRACKET-THERMOSTAT			
3.0262	RCI-645K	7537675	1	LEFT OVEN
	3.030 BUSHING,RUBBER-SURFACE UNIT SWITCH SEAL			
3.030	RCD-630K	7536251	4	
	3.130 KNOB,CONTROL-LAMP SELECTOR SWITCH			
3.130	RCI-635K RCI-645K	7531512	1	
	3.1301 KNOB,CONTROL-TENDER-MATIC			
3.1301	RCI-635K RCI-645K	7531512	1	
	3.1302 KNOB, CONTROL-SURFACE UNITS			
3.1302	RCD-630K	7531370	4	
3.1302	RCI-635K RCI-645K	7531511	4	
	3.1303 KNOB,CONTROL-OVEN THERMOSTAT			
3.1303	RCD-630K	7536309	1	
3.1303	RCI-635K	7531511	1	
3.1303	RCI-645K	7531511	2	
	3.1304 KNOB,CONTROL-BROIL			
3.1304	RCI-635K RCI-645K	7531512	1	
	3.143 MOTOR-OVEN CONTROL			
3.143	RCI-635K RCI-645K	7533041	1	INCLUDES TWO MOTORS AND DRIVE
	3.149 NUT			
3.149	RCD-630K	5434526	2	KNURLED-LAMP SWITCH
	3.163 PIN,COTTER-SWITCH OPERATING ARM			
3.163	RCD-630K RCI-635K RCI-645K	-------	2	1-1/8X3/32 PURCHASE LOCALLY
	3.192 RETAINER,SPRING-SWITCH			
3.192	ALL MODELS	6568159	AR	9/16 INCHES LONG
3.192	ALL MODELS	6592441	AR	13/16 INCHES LONG

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	3.1921 RETAINER-SWITCH DIAL			
3.1921	RCI-645K	7536805	1	OVEN THERMOSTAT
	3.205 SEAL,SHAFT-SURFACE UNIT SWITCH			
3.205	RCD-630K	7527679	4	
	3.208 SCREW			
3.208	RCI-635K	5435827	4	SWITCH BRACKET 8-15X1/2
3.2081	RCD-630K	6576499	2	OVEN THERMOSTAT 6-32X3/16
3.2081	RCI-635K RCI-645K	156750	3	OVEN THERMOSTAT 8-32X5/16
3.2081	RCI-645K	6576499	2	OVEN THERMOSTAT-LEFT OVEN 6-32X3/16
3.2082	RCD-630K	5885238	4	SURFACE UNIT SWITCH BRACKET 6-20X3/8
3.2082	RCI-635K RCI-645K	5436528	4	SURFACE UNIT SWITCH BRACKET 8-15X3/8
3.2083	RCI-635K RCI-645K	5435111	2	SPEED HEAT SWITCH 8-32X1/4
3.2084	RCD-630K	5435111	8	INFINITE HEAT SURFACE UNIT SWITCH 8-32X1/4
3.2084	RCI-635K RCI-645K	5435111	4	INFINITE HEAT SURFACE UNIT SWITCH 8-32X1/4
3.2085	RCI-635K RCI-645K	443940	1	LAMP SWITCH 6-32X3/16
3.2086	RCI-635K RCI-645K	5435111	2	BROIL CONTROL SWITCH 8-32X1/4
3.2087	RCI-635K RCI-645K	6576499	2	HEAT MINDER SWITCH 6-32X3/16
3.2088	RCD-630K RCI-635K	7528041	4	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2088	RCI-645K	7528041	5	DISCONNECT SWITCH SHIELD 8-18X7/16
3.2089	RCI-645K	5436528	4	THERMOSTAT BRACKET-LEFT OVEN 8-15X3/8
3.20811	RCD-630K RCI-635K RCI-645K	5436528	4	DISCONNECT SWITCH 8-15X3/8
3.20812	RCD-630K	5435827	2	SURFACE UNIT SWITCH SHIELD 8-15X1/2
3.20813	RCI-635K RCI-645K	5436528	4	OVEN CONTROL 8-15X3/8
3.20814	RCD-630K RCI-635K	7528041	1	THERMOSTAT CAPILLARY TUBE CLAMP 8-18X7/16
3.20814	RCI-645K	5435827	2	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X1/2
3.20815	RCI-635K RCI-645K	5436528	2	THERMOSTAT CAPILLARY TUBE SUPPORT 8-15X3/8
3.20816	RCI-635K RCI-645K	5435111	2	TENDERMATIC THERMOSTAT 8-32X1/4
	3.216 SHIELD-DISCONNECT SWITCH			
3.216	RCD-630K RCI-635K RCI-645K	6567706	2	
	3.2161 SHIELD-SURFACE UNIT SWITCH			
3.2161	RCD-630K	7529759	2	
	3.242 THERMOSTAT-OVEN			
3.242	RCD-630K	7531595	1	
3.242	RCI-635K RCI-645K	7533388	1	
3.242	RCI-645K	7531595	1	LEFT OVEN
	3.2421 THERMOSTAT-TENDER-MATIC			
3.2421	RCI-635K	7533355	1	INCLUDES CAP TUBE
3.2421	RCI-645K	7532979	1	INCLUDES CAP TUBE
	3.279 WASHER			
3.279	RCD-630K	5886323	2	LAMP SWITCH
	3.285 SWITCH,SURFACE UNIT-HEAT MINDER			
3.285	RCI-635K RCI-645K	7526418	1	INCLUDES SENSOR
	3.2851 SWITCH,SURFACE UNIT-SPEED HEAT			
3.2851	RCI-635K RCI-645K	7531515	1	
	3.2852 SWITCH,SURFACE UNIT-INFINITE HEAT			
3.2852	RCD-630K	7533011	3	SMALL 6 INCH
3.2852	RCI-635K RCI-645K	7521242	1	SMALL 6 INCH
3.2852	RCD-630K	7521370	1	LARGE 8 INCH
3.2852	RCI-635K RCI-645K	7521243	1	LARGE 8 INCH
	3.321 SUPPORT-THERMOSTAT CAPILLARY TURE			
3.321	RCI-635K RCI-645K	7536303	1	WIRE TYPE MOUNTING WITH SCREW
	3.327 CLAMP-THERMOSTAT CAPILLARY TURE			
3.327	RCD-630K RCI-635K RCI-645K	5436867	1	
3.327	RCI-645K	7527865	1	
	3.366 ARM,CONTROL-SWITCH OPERATING			
3.366	RCD-630K RCI-635K RCI-645K	6567150	2	

1966

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	3.380 BUTTON-SWITCH ARM GLIDE			
3.380	RCD-630K RCI-635K RCI-645K	6567143	2	
	3.381 DIAL,SWITCH-INFINITE HEAT SURFACE UNIT			
3.381	RCI-635K RCI-645K	7537667	3	
	3.3811 DIAL,SWITCH-HEAT MINDER			
3.3811	RCI-635K RCI-645K	7537668	1	
	3.3812 DIAL-THERMOSTAT			
3.3812	RCI-635K	7537669	1	ROTISSERIE
3.3812	RCI-645K	7537670	1	LEFT OVEN
3.3812	RCI-645K	7537669	1	ROTISSERIE-RIGHT OVEN
	3.3813 DIAL-BROIL CONTROL			
3.3813	RCI-635K RCI-645K	7538041	1	
	3.3814 DIAL-LAMP SELECTOR SWITCH			
3.3814	RCI-635K RCI-645K	7538042	1	
	3.3815 DIAL-TENDER-MATIC CONTROL			
3.3815	RCI-635K	7538043	1	
	3.387 SWITCH,CONTROL-BROIL			
3.387	RCI-635K RCI-645K	7531513	1	
	3.390 PLATE-SURFACE UNIT SWITCH			
3.390	RCD-630K	7536779	2	
	3.3961 SWITCH,DISCONNECT-SURFACE UNITS			
3.3961	RCD-630K RCI-635K RCI-645K	6564289	2	
	3.403 SWITCH,SELECTOR-LAMP			
3.403	RCD-630K	7531948	1	BLACK-OVEN LAMP
3.403	RCD-630K	7524967	1	WHITE-FLUORESCENT LAMP
3.403	RCI-635K RCI-645K	7531514	1	

GROUP 4 SURFACE UNITS AND PARTS

	4.026 BRACKET-SURFACE UNIT HINGE			
4.026	RCD-630K RCI-635K RCI-645K	6565251	4	
	4.0261 BRACKET,RETAINER-SENSOR			
4.0261	RCI-635K RCI-645K	7528900	1	
	4.099 GASKET-SURFACE UNIT TERMINAL BLOCK SEAL			
4.099	RCD-630K RCI-635K RCI-645K	7535507	4	
	4.126 INSULATOR-SURFACE UNIT CONNECTOR			
4.126	RCD-630K RCI-635K RCI-645K	7535070	4	
	4.208 SCREW			
4.208	RCD-630K RCI-635K RCI-645K	6564547	8	SURFACE UNIT CLAMP TO BRACKET 8-32X5/16
4.2081	RCI-635K RCI-645K	5436528	4	SENSOR SUPPORT 8-15X3/8
4.2082	RCD-630K RCI-635K RCI-645K	6564547	8	SURFACE UNIT BRACKET 8-32X5/16
4.2083	RCD-630K RCI-635K RCI-645K	7529180	8	SURFACE UNIT TERMINAL BLOCK 5-40X7/16
4.2084	RCI-635K RCI-645K	5434896	2	SENSOR RETAINER BRACKET 8-18X1/4
4.2085	RCD-630K RCI-635K RCI-645K	5899587	4	SURFACE UNIT CONNECTOR BLOCK 8-32X3/8
	4.266 UNIT,SURFACE 6-INCH			
4.266	RCI-635K RCI-645K	6591863	1	1250W 118V SPEED HEAT-LEFT FRONT-USE ON 208,236 OR 250 VOLT WITHOUT CHANGE
4.266	RCD-630K	7531295	3	1250W 236V-1400W 250V-LEFT FRONT, RIGHT & LEFT REAR
4.266	RCI-635K RCI-645K	6590804	1	1400W 250V-RIGHT REAR
4.266	RCD-630K	6591937	3	1450W 208V-LEFT FRONT, RIGHT &LEFT REAR
4.266	RCI-635K RCI-645K	6591937	1	1450W 208V-RIGHT REAR
	4.2661 UNIT,SURFACE 8-INCH			
4.2661	RCD-630K	7521366	1	2050W 236V-RIGHT FRONT
4.2661	RCI-635K RCI-645K	6590805	2	2300W 250V-LEFT REAR AND RIGHT FRONT
4.2661	RCD-630K	6590380	1	2600W 208V-RIGHT FRONT
4.2661	RCI-635K RCI-645K	6590380	2	2600W 208V-LEFT REAR AND RIGHT FRONT
	4.321 SUPPORT-HEAT MINDER SENSOR			
4.321	RCI-635K RCI-645K	6567531	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	4.3211 SUPPORT-SURFACE UNIT SMALL			
4.3211	RCD-630K	7529769	3	LEFT FRONT,RIGHT & LEFT REAR
4.3211	RCI-635K RCI-645K	7529831	1	RIGHT REAR
4.3211	RCI-635K RCI-645K	7525903	1	SPEED HEAT-LEFT FRONT
	4.3212 SUPPORT-SURFACE UNIT LARGE			
4.3212	RCD-630K	7529770	1	RIGHT FRONT
4.3212	RCI-635K RCI-645K	7529832	1	LEFT REAR
4.3212	RCI-635K RCI-645K	7529833	1	HEAT MINDER-RIGHT FRONT
	4.327 CLAMP-SURFACE UNIT HINGE			
4.327	RCD-630K RCI-635K RCI-645K	6565252	4	
	4.330 BLOCK,FEMALE-SURFACE UNIT CONNECTOR			
4.330	RCD-630K RCI-635K RCI-645K	7535428	3	BLACK
4.330	RCD-630K	7535427	1	BROWN-USE WITH RIGHT FRONT SURFACE UNIT
4.330	RCI-635K RCI-645K	7527656	1	BROWN-USE WITH SPEED HEAT SURFACE UNIT
	4.3301 BLOCK,MALE-SURFACE UNIT CONNECTOR			
4.3301	RCD-630K RCI-635K RCI-645K	7535071	3	BLACK
4.3301	RCD-630K RCI-635K RCI-645K	7535429	1	BROWN
	4.336 PAN,SMALL-SURFACE UNIT DRIP			
4.336	RCD-630K	6565456	3	
4.336	RCI-635K RCI-645K	6565456	2	
	4.3361 PAN,LARGE-SURFACE UNIT DRIP			
4.3361	RCD-630K	6565457	1	
4.3361	RCI-635K RCI-645K	6565457	2	
	4.490 SENSOR-HEAT MINDER			
4.490	RCI-635K RCI-645K	7526418	1	INCLUDES SWITCH

GROUP 6 TOPS AND PARTS

1966

	6.026 BRACKET-LATCH SPRING RETAINER			
6.026	RCD-630K RCI-635K RCI-645K	6569713	1	
	6.0261 BRACKET-TOP COVER SLIDE			
6.0261	RCD-630K RCI-635K RCI-645K	7529879	2	
	6.029 BUMPER-PULLEY CHANNEL			
6.029	RCD-630K RCI-635K RCI-645K	6567881	2	
	6.037 CHANNEL-PULLEY			
6.037	RCD-630K RCI-635K RCI-645K	7522204	1	LH
6.037	RCD-630K RCI-635K	7522203	1	RH
	6.0371 CHANNEL-COOKING TOP STOP			
6.0371	RCD-630K RCI-635K RCI-645K	7529050	1	
	6.0372 CHANNEL-CABLE SPACER			
6.0372	RCD-630K RCI-635K	7529880	1	
6.0372	RCI-645K	7529901	1	
	6.110 HANDLE-COOKING TOP			
6.110	RCD-630K	7537976	1	
6.110	RCI-635K RCI-645K	7537577	1	
	6.112 HOLDER-CABLE SPACER CHANNEL			
6.112	RCD-630K RCI-635K RCI-645K	5432514	2	NEOPRENE
	6.116 HOUSING-COOKING TOP			
6.116	RCD-630K RCI-635K	7524973	1	
6.116	RCI-645K	6564283	1	
	6.120 SLIDE-COOKING TOP COVER			
6.120	RCD-630K RCI-635K RCI-645K	6567147	2	
	6.149 NUT			
6.149	RCD-630K RCI-635K RCI-645K	7520910	2	LOCK-COOKING TOP SHIPPING
6.1491	RCD-630K RCI-635K RCI-645K	5423225	2	CABLE SPACER CHANNEL
	6.156 PANEL,FRONT-COOKING TOP			
6.156	RCD-630K	7537975	1	
6.156	RCI-635K	7537978	1	
6.156	RCI-645K	7537982	1	
	6.177 PULLEY,CABLE-COOKING TOP			
6.177	RCD-630K RCI-635K RCI-645K	6569474	4	
	6.192 RETAINER-CABLE BRACKET			
6.192	RCD-630K RCI-635K RCI-645K	7527850	2	UPPER

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	6.1921 RETAINER,SPRING-CABLE PULLEY			
6.1921	RCD-630K RCI-635K RCI-645K	5437128	4	
	6.199 ROLLER-COOKING TOP			
6.199	RCD-630K RCI-635K RCI-645K	6569100	1	
6.199	RCD-630K RCI-635K RCI-645K	6568686	3	
	6.1991 ROLLER-TOP COVER			
6.1991	RCD-630K RCI-635K RCI-645K	6568686	2	
	6.208 SCREW			
6.208	RCD-630K RCI-635K RCI-645K	5439072	1	LATCH KNOB 6-32X3/8
6.2081	RCD-630K RCI-635K RCI-645K	5885072	3	COOKING TOP DRIP PLATE 8-18X3/8
6.2082	RCD-630K RCI-635K RCI-645K	5885072	3	COOKING TOP FRONT PANEL-LOWER 8-18X3/8
6.2083	RCD-630K RCI-635K RCI-645K	5885072	2	COOKING TOP STOP CHANNEL SCREW SHIELD 8-18X3/8
6.2084	RCD-630K RCI-635K RCI-645K	5436528	4	LATCH SPRING RETAINER BRACKET 8-15X3/8
6.2085	RCD-630K RCI-635K RCI-645K	7528041	4	LATCH OPERATING LEVER 8-18X7/16
6.2086	RCD-630K RCI-635K RCI-645K	5435226	8	PULLEY CHANNEL 10-12X3/8
6.2087	RCD-630K RCI-635K RCI-645K	7535565	2	CABLE SPACER CHANNEL 10-32X7/8
6.2088	RCD-630K RCI-635K RCI-645K	5885072	4	COOKING TOP STOP CHANNEL 8-18X3/8
6.2089	RCD-630K RCI-635K RCI-645K	7528041	4	COOKING TOP CABLE 8-18X7/16
6.20811	RCD-630K RCI-635K RCI-645K	273741	2	COOKING TOP HANDLE 10-32X7/16
6.20812	RCD-630K RCI-635K RCI-645K	5435827	4	COOKING TOP COVER SLIDE BRACKET 8-15X1/2
	6.216 SHIELD,SCREW-COOKING TOP STOP CHANNEL			
6.216	RCD-630K RCI-635K RCI-645K	6566986	2	
	6.226 SPRING-TOP COVER			
6.226	RCD-630K RCI-635K RCI-645K	6567610	2	
	6.2261 SPRING-LATCH PIN OPERATING			
6.2261	RCD-630K RCI-635K RCI-645K	6568818	1	
	6.235 STOP-COOKING TOP COVER			
6.235	RCD-630K RCI-635K RCI-645K	7528879	1	
	6.253 TRIM-COOKING TOP HOUSING			
6.253	RCD-630K RCI-635K RCI-645K	7529133	1	LH-CEMENTED
6.253	RCD-630K RCI-635K RCI-645K	7529132	1	RH-CEMENTED
	6.258 TOP-COOKING			
6.258	RCD-630K	7533350	1	
6.258	RCI-635K	7533351	1	
6.258	RCI-645K	7533352	1	
	6.279 WASHER			
6.279	RCD-630K RCI-635K RCI-645K	5427712	4	COOKING TOP CABLE PULLEY
6.2791	RCD-630K RCI-635K RCI-645K	6565542	AR	PLAIN-ROLLER
6.2792	RCD-630K RCI-635K RCI-645K	629690	4	COOKING TOP HANDLE
	6.320 REINFORCEMENT-COOKING TOP HANDLE			
6.320	RCI-635K RCI-545K	7548936	1	
	6.321 SUPPORT,HANDLE-COOKING TOP			
6.321	RCD-630K RCI-635K RCI-645K	7537575	1	LEFT
6.321	RCD-630K RCI-635K RCI-645K	7537574	1	RIGHT
	6.350 KNOB-LATCH OPERATING			
6.350	RCD-630K RCI-635K RCI-645K	6568810	1	
	6.356 LEVER-LATCH OPERATING			
6.356	RCD-630K RCI-635K RCI-645K	7521097	1	
	6.364 PIN-COOKING TOP LATCH			
6.364	RCD-630K RCI-635K RCI-645K	6568811	1	
	6.378 COVER-COOKING TOP			
6.378	RCD-630K RCI-635K	7524661	1	
6.378	RCI-645K	7524662	1	
	6.380 BUTTON-COOKING TOP COVER			
6.380	RCD-630K RCI-635K RCI-645K	6567143	2	
	6.390 PLATE-COOKING TOP DRIP			
6.390	RCD-630K RCI-635K	6568842	1	
6.390	RCI-645K	6568843	1	
	6.393 RING,RETAINER-COOKING TOP LATCH PIN			
6.393	RCD-630K RCI-635K RCI-645K	6586240	1	
	6.3931 RING,RETAINER-TOP COVER ROLLER			
6.3931	RCD-630K RCI-635K RCI-645K	7537983	2	
	6.436 CABLE-COOKING TOP			
6.436	RCD-630K RCI-635K RCI-645K	7522206	2	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	GROUP 7 FRAMES, PANELS AND PARTS			
	7.026 BRACKET-SIDE TRIM			
7.026	RCD-630K RCI-635K RCI-645K	7529048	2	
	7.149 NUT			
7.149	RCD-630K RCI-635K RCI-645K	5433660	AR	CONDENSATION TRIM SPACER
	7.159 PANEL,SIDE-RANGE RH			
7.159	RCD-630K RCI-635K RCI-645K	7521851	1	WHITE
7.159	RCD-630K RCI-635K RCI-645K	7521852	1	YELLOW
7.159	RCD-630K RCI-635K RCI-645K	7521854	1	TURQUOISE
7.159	RCD-630K RCI-635K RCI-645K	7521855	1	COPPER
	7.1591 PANEL,SIDE-RANGE LH			
7.1591	RCD-630K RCI-635K RCI-645K	7521856	1	WHITE
7.1591	RCD-630K RCI-635K RCI-645K	7521857	1	YELLOW
7.1591	RCD-630K RCI-635K RCI-645K	7521859	1	TURQUOISE
7.1591	RCD-630K RCI-635K RCI-645K	7521860	1	COPPER
	7.160 PANEL,TOP-RANGE			
7.160	RCD-630K RCI-635K	7524005	1	WHITE
7.160	RCD-630K RCI-635K	7524006	1	YELLOW
7.160	RCD-630K RCI-635K	7524008	1	TURQUOISE
7.160	RCD-630K RCI-635K	7524009	1	COPPER
7.160	RCI-645K	7524012	1	WHITE
7.160	RCI-645K	7524013	1	YELLOW
7.160	RCI-645K	7524015	1	TURQUOISE
7.160	RCI-645K	7524016	1	COPPER
	7.192 RETAINER-INSULATION			
7.192	RCD-630K RCI-635K	6569530	1	OVEN
7.192	RCI-645K	6569532	1	LEFT OVEN
7.192	RCI-645K	6569531	1	RIGHT OVEN
	7.208 SCREW			
7.208	RCD-630K RCI-635K	7528041	4	ROTISSERIE OPENING COVER 8-18X7/16
7.2081	RCD-630K RCI-635K RCI-645K	148101	2	TOP TRIM
7.2082	RCD-630K RCI-635K RCI-645K	6569714	14	TRIM 6-20X3/8
7.2082	RCD-630K RCI-635K RCI-645K	6569714	2	TRIM 6-20X3/8-USE WITH SIDE TRIM BRACKET
7.2082	RCD-630K RCI-635K RCI-645K	5436528	2	TRIM-USE WITH SHIELD 8-15X3/8
7.2083	RCD-630K RCI-635K RCI-645K	5435828	2	BOTTOM TRIM 8-18X5/8
7.2083	RCD-630K RCI-635K RCI-645K	5435261	4	BOTTOM TRIM 6-20X1/4
7.2084	RCD-630K RCI-635K	5436528	3	CONDENSATION TRIM 8-15X3/8
7.2084	RCI-645K	5436528	4	CONDENSATION TRIM 8-15X3/8
7.2085	RCD-630K RCI-635K	7528041	2	OVEN ANGLE 8-18X7/16
7.2085	RCI-645K	7528041	4	OVEN ANGLE 8-18X7/16
7.2086	RCD-630K RCI-635K	7528041	7	CONDENSATE TRIM PLATE 8-18X7/16
7.2086	RCI-645K	7528041	11	CONDENSATE TRIM PLATE 8-18X7/16
7.2087	RCD-630K RCI-635K	7528041	19	RANGE BACK PANEL 8-18X7/16
7.2087	RCI-645K	7528041	27	RANGE BACK PANEL 8-18X7/16
7.2088	RCD-630K RCI-635K RCI-645K	7528041	6	SIDE PANEL 8-18X7/16
7.2089	RCD-630K RCI-635K RCI-645K	274920	6	INSULATION RETAINER 10-12X1/2
	7.216 SHIELD,SCREW-TRIM			
7.216	RCD-630K RCI-635K RCI-645K	6566986	2	
	7.253 TRIM,SIDE-UPPER			
7.253	RCD-630K RCI-635K RCI-645K	7524677	1	LH-SATIN FINISH-RIBBED
7.253	RCD-630K RCI-635K RCI-645K	7524676	1	RH-SATIN FINISH-RIBBED
	7.2531 TRIM,SIDE-LOWER			
7.2531	RCD-630K RCI-635K RCI-645K	7524675	1	LH-SATIN FINISH-RIBBED
7.2531	RCD-630K RCI-635K RCI-645K	7524674	1	RH-SATIN FINISH-RIBBED
	7.2532 TRIM,BOTTOM-RANGE			
7.2532	RCD-630K RCI-635K	6568907	1	SATIN FINISH
7.2532	RCI-645K	6568909	1	SATIN FINISH
	7.2533 TRIM,TOP-RANGE			
7.2533	RCD-630K RCI-635K	6568908	1	SATIN FINISH
7.2533	RCI-645K	6568910	1	SATIN FINISH
	7.2534 TRIM-CONDENSATION			
7.2534	RCD-630K	7536781	1	
7.2534	RCI-635K	6569535	1	
7.2534	RCI-645K	6569536	1	
	7.310 PANEL,BACK			
7.310	RCD-630K RCI-635K	7535333	1	
7.310	RCI-645K	7535334	1	
	7.319 ANGLE-OVEN			
7.319	RCD-630K RCI-635K	7537679	1	
7.319	RCI-645K	7537680	1	
	7.378 COVER-ROTISSERIE OPENING			
7.378	RCD-630K RCI-635K RCI-645K	6567869	2	REAR
	7.390 PLATE-CONDENSATE TRIM			
7.390	RCD-630K RCI-635K	6569533	1	
7.390	RCI-645K	6569534	1	

1966

GROUP 8 OVEN LINERS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.009 BASE,HANDLE-OVEN DOOR			
8.009	RCD-630K RCI-635K	7537904	1	
8.009	RCI-645K	7537904	2	
	8.011 BEARING,NYLON-TORQUE SHAFT			
8.011	RCD-630K RCI-635K RCI-645K	6569567	2	MOUNT TO DOOR SPRING RETAINER
8.011	RCI-645K	6567433	2	LOWER
8.011	RCI-645K	6567612	2	UPPER
	8.026 BRACKET-LOWER ARM			
8.026	RCD-630K RCI-635K	6564377	2	
8.026	RCI-645K	6564377	4	
	8.0261 BRACKET-DOOR SPRING RETAINER			
8.0261	RCD-630K RCI-635K RCI-645K	6569554	2	
	8.0262 BRACKET-OVEN DOOR LATCH			
8.0262	RCI-635K	6567380	2	
8.0262	RCI-645K	6567380	4	
	8.096 FRAME,OUTSIDE-OVEN DOOR			
8.096	RCD-630K	7529102	1	
8.096	RCI-635K	6567407	1	
8.096	RCI-645K	6567406	1	LEFT
8.096	RCI-645K	6567405	1	RIGHT
	8.0961 FRAME,INSIDE-OVEN DOOR			
8.0961	RCD-630K RCI-635K	6567404	1	
8.0961	RCI-635K	6567403	1	LEFT
8.0961	RCI-645K	6567402	1	RIGHT
	8.099 GASKET-OVEN DOOR HANDLE			
8.099	RCD-630K RCI-635K	6567685	2	
8.099	RCI-645K	6567685	4	
	8.103 GLASS,OUTER-OVEN DOOR			
8.103	RCD-630K RCI-635K	7537962	1	
8.103	RCI-645K	7537979	1	LEFT
8.103	RCI-645K	7537980	1	RIGHT
	8.1031 GLASS,INNER-OVEN DOOR			
8.1031	RCD-630K RCI-635K	6567395	1	
8.1031	RCI-645K	6567394	1	LEFT
8.1031	RCI-645K	6567393	1	RIGHT
	8.110 HANDLE,DOOR-OVEN			
8.110	RCD-630K	7537963	1	
8.110	RCI-635K	7537903	1	
8.110	RCI-645K	7537903	2	
	8.149 NUT			
8.149	RCD-630K RCI-635K RCI-645K	134559	2	OVEN DOOR SPRING ADJUSTING
	8.192 RETAINER-OVEN DOOR GLASS			
8.192	RCD-630K RCI-635K	6567401	1	
8.192	RCI-645K	6567400	1	LEFT
8.192	RCI-645K	6567399	1	RIGHT
	8.1921 RETAINER-DOOR SPRING			
8.1921	RCD-630K RCI-635K RCI-645K	6569566	2	
	8.197 ROD,RELEASE-OVEN DOOR			
8.197	RCI-635K	6567383	2	
8.197	RCI-645K	6567383	4	
	8.1971 ROD-OVEN DOOR LATCH PLATE			
8.1971	RCD-630K	7529104	1	LH
8.1971	RCD-630K	7529103	1	RH
	8.199 ROLLER-OVEN DOOR STOP			
8.199	RCD-630K RCI-635K	5426925	1	
8.199	RCI-645K	5426925	2	
	8.203 SEAL,DOOR-BOTTOM			
8.203	RCD-630K RCI-635K	7527775	1	
8.203	RCI-645K	7527774	1	LEFT OVEN
8.203	RCI-645K	7527773	1	RIGHT OVEN
	8.2031 SEAL,DOOR-SIDE			
8.2031	RCD-630K RCI-635K	6590767	1	INCLUDES SEALS FOR BOTH SIDES
8.2031	RCI-645K	6590767	2	INCLUDES SEALS FOR BOTH SIDES
	8.208 SCREW			
8.208	RCD-630K RCI-635K	9419256	2	DOOR HANDLE 10-32X7/8
8.208	RCI-645K	9419256	4	DOOR HANDLE 10-32X7/8
8.2081	RCI-635K	446887	2	SET-OVEN DR RELEASE BUTTON 8-32X1/8
8.2081	RCI-645K	446887	4	SET-OVEN DR RELEASE BUTTON 8-32X1/8
8.2082	RCI-635K	6567391	2	OVEN DOOR LATCH BRACKET 8-32X5/16
8.2082	RCI-635K	6567391	4	OVEN DOOR LATCH BRACKET 8-32X5/16

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.208 SCREW - CONTINUED			
8.2083	RCD-630K RCI-635K	6567391	10	INSIDE OVEN DOOR FRAME 8-32X5/16
8.2083	RCI-645K	6567391	16	INSIDE OVEN DOOR FRAME 8-32X5/16
8.2084	RCI-645K	5435230	4	TORQUE SHAFT LOWER BEARING 10-12X3/4
8.2085	RCI-645K	5899607	4	TORQUE SHAFT UPPER BEARING 10-16X5/8
8.2086	RCD-630K	274920	1	LOWER ARM BRACKET 10-12X1/2
8.2086	RCI-635K	274920	2	LOWER ARM BRACKET 10-12X1/2
8.2086	RCI-645K	274920	4	LOWER ARM BRACKET 10-12X1/2
8.2087	RCD-630K RCI-635K	5439003	8	OVEN DOOR TORQUE SHAFT 10-32X3/8
8.2087	RCI-645K	5439003	16	OVEN DOOR TORQUE SHAFT 10-32X3/8
8.2088	RCD-630K RCI-635K	6546813	2	OVEN DOOR RELEASE ARM 8-32X1/4
8.2088	RCI-645K	6546813	4	OVEN DOOR RELEASE ARM 8-32X1/4
8.2089	RCD-630K RCI-635K	6567381	2	LOWER ARM 10-32X31/64
8.2089	RCI-645K	6567381	4	LOWER ARM 10-32X31/64
8.20811	RCD-630K RCI-635K RCI-645K	6569576	2	OVEN DOOR SPRING ADJUSTING
8.20812	RCD-630K RCI-635K RCI-645K	274920	4	TORQUE SHAFT BEARING 10-12X1/2
8.20813	RCD-630K RCI-635K	5436175	1	OVEN DOOR STOP ROLLER 10-32X1
8.20813	RCI-645K	5436175	2	OVEN DOOR STOP ROLLER 10-32X1
8.20814	RCD-630K RCI-635K RCI-645K	274920	12	DOOR SPRING RETAINER 10-12X1/2
8.20815	RCD-630K RCI-635K	274920	2	BROIL STOP SPRING 10-12X1/2
8.20815	RCI-645K	274920	4	BROIL STOP SPRING 10-12X1/2
8.20816	RCD-630K	6567391	2	OVEN DOOR LATCH PLATE ROD 8-32X5/16
	8.210 SHAFT-TORQUE			
8.210	RCD-630K RCI-635K	7531598	1	
8.210	RCI-645K	7531655	1	LEFT OVEN
8.210	RCI-645K	7531599	1	RIGHT OVEN
	8.222 SPACER-OVEN DOOR LOWER ARM			
8.222	RCD-630K	7529105	1	
	8.226 SPRING-OVEN DOOR LATCH			
8.226	RCI-635K	6567148	2	
8.226	RCI-645K	6567148	4	
	8.2261 SPRING-OVEN DOOR COUNTERBALANCE			
8.2261	RCD-630K RCI-635K	6569574	2	
8.2261	RCI-645K	6569583	1	LEFT
8.2261	RCI-645K	6569582	1	RIGHT
	8.2262 SPRING-BROIL STOP			
8.2262	RCD-630K RCI-635K	6569568	1	
8.2262	RCI-645K	6569581	1	LEFT OVEN
8.2262	RCI-645K	6569580	1	RIGHT OVEN
	8.279 WASHER			
8.279	RCI-645K	5428229	2	LOWER TORQUE SHAFT BEARING 5/8 IN OD
8.279	RCI-645K	629690	2	LOWER TORQUE SHAFT BEARING 3/4 IN OD
8.2791	RCD-630K RCI-635K RCI-645K	60002	2	OVEN DOOR SPRING ADJUSTING
8.2792	RCD-630K	6565749	1	LOCK-LOWER ARM BRACKET
8.2792	RCI-635K	6565749	2	LOCK-LOWER ARM BRACKET
8.2792	RCI-645K	6565749	4	LOCK-LOWER ARM BRACKET
8.2793	RCD-630K RCI-635K	6566285	2	OVEN DOOR HANDLE-CUP
8.2793	RCI-645K	6566285	4	OVEN DOOR HANDLE-CUP
8.2794	RCD-630K RCI-635K	6567384	2	CUP-OVEN DOOR RELEASE ARM
8.2794	RCI-645K	6567384	4	CUP-OVEN DOOR RELEASE ARM
8.2795	RCD-630K	6566759	1	OVEN DOOR RELEASE ARM
8.2795	RCI-635K	6566759	2	OVEN DOOR RELEASE ARM
8.2795	RCI-645K	6566759	4	OVEN DOOR RELEASE ARM
8.2796	RCD-630K RCI-635K	5438491	1	BROIL STOP SPRING
8.2796	RCI-645K	5438491	4	BROIL STOP SPRING
	8.316 BUSHING-DOOR SPRING			
8.316	RCD-630K RCI-635K RCI-645K	7528017	2	
	8.3161 BUSHING-DOOR SPRING SWIVEL			
8.3161	RCD-630K RCI-635K RCI-645K	7535598	2	
	8.321 SUPPORT,HANDLE-OVEN DOOR			
8.321	RCD-630K RCI-635K	7537575	1	LEFT
8.321	RCD-630K RCI-635K	7537574	1	RIGHT
8.321	RCI-645K	7537575	2	LEFT
8.321	RCI-645K	7537574	2	RIGHT

1966

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	8.366 ARM,LOWER-OVEN DOOR			
8.366	RCD-630K	6567435	1	
8.366	RCI-635K	6567435	2	
8.366	RCI-645K	6567435	4	
	8.3661 ARM,UPPER-OVEN DOOR			
8.3661	RCD-630K RCI-635K	7522328	1	LEFT
8.3661	RCD-630K RCI-635K	7522327	1	RIGHT
8.3661	RCI-645K	7522328	2	LEFT
8.3661	RCI-645K	7522327	2	RIGHT
	8.3662 ARM,RELEASE-OVEN DOOR			
8.3662	RCD-630K RCI-635K	6564415	1	LEFT
8.3662	RCD-630K RCI-635K	6564414	1	RIGHT
8.3662	RCI-645K	6564415	2	LEFT
8.3662	RCI-645K	6564414	2	RIGHT
	8.380 BUTTON,RELEASE-OVEN DOOR			
8.380	RCI-635K	6567382	2	
8.380	RCI-645K	6567382	4	
	8.3801 BUTTON-BROIL STOP			
8.3801	RCD-630K RCI-635K	6569572	1	
8.3801	RCI-645K	6569572	2	
	8.393 RING,RETAINER-LOWER ARM BRACKET			
8.393	RCD-630K	6567241	1	
8.393	RCI-635K	6567241	2	
8.393	RCI-645K	6567241	4	

GROUP 9 OVEN DOORS AND PARTS

	9.136 LINER-OVEN			
9.136	RCD-630K	7533345	1	
9.136	RCI-635K	7533039	1	
9.136	RCI-645K	7532885	1	LEFT
9.136	RCI-645K	7533013	1	RIGHT
	9.149 NUT			
9.149	RCD-630K RCI-635K	271163	4	OVEN LINER
9.149	RCI-645K	271163	8	OVEN LINER
	9.208 SCREW			
9.208	RCD-630K RCI-635K RCI-645K	6567391	5	OVEN LINER 8-18X7/16
9.208	RCD-630K RCI-635K	7528041	2	OVEN LINER 8-18X7/16
9.208	RCI-645K	7528041	7	OVEN LINER 8-18X7/16
	9.376 CAP-OVEN LINER CORNER			
9.376	RCD-630K	7528414	2	
	9.380 BUTTON,PLUG-ROTISSERIE			
9.380	RCI-635K RCI-645K	6567525	1	LOWER RIGHT
9.380	RCI-635K RCI-645K	6567526	1	UPPER LEFT

GROUP 10 OVEN INTERIOR PARTS

	10.103 GLASS-OVEN LIGHT			
10.103	RCI-635K	6567295	1	
10.103	RCI-645K	6567295	2	
	10.108 GRILL-BROILER PAN			
10.108	RCD-630K	6565589	1	
10.108	RCI-635K RCI-645K	7532503	1	PART OF SPATTER FREE BRL PAN
	10.110 HANDLE-BROILER PAN			
10.110	RCI-635K RCI-645K	5437919	4	PART OF SPATTER FREE BRL PAN
	10.192 RETAINER-THERMOSTAT BULB			
10.192	RCD-630K	6568792	2	
10.192	RCI-635K	7537689	2	
10.192	RCI-645K	6569993	4	
10.192	RCI-645K	7537693	2	RIGHT OVEN
	10.208 SCREW			
10.208	RCI-635K RCI-645K	5438261	8	HANDLE-PART OF SPATTER FREE BROILER PAN
	10.213 SHELF-OVEN			
10.213	RCD-630K RCI-635K	7532547	2	
10.213	RCI-645K	7532549	2	LEFT
10.213	RCI-645K	7532548	2	RIGHT
	10.323 GUIDE-SHELF RH			
10.323	RCD-630K RCI-635K	7532707	1	
10.323	RCI-645K	7532707	2	
	10.3231 GUIDE-SHELF LH			
10.3231	RCD-630K RCI-635K	7532708	1	
10.3231	RCI-645K	7532708	2	
	10.336 PAN-BROILER			
10.336	RCD-630K	6569846	1	
10.336	RCI-635K RCI-645K	6561567	1	SPATTER FREE-COMPLETE

GROUP 13 ELECTRICAL PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.001 ADAPTER-ELECTRICAL			
13.001	ALL MODELS	7529179	AR	THREE TERMINAL .030X1/4 INCH TAB
	13.007 BAFFLE-BROIL ELEMENT			
13.007	RCD-630K RCI-635K	7535362	1	
13.007	RCI-645K	6567291	1	LEFT OVEN
13.007	RCI-645K	7535362	1	RIGHT OVEN
	13.009 BASE-STARTER			
13.009	RCD-630K RCI-635K RCI-645K	6562260	1	
	13.026 BRACKET-LAMPHOLDER			
13.026	RCD-630K RCI-635K	6567862	2	
13.026	RCI-645K	6567582	2	
	13.037 CHANNEL-LEAD COVER			
13.037	RCD-630K RCI-635K	6567831	1	
13.037	RCI-645K	6567831	2	
	13.039 CLIP-LEAD WIRE			
13.039	RCI-635K RCI-645K	6567490	2	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
13.039	RCD-630K	7527865	1	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
13.039	RCI-635K	7527865	4	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
13.039	RCI-645K	7527865	3	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
13.039	RCI-635K RCI-645K	6569719	1	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
13.039	RCI-645K	7535609	2	WIRE TYPE MOUNTING WITH SCREW 1 IN OD
13.039	RCD-630K RCI-635K	6566117	1	WIRE TYPE MOUNTING WITH SCREW 1-1/4 IN DIA
13.039	RCI-645K	6566117	2	WIRE TYPE MOUNTING WITH SCREW 1-1/4 IN DIA
13.039	RCD-630K	6568051	4	WIRE TYPE MOUNTING WITH SCREW
13.039	RCI-635K RCI-645K	6568051	2	WIRE TYPE MOUNTING WITH SCREW
13.039	RCI-635K RCI-645K	6566168	1	MOUNT WITH SCREW,1/4 IN DIA-HEAT MINDER CAP TUBE
13.039	RCD-630K RCI-635K RCI-645K	7528581	2	SPECIAL SNAP ON TYPE-CONTROL HOUSING
	13.048 CONNECTOR-LINE TERMINAL			
13.048	RCI-645K	5429035	3	COPPER-PLAIN
	13.0481 CONNECTOR,LINE-TER RECEPTACLE JUMPER			
13.0481	RCD-630K RCI-635K RCI-645K	7532005	1	RECTANGULAR NYLON
	13.0482 CONNECTOR,MALE-LEAD WIRE SPLICE			
13.0482	ALL MODELS	5438151	AR	NATURAL COLOR-SIX LEAD WIRES
13.0482	ALL MODELS	6566745	AR	WHITE-SINGLE LEAD WIRE
	13.0483 CONNECTOR,FEMALE-LEAD WIRE SPLICE			
13.0483	ALL MODELS	6567412	AR	NATURAL COLOR-SIX LEAD WIRES
13.0483	ALL MODELS	6566746	AR	WHITE-SINGLE LEAD WIRE
13.0483	RCI-635K RCI-645K	6568739	1	FOUR LEAD WIRES-OVEN CONTROL
	13.0484 CONNECTOR,MALE-ELECTRICAL			
13.0484	ALL MODELS	P5877822	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	13.0485 CONNECTOR,FEMALE-ELECTRICAL			
13.0485	ALL MODELS	P5877823	AR	BULLET NOSE TO BLADE-.030X1/4 INCH TAB
	13.0486 CONNECTOR,SOLDERLESS			
13.0486	ALL MODELS	6585261	AR	SMALL-SET SCREW TYPE NO 18 TO 20 WIRE-3/32 IN ID
13.0486	ALL MODELS	5851484	AR	MEDIUM-SET SCREW TYPE NO 14 TO 18 WIRE-1/8 IN ID
13.0486	ALL MODELS	84514	AR	LARGE-SET SCREW TYPE NO 14 TO 18 WIRE-3/16 IN ID
	13.0487 CONNECTOR,SLEEVE			
13.0487	ALL MODELS	P5873790	AR	CRIMP TYPE #14 TO #16 1 WIRE
	13.080 ELEMENT,HEATING-BROIL			
13.080	RCD-630K RCI-635K	6564765	1	3200W 236V
13.080	RCI-645K	6564823	1	LEFT OVEN 1750W 236V
13.080	RCI-645K	6564765	1	RIGHT OVEN 3200W 236V
13.080	RCD-630K RCI-635K	7520982	1	2800W 208V
13.080	RCI-645K	7520986	1	LEFT OVEN 1750W 208V
13.080	RCI-645K	7520982	1	RIGHT OVEN 2800W 208V

1966

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.0801 ELEMENT,HEATING-BAKE			
13.0801	RCD-630K RCI-635K	7532552	1	2400W 236V,2700W 250V
13.0801	RCI-645K	7532554	1	LEFT OVEN 1600W 236V,1800W 250V
13.0801	RCI-645K	7532556	1	RIGHT OVEN 2200W 236V,2475W 250V
13.0801	RCD-630K RCI-635K	7532553	1	2330W 208V
13.0801	RCI-645K	7532555	1	LEFT OVEN 1600W 208V
13.0801	RCI-645K	7532557	1	RIGHT OVEN 2200W 208V
	13.098 FUSE			
13.098	RCD-630K RCI-635K RCI-645K	-------	1	15 AMP-APPLIANCE RECEPTACLE-PURCHASE LOCALLY
	13.116 HOUSING-TERMINAL BLOCK			
13.116	RCD-630K RCI-635K RCI-645K	6567245	1	
	13.126 INSULATOR,ELECTRICAL-BROIL RECEPTACLE			
13.126	RCD-630K RCI-635K	6567294	1	
13.126	RCI-645K	6567294	2	
	13.1261 INSULATOR,TERMINAL			
13.1261	ALL MODELS	6567957	AR	VINYL FOR FLAG TERMINALS
	13.1262 INSULATOR,SLEEVE			
13.1262	ALL MODELS	7529395	AR	SILICONE RUBBER-1 INCH LONG 3/16 IN ID
13.1262	ALL MODELS	6568691	AR	VINYL 1-7/16 INCHES LONG 3/16 IN ID
13.1262	ALL MODELS	5423696	AR	37-1/2 INCHES-FOR NO 10 WIRE
	13.132 LAMP,FLUORESCENT			
13.132	RCD-630K RCI-635K	-------	1	25 WATT GE F25T12/CW-28 INCH PURCHASE LOCALLY
13.132	RCI-645K	-------	1	30 WATT GE F30T8/CW-36 INCH PURCHASE LOCALLY
	13.149 NUT			
13.149	RCI-635K RCI-645K	99812	3	CONNECTOR TERMINAL BLOCK TERMINAL
13.1491	RCD-630K RCI-635K RCI-645K	5898589	2	TERMINAL BLOCK HOUSING
13.1492	RCD-630K RCI-635K RCI-645K	99812	2	TERMINAL BLOCK
13.1493	RCD-630K	99812	8	TERMINAL BLOCK TERMINAL
13.1493	RCI-635K RCI-645K	99812	11	TERMINAL BLOCK TERMINAL
13.1494	RCI-645K	5855706	3	LINE TERMINAL CONNECTOR
13.1495	RCD-630K	5895869	1	PILOT LAMP INDICATOR
	13.185 RECEPTACLE-BROIL ELEMENT TERMINAL			
13.185	RCD-630K RCI-635K	6567292	1	
13.185	RCI-645K	6567292	2	
	13.1851 RECEPTACLE-APPLIANCE			
13.1851	RCD-630K RCI-635K RCI-645K	7522292	1	
	13.1852 RECEPTACLE,LAMP-OVEN			
13.1852	RCD-630K RCI-635K	6564356	1	
13.1852	RCI-645K	6564356	2	
	13.1853 RECEPTACLE-BAKE ELEMENT TERMINAL			
13.1853	RCD-630K RCI-635K	7535332	1	
13.1853	RCI-645K	7535332	2	
	13.1854 RECEPTACLE-FUSE			
13.1854	RCD-630K RCI-635K RCI-645K	7531141	1	APPLIANCE
	13.192 RETAINER-BROIL RECEPTACLE			
13.192	RCD-630K RCI-635K	6567293	1	
13.192	RCI-645K	6567293	2	
	13.1921 RETAINER-FUSE RECEPTACLE			
13.1921	RCD-630K RCI-635K RCI-645K	7520171	2	
	13.1922 RETAINER-CONDUIT			
13.1922	RCD-630K RCI-635K RCI-645K	5425684	1	
	13.208 SCREW			
13.208	ALL MODELS	628321	AR	TERMINAL 4-40X5/16 INCH
13.208	ALL MODELS	5899914	AR	TERMINAL 4-40X7/16 INCH
13.208	ALL MODELS	5894191	AR	TERMINAL 6-32X1/4 INCH
13.208	ALL MODELS	5427015	AR	TERMINAL 8-32X1/4 INCH
13.208	ALL MODELS	5426525	AR	TERMINAL 8-32X3/8 INCH
13.208	ALL MODELS	5427014	AR	TERMINAL 8-32X1/2 INCH
13.208	ALL MODELS	5894189	AR	TERMINAL 8-32X5/8 INCH
13.208	ALL MODELS	5426495	AR	TERMINAL 10-32X1/4 INCH
13.208	ALL MODELS	9408527	AR	TERMINAL 10-32X1/2 INCH
13.2081	RCD-630K RCI-635K	7528041	4	LEAD COVER CHANNEL 8-18X7/16
13.2081	RCI-645K	7528041	6	LEAD COVER CHANNEL 8-18X7/16
13.2082	RCD-630K RCI-635K	161867	2	BROIL ELEMENT 8-15X1/2
13.2082	RCD-630K RCI-635K	6567885	2	BROIL ELEMENT 10-32X2
13.2082	RCI-645K	161867	4	BROIL ELEMENT 8-15X1/2
13.2082	RCI-645K	6567885	4	BROIL ELEMENT 10-32X2
13.2083	RCD-630K	7528041	6	LEAD WIRE CLIP 8-18X7/16
13.2083	RCI-635K	7528041	11	LEAD WIRE CLIP 8-18X7/16

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.208 SCREW-CONTINUED			
13.2083	RCI-645K	7528041	13	LEAD WIRE CLIP 8-18X7/16
13.2084	RCD-630K RCI-635K	6565857	1	BROIL RECEPTACLE RETAINER 10-12X1
13.2084	RCI-645K	6565857	2	BROIL RECEPTACLE RETAINER 10-12X1
13.2085	RCD-630K RCI-635K	6567391	2	FLUORESCENT LAMP BALLAST 8-32X5/16
13.2085	RCI-645K	5436724	2	FLUORESCENT LAMP BALLAST 10-32X3/8
13.2086	RCD-630K RCI-635K RCI-645K	5436724	2	TERMINAL BLOCK HOUSING 10-32X3/8
13.2087	RCD-630K RCI-635K RCI-645K	6569059	2	FUSE RECEPTACLE TERMINAL 8-32X1/4
13.2088	RCD-630K RCI-635K RCI-645K	5424117	1	GROUND STRAP 10-12X3/8
13.2089	RCD-630K RCI-635K	5435346	2	BAKE ELEMENT HINGE PLATE 10-12X1-1/2
13.2089	RCI-645K	5435346	4	BAKE ELEMENT HINGE PLATE 10-12X1-1/2
13.20811	RCD-630K RCI-635K RCI-645K	5436724	2	CONDUIT RETAINER 10-32X3/8
13.20812	RCI-645K	7528041	3	TERMINAL BLOCK COVER 8-18X7/16
13.20813	RCD-630K RCI-635K	6565857	2	OVEN LAMP RECEPTACLE 10-12X1
13.20813	RCI-645K	6565857	4	OVEN LAMP RECEPTACLE 10-12X1
13.20814	RCD-630K RCI-635K RCI-645K	5436528	2	FLUOR LAMP HOLDER BRACKET 8-15X3/8
13.20815	RCD-630K RCI-635K RCI-645K	163102	2	FLUOR LAMP HOLDER 6-20X1/2
13.20816	RCD-630K RCI-635K RCI-645K	5436528	2	STARTER BASE 8-15X3/8
13.20817	RCI-635K RCI-645K	6546560	2	TERMINAL BLOCK 10-12X3/4
13.20817	RCD-630K RCI-635K RCI-645K	6566861	2	TERMINAL BLOCK 10-32X3/4
	13.230 STARTER-FLUORESCENT LAMP			
13.230	RCD-630K RCI-635K	6560637	1	
13.230	RCI-645K	5432429	1	
	13.248 INDICATOR-OVEN PILOT LAMP			
13.248	RCD-630K	7529130	1	
	13.279 WASHER			
13.279	RCD-630K RCI-635K	6569767	3	TERMINAL-PLAIN
13.279	RCD-630K RCI-635K	5433842	1	TERMINAL-CUP
13.279	RCI-645K	5433842	5	TERMINAL-CUP
	13.321 SUPPORT-BAKE ELEMENT			
13.321	RCD-630K RCI-635K	7537048	2	U SHAPED CRIMP TYPE
13.321	RCI-645K	7537048	4	U SHAPED CRIMP TYPE
	13.327 CLAMP,BROIL ELEMENT RETAINER-OVEN			
13.327	RCD-630K RCI-635K	5436951	12	
13.327	RCI-645K	5436951	16	
	13.3272 CLAMP-TERMINAL			
13.3272	RCD-630K RCI-635K	7536768	3	
	13.329 TERMINAL,ELECTRIC			
13.329	RCD-630K RCI-635K RCI-645K	6568735	6	TAB-USE WITH VENT HOODS
13.3291	ALL MODELS	5438535	AR	LEAD CONNECTOR-BRASS ANGLE WITH HOLE TO CONNECT BLADE RECEPTACLE AND EYELET TYPE TERMINAL LEADS
13.3292	ALL MODELS	5223619	AR	LEAD CONNECTOR TO CONNECT TAB AND EYELET TYPE TERMINAL LEADS
13.3293	ALL MODELS	P5873786	AR	EYELET-LEAD WIRE #6 SCREW
13.3293	ALL MODELS	P5873787	AR	EYELET-LEAD WIRE #8 SCREW
13.3293	ALL MODELS	P5873788	AR	EYELET-LEAD WIRE #10 SCREW
13.3294	ALL MODELS	P5873789	AR	BULLET NOSE-NO 14 TO 16 WIRE
13.3295	ALL MODELS	P5875093	AR	BLADE RECEPTACLE-1 WIRE STR .030X1/4 INCH TAB
13.3295	ALL MODELS	P6569386	AR	BLADE RECEPTACLE-2 WIRE STR .030X1/4 INCH TAB-BRASS
13.3295	ALL MODELS	7535219	AR	BLADE RECEPTACLE-2 WIRE STR .030X1/4 INCH TAB-STEEL NICKEL
13.3295	ALL MODELS	6566627	AR	BLADE RECEPTACLE-1 WIRE STR .020X3/16 INCH TAB
13.3295	ALL MODELS	7529602	AR	BLADE RECEPTACLE-2 WIRE STR .020X3/16 INCH TAB
13.3295	ALL MODELS	7547988	AR	BLADE RECEPTACLE-1 WIRE STR .030X.205 INCH TAB-BRASS
13.3296	ALL MODELS	P5875091	AR	BLADE RECEPTACLE-FLAG-1 WIRE .020X3/16 INCH TAB
13.3296	ALL MODELS	P5875092	AR	BLADE RECEPTACLE-FLAG-1 WIRE .030X1/4 INCH TAB
13.3296	ALL MODELS	7547989	AR	BLADE RECEPTACLE-FLAG-1 WIRE .030X.205 INCH TAB-BRASS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	13.329 TERMINAL,ELECTRIC-CONTINUED			
13.3297	ALL MODELS	6592122	AR	TAB-.016X1/4 INCH-2 WIRE STR
13.3298	ALL MODELS	5875094	AR	BLADE RECEPTACLE-PIGGY BACK-1 WIRE STRAIGHT .030X1/4 TAB
13.3299	ALL MODELS	6592002	AR	RECEPTACLE-HARNESS HOUSING 2 WIRE STR-.030X1/4 INCH TAB
	13.330 BLOCK-TERMINAL			
13.330	RCD-630K	6563359	1	
13.330	RCI-635K RCI-645K	6563359	2	
	13.358 BULB,LAMP-OVEN ILLUMINATING			
13.358	RCD-630K RCI-635K	--------	1	MEDIUM BASE-40 WATT-PURCHASE LOCALLY
13.358	RCI-645K	-------	2	MEDIUM BASE-40 WATT-PURCHASE LOCALLY
	13.3581 BULB,LAMP-OVEN PILOT			
13.3581	RCD-630K	-------	1	CANDELABRA BASE-10 WATT-PURCHASE LOCALLY
	13.363 HOLDER,LAMP-FLUORESCENT			
13.363	RCD-630K RCI-635K	6564594	1	LEFT
13.363	RCD-630K RCI-635K	7531949	1	RIGHT
13.363	RCI-645K	7531951	1	LEFT
13.363	RCI-645K	7531950	1	RIGHT
	13.3631 HOLDER,LAMP-OVEN PILOT			
13.3631	RCD-630K	7524966	1	
	13.371 BALLAST-FLUORESCENT LAMP			
13.371	RCD-630K RCI-635K	6562489	1	25 WATT
13.371	RCI-645K	5432344	1	30 WATT
	13.378 COVER-TERMINAL BLOCK			
13.378	RCI-645K	6567870	1	
	13.386 STRAP,GROUND			
13.386	RCD-630K RCI-635K	7536767	1	
13.386	RCI-645K	5426989	1	
	13.390 PLATE-BAKE ELEMENT HINGE			
13.390	RCD-630K RCI-635K	7529639	1	
13.390	RCI-645K	7529639	2	
	13.394 SPLICE,MALE-ELECTRICAL			
13.394	ALL MODELS	P5431641	AR	BLADE TO BLADE .030X1/4 INCH TAB
	13.438 HARNESS,ELECTRICAL			
13.438	RCD-630K	7531594	1	COOKING TOP-INCLUDES DISCONNECT SWITCHES
13.438	RCI-635K	7530771	1	COOKING TOP-INCLUDES DISCONNECT SWITCHES
13.438	RCI-645K	7530772	1	COOKING TOP-INCLUDES DISCONNECT SWITCHES
13.438	RCD-630K	7531593	1	LINE AND THERMOSTAT
13.438	RCD-630K	7531947	1	TERMINAL BLOCK TO COOKING TOP
13.438	RCI-635K	7533048	1	LINE
13.438	RCI-635K	7533042	1	DRIVE MOTORS AND THERMOSTAT
13.438	RCI-635K	7531527	1	SWITCHES
13.438	RCI-645K	7531588	1	SWITCHES
13.438	RCI-645K	7531585	1	LEFT THERMOSTAT
13.438	RCI-645K	7533044	1	OVEN CONTROL
13.438	RCI-645K	7533052	1	ROTISSERIE
	13.489 LIGHT,PILOT-SURFACE UNIT			
13.489	RCD-630K	7526449	1	
13.489	RCI-635K RCI-645K	7533036	1	
	13.4891 LIGHT,PILOT-OVEN			
13.4891	RCI-635K	7533050	1	
13.4891	RCI-645K	7533034	1	LEFT
13.4891	RCI-645K	7533050	1	RIGHT
13.4891	RCI-635K RCI-645K	7533051	1	TENDER-MATIC

GROUP 14 ACCESSORIES AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.023 BOX-JUNCTION			
14.023	RCD-630K RCI-635K RCI-645K	5879987	1	PART OF EH-30J,EH-40J,EH-35J &EH-45J VENT HOODS
	14.029 BUMPER-FRONT PANEL			
14.029	RCD-630K RCI-635K	6592262	2	PART OF EH-30J AND EH-35J VENT HOODS
14.029	RCI-645K	6592262	4	PART OF EH-40J & EH-45J VENT HOODS
	14.037 CHANNEL-WIRING			
14.037	RCD-630K RCI-635K RCI-645K	6592480	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.039 CLIP-FILTER			
14.039	RCD-630K RCI-635K RCI-645K	6592128	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.048 CONNECTOR,FEMALE-LEAD WIRE SPLICE			
14.048	RCD-630K RCI-635K RCI-645K	7529998	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.0481 CONNECTOR,MALE-LEAD WIRE SPLICE			
14.0481	RCD-630K RCI-635K RCI-645K	7528468	1	VENT HOOD PLUG IN-MOUNTS TO CONTROL HOUSING-3 WIRE
14.0481	RCD-630K RCI-635K RCI-645K	6592478	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS-SAME AS 7528468 WITH WIRE
	14.088 FILTER,AIR			
14.088	RCD-630K RCI-635K	5879979	1	PART OF EH-30J&EH-35J VENT HOODS
14.088	RCI-645K	5879980	1	PART OF EH-40J&EH-45J VENT HOODS
14.0881	RCD-630K RCI-635K	6592487	1	CARBON-PART OF EH-35J VENT HOOD
14.0881	RCI-645K	6592488	1	CARBON-PART OF EH-45J VENT HOOD
14.0882	RCD-630K RCI-635K	6592489	1	SMOKE-PART OF EH-35J VENT HOOD
14.0882	RCI-645K	6592490	1	SMOKE-PART OF EH-45J VENT HOOD
	14.101 GEAR-SPROCKET			
14.101	RCI-635K RCI-645K	6592135	2	PART OF 6590486 ROTISSERIE
	14.109 GROMMET,NEOPRENE-CONDUIT			
14.109	RCD-630K RCI-635K RCI-645K	5875949	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.113 HOOD,VENT			
14.113	RCD-630K RCI-635K	-------	1	EH-30J&EH-35J FINISHED PRODUCTS
14.113	RCI-645K	-------	1	EH-40J&EH-45J FINISHED PRODUCTS
	14.1131 HOOD,TOP-VENTLESS			
14.1131	RCD-630K RCI-635K	6592837	1	PART OF EH-35J VENT HOOD
14.1131	RCI-645K	6592838	1	PART OF EH-45J VENT HOOD
	14.116 HOUSING-BLOWER			
14.116	RCD-630K RCI-635K RCI-645K	5879985	1	LH PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.116	RCD-630K RCI-635K RCI-645K	5879984	1	RH PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
	14.143 MOTOR-ROTISSERIE			
14.143	RCI-635K RCI-645K	7524935	1	PART OF ROTISSERIE KIT
	14.1431 MOTOR-BLOWER			
14.1431	RCD-630K RCI-635K RCI-645K	6592484	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.149 NUT			
14.149	RCD-630K RCI-635K RCI-645K	95142	AR	TRIM-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.1491	RCD-630K RCI-635K RCI-645K	5434526	1	CIRCUIT BREAKER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
	14.156 PANEL,FRONT-VENT HOOD			
14.156	RCD-630K RCI-635K	6593105	1	COMPLETE-PART OF EH-30J& EH-35J VENT HOODS
14.156	RCI-645K	6593106	1	COMPLETE-PART OF EH-40J& EH-45J VENT HOODS
	14.1561 PANEL,FRONT-HOOD TRIM			
14.1561	RCD-630K RCI-635K	6592263	1	PART OF EH-30J&EH-35J VENT HOODS
14.1561	RCI-645K	6592264	1	PART OF EH-40J&EH-45J VENT HOODS

1966

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.170 PLATE,NAME-HOOD			
14.170	RCD-630K RCI-635K RCI-645K	6592127	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.174 PROTECTOR,ELECTRICAL-CIRCUIT BREAKER			
14.174	RCD-630K RCI-635K RCI-645K	5432132	1	15AMP-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
	14.182 RACK-ROTISSERIE			
14.182	RCI-635K RCI-645K	7520920	1	PART OF ROTISSERIE KIT
	14.1821 RACK-ROASTER SIDE			
14.1821	RCD-630K RCI-635K RCI-645K	6597531	1	FOR SPATTER FREE BROILER PAN
	14.192 RETAINER-FRONT PANEL			
14.192	RCD-630K RCI-635K RCI-645K	6592481	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.199 ROLLER-FRONT PANEL			
14.199	RCD-630K RCI-635K RCI-645K	6592482	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.208 SCREW			
14.208	RCI-635K RCI-645K	5435817	2	THUMB-ROTISSERIE FORK-PART OF ROTISSERIE KIT
14.2081	RCI-635K RCI-645K	6562048	5	ROTISSERIE-PART OF ROTISSERIE KIT 10-12X1/2
14.2082	RCD-630K RCI-635K RCI-645K	5879992	4	VENT HOOD
14.2083	RCI-635K RCI-645K	5430929	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT 8-32X3/8
14.2084	RCI-635K RCI-645K	5879944	2	SWITCH INSULATOR-PART OF ROTISSERIE KIT 6-32X1/4
14.2085	RCI-635K RCI-645K	6592138	2	SWITCH-PART OF ROTISSERIE KIT 2-56X1-3/8
14.2086	RCD-630K RCI-635K RCI-645K	5855529	AR	TRIM-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.2087	RCD-630K RCI-635K RCI-645K	5885238	1	JUNCTION BOX COVER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.2088	RCD-630K RCI-635K RCI-645K	5885238	3	JUNCTION BOX-PART OF EH-30J, EH-40J,EH-35J&EH-45J VENT HOODS
14.2089	RCD-630K RCI-635K RCI-645K	5885238	1	SWITCH BOX COVER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.20811	RCD-630K RCI-635K RCI-645K	5885238	1	WIRING CHANNEL-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.20812	RCD-630K RCI-635K RCI-645K	5887721	2	FRONT PANEL RETAINER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.20813	RCD-630K RCI-635K RCI-645K	443778	2	SET-BLOWER WHEEL-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
14.20814	RCD-630K RCI-635K RCI-645K	7528041	2	PLUG IN COVER-PART OF EH-30J, EH-40J,EH-35J&EH-45J VENT HOODS
	14.226 SPRING-LINK WIRE			
14.226	RCI-635K RCI-645K	6592136	1	PART OF ROTISSERIE KIT
	14.2261 SPRING-SWITCH			
14.2261	RCD-630K RCI-635K RCI-645K	6592124	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.2262 SPRING-FILTER			
14.2262	RCD-630K RCI-635K RCI-645K	6592475	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.2263 SPRING-FRONT PANEL ROLLER			
14.2263	RCD-630K RCI-635K RCI-645K	6592483	2	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.253 TRIM-HOOD HOUSING			
14.253	RCD-630K RCI-635K	6592123	1	PART OF EH-30J&EH-35J VENT HOODS
14.253	RCI-645K	6592129	1	PART OF EH-40J&EH-45J VENT HOODS
	14.2531 TRIM,FRONT-HOOD			
14.2531	RCD-630K RCI-635K	6592125	1	PART OF EH-30J&EH-35J VENT HOODS
14.2531	RCI-645K	6592130	1	PART OF EH-40J&EH-45J VENT HOODS
	14.2532 TRIM-CIRCUIT BREAKER			
14.2532	RCD-630K RCI-635K RCI-645K	6565962	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	14.279 WASHER			
14.279	RCI-635K RCI-645K	5879591	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT
14.2791	RCD-630K RCI-635K RCI-645K	5898148	AR	TRIM-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.2792	RCD-630K RCI-635K RCI-645K	5886323	1	LOCK-CIRCUIT BREAKER-PART OF EH-30J,EH-40J,EH-35J&EH-45J VENT HOODS
	14.311 DUCT,AIR			
14.311	RCD-630K RCI-635K RCI-645K	5879977	1	PART OF EH-30J&EH-40J VENT HOODS
	14.327 CLAMP-BLOWER HOUSING			
14.327	RCD-630K RCI-635K RCI-645K	5879978	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.336 PAN-BROILER			
14.336	RCD-630K	6561567	1	SPATTER FREE-COMPLETE
14.336	RCI-645K	6591106	1	SMALL FOR LEFT OVEN-COMPLETE
	14.341 WHEEL,BLOWER			
14.341	RCD-630K RCI-635K RCI-645K	5879982	1	LH-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
14.341	RCD-630K RCI-635K RCI-645K	5879981	1	RH-PART OF EH-30J,EH-40J, EH-35J&EH-45J VENT HOODS
	14.348 LINK-TRIGGER TO SPRING			
14.348	RCI-635K RCI-645K	6592132	1	PART OF ROTISSERIE KIT
	14.3481 LINK-ACTUATING ARM TO PLATE			
14.3481	RCI-635K RCI-645K	6592134	1	PART OF ROTISSERIE KIT
	14.351 CHAIN-DRIVE			
14.351	RCI-635K RCI-645K	6592133	1	PART OF ROTISSERIE KIT
	14.364 PIN-GEAR			
14.364	RCI-635K RCI-645K	6592137	2	PART OF ROTISSERIE KIT
	14.378 COVER-ROTISSERIE			
14.378	RCI-635K RCI-645K	6568763	1	LOWER
14.378	RCI-635K RCI-645K	6568762	1	UPPER
	14.3781 COVER-JUNCTION BOX			
14.3781	RCD-630K RCI-635K RCI-645K	6592477	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.3782 COVER-SWITCH BOX			
14.3782	RCD-630K RCI-635K RCI-645K	6592476	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.3783 COVER-AIR DUCT			
14.3783	RCD-630K RCI-635K RCI-645K	6592486	1	PART OF EH-30J&EH-40J VENT HOODS
	14.3784 COVER-PLUG IN			
14.3784	RCD-630K RCI-635K RCI-645K	6592485	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.396 SWITCH-BLOWER OPERATING			
14.396	RCD-630K RCI-635K RCI-645K	5432253	1	PART OF EH-30J,EH-40J,EH-35J& EH-45J VENT HOODS
	14.3961 SWITCH-ROTISSERIE			
14.3961	RCI-635K RCI-645K	7520919	1	PART OF ROTISSERIE KIT
	14.428 ROTISSERIE KIT			
14.428	RCI-635K RCI-645K	6590486	1	
	14.430 SPIT-ROTISSERIE			
14.430	RCI-635K RCI-645K	7520921	1	PART OF ROTISSERIE KIT
	14.431 FORK,TURNING-ROTISSERIE			
14.431	RCI-635K RCI-645K	5432586	2	PART OF ROTISSERIE KIT
	14.485 GRIDDLE,KANT SLIDE			
14.485	RCD-630K RCI-635K RCI-645K	6563250	1	USE ON 8 INCH SURFACE UNITS

1966

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 15 INSULATION

	15.124 INSULATION,BULK			
15.124	ALL MODELS	5873771	AR	1X18X30 INCHES
15.124	ALL MODELS	5873772	AR	2X24X90 INCHES
15.124	ALL MODELS	5873773	AR	2-1/2X42X90 INCHES
15.124	ALL MODELS	5873774	AR	3X38X90 INCHES
15.1241	RCD-630K RCI-635K	*-------	1	OVEN SIDES AND BOTTOM 2X15X59 INCHES
15.1241	RCI-645K	*-------	1	LEFT OVEN SIDES AND BOTTOM 2X15X49 INCHES
15.1241	RCI-645K	*-------	1	RIGHT OVEN SIDES AND BOTTOM 2X15X57 INCHES
15.1242	RCD-630K RCI-635K	*-------	1	OVEN TOP 3X16X28 INCHES
15.1242	RCI-645K	*-------	1	LEFT OVEN TOP 3X14X16 INCHES
15.1242	RCI-645K	*-------	1	RIGHT OVEN TOP 3X16X22 INCHES
15.1243	RCD-630K RCI-635K	*-------	1	OVEN BACK 2X16X28 INCHES
15.1243	RCI-645K	*-------	1	LEFT OVEN BACK 2X14X16 INCHES
15.1243	RCI-645K	*-------	1	RIGHT OVEN BACK 2X16X22 IN
	15.1244 INSULATION,ASBESTOS-COOKING TOP COVER			
15.1244	RCD-630K RCI-635K RCI-645K	6567916	1	SOUND 8-7/16X18 INCHES-CUT TO SIZE REQUIRED

*CUT TO SIZE FROM BULK PIECES

GROUP 16 BASE CABINET AND PARTS

	16.026 BRACKET-HINGE PIVOT			
16.026	RCD-630K RCI-635K RCI-645K	6567649	4	PART OF B-30&B-40 BASE CABINETS
	16.029 BUMPER-DOOR			
16.029	RCD-630K RCI-635K RCI-645K	6568980	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.0291 BUMPER-SHELF			
16.0291	RCD-630K RCI-635K RCI-645K	6569025	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.0292 BUMPER,SLEEVE-SHELF			
16.0292	RCD-630K RCI-635K	6569022	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.0292	RCI-645K	6569022	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.070 DOOR-BASE CABINET LH			
16.070	RCD-630K RCI-635K	7521951	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCD-630K RCI-635K	7521972	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCD-630K RCI-635K	7521974	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCD-630K RCI-635K	7521975	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCI-645K	7521978	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCI-645K	7521999	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCI-645K	7522001	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCI-645K	7522002	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.0701 DOOR-BASE CABINET RH			
16.0701	RCD-630K RCI-635K	7521950	1	WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCD-630K RCI-635K	7521964	1	YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCD-630K RCI-635K	7521966	1	TURQUOISE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCD-630K RCI-635K	7521967	1	COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCI-645K	7521977	1	WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCI-645K	7521991	1	YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCI-645K	7521993	1	TURQUOISE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCI-645K	7521994	1	COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	16.096 FRAME-BASE CABINET			
16.096	RCD-630K RCI-635K	-------	1	PART OF B-30 BASE CABINET NOT AVAILABLE
16.096	RCI-645K	-------	1	PART OF B-40 BASE CABINET NOT AVAILABLE
	16.110 HANDLE,DOOR-BASE CABINET			
16.110	RCD-630K RCI-635K	6568979	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.110	RCI-645K	6568996	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.149 NUT			
16.149	RCD-630K RCI-635K RCI-645K	5439337	2	DOOR STRIKE-PART OF B-30& B-40 BASE CABINETS
16.1492	RCD-630K RCI-635K RCI-645K	447014	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.1493	RCD-630K RCI-635K	7524744	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105
16.1493	RCI-645K	7524744	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106
	16.208 SCREW			
16.208	RCD-630K RCI-635K RCI-645K	5887109	8	HINGE PIVOT BRACKET-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
16.2081	RCD-630K RCI-635K RCI-645K	5909850	8	DOOR HINGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
16.2082	RCD-630K RCI-635K RCI-645K	6568999	6	DOOR HANDLE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-18X3/8
16.2085	RCD-630K RCI-635K	5909850	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-32X1/2
16.2085	RCD-630K RCI-635K	5435827	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-15X1/2
16.2085	RCI-645K	5909850	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-32X1/2
16.2085	RCI-645K	5435827	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-15X1/2
16.2086	RCD-630K RCI-635K RCI-645K	5415118	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 3/8-16X5/8
16.2087	RCD-630K RCI-635K RCI-645K	455508	4	UPPER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
16.2089	RCD-630K RCI-635K RCI-645K	455508	4	LOWER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
16.20811	RCD-630K RCI-635K RCI-645K	6569714	2	LOWER TRIM CAP-PART OF B-30& B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 6-20X3/8
16.20812	RCD-630K RCI-635K RCI-645K	5427288	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	16.213 SHELF-CABINET			
16.213	RCD-630K RCI-635K	7521343	1	PART OF B-30 BASE CABINET MODEL NO 6560105
16.213	RCI-645K	7521344	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.253 TRIM,SIDE-UPPER			
16.253	RCD-630K RCI-635K RCI-645K	6568982	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106-SATIN FINISH-RIBBED
	16.2531 TRIM,SIDE-LOWER			
16.2531	RCD-630K RCI-635K RCI-645K	6568983	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.279 WASHER			
16.2791	RCD-630K RCI-635K RCI-645K	640152	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.282 WRENCH-GLIDER BUTTON ADJUSTING			
16.282	RCD-630K RCI-635K RCI-645K	6568988	1	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.316 BUSHING-HINGE PIVOT			
16.316	RCD-630K RCI-635K RCI-645K	6567650	4	PART OF B-30&B-40 BASE CABINETS
	16.323 GUIDE-SHELF			
16.323	RCD-630K RCI-635K	6569021	2	PART OF B-30 BASE CABINET MODEL NO 6560105
16.323	RCI-645K	6569021	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	16.328 CATCH,SPRING-DOOR			
16.328	RCD-630K RCI-635K RCI-645K	6567662	2	PART OF B-30&B-40 BASE CABINETS
	16.346 HINGE,DOOR-RH TOP AND LH BOTTOM			
16.346	RCD-630K RCI-635K RCI-645K	6564643	2	PART OF B-30&B-40 BASE CABINETS
	16.3461 HINGE,DOOR-LH TOP AND RH BOTTOM			
16.3461	RCD-630K RCI-635K RCI-645K	6564644	2	PART OF B-30&B-40 BASE CABINETS
	16.349 STRIKE-DOOR			
16.349	RCD-630K RCI-635K RCI-645K	6568984	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.376 CAP-LOWER TRIM			
16.376	RCD-630K RCI-635K RCI-645K	6569067	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.378 COVER-REAR ACCESS			
16.378	RCD-630K RCI-635K RCI-645K	7522003	2	WHITE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCD-630K RCI-635K RCI-645K	7522004	2	YELLOW-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCD-630K RCI-635K RCI-645K	7522006	2	TURQUOISE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCD-630K RCI-635K RCI-645K	7522007	2	COPPER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.380 BUTTON,GLIDER-CABINET			
16.380	RCD-630K RCI-635K RCI-645K	6568985	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	16.3801 BUTTON,PLUG-DOOR			
16.3801	RCD-630K RCI-635K RCI-645K	432608	4	PART OF B-30&B-40 BASE CABINETS

ADDITIONAL COLORS FOR 1966 MODELS OF FLAIR RANGES

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	7.159 PANEL,SIDE-RANGE RH			
7.159	RCD-630K RCI-635K RCI-645K	631136	1	BE-AUTUMN HAZE
7.159	RCD-630K RCI-635K RCI-645K	7533792	1	HB-HONEY BEIGE
7.159	RCD-630K RCI-635K RCI-645K	630928	1	CC-TWO TONE COPPER
7.159	RCD-630K RCI-635K RCI-645K	630929	1	GN-TAHITIAN GREEN
	7.1591 PANEL,SIDE-RANGE LH			
7.1591	RCD-630K RCI-635K RCI-645K	631137	1	BE-AUTUMN HAZE
7.1591	RCD-630K RCI-635K RCI-645K	7533793	1	HB-HONEY BEIGE
7.1591	RCD-630K RCI-635K RCI-645K	630932	1	CC-TWO TONE COPPER
7.1591	RCD-630K RCI-635K RCI-645K	630933	1	GN-TAHITIAN GREEN
	7.160 PANEL,TOP-RANGE			
7.160	RCD-630K RCI-635K	631138	1	BE-AUTUMN HAZE
7.160	RCD-630K RCI-635K	7533794	1	HB-HONEY BEIGE
7.160	RCD-630K RCI-635K	630930	1	CC-TWO TONE COPPER
7.160	RCD-630K RCI-635K	630931	1	GN-TAHITIAN GREEN
7.160	RCI-645K	7533795	1	HB-HONEY BEIGE
7.160	RCI-645K	7524014	1	PK-PINK
7.160	RCI-645K	630934	1	CC-TWO TONE COPPER
7.160	RCI-645K	630935	1	GN-TAHITIAN GREEN
	16.070 DOOR-BASE CABINET LH			
16.070	RCD-630K RCI-635K	631176	1	BE-AUTUMN HAZE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCD-630K RCI-635K	7533801	1	HB-HONEY BEIGE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCD-630K RCI-635K	630946	1	CC-TWO TONE COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCD-630K RCI-635K	630947	1	GN-TAHITIAN GREEN-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.070	RCI-645K	7533810	1	HB-HONEY BEIGE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCI-645K	630960	1	CC-TWO TONE COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.070	RCI-645K	630961	1	GN-TAHITIAN GREEN-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	16.0701 DOOR-BASE CABINET-RH			
16.0701	RCD-630K RCI-635K	631174	1	BE-AUTUMN HAZE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCD-630K RCI-635K	7533799	1	HB-HONEY BEIGE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCD-630K RCI-635K	630942	1	CC-TWO TONE COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCD-630K RCI-635K	630943	1	GN-TAHITIAN GREEN-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
16.0701	RCI-645K	7533808	1	HB-HONEY BEIGE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCI-645K	630956	1	CC-TWO TONE COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
16.0701	RCI-645K	630957	1	GN-TAHITIAN GREEN-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	16.378 COVER-REAR ACCESS			
16.378	RCD-630K RCI-635K RCI-645K	631177	2	BE-AUTUMN HAZE-PART OF B-30& B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCD-630K RCI-635K RCI-645K	7533802	2	HB-HONEY BEIGE-PART OF B-30& B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCD-630K RCI-635K RCI-645K	630948	2	CC-TWO TONE COPPER-PART OF B-30 & B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
16.378	RCD-630K RCI-635K RCI-645K	630949	2	GN-TAHITIAN GREEN-PART OF B-30 & B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106

1966


GM
MARK OF EXCELLENCE

FRIGIDAIRE
FLAIR RANGE
PARTS CATALOG

"N" MODELS

INDEX

DESCRIPTION	PAGES
ALPHABETICAL INDEX	B, C, D
PRODUCT VIEWS	1
CONTROL PANEL, MEAL MINDER, SWITCHES AND PARTS	2
CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS	3
BLOWER, VENT AND PARTS	4
COOKING TOP, SURFACE UNITS AND PARTS	5
OVEN LINERS AND INTERIOR PARTS	6
PANELS, TRIMS AND PARTS	7
OVEN DOORS AND PARTS	8
BASE CABINETS AND PARTS	9
ROTISSERIE - ACCESSORY	10
DUCTLESS VENT KIT - ACCESSORY	10
ELECTRICAL TERMINALS AND CONNECTORS	11
LEAD WIRE CHART	11

GROUPS	DESCRIPTION	PAGES
1	CONTROL PANELS AND PARTS	12 - 14
2	COOK-MASTERS AND PARTS	14
3	SWITCHES AND PARTS	15 - 16
4	SURFACE UNITS AND PARTS	17
6	TOPS AND PARTS	18 - 19
7	FRAMES, PANELS AND PARTS	19 - 21
8	OVEN DOORS AND PARTS	21 - 24
9	OVEN LINERS AND PARTS	24
10	OVEN INTERIOR PARTS	25
13	ELECTRICAL PARTS	25 - 28
14	ACCESSORIES AND PARTS	28 - 29
15	INSULATION	30
16	BASE CABINETS AND PARTS	30 - 33

1968

ALPHABETICAL INDEX

DESCRIPTION	CODE
ADAPTER - Air Duct	1.001
ADAPTER - Electrical	13.001
ARM - Oven Door Lower	8.366
ARM - Oven Door Upper	8.3661
ARM - Switch Operating Control	3.366
BAFFLE - Broil Element	13.007
BALLAST - Fluorescent Lamp	13.371
BASE - Oven Door Handle	8.009
BASE - Starter	13.009
BEARING - Nylon Torque Shaft	8.011
BLOCK - Surface Unit Connector	4.330
BLOCK - Terminal	13.330
BRACE - Back Panel	7.025
BRACE - Control Housing	1.025
BRACKET - Broil Switch	3.026
BRACKET - Hinge Pivot	16.026
BRACKET - Lamp Holder	13.026
BRACKET - Latch Spring Retainer	6.026
BRACKET - Lower Arm	8.026
BRACKET - Non Vent Type Filter	14.026
BRACKET - Oven Door Mounting	8.0263
BRACKET - Sensor Retainer	4.0261
BRACKET - Spring	8.0262
BRACKET - Stand Off	1.026
BRACKET - Surface Unit Hinge	4.026
BRACKET - Surface Unit Switch	3.0261
BRACKET - Terminal Block	13.0261
BRACKET - Thermostat	3.0262
BRACKET - Top Cover Slide	6.0261
BRACKET - Torque Bearing	8.0261
BULB - Oven Lamp	13.358
BUMPER - Cooking Top	6.0291
BUMPER - Door	16.029
BUMPER - Pulley Channel	6.029
BUMPER - Shelf	16.0291
BUMPER - Shelf Sleeve	16.0292
BUSHING - Door Spring	8.316
BUSHING - Door Spring Swivel	8.3161
BUSHING - Hinge Pivot	16.316
BUTTON - Broil Stop	8.380
BUTTON - Console Lock	1.3801
BUTTON - Control Housing Plug	1.380
BUTTON - Cooking Top Cover	6.380
BUTTON - Rotisserie Plug	9.380
BUTTON - Switch Arm Glide	3.380
BUTTON - Top Panel	7.380
BUTTON - Cabinet Glider	16.380
BUTTON - Door Plug	16.3801
CABLE - Cooking Top	6.436
CAP - Lower Side Trim	7.376
CAP - Lower Trim	16.376
CATCH - Door Spring	16.328
CHAIN - Drive	14.351
CHANNEL - Air Filter	1.037
CHANNEL - Cable Spacer	6.0372
CHANNEL - Cooking Top Stop	6.037
CHANNEL - Wiring	1.0371
CLAMP - Air Duct Adapter	1.327
CLAMP - Broil ELement Retainer	13.327
CLAMP - Lead Wire	13.3271
CLAMP - Surface Unit Hinge	4.327
CLAMP - Thermostat Capillary Tube	3.327
CLIP - Blower Motor	1.039
CLIP - Conduit Cable	13.0391
CLIP - Lead Wire	13.039
CLIP - Pilot Lamp	13.0392
CONDUIT	13.047
CONNECTOR - Conduit	13.048
COOKMASTER & TIME SIGNAL	2.374
COVER - Blower	1.3784
COVER - Blower Center	1.3783
COVER - Blower Opening	7.3783
COVER - Console Lock Plate	1.3781
COVER - Control	1.378
COVER - Cooking Top	6.378
COVER - Fluorescent Lamp	1.3782
COVER - Lead	7.3781
COVER - Oven Element Wiring	7.3782
COVER - Rear Access	16.378
COVER - Rotisserie	14.378
COVER - Rotisserie Opening	7.378
CUSHION - Oven Door Glass	8.400
DAMPER - Air Duct	1.062
DIAL - Broil Control	3.3813
DIAL - Heat Minder Switch	3.3811
DIAL - Infinite Heat Surface Unit Switch	3.381
DIAL - Meal Minder	2.381
DIAL - Tender-Matic Control	3.3814
DIAL - Thermostat	3.3812
DOOR - Base Cabinet LH	16.070
DOOR - Base Cabinet RH	16.0701
DUCT -Air	14.311
ELEMENT - Bake	13.0801
ELEMENT - Broil	13.080
END - Control Panel	1.395
ESCUTCHEON - Control Panel	1.081
FILTER - Air	1.088
FILTER - Air	14.0881
FORK - Rotisserie Turning	14.431
FRAME - Base Cabinet	16.096
FRAME - Cookmaster & Time Signal	2.096
FRAME - Oven Door	8.096
FRAME - Oven Light Glass	10.096
FUSE	13.098
GASKET - Oven Door Handle	8.099
GASKET - Surface Unit Terminal Block Seal	4.099
GEAR - Sprocket	14.101
GLASS - Control Panel	1.103
GLASS - Cookmaster & Time Signal	2.103
GLASS - Lamp Housing	1.1031
GLASS - Oven Door Inner	8.1031
GLASS - Oven Door Outer	8.103
GLASS - Oven Light	10.103
GRIDDLE - Kant Slide	14.485
GRILL - Broiler Pan	10.108
GRILL - Broiler Pan	14.108
GRIP - Oven Door Handle	8.107
GUIDE - Shelf	16.323
GUIDE - Shelf LH	10.3231
GUIDE - Shelf RH	10.323
HANDLE - Base Cabinet Door	16.110
HANDLE - Broiler Pan	14.110
HANDLE - Cooking Top	6.110
HANDLE - Oven Door	8.110
HARNESS - Electrical	13.438
HINGE - Door LH Top and RH Bottom	16.3461
HINGE - Door RH Top and LH Bottom	16.346
HOLDER - Cable Spacer Channel	6.112
HOLDER - Fluorescent Lamp	13.363
HOUSING - Blower Assembly	1.1161
HOUSING - Blower Motor	1.1162
HOUSING - Control	1.116
HOUSING - Cooking Top	6.116
HOUSING - Oven Lamp	10.116
INDICATOR - Pilot Lamp	13.248
INSULATION - Bulk	15.124

ALPHABETICAL INDEX - Continued


DESCRIPTION	CODE
INSULATION - Cooking Top Cover.	15.1244
INSULATION - Lamp Housing Lower Trim.....	1.124
INSULATOR - Broil Element Terminal Block Spacer..	13.126
KNOB - Broil Control.....	3.130
KNOB - Cookmaster and Time Signal.....	2.130
KNOB - Latch Operating.....	6.350
KNOB - Meal Minder.....	2.1301
KNOB - Oven Thermostat Control.	3.1303
KNOB - Surface Units Control...	3.1302
KNOB - Tender-Matic Control....	3.1301
LAMP - Fluorescent.....	13.132
LEVER - Latch Operating.....	6.356
LIGHT - Oven Pilot.....	13.4891
LIGHT - Surface Unit Pilot.....	13.489
LINER - Oven.....	9.136
LINK - Actuating Arm To Plate..	14.3481
LINK - Trigger To Spring.....	14.348
MEAL MINDER.....	2.528
MOTOR - Blower.....	1.143
MOTOR - Cookmaster and Time Signal.....	2.143
MOTOR - Meal Minder.....	2.1431
MOTOR - Oven Control.....	3.143
MOTOR - Rotisserie.....	14.143
PAN - Broiler.....	10.336
PAN - Broiler.....	14.336
PAD - Air Duct Adapter.....	1.1531
PAD - Blower Sound.....	1.1532
PAD - Control Panel Glass.....	1.153
PAD - Meal Minder.....	2.153
PAN - Large Surface Unit Drip..	4.3361
PAN - Small Surface Unit Drip..	4.336
PANEL - Back.....	7.310
PANEL - Cooking Top Front.....	6.156
PANEL - Lower Access.....	7.498
PANEL - Range LH Side.....	7.1591
PANEL - Range RH Side.....	7.159
PANEL - Top.....	7.160
PANEL - Top.....	14.156
PIN - Console Mounting.....	1.364
PIN - Cooking Top Latch.....	6.364
PIN - Gear.....	14.364
PIN - Switch Operating Arm Cotter.....	3.163
PLATE - Bake Element Hinge.....	13.390
PLATE - Blower Baffle.....	1.3901
PLATE - Blower Motor Mounting..	1.3902
PLATE - Condensate Trim.....	7.390
PLATE - Conduit and Terminal Block.....	13.3901
PLATE - Console Lock.....	1.390
PLATE - Cooking Top Drip.....	6.390
PLATE - Door Frame.....	8.390
PLATE - Name.....	1.170
PULLEY - Cooking Top Cable.....	6.177
RACK - Roaster Side.....	14.1821
RACK - Rotisserie.....	14.182
RECEPTACLE - Appliance.....	13.1851
RECEPTACLE - Fuse.....	13.185
RECEPTACLE - Oven Lamp.....	13.1852
RETAINER - Cable Bracket.....	6.192
RETAINER - Cable Pulley Spring.	6.1921
RETAINER - Control Panel Escutcheon.....	1.192
RETAINER - Fuse Receptacle.....	13.192
RETAINER - Lamp Glass.....	1.1922
RETAINER - Lamp Housing Glass..	1.1921
RETAINER - Oven Door Glass.....	8.192
RETAINER - Oven Insulation.....	9.192
RETAINER - Oven Lamp Glass.....	10.1921
RETAINER - Switch Spring.....	3.192
RETAINER - Thermostat Bulb.....	10.192
RING - Blower Venturi.....	1.393
RING - Cooking Top Latch Pin Retainer.....	6.393
RING - Lower Arm Bracket Retainer.....	8.393
RING - Top Cover Roller Retainer.....	6.3931
RIVET - Upper Side Trim.....	7.194
ROD - Air Duct Adapter.....	1.197
ROLLER - Cooking Top.....	6.199
ROLLER - Oven Door Stop.....	8.199
ROLLER - Top Cover.....	6.1991
ROTISSERIE KIT.....	14.428
SEAL - Bottom Door.....	8.203
SEAL - Side Seal.....	8.2031
SENSOR - Heat Minder.....	4.490
SHAFT - Torque.....	8.210
SHELF - Cabinet.....	16.213
SHELF - Oven.....	10.213
SHIELD - Cooking Top Stop Channel Screw.....	6.216
SHIELD - Disconnect Switch.....	3.216
SHIELD - Oven.....	10.216
SHIELD - Speed Heat Switch.....	3.2161
SLIDE - Cooking Top Cover.....	6.120
SPACER - Broil Element.....	13.222
SPACER - Console Mounting.....	1.222
SPIT - Rotisserie.....	14.430
SPRING - Air Filter.....	1.226
SPRING - Broil Stop.....	8.226
SPRING - Filter.....	14.2261
SPRING - Latch Pin Operating...	6.2261
SPRING - Link Wire.....	14.226
SPRING - Oven Door Counter-Balance.....	8.2261
SPRING - Top Cover.....	6.226
STARTER - Fluorescent Lamp.....	13.230
STOP - Cooking Top Cover.....	6.235
STRIKE - Door.....	16.349
SUPPORT - Bake Element.....	13.321
SUPPORT - Console.....	1.321
SUPPORT - Control Housing.....	1.3211
SUPPORT - Heat Minder Capillary Tube.....	3.321
SUPPORT - Heat Minder Sensor...	4.321
SUPPORT - Oven Door Handle.....	8.321
SUPPORT - Oven Lamp Receptacle.	10.321
SUPPORT - Surface Unit Large...	4.3212
SUPPORT - Surface Unit Small...	4.3211
SWITCH - Broil Control.....	3.387
SWITCH - Cookmaster and Time Signal Terminal.....	2.396
SWITCH - Fan.....	3.3961
SWITCH - Fluorescent Light.....	3.241
SWITCH - Heat Minder Surface Unit.....	3.285
SWITCH - Infinite Heat Surface Unit.....	3.2852
SWITCH - Meal Minder.....	2.3961
SWITCH - Oven Interior Light...	3.396
SWITCH - Rotisserie.....	14.396
SWITCH - Speed Heat Surface Unit.....	3.2851
SWITCH - Surface Unit Disconnect.....	3.3962
THERMOSTAT - Oven.....	3.242
THERMOSTAT - Tender-Matic.....	3.2421
TOP - Cooking.....	6.258
TRAY - Oven Bottom Drip.....	10.075
TRIM - Bottom.....	7.2532
TRIM - Condensation.....	7.2534
TRIM - Control Panel Lower.....	1.253

1968

ALPHABETICAL INDEX - Continued


DESCRIPTION	CODE
TRIM - Control Panel Upper.....	1.2533
TRIM - Cooking Top Housing.....	6.253
TRIM - Glass Control Panel.....	1.2532
TRIM - Heat Deflector.....	1.2531
TRIM - Lower Side.....	7.2531
TRIM - Lower Side.....	16.2531
TRIM - Top.....	7.2533
TRIM - Upper Side.....	7.253
TRIM - Upper Side.....	16.253
UNIT - 6 Inch Surface.....	4.266
UNIT - 8 Inch Surface.....	4.2661
VENT - Ductless.....	14.520
WHEEL - Blower.....	1.341
WRENCH - Glider Button Adjusting.....	16.282

PRODUCT VIEWS

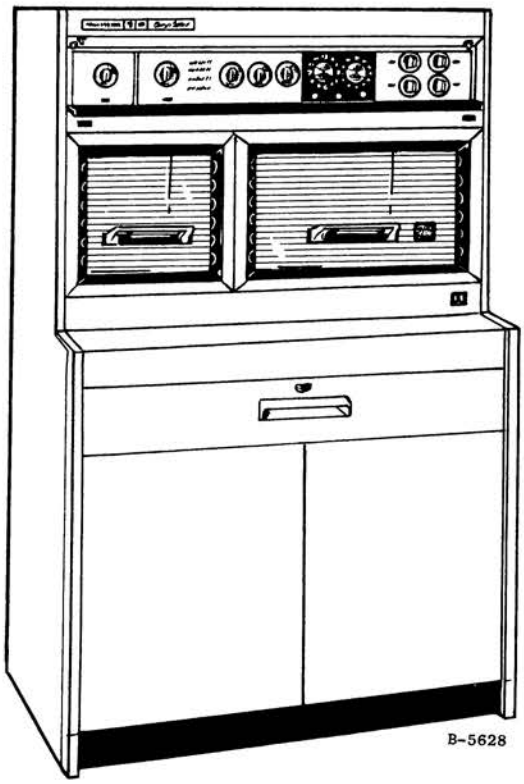


B-5628

Models RCI-645N and RCI-645VN

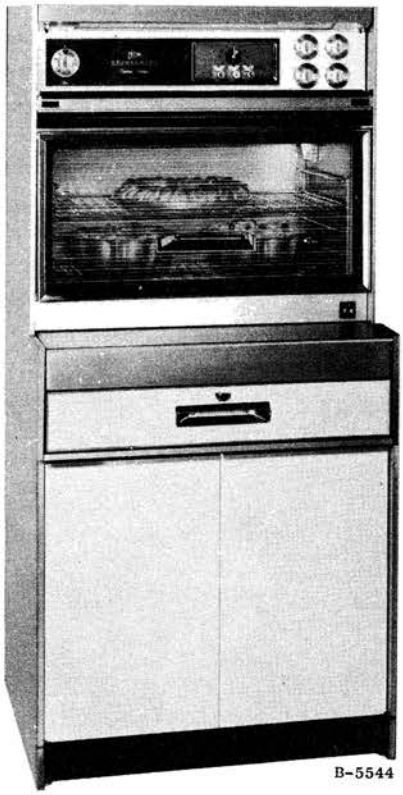

B-5544

Models RCD-630N and RCD-630VN

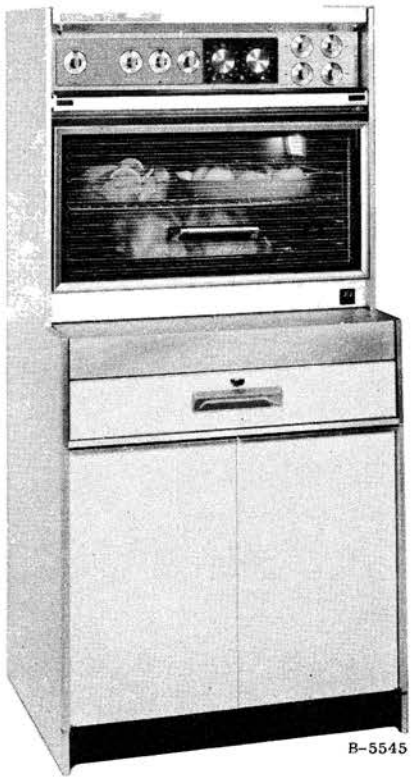


B-5545

Models RCI-635N and RCI-635VN

1968

CONTROL PANEL, MEAL MINDER, SWITCHES AND PARTS

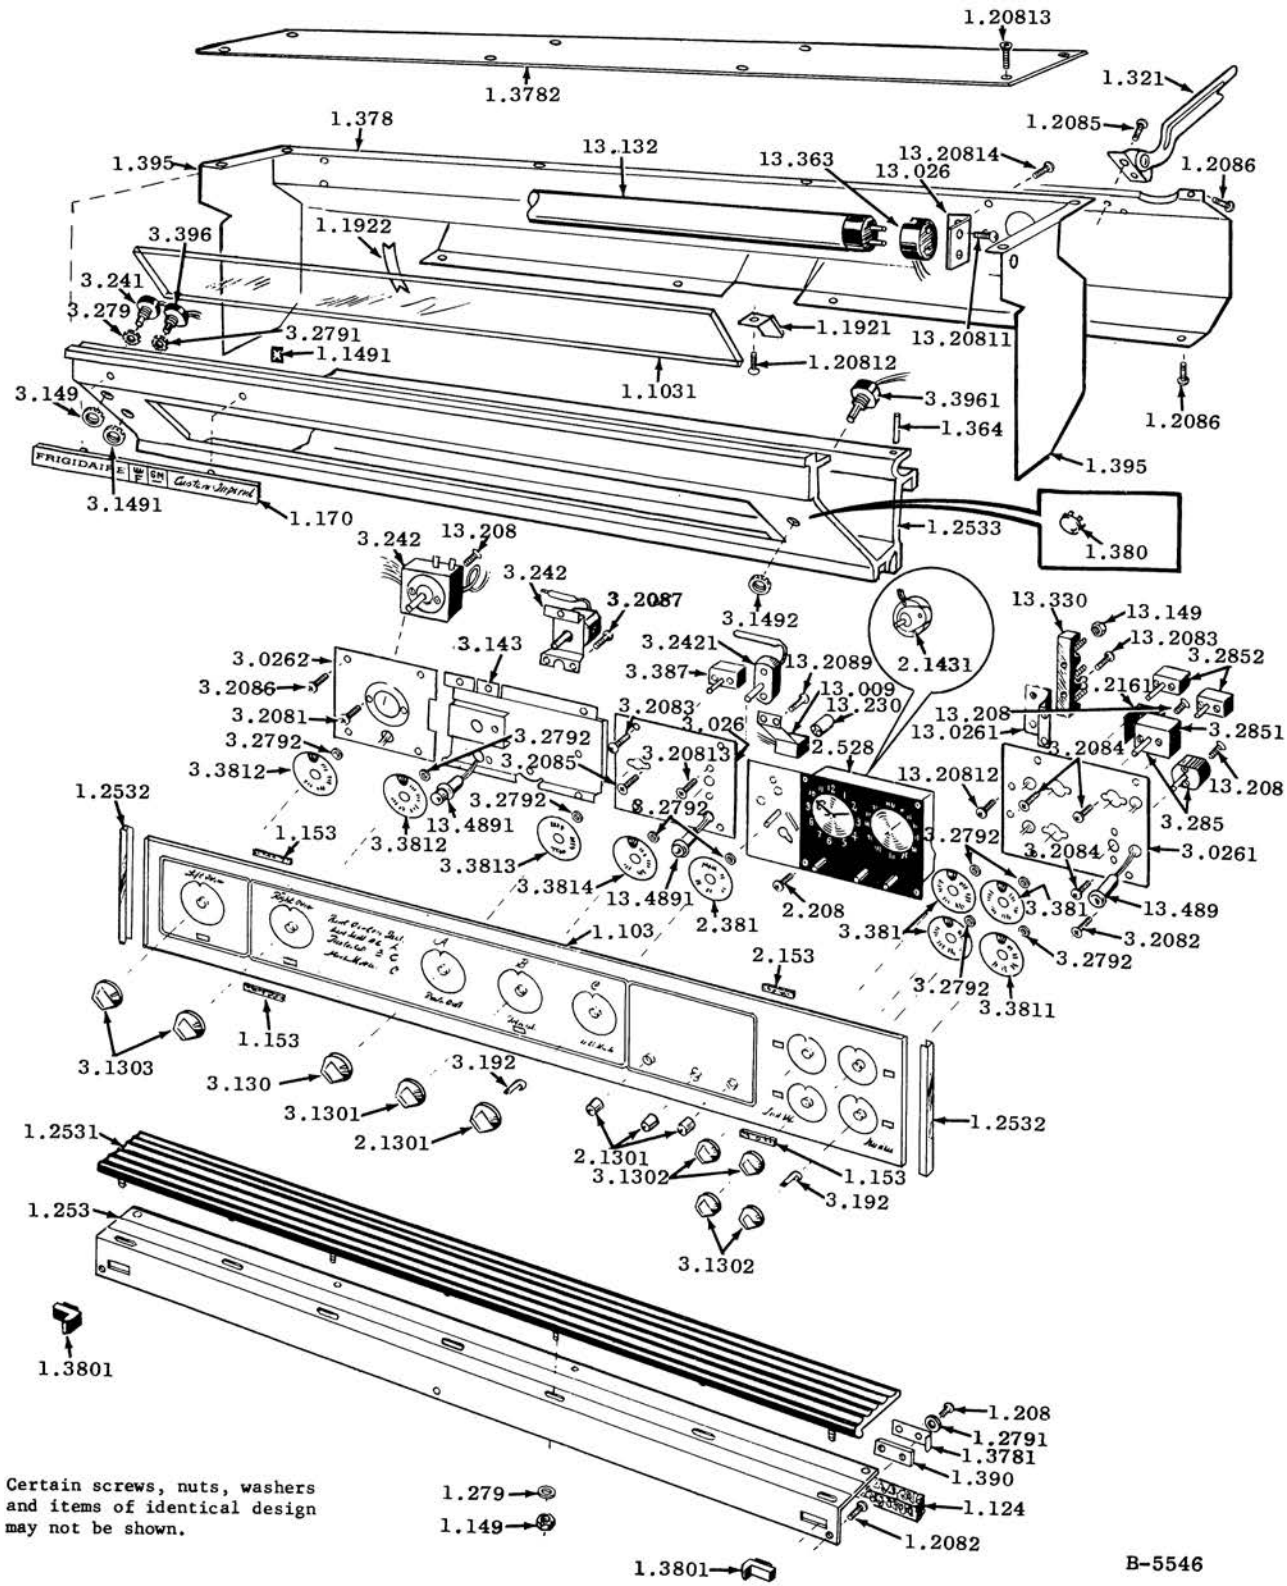


Certain screws, nuts, washers and items of identical design may not be shown.

Models RCI-645N and RCI-645VN

This illustration may also be used for the selection of parts for models RCI-635N and RCI-635VN, but all parts shown are not used on these models.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

CONTROL PANEL, COOK-MASTER, SWITCHES AND PARTS

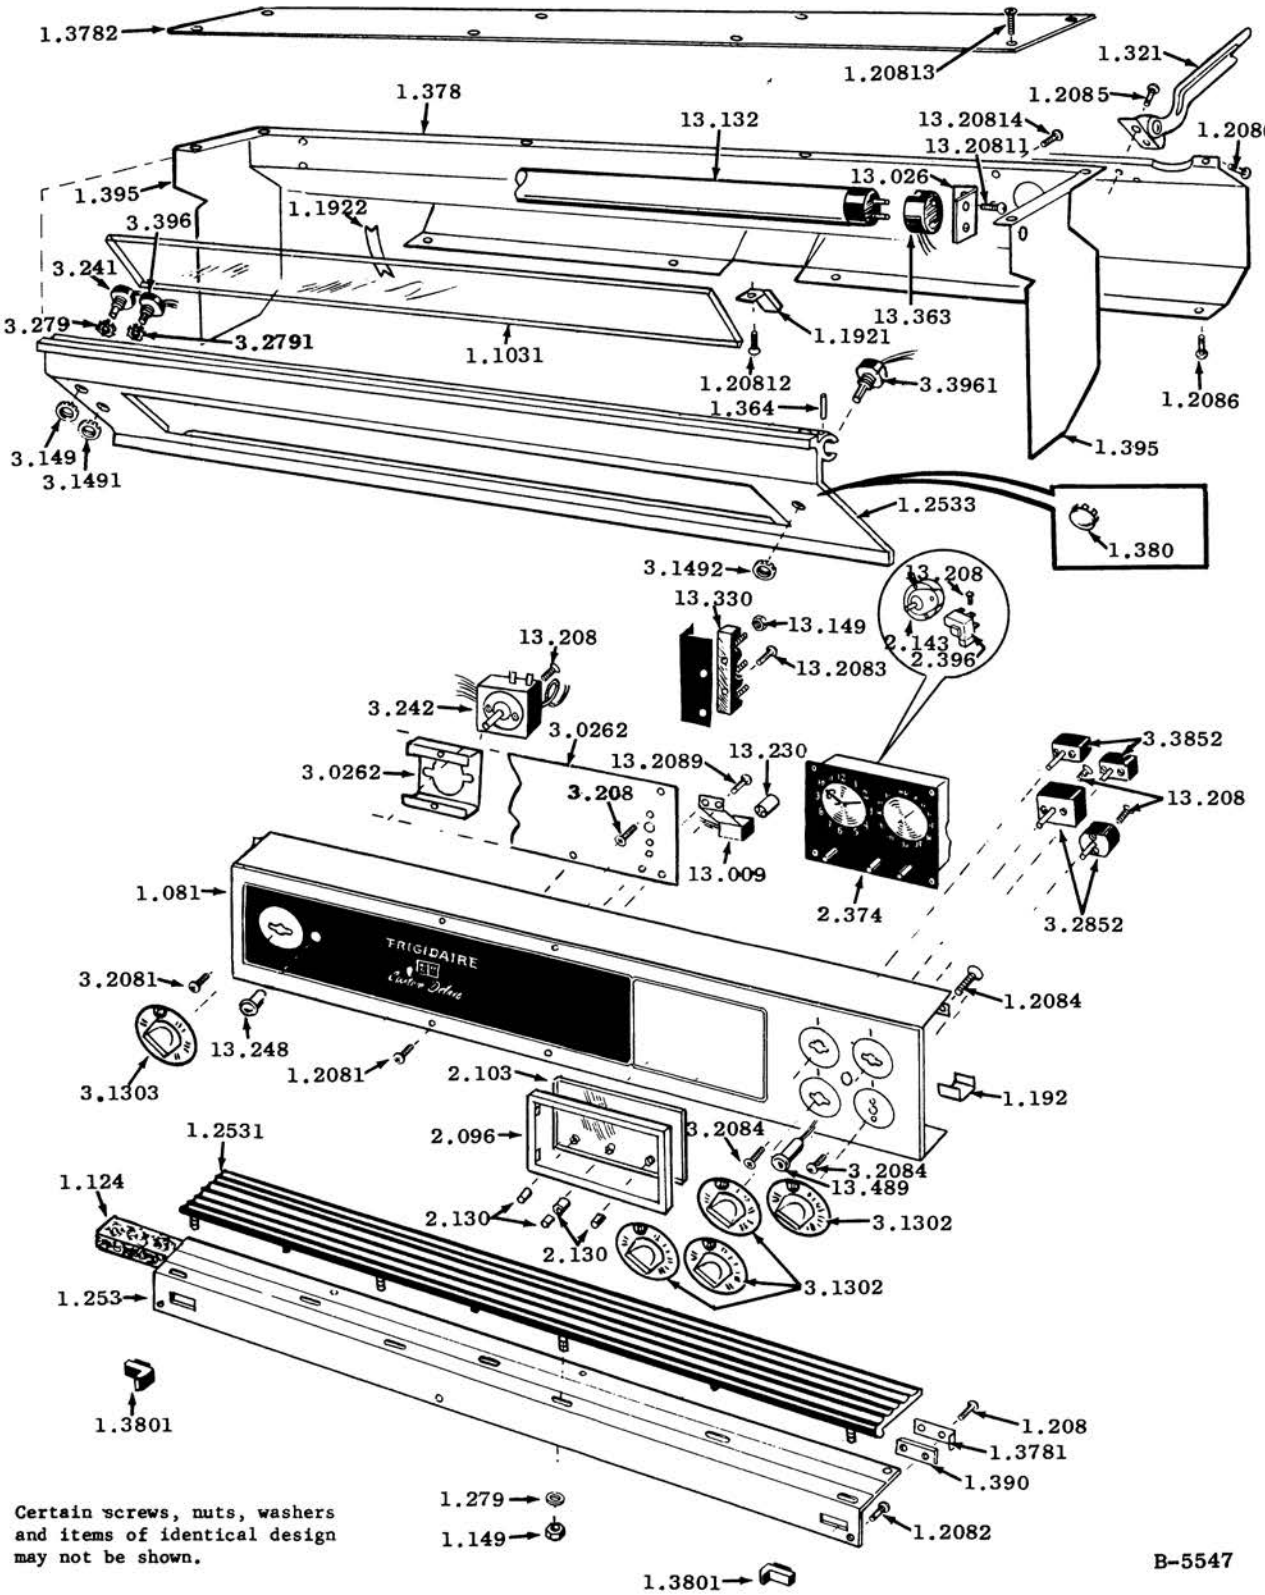

Certain screws, nuts, washers and items of identical design may not be shown.


B-5547

Models RCD-630N and RCD-630VN

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

1968


BLOWER, VENT AND PARTS

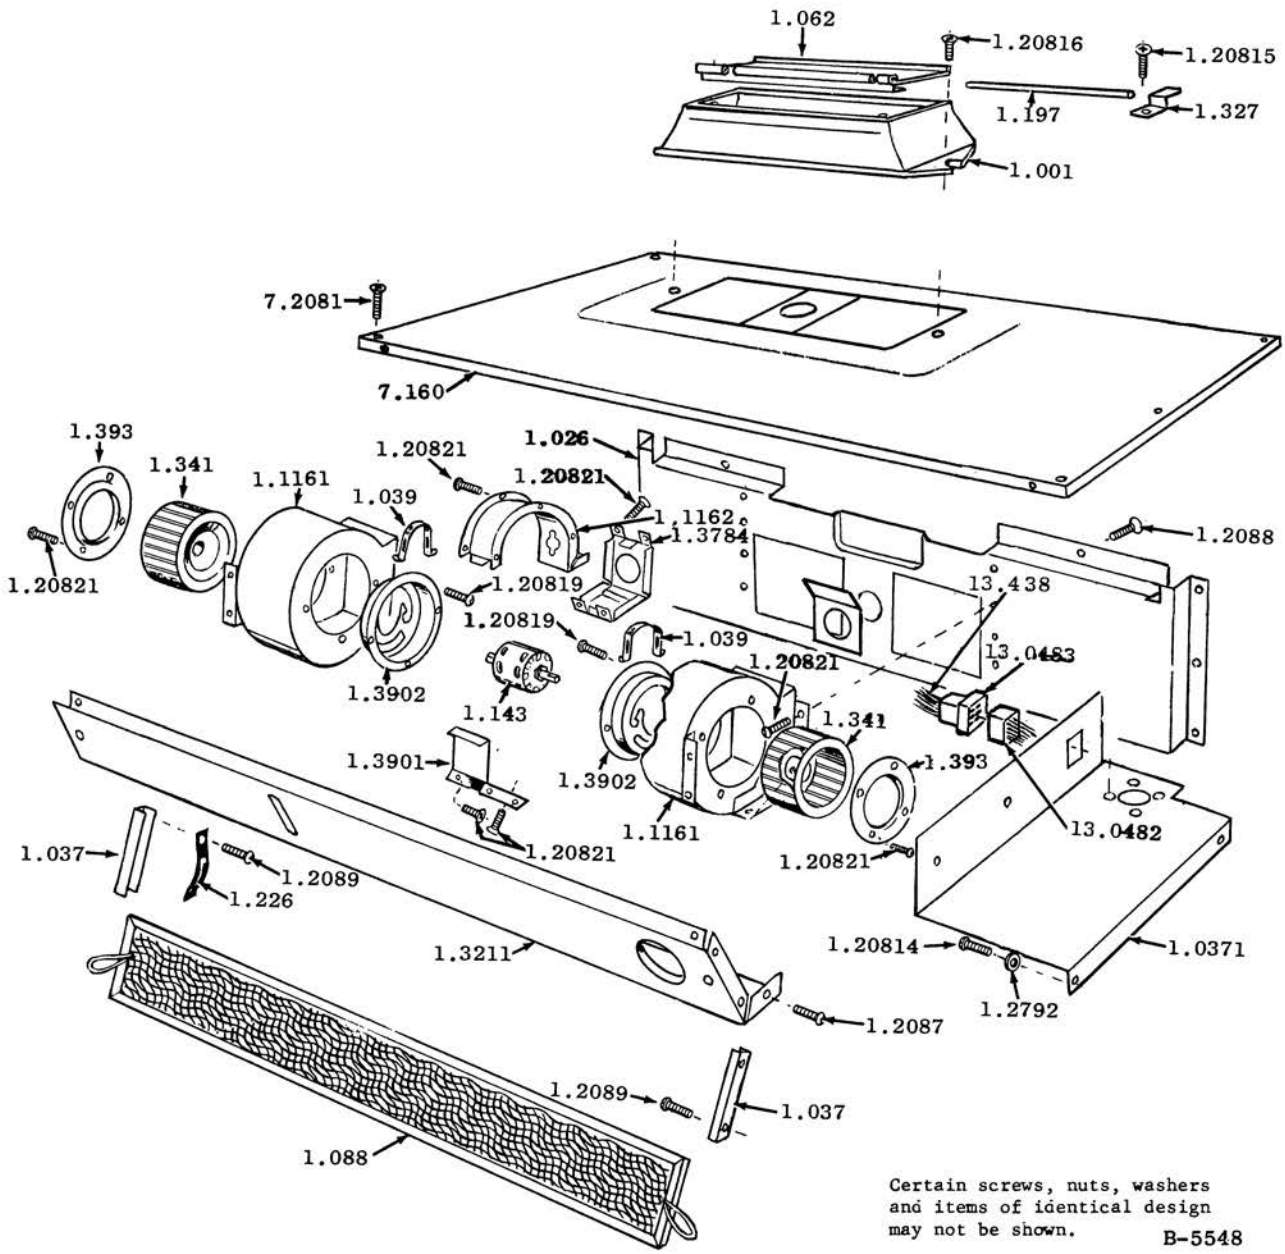

Models RCD-630VN, RCI-635VN and RCI-645VN

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

COOKING TOP, SURFACE UNITS AND PARTS

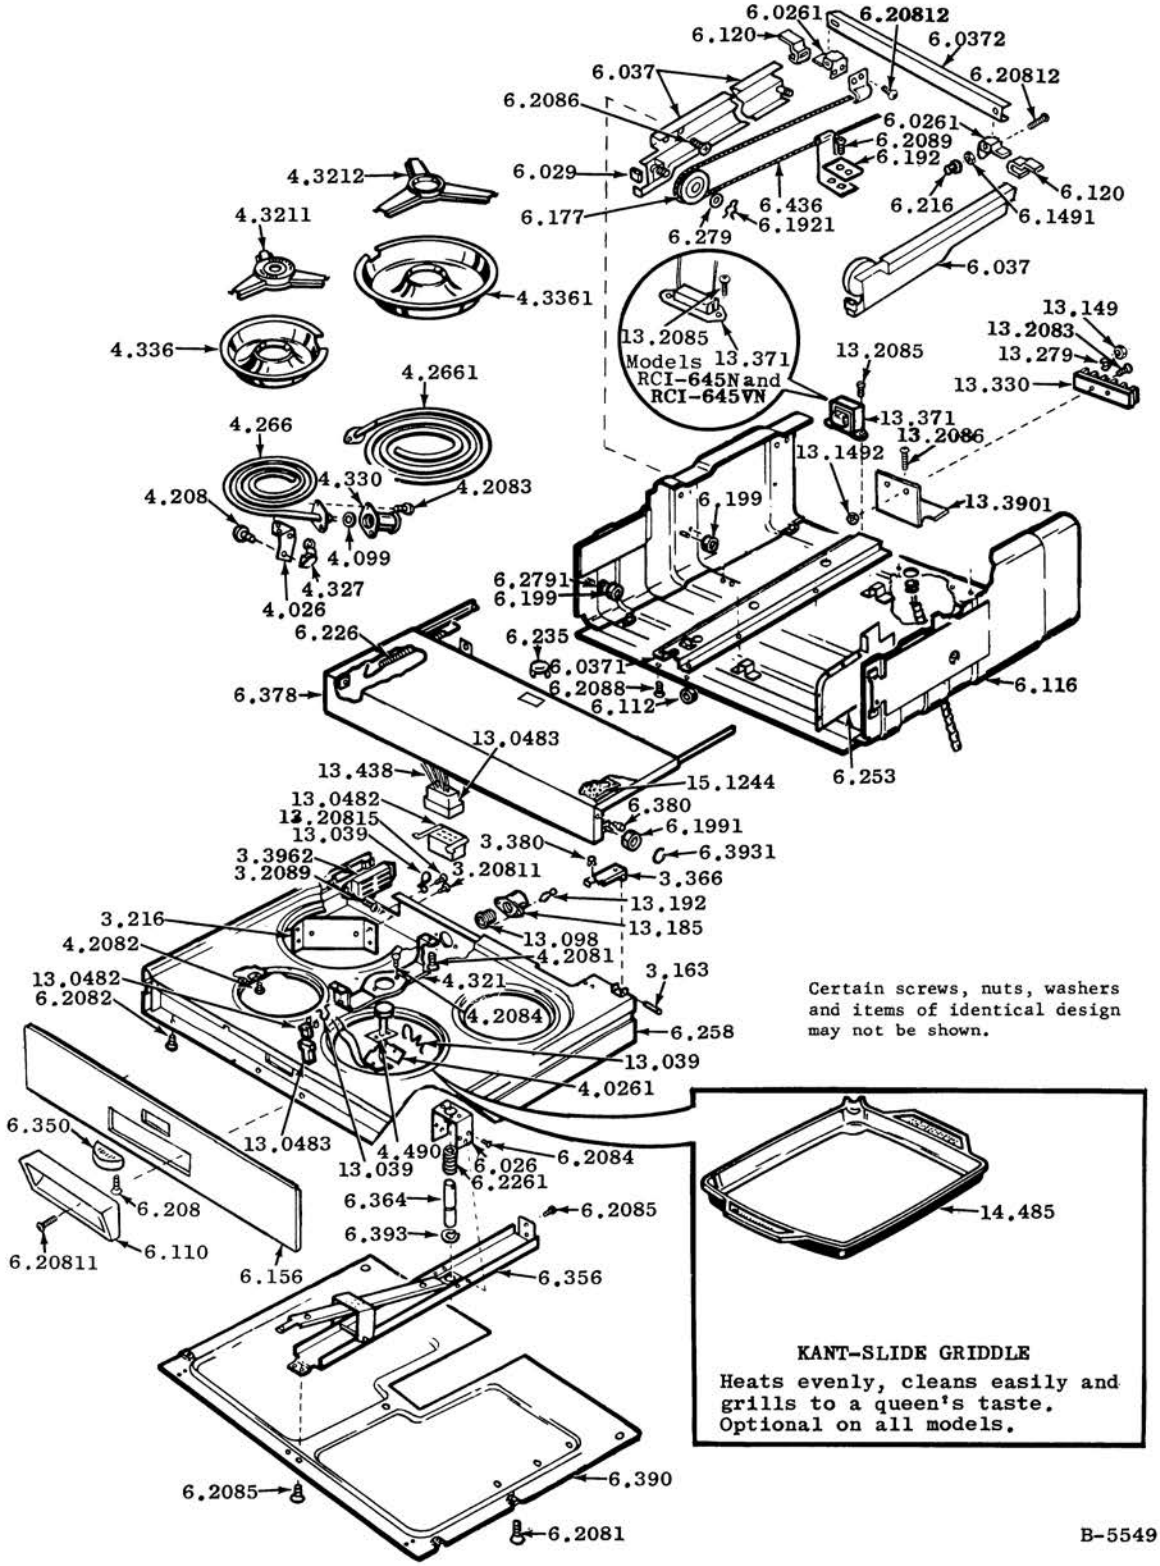

1968


Models RCI-635N and RCI-635VN

This illustration may also be used for the selection of parts for models RCD-630N, RCD-630VN, RCI-645N and RCI-645VN, but all parts shown are not used on these models.

Models RCD-630N and RCD-630VN appear the same as models RCI-635N, RCI-635VN, RCI-645N and RCI-645VN, except that models RCD-630N and RCD-630VN have no speed heat or heat minder units.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

OVEN LINERS AND INTERIOR PARTS

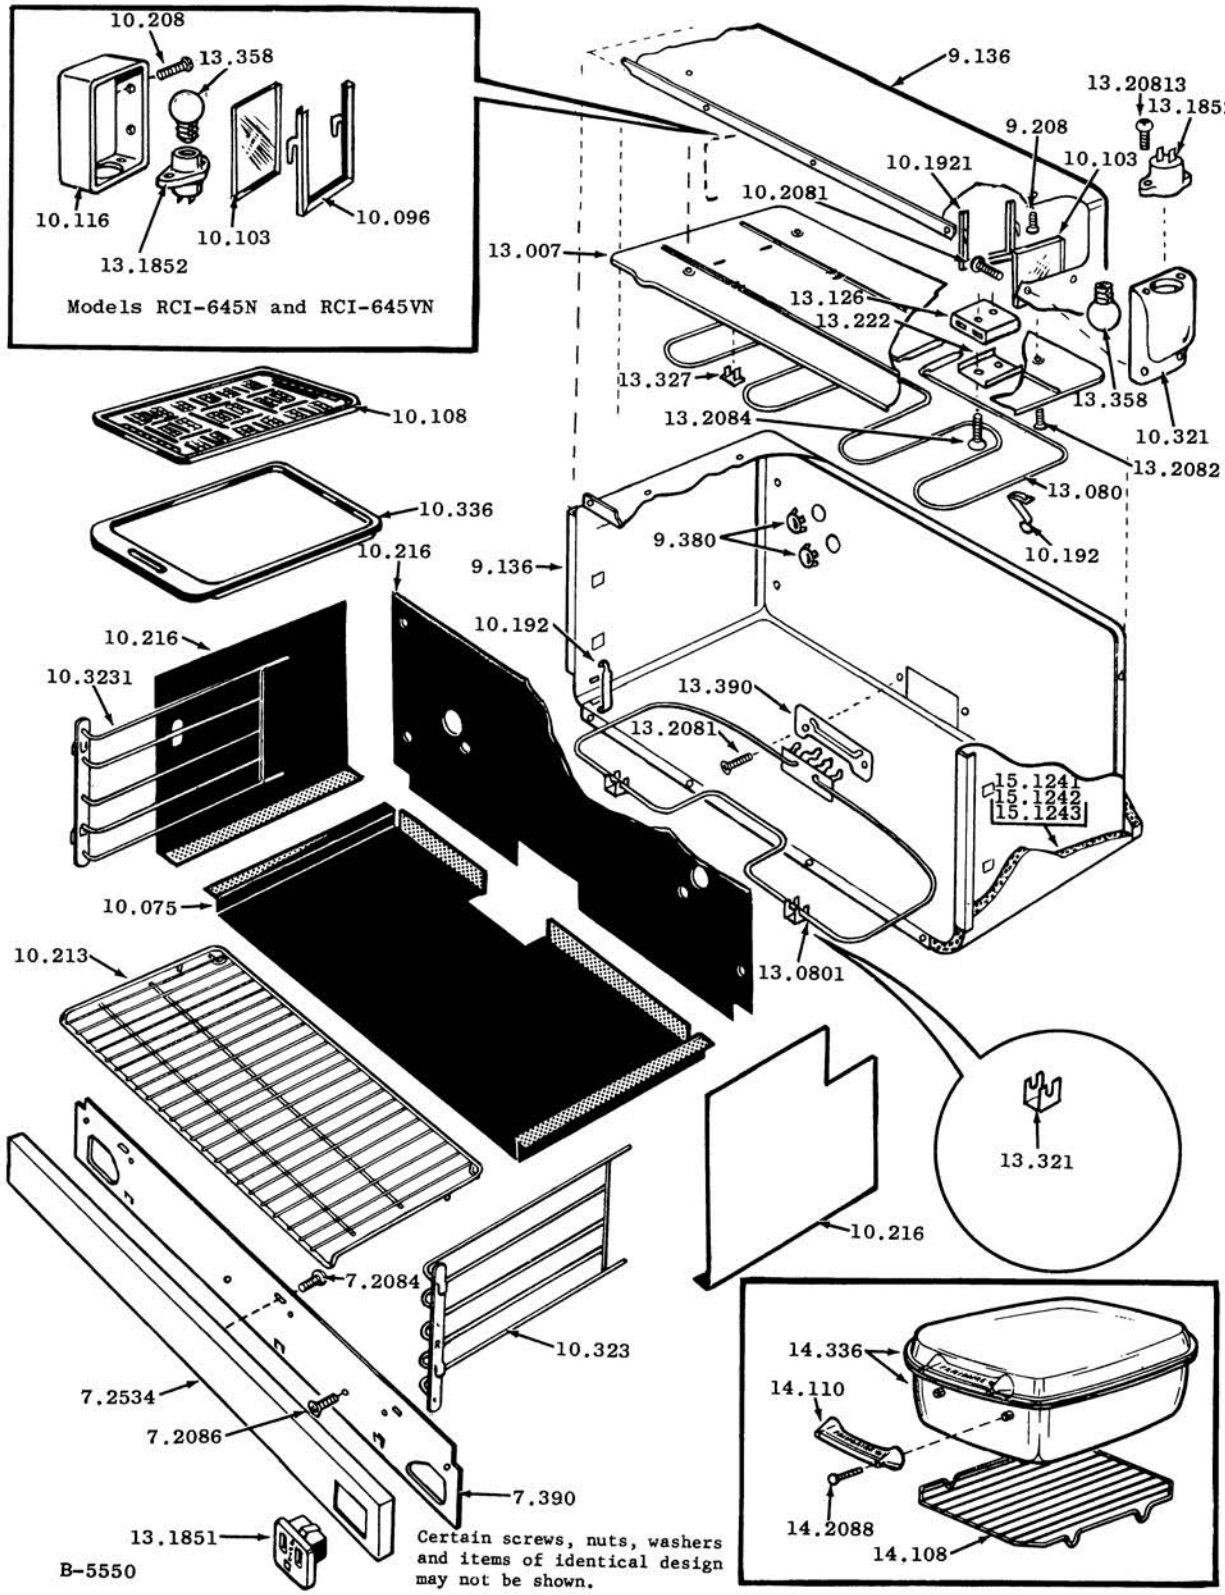


Models RCI-635N and RCI-635VN

This illustration may also be used for the selection of parts for models RCD-630N, RCD-630VN, RCI-645N and RCI-645VN, but all parts shown are not used on these models.

Models RCI-645N and RCI-645VN have two ovens. Parts are similar for both ovens.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

PANELS, TRIMS AND PARTS

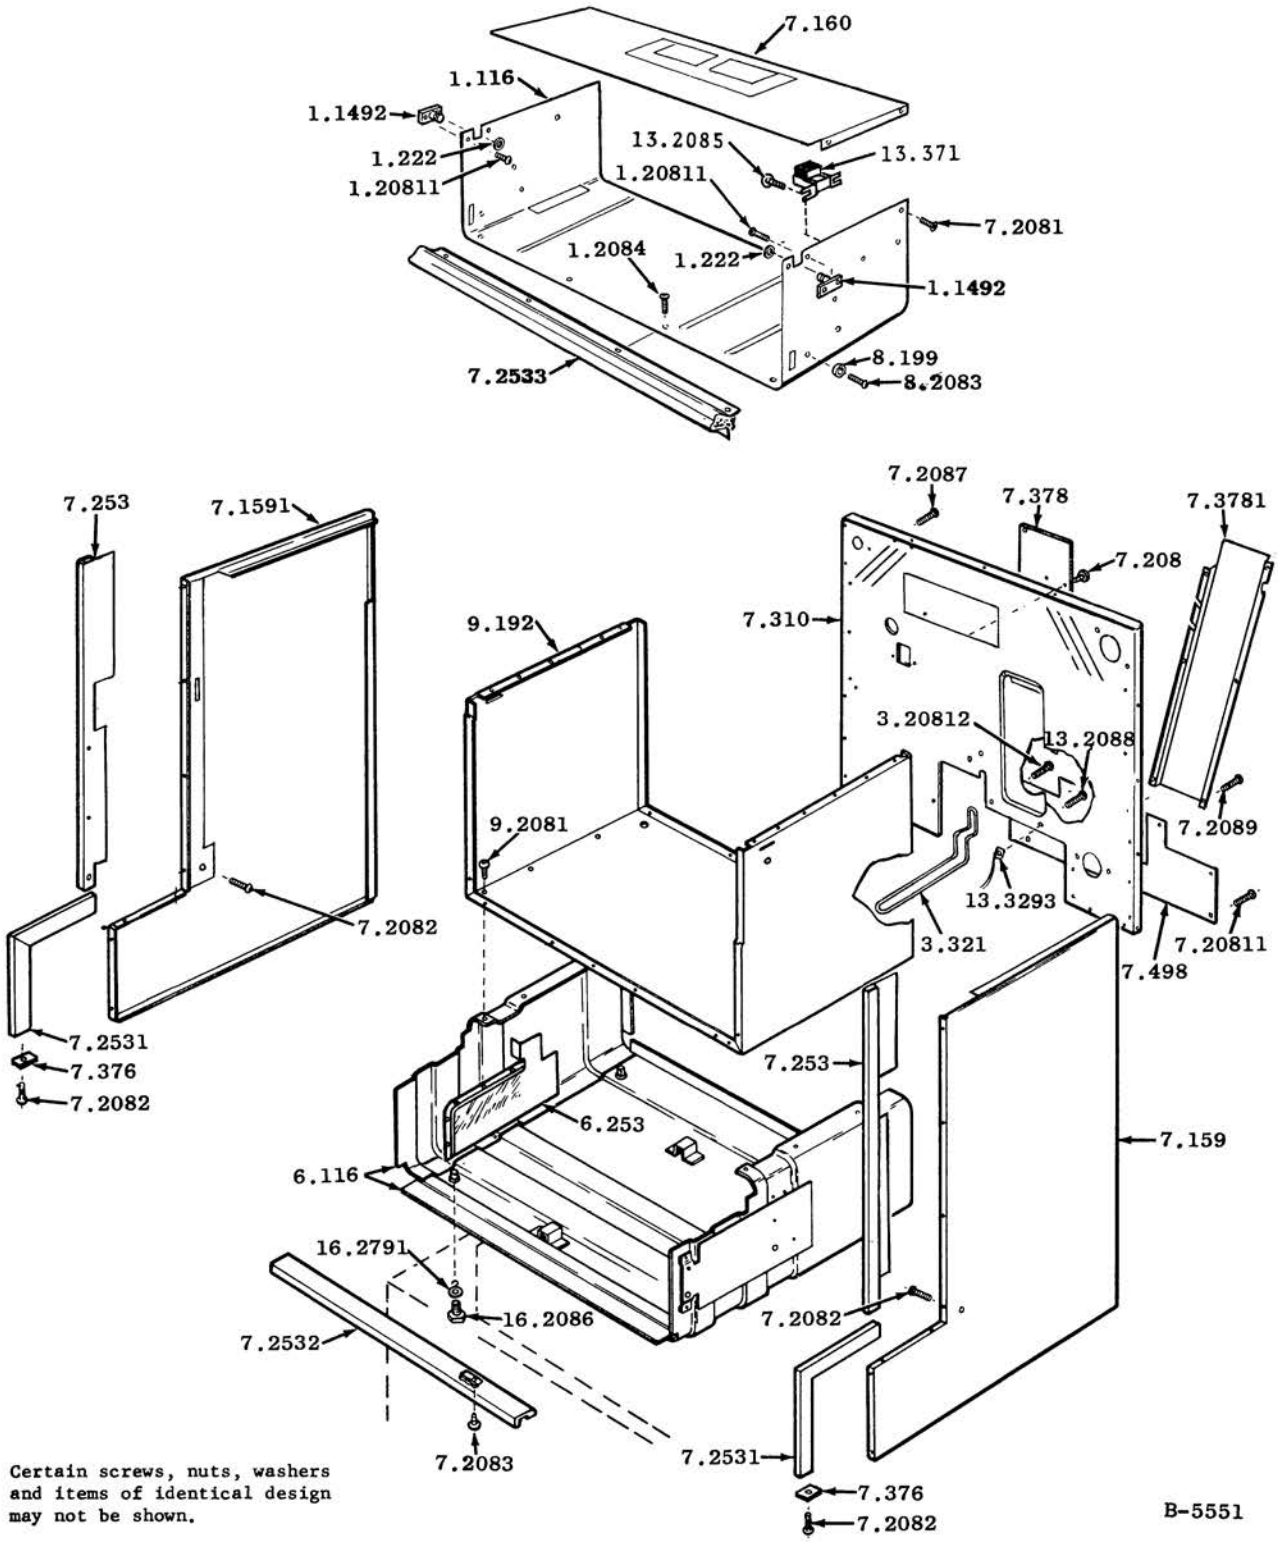

Certain screws, nuts, washers and items of identical design may not be shown.


Models RCI-635N and RCI-635VN

This illustration may also be used for the selection of parts for models RCD-630N, RCD-630VN, RCI-645N and RCI-645VN, but all parts shown are not used on these models.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

1968


OVEN DOORS AND PARTS

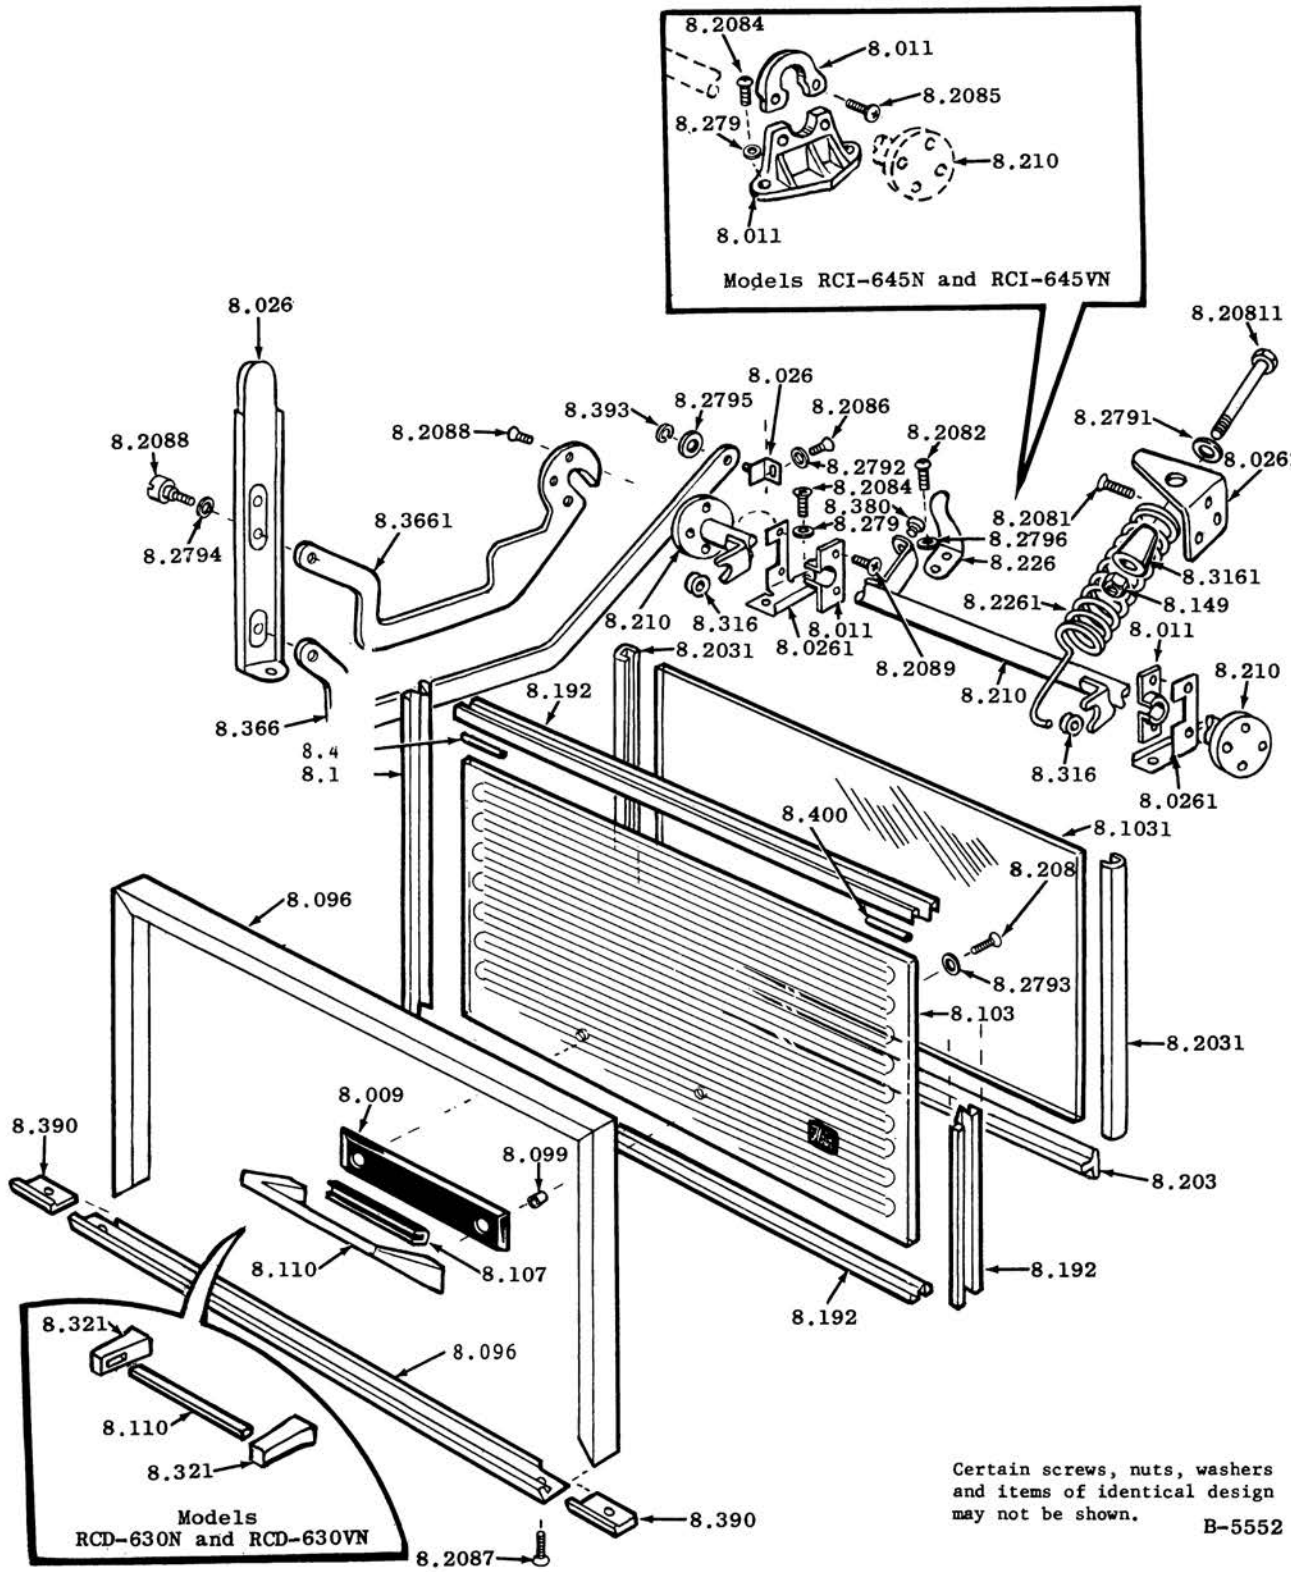

Models RCD-630N, RCD-630VN, RCI-635N, RCI-635VN, RCI-645N and RCI-645VN.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

BASE CABINETS AND PARTS

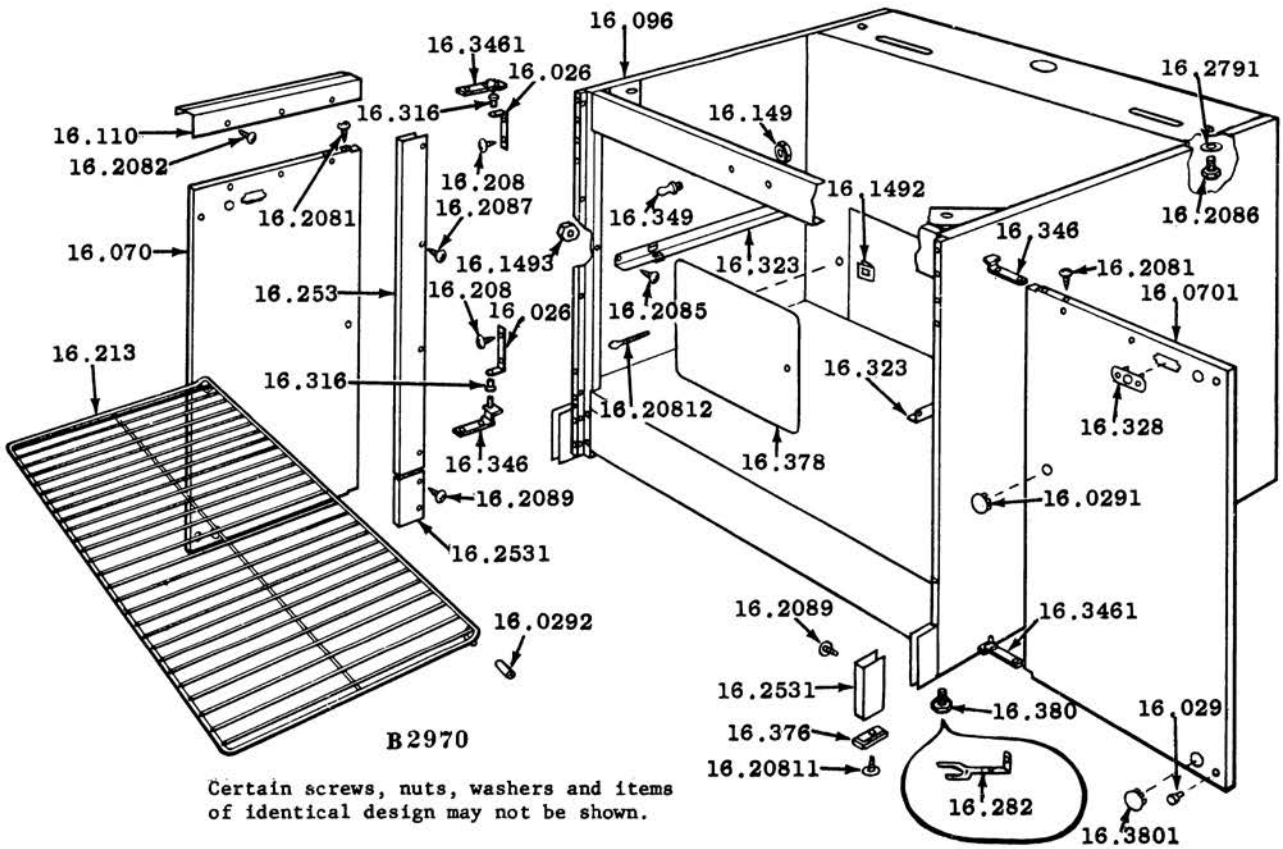

B2970

Certain screws, nuts, washers and items of identical design may not be shown.

1968

Model B-30 Base Cabinet


The B-40 Base Cabinet appears the same as the B-30 Base Cabinet except that the B-40 Base Cabinet has two shelves and is wider.

Use B-30 Base Cabinet illustrated with models RCD-630N, RCD-630VN, RCI-635N and RCI-635VN.

Use B-40 Base Cabinet with models RCI-645N and RCI-645VN.


Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

14.520 DUCTLESS VENT KIT - ACCESSORY

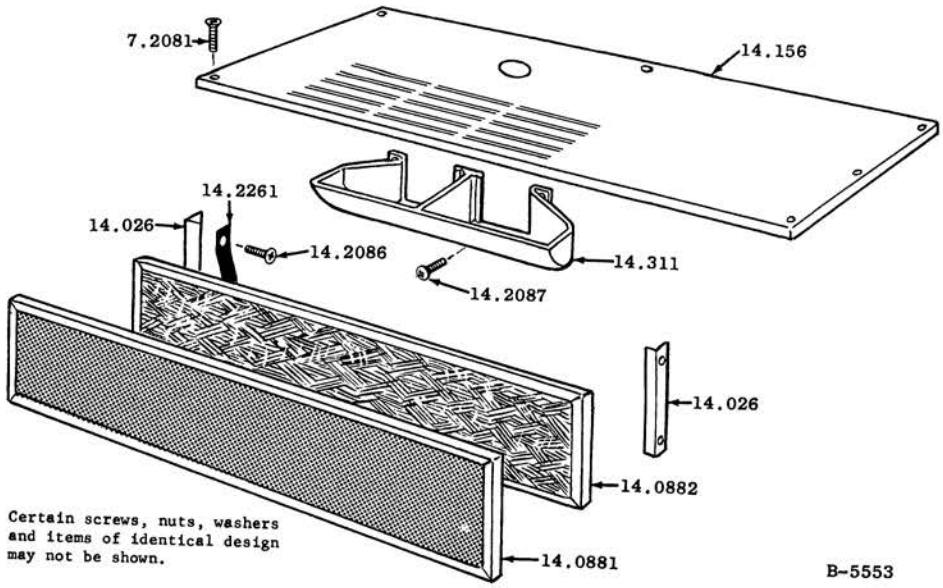

Models RCD-630VN, RCI-635VN and RCI-645VN


14.428 ROTISSERIE - ACCESSORY

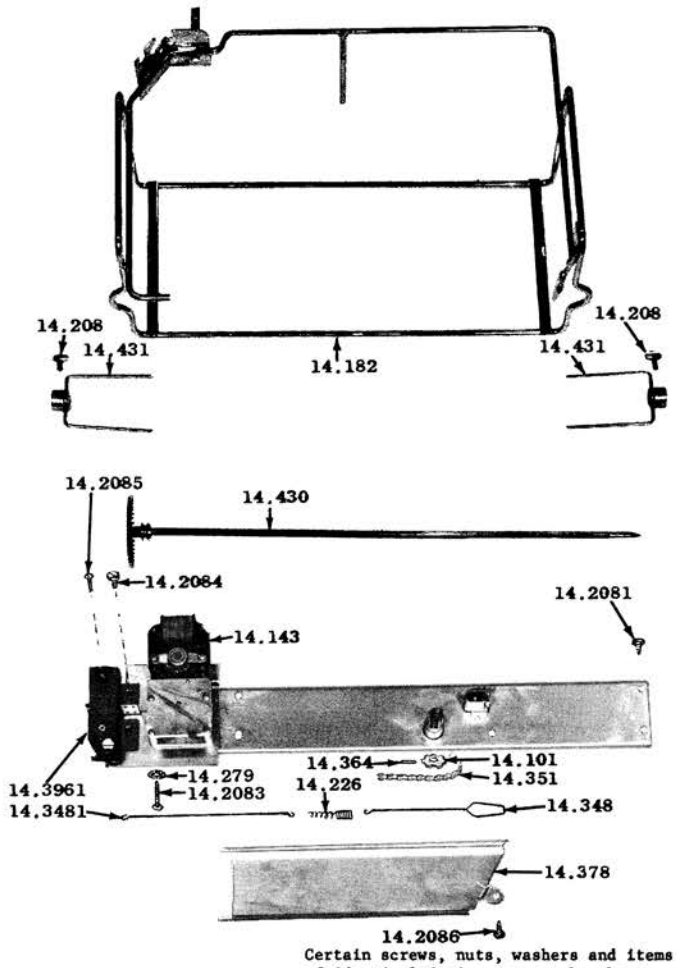


Models RCI-635N, RCI-635VN, RCI-645N and RCI-645VN

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

ELECTRICAL CONNECTORS IDENTIFICATION CHART

PIECE	PART NUMBER	DESCRIPTION	DATA
	P 5873786 (10 IN PKG.)	#6 EYELET - COPPER - TIN - VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	P 5873787 (10 IN PKG.)	#8 EYELET - COPPER - TIN - VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	P 5873788 (10 IN PKG.)	#10 EYELET - COPPER - TIN - VINYL SLEEVE	#14 TO #16 WIRE .115 TO .170 INSUL. DIA.
	628321 5899914 5894191 5427015 5426525 5427014 5894189 5426495 9408527	BINDING HEAD BRASS TERMINAL SCREW	4-40 x 5/16" 4-40 x 7/16" 6-32 x 1/4" 8-32 x 1/4" 8-32 x 3/8" 8-32 x 1/2" 8-32 x 5/8" 10-32 x 1/4" 10-32 x 1/2"
	7529602	STRAIGHT RECEPTACLE BRASS	#18 TWO WIRE .020 x 3/16" TAB
	P 5875093 (20 IN PKG.)	STEEL - NICKEL LOCK TAB	#14 TO #18 ONE WIRE .030 x 1/4" TAB
	P 6569386 (20 IN PKG.)	BRASS LOCK TAB	#16 TWO WIRE .030 x 1/4" TAB
	P 7535219 (12 IN PKG.)	STRAIGHT RECEPTACLE STEEL - NICKEL	#14 TWO WIRE .030 x 1/4" TAB
	7547988	STRAIGHT RECEPTACLE BRASS - TIN	#18 TO #22 ONE WIRE .032 x .205 TAB
	6592002	HARNESS HOUSING RECEPTACLE BRASS - TIN	#16 TWO WIRE .030 x 1/4" TAB
	P 5875094 (20 IN PKG.)	STRAIGHT PIGGY-BACK RECEPTACLE BRASS - TIN	#14 TO #18 ONE WIRE .030 x 1/4" TAB
	P 5875091 (10 IN PKG.)	FLAG RECEPTACLE BRASS - TIN	#16 TO #20 ONE WIRE .020 x 3/16" TAB
	P 5875092 (10 IN PKG.)	FLAG RECEPTACLE BRASS - TIN	#12 TO #18 ONE WIRE .030 x 1/4" TAB
	7547989	FLAG RECEPTACLE BRASS - TIN	#14 TO #20 ONE WIRE .032 x .205 TAB
	P 7529179 (6 IN PKG.)	ADAPTER - 3 TERMINAL BRASS	.030 x 1/4" TAB
	5223619	RECEPTACLE TERMINAL & SCREW ASSY. BRASS-TIN	.030 x 1/4" TAB #6 - 32 SCREW
	6568735	TAB - TERMINAL BRASS - TIN	#16 TO #18 ONE WIRE .012 x 3/32" TAB
	2973916	TAB - TERMINAL BRONZE - TIN LOCK TAB	#14 TO #16 WIRE .016 x 1/8" TAB
	2973917	TAB - TERMINAL BRONZE - TIN LOCK TAB	#12 WIRE .123 x 1/4" TAB
	5438535	TAB TERMINAL ADAPTER - BRASS	.030 x 1/4" TAB TO #8 SCREW
	P 6592122 (12 IN PKG.)	TAB TERMINAL BRASS - TIN	#16 TWO WIRE .031 x 1/4" TAB
	P 5873789 (10 IN PKG.)	BULLET NOSE CONNECTOR COPPER - TIN	#14 TO #16 WIRE
 FOURTEEN	8900317 2984646 6294722 6294723 6294725 6294726	ONE LEAD WIRE TWO LEAD WIRES FOUR LEAD WIRES* TEN LEAD WIRES* FOURTEEN LEAD WIRES NINE LEAD WIRES (STAGGERED)	*mates with 6294725

PIECE	PART NUMBER	DESCRIPTION	DATA
	P 5877822 (10 IN PKG.)	BULLET NOSE TO BLADE CONNECTOR (MALE) BRASS - TIN	.030 x 1/4" TAB
	P 5877823 (20 IN PKG.)	BULLET NOSE TO BLADE CONNECTOR (FEMALE) BRASS - TIN	.030 x 1/4" TAB
	P 5431641 (10 IN PKG.)	SLEEVE BLADE CONNECTOR (MALE) BRASS - NYLON SLEEVE	.030 x 1/4" TAB
	P 5873790 (10 IN PKG.)	SLEEVE SPLICE CONNECTOR - BRASS VINYL SLEEVE	#14 TO #16 ONE WIRE .115 TO .170 INSUL. DIA.
	6569360	GROUND PRESSURE CONNECTOR - COPPER - TIN	.132" I.D.
	5423696	INSULATING SLEEVING 37-1/2" LONG FIBER-GLASS	FOR #10 WIRE
	6568691	INSULATING SLEEVING VINYL	3/16" I.D. x 1-7/16" LONG
	7529395	SILICONE	3/16" I.D. x 1" LONG
 SINGLE	HOUSING SPLICE - MALE 638114 6568745 7528468 6568794 5438151 2977594 2984780	 SINGLE LEAD WIRE SINGLE LEAD WIRE THREE LEAD WIRES FOUR LEAD WIRES SIX LEAD WIRES SIX LEAD WIRES TWELVE LEAD WIRES	
 SINGLE	HOUSING SPLICE - FEMALE 6566746 7529998 6568739 6567412 2977593 7537988 2984781	 SINGLE LEAD WIRE THREE LEAD WIRES FOUR LEAD WIRES SIX LEAD WIRES SIX LEAD WIRES NINE LEAD WIRES TWELVE LEAD WIRES	
	P 5851484 (6 IN PKG.)	CONNECTOR (MEDIUM)	#14 TO #18 WIRE 1/8" I.D.
	6585261	SOLDERLESS CONNECTOR (SMALL)	#18 TO #20 WIRE 3/32" I.D.
	P 84514 (5 IN PKG.)	CONNECTOR (LARGE) BRASS - BAKELITE	#14 TO #18 WIRE 3/16" I.D.
	6567957	INSULATOR - FLAG TERMINAL (VINYL)	
	7538803	INSULATOR - FLAG TERMINAL (NYLON)	
	7536780	FLAG CONTACT (MALE) FOR 7536783 HOUSING BRONZE - TIN	#18 TO #22 WIRE .016 x .180 TAB
	1125847	PIN RECEPTACLE BRONZE - TIN	#14 TO #20 WIRE .090 PIN
	2973204	STRAIGHT RECEPTACLE BRASS - TIN LOCK TAB	#16 TO #20 ONE WIRE .032 x 1/4" TAB
	8900689	STRAIGHT RECEPTACLE BRASS - TIN LOCK TAB	#16 TO #20 TWO WIRE .032 x 1/4" TAB
	2965944	STRAIGHT RECEPTACLE BRASS - LOCK TAB	#16 TO #18 WIRE .030 x 1/4" TAB
	1125861 1125860	OVEN UNIT RECEPTACLES STEEL	ONE WIRE TWO WIRES

LEAD WIRE CHART

COLORS	PLASTIC INSULATED STRANDED		ASBESTOS INSULATED STRANDED		SOLID		SILICONE RUBBER GLASS BRAIDED INSULATED STRANDED	
	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.	SIZE	PIECE NO.
Black	12	6594075	--	-------	--	-------	--	-------
Black	14	*5875355	--	-------	12	5874562	--	-------
Black	14	5873791	14	5417736	--	-------	--	-------
†Black	16	5874583	--	-------	--	-------	--	-------
§Black	16	5874584	--	-------	--	-------	--	-------
Blue	14	5873795	14	5873026	--	-------	--	-------
Brown	14	5874230	--	-------	14	5873619	--	-------
Green	14	5874238	14	5417738	--	-------	--	-------
Orange	14	5873794	--	-------	--	-------	--	-------
Purple	14	5874231	--	-------	--	-------	--	-------
Red	12	6594076	12	6596332	12	5874563	--	-------
Red	14	5873793	14	5417737	--	-------	--	-------
White	14	5873792	14	5417735	14	5873620	--	-------
White-Black	--	-------	--	-------	--	-------	14	#6595597
White-Red	--	-------	--	-------	--	-------	14	#6595598
White-Yellow	18	5875281	--	-------	--	-------	--	-------
Yellow	14	5874229	14	5417739	14	5873618	--	-------

NOTE: Bulk Wire is available by the foot.

†Two conductor - ribbed.
§Three conductor - ribbed.

*Use where extreme flexing is required.
#High Temperature Application - Nickel Plated.

Protect Your Customers With Quality, Always Use Frigidaire Parts And Accessories.

GROUP 1 CONTROL PANELS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	ADAPTER-AIR DUCT			
001	RCD-630VN RCI-635VN RCI-645VN	631414	1	INCLUDES DAMPER, ROD, CLAMPS AND PAD
	BRACE-CONTROL HOUSING			
025	RCI-635VN RCI-645VN	639270	1	
	BRACKET-STAND OFF			
026	RCD-630VN RCI-635VN RCI-645VN	7539638	1	
	CHANNEL-AIR FILTER			
037	RCD-630VN RCI-635VN RCI-645VN	7539559	1	LEFT
037	RCD-630VN RCI-635VN RCI-645VN	7539560	1	RIGHT
	CHANNEL-WIRING			
0371	ALL MODELS	7538975	1	
	CLIP-BLOWER MOTOR			
039	RCD-630VN RCI-635VN RCI-645VN	6594091	2	
	DAMPER-AIR DUCT			
062	RCD-630VN RCI-635VN RCI-645VN	7539640	1	
	ESCUTCHEON-CONTROL PANEL			
081	RCD-630N RCD-630VN	7539003	1	
	FILTER-AIR			
088	RCD-630VN RCI-635VN	631288	1	GREASE
088	RCI-645VN	631289	1	GREASE
	GLASS-CONTROL PANEL			
103	RCI-635N RCI-635VN	7539009	1	
103	RCI-645N RCI-645VN	7539013	1	
	GLASS-LAMP HOUSING			
1031	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539548	1	
1031	RCI-645N RCI-645VN	7539001	1	
	HOUSING-CONTROL			
116	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539046	1	
116	RCI-645N RCI-645VN	7539047	1	
	HOUSING-BLOWER ASSEMBLY			
1161	RCD-630VN RCI-635VN RCI-645VN	6594099	1	LEFT
1161	RCD-630VN RCI-635VN RCI-645VN	6594101	1	RIGHT
	HOUSING-BLOWER MOTOR			
1162	RCD-630VN RCI-635VN RCI-645VN	6594097	1	
	INSULATION-LAMP HOUSING LOWER TRIM			
124	RCD-630N RCD-630VN RCI-635N RCI-635VN	7537678	1	CUT TO SIZE
124	RCI-645N RCI-645VN	7537678	1	1X1X37-1/2 INCHES
	MOTOR-BLOWER			
143	RCD-630VN RCI-635VN RCI-645VN	6594100	1	
	NUT			
149	ALL MODELS	441253	7	HEAT DEFLECTOR TRIM
1491	RCI-635N RCI-635VN RCI-645N RCI-645VN	274750	2	NAME PLATE
1492	ALL MODELS	7539557	2	CONSOLE MOUNTING-TEE
	PAD-CONTROL PANEL GLASS			
153	RCI-635N RCI-635VN	7537200	8	
153	RCI-645N RCI-645VN	7537200	9	
	PAD-AIR DUCT ADAPTER			
1531	RCD-630N	637050	1	
	PAD-BLOWER SOUND			
1532	RCD-630VN RCI-635VN RCI-645VN	7539644	4	
	PLATE-NAME			
170	RCI-635N RCI-635VN RCI-645N RCI-645VN	632629	1	
	RETAINER-CONTROL PANEL ESCUTCHEON			
192	RCD-630N RCD-630VN	7539006	6	
	RETAINER-LAMP HOUSING GLASS			
1921	ALL MODELS	7539554	1	LEFT
1921	ALL MODELS	7539553	1	RIGHT
	RETAINER-LAMP GLASS			
1922	RCI-635N RCI-635VN RCI-645N RCI-645VN RCD-630VN RCD-630N	7539965	1	
	ROD-AIR DUCT ADAPTER			
197	RCD-630VN RCI-635VN RCI-645VN	7539641	1	

GROUP 1 CONTROL PANELS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
208	ALL MODELS	637442	4	CONSOLE LOCK BUTTON 8-32X7/16
2081	RCD-630N RCD-630VN	6567391	6	CONTROL PANEL ESCUTCHEON RETAINER 8-32X5/16
2082	ALL MODELS	6567391	2	CONTROL PANEL LOWER TRIM 8-32X5/16
2083	ALL MODELS	7536676	2	CONTROL PANEL UPPER TRIM 8-18X3/8
2084	RCD-630N RCD-630VN RCI-635N RCI-635VN	P7536987	3	CONTROL HOUSING 8-15X1/2
2084	RCI-645N RCI-645VN	P7536987	6	CONTROL HOUSING 8-15X1/2
2085	ALL MODELS	163098	2	CONSOLE SUPPORT 6-20X3/8
2086	ALL MODELS	6567391	15	CONTROL COVER 8-32X5/16
2087	ALL MODELS	5885072	4	CONTROL HOUSING SUPPORT 8-18X3/8
2088	RCD-630VN RCI-635VN RCI-645VN	5885072	10	BRACKET STAND OFF 8-18X3/8
2089	RCD-630VN RCI-635VN RCI-645VN	5435261	4	AIR FILTER CHANNEL 6-20X1/4
20811	ALL MODELS	5435111	4	CONSOLE TEE NUT 8-32X1/4
20812	ALL MODELS	6567391	2	LAMP HOUSING GLASS RETAINER 8-32X5/16
20813	ALL MODELS	9420681	6	FLUORESCENT LAMP COVER 8-32X3/8
20814	ALL MODELS	5885072	2	WIRING CHANNEL 8-18X3/8
20815	RCD-630VN RCI-635VN RCI-645VN	7527829	2	AIR DUCT ADAPTER CLAMP 6-32X1/4
20816	RCD-630VN RCI-635VN RCI-645VN	163162	2	AIR DUCT ADAPTER
20817	RCD-630VN RCI-635VN RCI-645VN	6569714	2	BLOWER CENTER COVER 6-18X3/8
20818	RCD-630VN RCI-635VN RCI-645VN	5899587	4	BLOWER 8-32X3/8
20819	RCD-630VN RCI-635VN RCI-645VN	6594094	6	BLOWER MOTOR MOUNTING PLATE
20821	RCD-630VN RCI-635VN RCI-645VN	6594102	22	BLOWER HOUSING
20822	RCI-635N RCI-635VN	5434896	2	CONTROL HOUSING BRACE 8-18X1/4
20822	RCI-645N RCI-645VN	5434896	4	CONTROL HOUSING BRACE 8-18X1/4
20822	ALL MODELS	5899587	1	CONTROL HOUSING BRACE 8-32X3/8
	SPACER-CONSOLE MOUNTING			
222	ALL MODELS	7539572	2	
	SPRING-AIR FILTER			
226	RCD-630VN RCI-635VN RCI-645VN	7539529	1	
	TRIM-CONTROL PANEL LOWER			
253	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539050	1	
253	RCI-645N RCI-645VN	7539049	1	
	TRIM-HEAT DEFLECTOR			
2531	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539020	1	
2531	RCI-645N RCI-645VN	7539021	1	
	TRIM-GLASS CONTROL PANEL			
2532	RCI-635N RCI-635VN RCI-645N RCI-645VN	7539002	2	
	TRIM-CONTROL PANEL UPPER			
2533	RCD-630N RCD-630VN	7539015	1	
2533	RCI-635N RCI-635VN	7539976	1	
2533	RCI-645N RCI-645VN	7539975	1	
	WASHER			
279	ALL MODELS	7529152	7	HEAT DEFLECTOR TRIM
2791	ALL MODELS	615187	4	CONSOLE LOCK BUTTON
2792	RCI-645VN	5428229	2	WIRING CHANNEL
	SUPPORT-CONSOLE			
321	ALL MODELS	631628	1	
	SUPPORT-CONTROL HOUSING			
3211	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539059	1	
3211	RCI-645N RCI-645VN	7539060	1	
	CLAMP-AIR DUCT ADAPTER			
327	RCD-630VN RCI-635VN RCI-645VN	7539642	2	
	WHEEL-BLOWER			
341	RCD-630VN RCI-635VN RCI-645VN	6594092	1	LEFT
341	RCD-630VN RCI-635VN RCI-645VN	6594093	1	RIGHT
	PIN-CONSOLE MOUNTING			
364	ALL MODELS	7539549	2	
	COVER-CONTROL			
378	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539023	1	
378	RCI-645N RCI-645VN	7539024	1	

1968

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 1 CONTROL PANELS AND PARTS

	COVER-CONSOLE LOCK PLATE			
3781	ALL MODELS	637359	2	
	COVER-FLUORESCENT LAMP			
3782	RCD-630N RCD-630VN RCI-635N RCD-635VN	7539967	1	
3782	RCI-645N RCI-645VN	7539968	1	
	COVER-BLOWER CENTER			
3783	RCD-630VN RCI-635VN RCI-645VN	7539748	1	
	COVER-BLOWER			
3784	RCD-630VN RCI-635VN RCI-645VN	6594098	1	
	BUTTON-CONTROL HOUSING PLUG			
380	RCD-630N RCI-635N RCI-645N	142068	1	1/2 INCH DIA FOR 13/32 INCH HOLE
	BUTTON-CONSOLE LOCK			
3801	ALL MODELS	637357	2	
	PLATE-CONSOLE LOCK			
390	ALL MODELS	637358	2	
	PLATE-BLOWER BAFFLE			
3901	RCD-630VN RCI-635VN RCI-645VN	6594097	1	
	PLATE-BLOWER MOTOR MOUNTING			
3902	RCD-630VN RCI-635VN RCI-645VN	6594096	2	
	RING-BLOWER VENTURI			
393	RCD-630VN RCI-635VN RCI-645VN	6594095	2	
	END-CONTROL PANEL			
395	ALL MODELS	7539016	1	LH
395	ALL MODELS	7539022	1	RH

GROUP 2 COOK-MASTERS AND PARTS

	FRAME-COOKMASTER & TIME SIGNAL			
096	RCD-630N RCD-630VN	5875454	1	
	GLASS-COOKMASTER & TIME SIGNAL			
103	RCD-630N RCD-630VN	5875455	1	
	KNOB-COOKMASTER AND TIME SIGNAL			
130	RCD-630N RCD-630VN	P7523846	2	HOURS TO COOK AND TIME SIGNAL
130	RCD-630N RCD-630VN	6568474	1	TIME STOP-LARGE-CENTER
130	RCD-630N RCD-630VN	7521201	1	TIME SET-WHITE-SMALL CENTER
	KNOB-MEAL MINDER			
1301	RCI-635N RCI-635VN RCI-645N RCI-645VN	P7523846	3	
1301	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534848	1	
	MOTOR-COOKMASTER AND TIME SIGNAL			
143	RCD-630N RCD-630VN	6592779	1	60 CYCLE 115 VOLT
143	RCD-630N RCD-630VN	6592906	1	50 CYCLE 115 VOLT
	MOTOR-MEAL MINDER			
1431	RCI-635N RCI-635VN RCI-645N RCI-645VN	6593984	1	60 CYCLE 115 VOLT
1431	RCI-635N RCI-635VN RCI-645N RCI-645VN	6593985	1	50 CYCLE 115 VOLT
	PAD-MEAL MINDER			
153	RCI-635N RCI-635VN RCI-645N RCI-645VN	7538046	4	
	SCREW			
208	RCI-635N RCI-635VN RCI-645N RCI-645VN	6567391	4	MEAL MINDER 8-32X5/16
	COOKMASTER & TIME SIGNAL			
374	RCD-630N RCD-630VN	631339	1	60 CYCLE 115 VOLT
	DIAL-MEAL MINDER			
381	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534898	1	
	SWITCH-COOKMASTER AND TIME SIGNAL TERMINAL			
396	RCD-630N RCD-630VN	6592112	1	
	SWITCH-MEAL MINDER			
3961	RCI-635N RCI-635VN RCI-645N RCI-645VN	6594106	1	
	MEAL MINDER			
528	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534684	1	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 3 SWITCHES AND PARTS

	BRACKET-BROIL SWITCH			
026	RCI-635N RCI-635VN	7539012	1	
026	RCI-645N RCI-645VN	7539092	1	
	BRACKET-SURFACE UNIT SWITCH			
0261	RCI-635N RCI-635VN	7539010	1	
0261	RCI-645N RCI-645VN	7539011	1	
	BRACKET-THERMOSTAT			
0262	RCD-630N RCD-630VN	7538973	1	
0262	RCI-645N RCI-645VN	7539008	1	LEFT OVEN
	KNOB-BROIL CONTROL			
130	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534848	1	
	KNOB-TENDER-MATIC CONTROL			
1301	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534848	1	
	KNOB-SURFACE UNITS CONTROL			
1302	RCD-630N RCD-630VN	632123	4	
1302	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534848	4	
	KNOB-OVEN THERMOSTAT CONTROL			
1303	RCD-630N RCD-630VN	7534649	1	
1303	RCI-635N RCI-635VN	7534848	1	
1303	RCI-645N RCI-645VN	7534848	2	
	MOTOR-OVEN CONTROL			
143	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534899	1	
	NUT			
149	ALL MODELS	5434526	1	FLUORESCENT LIGHT SWITCH-KNURLED
1491	ALL MODELS	5434526	1	OVEN INTERIOR LIGHT SWITCH-KNURLED
1492	RCD-630VN RCI-635VN RCI-645VN	5434526	1	FAN SWITCH-KNURLED
	PIN-SWITCH OPERATING ARM COTTER			
163	ALL MODELS	-------	2	1-1/8X3/32 PURCHASE LOCALLY
	RETAINER-SWITCH SPRING			
192	ALL MODELS	6568159	AR	9/16 INCHES LONG
192	ALL MODELS	6592441	AR	13/16 INCHES LONG
	SCREW			
208	RCD-630N RCD-630VN	5434896	2	OVEN THERMOSTAT BRACKET 8-15X1/4
2081	RCD-630N RCD-630VN	5435111	2	OVEN THERMOSTAT 8-32X1/4
2081	RCI-635N RCI-635VN RCI-645N RCI-645VN	156750	3	OVEN THERMOSTAT 8-32X5/16
2081	RCI-645N RCI-645VN	5435111	2	OVEN THERMOSTAT-LEFT OVEN 8-32X1/4
2082	RCI-635N RCI-635VN RCI-645N RCI-645VN	6567391	4	SURFACE UNIT SWITCH BRACKET 8-32X5/16
2083	RCI-635N RCI-635VN RCI-645N RCI-645VN	6567391	4	BROIL SWITCH BRACKET 8-32X5/16
2084	ALL MODELS	5435111	8	SURFACE UNIT SWITCH 8-32X1/4
2085	RCI-635N RCI-635VN RCI-645N RCI-645VN	5435111	2	BROIL CONTROL SWITCH 8-32X1/4
2086	RCI-645N RCI-645VN	6567391	4	OVEN THERMOSTAT BRACKET-LEFT OVEN 8-32X5/16
2087	RCI-635N RCI-635VN RCI-645N RCI-645VN	6567391	3	OVEN CONTROL 8-32X5/16
2088	RCD-630N RCD-630VN RCI-635N RCI-635VN	5885072	2	THERMOSTAT CAPILLARY TUBE CLAMP 8-18X3/8
2088	RCI-645N RCI-645VN	5885072	3	THERMOSTAT CAPILLARY TUBE CLAMP 8-18X3/8
2088	RCI-645N RCI-645VN	P7536987	2	THERMOSTAT CAPILLARY TUBE CLAMP 8-15X1/2
2089	ALL MODELS	161857	4	DISCONNECT SWITCH 8-15X3/8
20811	RCD-630N RCD-630VN RCI-635N RCI-635VN	P7536987	4	DISCONNECT SWITCH SHIELD 8-15X1/2
20811	RCI-645N RCI-645VN	P7536987	5	DISCONNECT SWITCH SHIELD 8-15X1/2
20812	RCI-635N RCI-635VN RCI-645N RCI-645VN	P7536987	1	HEAT MINDER CAPILLARY TUBE SUPPORT 8-15X1/2
20813	RCI-635N RCI-635VN RCI-645N RCI-645VN	5435111	2	TENDERMATIC THERMOSTAT 8-32X1/4
	SHIELD-DISCONNECT SWITCH			
216	ALL MODELS	6567706	2	
	SHIELD-SPEED HEAT SWITCH			
2161	RCI-635N RCI-635VN RCI-645N RCI-645VN	7538942	1	

1968

GROUP 3 SWITCHES AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SWITCH-FLUORESCENT LIGHT			
241	ALL MODELS	631328	1	WHITE BUTTON
	THERMOSTAT-OVEN			
242	RCD-630N RCD-630VN	7534765	1	
242	RCI-635N RCI-635VN	7534768	1	
242	RCI-645N RCI-645VN	7534768	1	RIGHT OVEN
242	RCI-645N RCI-645VN	7534765	1	LEFT OVEN
	THERMOSTAT-TENDER-MATIC			
2421	RCI-635N RCI-635VN RCI-645N RCI-645VN	631337	1	INCLUDES CAP TUBE
	WASHER			
279	ALL MODELS	5886323	1	FLUORESCENT LAMP SWITCH
2791	ALL MODELS	5886323	1	OVEN INTERIOR LIGHT SWITCH
2792	RCI-635N RCI-635VN	6567692	8	SWITCH SHAFT SPACER
2792	RCI-645N RCI-645VN	6567692	9	SWITCH SHAFT SPACER
	SWITCH-HEAT MINDER SURFACE UNIT			
285	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534769	1	INCLUDES SENSOR
	SWITCH-SPEED HEAT SURFACE UNIT			
2851	RCI-635N RCI-635VN RCI-645N RCI-645VN	6599200	1	
	SWITCH-INFINITE HEAT SURFACE UNIT			
2852	RCD-630N RCD-630VN	7531379	3	SMALL 6 INCH
2852	RCI-635N RCI-635VN RCI-645N RCI-645VN	7526395	1	SMALL 6 INCH
2852	RCI-635N RCI-635VN RCI-645N RCI-645VN	7526396	1	LARGE 8 INCH
2852	RCD-630N RCD-630VN	7521245	1	LARGE 8 INCH
	SUPPORT-HEAT MINDER CAPILLARY TUBE			
321	RCI-635N RCI-635VN RCI-645N RCI-645VN	7539608	1	WIRE TYPE MOUNTING WITH SCREW
	CLAMP-THERMOSTAT CAPILLARY TUBE			
327	RCD-630N RCD-630VN RCI-635N RCI-635VN	5436867	1	
327	RCI-645N RCI-645VN	5436867	4	
327	RCI-645N RCI-645VN RCI-635N RCD-630N RCI-635VN	7527865	1	
	ARM-SWITCH OPERATING CONTROL			
366	ALL MODELS	6567150	2	
	BUTTON-SWITCH ARM GLIDE			
380	ALL MODELS	6567143	2	
	DIAL-INFINITE HEAT SURFACE UNIT SWITCH			
381	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534863	3	
	DIAL-HEAT MINDER SWITCH			
3811	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534864	1	
	DIAL-THERMOSTAT			
3812	RCI-635N RCI-635VN	7534862	1	ROTISSERIE
3812	RCI-645N RCI-645VN	630526	1	LEFT OVEN
3812	RCI-645N RCI-645VN	7534862	1	ROTISSERIE-RIGHT OVEN
	DIAL-BROIL CONTROL			
3813	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534897	1	
	DIAL-TENDER-MATIC CONTROL			
3814	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534865	1	
	SWITCH-BROIL CONTROL			
387	RCI-635N RCI-645N	631580	1	
387	RCI-635VN RCI-645VN	634652	1	
	SWITCH-OVEN INTERIOR LIGHT			
396	ALL MODELS	631878	1	BLACK BUTTON
	SWITCH-FAN			
3961	RCD-630VN RCI-635VN RCI-645VN	631329	1	BLACK BUTTON
	SWITCH-SURFACE UNIT DISCONNECT			
3962	ALL MODELS	6564289	2	

GROUP 4 SURFACE UNITS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BRACKET-SURFACE UNIT HINGE			
026	ALL MODELS	6565251	4	
	BRACKET-SENSOR RETAINER			
0261	RCI-635N RCI-635VN RCI-645N RCI-645VN	7528900	1	
	GASKET-SURFACE UNIT TERMINAL BLOCK SEAL			
099	ALL MODELS	7535507	4	
	SCREW			
208	ALL MODELS	P5430929	8	SURFACE UNIT CLAMP TO BRACKET 8-32X5/16
2081	RCI-635N RCI-635VN RCI-645N RCI-645VN	5436528	4	SENSOR SUPPORT 8-15X3/8
2082	ALL MODELS	P5430929	8	SURFACE UNIT BRACKET 8-32X5/16
2083	ALL MODELS	7529180	8	SURFACE UNIT TERMINAL BLOCK 5-40X7/16
2084	RCI-635N RCI-635VN RCI-645N RCI-645VN	5434896	2	SENSOR RETAINER BRACKET 8-18X1/4
	UNIT-6 INCH SURFACE			
266	RCI-635N RCI-635VN RCI-645N RCI-645VN	6591863	1	1250W 118V SPEED HEAT-LEFT FRONT-USE ON 208,236 OR 250 VOLT WITHOUT CHANGE
266	RCD-630N RCD-630VN	6590804	3	1400W 250V-LEFT FRONT, RIGHT AND LEFT REAR
266	RCI-635N RCI-635VN RCI-645N RCI-645VN	6590804	1	1400W 250V-RIGHT REAR
266	RCD-630N RCD-630VN	6591937	3	1450W 208V-LEFT FRONT, RIGHT &LEFT REAR
266	RCI-635N RCI-635VN RCI-645N RCI-645VN	6591937	1	1450W 208V-RIGHT REAR
	UNIT-8 INCH SURFACE			
2661	RCD-630N RCD-630VN	6590805	1	2300W 250V-RIGHT FRONT
2661	RCI-635N RCI-635VN RCI-645N RCI-645VN	6590805	2	2300W 250V-LEFT REAR AND RIGHT FRONT
2661	RCD-630N RCD-630VN	6591938	1	2600W 208V-RIGHT FRONT
2661	RCI-635N RCI-635VN RCI-645N RCI-645VN	6591938	2	2600W 208V-LEFT REAR AND RIGHT FRONT
	SUPPORT-HEAT MINDER SENSOR			
321	RCI-635N RCI-635VN RCI-645N RCI-645VN	6597531	1	
	SUPPORT-SURFACE UNIT SMALL			
3211	RCD-630N RCD-630VN	7529769	3	LEFT FRONT,RIGHT & LEFT REAR
3211	RCI-635N RCI-635VN RCI-645N RCI-645VN	7529769	2	RIGHT REAR & LEFT FRONT
	SUPPORT-SURFACE UNIT LARGE			
3212	RCD-630N RCD-630VN	7529770	1	RIGHT FRONT
3212	RCI-635N RCI-635VN RCI-645N RCI-645VN	7529770	1	LEFT REAR
3212	RCI-635N RCI-635VN RCI-645N RCI-645VN	5435224	1	HEAT MINDER-RIGHT FRONT
	CLAMP-SURFACE UNIT HINGE			
327	ALL MODELS	6565252	4	
	BLOCK-SURFACE UNIT CONNECTOR			
330	ALL MODELS	7538214	4	BROWN-USES TWO P5875092 TERMINALS
330	ALL MODELS	7538213	1	BLACK-USES TWO P5875092 TERMINALS
	PAN-SMALL SURFACE UNIT DRIP			
336	RCD-630N RCD-630VN	6565456	3	
336	RCI-635N RCI-635VN RCI-645N RCI-645VN	6565456	2	
	PAN-LARGE SURFACE UNIT DRIP			
3361	RCD-630N RCD-630VN	6565457	1	
3361	RCI-635N RCI-635VN RCI-645N RCI-645VN	6565457	2	
	SENSOR-HEAT MINDER			
490	RCI-635N RCI-635VN RCI-645N RCI-645VN	7534769	1	INCLUDES SWITCH

1968

GROUP 6 TOPS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	BRACKET-LATCH SPRING RETAINER			
026	ALL MODELS	6569713	1	
	BRACKET-TOP COVER SLIDE			
0261	ALL MODELS	7529879	2	
	BUMPER-PULLEY CHANNEL			
029	ALL MODELS	6567881	2	
	BUMPER-COOKING TOP			
0291	ALL MODELS	5424482	2	
	CHANNEL-COOKING TOP STOP			
037	ALL MODELS	7522204	1	LH
037	ALL MODELS	7522203	1	RH
	CHANNEL-COOKING TOP STOP			
0371	ALL MODELS	7529050	1	
	CHANNEL-CABLE SPACER			
0372	RCD-630N RCD-630VN RCI-635N RCI-635VN	7529880	1	
0372	RCI-645N RCI-645VN	7529901	1	
	HANDLE-COOKING TOP			
110	ALL MODELS	7539568	1	
	HOLDER-CABLE SPACER CHANNEL			
112	ALL MODELS	5432514	2	NEUPRENE
	HOUSING-COOKING TOP			
116	RCD-630N RCD-630VN RCI-635N RCI-635VN	631274	1	
116	RCI-645N RCI-645VN	631275	1	
	SLIDE-COOKING TOP COVER			
120	ALL MODELS	6567147	2	
	NUT			
149	ALL MODELS	7520910	2	LOCK-COOKING TOP SHIPPING
1491	ALL MODELS	5423225	2	CABLE SPACER CHANNEL
	PANEL-COOKING TOP FRONT			
156	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539546	1	WH-WHITE
56	RCD-630N RCD-630VN RCI-635N RCI-635VN	639823	1	HG-HARVEST GOLD
156	RCD-630N RCD-630VN RCI-635N RCI-635VN	639525	1	CC-TWO TONE COPPER-DARK EDGES
156	RCD-630N RCD-630VN RCI-635N RCI-635VN	639857	1	CO-TWO TONE COPPER-MEDIUM EDGES
156	RCD-630N RCD-630VN RCI-635N RCI-635VN	639526	1	GN-AVOCADO GREEN
156	RCI-645N RCI-645VN	7539547	1	WH-WHITE
156	RCI-645N RCI-645VN	639824	1	HG-HARVEST GOLD
156	RCI-645N RCI-645VN	639527	1	CC-TWO TONE COPPER-DARK EDGES
156	RCI-645N RCI-645VN	639859	1	CO-TWO TONE COPPER-MEDIUM EDGES
156	RCI-645N RCI-645VN	639528	1	GN-AVOCADO GREEN
	PULLEY-COOKING TOP CABLE			
177	ALL MODELS	6569474	4	
	RETAINER-CABLE BRACKET			
192	ALL MODELS	7527850	2	UPPER
	RETAINER-CABLE PULLEY SPRING			
1921	ALL MODELS	5437128	4	
	ROLLER-COOKING TOP			
199	ALL MODELS	6569100	1	
199	ALL MODELS	6568686	3	
	ROLLER-TOP COVER			
1991	ALL MODELS	6568686	2	
	SCREW			
208	ALL MODELS	5439072	1	LATCH KNOB 6-32X3/8
2081	ALL MODELS	5885072	3	COOKING TOP DRIP PLATE 8-18X3/8
2082	ALL MODELS	5885072	3	COOKING TOP FRONT PANEL-LOWER 8-18X3/8
2083	ALL MODELS	5885072	2	COOKING TOP STOP CHANNEL SCREW SHIELD 8-18X3/8
2084	ALL MODELS	5436528	4	LATCH SPRING RETAINER BRACKET 8-15X3/8
2085	ALL MODELS	P7536987	4	LATCH OPERATING LEVER 8-15X1/2
2086	ALL MODELS	5435226	8	PULLEY CHANNEL 10-12X3/8
2087	ALL MODELS	7535565	2	CABLE SPACER CHANNEL 10-32X1-7/8
2088	ALL MODELS	5885072	4	COOKING TOP STOP CHANNEL 8-18X3/8
2089	ALL MODELS	P7536987	4	COOKING TOP CABLE 8-15X1/2
20811	ALL MODELS	161425	2	COOKING TOP HANDLE 8-15X3/4
20812	ALL MODELS	P7536987	4	COOKING TOP COVER SLIDE BRACKET 8-15X1/2

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 6 TOPS AND PARTS

	SHIELD-COOKING TOP STOP CHANNEL SCREW			
216	ALL MODELS	6566986	2	
	SPRING-TOP COVER			
226	ALL MODELS	6567610	2	
	SPRING-LATCH PIN OPERATING			
2261	ALL MODELS	6568818	1	
	STOP-COOKING TOP COVER			
235	ALL MODELS	7526879	1	
	TRIM-COOKING TOP HOUSING			
253	ALL MODELS	7539524	1	LH-CEMENTED
253	ALL MODELS	7539523	1	RH-CEMENTED
	TOP-COOKING			
258	RCD-630N RCD-630VN	631287	1	
258	RCI-635VN RCI-635N	7533351	1	
258	RCI-645VN RCI-645N	7533352	1	
	WASHER			
279	ALL MODELS	5427712	4	COCKING TOP CABLE PULLEY
2791	ALL MODELS	6565542	AR	PLAIN-ROLLER
	KNOB-LATCH OPERATING			
350	ALL MODELS	6568810	1	
	LEVER-LATCH OPERATING			
356	ALL MODELS	7521097	1	
	PIN-COOKING TOP LATCH			
364	ALL MODELS	6568811	1	
	COVER-COOKING TOP			
378	RCD-630N RCD-630VN RCI-635N RCI-635VN	7524661	1	
378	RCI-645N RCI-645VN	7524662	1	
	BUTTON-COOKING TOP COVER			
380	ALL MODELS	6567143	2	
	PLATE-COOKING TOP DRIP			
390	RCD-630N RCD-630VN RCI-635N RCI-635VN	6568842	1	
390	RCI-645N RCI-645VN	6568843	1	
	RING-COOKING TOP LATCH PIN RETAINER			
393	ALL MODELS	6586240	1	
	RING-TOP COVER ROLLER RETAINER			
3931	ALL MODELS	7537983	2	
	CABLE-COOKING TOP			
436	ALL MODELS	7522206	2	

GROUP 7 FRAMES, PANELS AND PARTS

	BRACE-BACK PANEL			
025	RCI-645N RCI-645VN	638136	1	
	NUT			
149	ALL MODELS	5433660	AR	CONDENSATION TRIM SPACER
	PANEL-RANGE RH SIDE			
159	ALL MODELS	7534702	1	WH-WHITE
159	ALL MODELS	7534703	1	YW-YELLOW
159	ALL MODELS	634311	1	HG-HARVEST GOLD
159	ALL MODELS	631256	1	CC-TWO TONE COPPER-DARK EDGES
159	ALL MODELS	634418	1	CO-TWO TONE COPPER-MEDIUM EDGES
159	ALL MODELS	631258	1	GN-AVOCADO GREEN
159	ALL MODELS	6595983	1	NO 824 GREEN TO MATCH BASE CABINETS
	PANEL-RANGE LH SIDE			
1591	ALL MODELS	7534707	1	WH-WHITE
1591	ALL MODELS	7534708	1	YW-YELLOW
1591	ALL MODELS	634312	1	HG-HARVEST GOLD
1591	ALL MODELS	631257	1	CC-TWO TONE COPPER-DARK EDGES
1591	ALL MODELS	634419	1	CO-TWO TONE COPPER-MEDIUM EDGES
1591	ALL MODELS	631259	1	GN-AVOCADO GREEN
1591	ALL MODELS	6595984	1	NO 824 GREEN TO MATCH BASE CABINETS

1968

GROUP 7 FRAMES, PANELS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	PANEL-TOP			
160	RCD-630N RCI-635N	7534720	1	WH-WHITE
160	RCD-630N RCI-635N	7534721	1	YW-YELLOW
160	RCD-630N RCI-635N	631260	1	CC-TWO TONE COPPER-DARK EDGES
160	RCD-630N RCI-635N	631261	1	GN-AVOCADO GREEN
160	RCD-630VN RCI-635VN	7534732	1	WH-WHITE
160	RCD-630VN RCI-635VN	7534733	1	YW-YELLOW
160	RCD-630VN RCI-635VN	634313	1	HG-HARVEST GOLD
160	RCD-630VN RCI-635VN	631264	1	CC-TWO TONE COPPER
160	RCD-630VN RCI-635VN	634420	1	CC-TWO TONE COPPER-MEDIUM EDGES
160	RCD-630VN RCI-635VN	631265	1	GN-AVOCADO GREEN
160	RCI-645N	7534725	1	WH-WHITE
160	RCI-645N	7534726	1	YW-YELLOW
160	RCI-645N	631262	1	CC-TWO TONE COPPER-DARK EDGES
160	RCI-645N	631263	1	GN-AVOCADO GREEN
160	RCI-645VN	7534737	1	WH-WHITE
160	RCI-645VN	7534738	1	YW-YELLOW
160	RCI-645VN	634314	1	HG-HARVEST GOLD
160	RCI-645VN	631248	1	CC-TWO TONE COPPER-DARK EDGES
160	RCI-645VN	634421	1	CC-TWO TONE COPPER-MEDIUM EDGES
160	RCI-645VN	631249	1	GN-AVOCADO GREEN
	RIVET-UPPER SIDE TRIM			
194	ALL MODELS	638812	4	
	SCREW			
208	ALL MODELS	P7536987	1	ROTISSERIE OPENING COVER 8-15X1/2
2081	ALL MODELS	163446	5	TOP PANEL 8-18X1/2
2082	ALL MODELS	5899587	14	SIDE TRIM 8-32X3/8
2083	ALL MODELS	5435261	4	BOTTOM TRIM 6-20X1/4
2084	ALL MODELS	161857	4	CONDENSATION TRIM 8-15X3/8
2085	RCI-645N RCI-645VN	P7536987	1	BACK PANEL BRACE 8-15X1/2
2086	RCD-630N RCD-630VN RCI-635N RCI-635VN	P7536987	7	CONDENSATE TRIM PLATE 8-15X1/2
2086	RCI-645N RCI-645VN	P7536987	11	CONDENSATE TRIM PLATE 8-15X1/2
2087	RCD-630N RCD-630VN RCI-635N RCI-635VN	7528041	11	RANGE BACK PANEL 8-15X3/8
2087	RCI-645N RCI-645VN	7528041	14	RANGE BACK PANEL 8-15X3/8
2088	ALL MODELS	161857	8	SIDE PANEL 8-15X3/8
2089	ALL MODELS	P7536987	6	LEAD COVER 8-15X1/2
20811	ALL MODELS	7523558	4	LOWER ACCESS PANEL 8-15X1/2
20812	ALL MODELS	161857	2	BLOWER OPENING COVER 8-15X3/8
20813	ALL MODELS	162653	2	LOWER SIDE TRIM CAP 8-18X3/8
20814	RCD-630N RCD-630VN RCI-635N RCI-635VN	P7536987	4	RANGE TOP TRIM 8-15X1/2
20814	RCI-645N RCI-645VN	P7536987	5	RANGE TOP TRIM 8-15X1/2
	TRIM-UPPER SIDE			
253	ALL MODELS	7539052	1	LH-BRUSHED & BRIGHT STAINLESS STEEL
253	ALL MODELS	7539051	1	RH-BRUSHED & BRIGHT STAINLESS STEEL
	TRIM-LOWER SIDE			
2531	ALL MODELS	7539054	1	LH-BRUSHED & BRIGHT STAINLESS STEEL
2531	ALL MODELS	7539053	1	RH-BRUSHED & BRIGHT STAINLESS STEEL
	TRIM-BOTTOM			
2532	RCD-630N RCD-630VN RCI-635N RCI-635VN	6568907	1	BRUSHED & BRIGHT STAINLESS STEEL
2532	RCI-645N RCI-645VN	6568909	1	BRUSHED & BRIGHT STAINLESS STEEL
	TRIM-TOP			
2533	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539467	1	BRUSHED & BRIGHT STAINLESS STEEL
2533	RCI-645N RCI-645VN	7539468	1	BRUSHED & BRIGHT STAINLESS STEEL
	TRIM-CONDENSATION			
2534	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539839	1	
2534	RCI-645N RCI-645VN	7539840	1	
	PANEL-BACK			
310	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539045	1	
310	RCI-645N RCI-645VN	7539044	1	
	CAP-LOWER SIDE TRIM			
376	ALL MODELS	7539532	2	

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 7 FRAMES, PANELS AND PARTS

	COVER-ROTISSERIE OPENING			
378	ALL MODELS	7539573	1	
	COVER-LEAD			
3781	ALL MODELS	7539456	1	
	COVER-OVEN ELEMENT WIRING			
3782	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539435	1	
3782	RCI-645N RCI-645VN	7539435	2	
	COVER-BLOWER OPENING			
3783	ALL MODELS	7539530	1	
	BUTTON-TOP PANEL			
380	ALL MODELS	142068	1	
	PLATE-CONDENSATE TRIM			
390	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539077	1	
390	RCI-645N RCI-645VN	7539078	1	
	PANEL-LOWER ACCESS			
498	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539447	1	
498	RCI-645N RCI-645VN	7539448	1	

GROUP 8 OVEN DOORS AND PARTS

	BASE-OVEN DOOR HANDLE			
009	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538851	1	
009	RCI-645N RCI-645VN	7538851	2	
	BEARING-NYLON TORQUE SHAFT			
011	ALL MODELS	6569567	2	MOUNT TO DOOR SPRING RETAINER
011	RCI-645N RCI-645VN	6567433	2	LOWER
011	RCI-645N RCI-645VN	6567612	2	UPPER
	BRACKET-LOWER ARM			
026	RCD-630N RCD-630VN RCI-635N RCI-635VN	7534660	1	
026	RCI-645N RCI-645VN	7534660	2	
	BRACKET-TORQUE BEARING			
0261	ALL MODELS	637074	1	LEFT
0261	ALL MODELS	637073	1	RIGHT
	BRACKET-SPRING			
0262	ALL MODELS	7539449	2	
	BRACKET-OVEN DOOR MOUNTING			
0263	RCD-630N RCD-630VN RCI-635N RCI-635VN	7533253	1	LEFT
0263	RCD-630N RCD-630VN RCI-635N RCI-635VN	7533252	1	RIGHT
0263	RCI-645N RCI-645VN	7534677	1	LEFT-RIGHT DOOR
0263	RCI-645N RCI-645VN	7534678	1	RIGHT-RIGHT DOOR
0263	RCI-645N RCI-645VN	7533253	1	LEFT-LEFT DOOR
0263	RCI-645N RCI-645VN	7533252	1	RIGHT-LEFT DOOR
	DOOR-UPPER OVEN COMPLETE			
070	RCD-630N RCD-630VN RCI-635N RCI-635VN	6598371	1	WHITE LINE
070	RCD-630N RCD-630VN RCI-635N RCI-635VN	6598374	1	BLACK LINE
070	RCI-645N RCI-645VN	6598372	1	RIGHT-WHITE LINE
070	RCI-645N RCI-645VN	6598375	1	RIGHT-BLACK LINE
070	RCI-645N RCI-645VN	6598373	1	LEFT-WHITE LINE
070	RCI-645N RCI-645VN	6598376	1	LEFT-BLACK LINE
	FRAME-OVEN DOOR			
096	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538845	1	BOTTOM-BRIGHT FINISH
096	RCD-630N RCD-630VN RCI-635N RCI-635VN	1125912	1	BOTTOM-BRUSHED FINISH
096	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538834	1	TOP AND SIDES-BRIGHT FINISH
096	RCD-630N RCD-630VN RCI-635N RCI-635VN	1125559	1	TOP AND SIDES-BRUSHED FINISH
096	RCI-645N RCI-645VN	7538846	1	BOTTOM-LEFT DOOR-BRIGHT FINISH
096	RCI-645N RCI-645VN	1125915	1	BOTTOM-LEFT DOOR-BRUSHED FINISH
096	RCI-645N RCI-645VN	7538835	1	TOP AND SIDES-LEFT DOOR-BRIGHT FINISH

1968

GROUP 8 OVEN DOORS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	FRAME-OVEN DOOR - CONTINUED			
096	RCI-645N RCI-645VN	1125916	1	TOP AND SIDES-LEFT DOOR-BRUSHED FINISH
096	RCI-645N RCI-645VN	7537909	1	BOTTOM-RIGHT DOOR-BRIGHT FINISH
096	RCI-645N RCI-645VN	1125914	1	BOTTOM-RIGHT DOOR-BRUSHED FINISH
096	RCI-645N RCI-645VN	7537905	1	TOP AND SIDES-RIGHT DOOR-BRIGHT FINISH
096	RCI-645N RCI-645VN	1125913	1	TOP AND SIDES-RIGHT DOOR-BRUSHED FINISH
	GASKET-OVEN DOOR HANDLE			
099	RCD-630N RCD-630VN RCI-635N RCI-635VN	6567685	2	TUBE 5/16 INCH DIA X 3/8 INCH
099	RCI-645N RCI-645VN	6567685	4	TUBE 5/16 INCH DIA X 3/8 INCH
099	RCI-635VN RCI-635N	1125935	2	1/16X3/4X1 ASBESTOS
099	RCI-645VN RCI-645N	1125935	4	1/16X3/4X1 ASBESTOS
	GLASS-OVEN DOOR OUTER			
103	RCD-630N RCD-630VN	7538836	1	OBLONG CIRCLES WITH LINE
103	RCI-635N RCI-635VN	7539420	1	OBLONG CIRCLES WITH LINE
103	RCD-630N RCD-630VN RCI-635N RCI-635VN	639531	1	BLACK LINE GLASS
103	RCI-645N RCI-645VN	7538838	1	LEFT-OBLONG CIRCLES WITH LINE
103	RCI-645N RCI-645VN	639533	1	LEFT-BLACK LINE GLASS
103	RCI-645N RCI-645VN	7538837	1	RIGHT-OBLONG CIRCLES WITH LINE
103	RCI-645N RCI-645VN	639532	1	RIGHT-BLACK LINE GLASS
	GLASS-OVEN DOOR INNER			
1031	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538839	1	
1031	RCI-645N RCI-645VN	7538840	1	LEFT
1031	RCI-645N RCI-645VN	7537821	1	RIGHT
	GRIP-OVEN DOOR HANDLE			
107	RCI-635N RCI-635VN	7538850	1	USE WITH WHITE PRODUCTS-GRAY
107	RCI-635N RCI-635VN	637254	1	USE WITH YELLOW, TWO TONE COPPER, AVOCADO GREEN AND HARVEST GOLD PRODUCTS-WHITE
107	RCI-645N RCI-645VN	7538850	2	USE WITH WHITE PRODUCTS-GRAY
107	RCI-645N RCI-645VN	637254	2	USE WITH YELLOW, TWO TONE COPPER, AVOCADO GREEN AND HARVEST GOLD PRODUCTS-WHITE
	HANDLE-OVEN DOOR			
110	RCD-630N RCD-630VN	7539419	1	
110	RCI-635N RCI-635VN	7538849	1	
110	RCI-645N RCI-645VN	7538849	2	
	NUT			
149	ALL MODELS	134559	2	OVEN DOOR SPRING ADJUSTING
	RETAINER-OVEN DOOR GLASS			
192	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538841	1	BOTTOM
192	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538306	1	LEFT SIDE
192	RCD-630N RCD-630VN RCI-635N RCI-635VN	7537820	1	RIGHT SIDE
192	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538843	1	TOP
192	RCI-645N RCI-645VN	7538842	1	BOTTOM-LEFT DOOR
192	RCI-645N RCI-645VN	7538307	1	BOTTOM-RIGHT DOOR
192	RCI-645N RCI-645VN	7538306	2	LEFT SIDE
192	RCI-645N RCI-645VN	7537820	2	RIGHT SIDE
192	RCI-645N RCI-645VN	7538844	1	TOP-LEFT DOOR
192	RCI-645N RCI-645VN	7537819	1	TOP-RIGHT OVEN
	ROLLER-OVEN DOOR STOP			
199	RCD-630N RCD-630VN RCI-635N RCI-635VN	5426925	1	
199	RCI-645N RCI-645VN	5426925	2	
	SEAL-BOTTOM DOOR			
203	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538847	1	
203	RCI-645N RCI-645VN	7538848	1	LEFT OVEN
203	RCI-645N RCI-645VN	7537822	1	RIGHT OVEN
	SEAL-SIDE SEAL			
2031	RCD-630N RCD-630VN RCI-635N RCI-635VN	7537823	2	
2031	RCI-645N RCI-645VN	7537823	4	

GROUP 8 OVEN DOORS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW			
208	RCD-630N RCD-630VN RCI-635N RCI-635VN	9419256	2	DOOR HANDLE 10-32X7/8
208	RCI-645N RCI-645VN	160069	4	DOOR HANDLE 10-32X1
2081	ALL MODELS	5436724	8	SPRING BRACKET 10-32X1/2
2082	RCD-630N RCD-630VN RCI-635N RCI-635VN	274920	2	BROIL STOP SPRING 10-12X1/2
2082	RCI-645N RCI-645VN	274920	4	BROIL STOP SPRING 10-12X1/2
2083	RCD-630N RCD-630VN RCI-635N RCI-635VN	5436175	1	OVEN DOOR STOP ROLLER 10-32X1
2083	RCI-645N RCI-645VN	5436175	2	OVEN DOOR STOP ROLLER 10-32X1
2084	RCD-630N RCD-630VN RCI-635N RCI-635VN	6569680	4	TORQUE SHAFT BEARING 12-24X5/8
2084	RCI-645N RCI-645VN	6569680	4	TORQUE SHAFT LOWER BEARING 12-24X5/8
2084	RCI-645N RCI-645VN	7532174	4	TORQUE SHAFT LOWER BEARING
2085	RCI-645N RCI-645VN	6567694	4	TORQUE SHAFT UPPER BEARING 10-16X5/8
2086	RCD-630N RCD-630VN RCI-635N RCI-635VN	P7536987	2	LOWER ARM BRACKET 8-15X1/2
2086	RCI-645N RCI-645VN	P7536987	4	LOWER ARM BRACKET 8-15X1/2
2087	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538014	4	DOOR FRAME PLATE 6-32X3/8
2087	RCI-645N RCI-645VN	7538014	8	DOOR FRAME PLATE 6-32X3/8
2088	RCD-630N RCD-630VN RCI-635N RCI-635VN	P6566329	3	OVEN DOOR MOUNTING BRACKET 8-32X5/16
2088	RCI-645N RCI-645VN	155874	6	OVEN DOOR MOUNTING BRACKET 8-32X5/16
2089	ALL MODELS	753e675	4	TORQUE SHAFT BEARING 10-32X1/2
20810	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538013	2	OVEN DOOR MOUNTING BRACKET 8-32X7/16
20810	RCI-645N RCI-645VN	7538013	4	OVEN DOOR MOUNTING BRACKET 8-32X7/16
20811	ALL MODELS	7539817	2	OVEN DOOR SPRING ADJUSTING 5/16-18X6
	SHAFT-TORQUE			
210	RCD-630N RCD-630VN RCI-635N RCI-635VN	7534672	1	
210	RCI-645N RCI-645VN	7534658	1	LEFT OVEN
210	RCI-645N RCI-645VN	7534659	1	RIGHT OVEN
	SPRING-BROIL STOP			
226	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539558	1	
226	RCI-645N RCI-645VN	7539558	2	
	SPRING-OVEN DOOR COUNTERBALANCE			
2261	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539564	2	
2261	RCI-645N RCI-645VN	7539562	1	LEFT
2261	RCI-645N RCI-645VN	7539563	1	RIGHT
	WASHER			
279	RCD-630N RCD-630VN RCI-635N RCI-635VN RCI-645N RCI-645VN	638712	4	TORQUE BEARING BRACKET 5/8 IN OD
279	RCI-645N RCI-645VN	629690	4	TORQUE BEARING BRACKET 3/4 IN OD
2791	ALL MODELS	60002	2	OVEN DOOR SPRING ADJUSTING
2792	RCD-630N RCD-630VN RCI-635N RCI-635VN	6565749	2	LOWER ARM BRACKET-LOCK
2792	RCI-645N RCI-645VN	6565749	4	LOWER ARM BRACKET-LOCK
2793	RCD-630N RCD-630VN RCI-635N RCI-635VN	P6566285	2	OVEN DOOR HANDLE-CUP
2793	RCI-645N RCI-645VN	P6566285	4	OVEN DOOR HANDLE-CUP
2794	RCD-630N RCD-630VN RCI-635N RCI-635VN	6567197	3	OVEN DOOR MOUNTING BRACKET-CUP
2794	RCI-645N RCI-645VN	6567197	6	OVEN DOOR MOUNTING BRACKET-CUP
2794	RCI-635VN	6567384	1	OVEN DOOR MOUNTING BRACKET-CUP
2795	RCD-630N RCD-630VN RCI-635N RCI-635VN	5438491	1	OVEN DOOR RELEASE ARM
2795	RCI-645N RCI-645VN	5438491	2	OVEN DOOR RELEASE ARM
2796	RCD-630N RCD-630VN RCI-635N RCI-635VN	5436491	1	BROIL STOP SPRING
2796	RCI-645N RCI-645VN	5438491	4	BROIL STOP SPRING
	BUSHING-DOOR SPRING			
316	ALL MODELS	7536937	2	
	BUSHING-DOOR SPRING SWIVEL			
3161	ALL MODELS	7535598	2	

1968

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 8 OVEN DOORS AND PARTS

	SUPPORT-OVEN DOOR HANDLE			
321	RCD-630N RCD-630VN	7537575	1	LEFT
321	RCD-630N RCD-630VN	7537574	1	RIGHT
	ARM-OVEN DOOR LOWER			
366	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538933	1	
366	RCI-645N RCI-645VN	7538933	2	
	ARM-OVEN DOOR UPPER			
3661	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538934	2	
3661	RCI-645N RCI-645N	7538934	4	
	BUTTON-BROIL STOP			
380	RCD-630N RCD-630VN RCI-635N RCI-635VN	6569572	1	
380	RCI-645N RCI-645VN	6569572	2	
	PLATE-DOOR FRAME			
390	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538012	1	LH
390	RCD-630N RCD-630VN RCI-635N RCI-635VN	7538011	1	RH
390	RCI-645N RCI-645VN	7538012	2	LH
390	RCI-645N RCI-645VN	7538011	2	RH
	RING-LOWER ARM BRACKET RETAINER			
393	RCD-630N RCD-630VN RCI-635N RCI-635VN	6567241	1	
393	RCI-645N RCI-645VN	6567241	2	
	CUSHION-OVEN DOOR GLASS			
400	RCD-630N RCD-630VN RCI-635N RCI-635VN	7536308	4	
400	RCI-645N RCI-645VN	7538308	8	

GROUP 9 OVEN LINERS AND PARTS

	LINER-OVEN			
136	RCD-630N RCD-630VN RCI-635N RCI-635VN	7534697	1	
136	RCI-645N RCI-645VN	7534696	1	LEFT
136	RCI-645N RCI-645VN	7534695	1	RIGHT
	RETAINER-OVEN INSULATION			
192	RCD-630N RCD-630VN RCI-635N RCI-635VN	632912	1	OVEN
192	RCI-645N RCI-645VN	632911	1	LEFT OVEN
192	RCI-645N RCI-645VN	632910	1	RIGHT OVEN
	SCREW			
208	ALL MODELS	6567391	5	OVEN LINER 8-32X5/16
208	RCD-630N RCD-630VN	P7536987	2	OVEN LINER 8-15X1/2
208	RCI-645N RCI-645VN	P7536987	9	OVEN LINER 8-15X1/2
2081	RCD-630N RCD-630VN RCI-635N RCI-635VN	P7536987	12	INSULATION RETAINER 8-15X1/2
2081	RCI-645N RCI-645VN	P7536987	22	INSULATION RETAINER 8-15X1/2
2081	ALL MODELS	274920	6	INSULATION RETAINER 10-12X1/2
	BUTTON-ROTISSERIE PLUG			
380	ALL MODELS	6567525	1	LOWER RIGHT
380	ALL MODELS	6567526	1	UPPER LEFT

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 10 OVEN INTERIOR PARTS

	TRAY-OVEN BOTTOM DRIP			
075	RCI-635N RCI-635VN	7539437	1	
075	RCI-645N RCI-645VN	7539438	1	LEFT OVEN
075	RCI-645N RCI-645VN	7539439	1	RIGHT OVEN
	FRAME-OVEN LIGHT GLASS			
096	RCI-645N RCI-645VN	7539037	2	
	GLASS-OVEN LIGHT			
103	RCD-630N RCD-630VN RCI-635N RCI-635VN	7537838	1	
103	RCI-645N RCI-645VN	7539038	2	
	GRILL-BROILER PAN			
108	ALL MODELS	6565589	1	
	HOUSING-OVEN LAMP			
116	RCI-645N RCI-645VN	7539039	1	
	RETAINER-THERMOSTAT BULB			
192	RCD-630N RCD-630VN	5437748	2	
192	RCI-635N RCI-635VN	7537689	2	
192	RCI-645N RCI-645VN	6568792	4	
192	RCI-645N RCI-645VN	7537693	2	RIGHT OVEN
	RETAINER-OVEN LAMP GLASS			
1921	RCD-630N RCD-630VN RCI-635N RCI-635VN	7539080	1	
	SCREW			
208	RCI-645N RCI-645VN	161857	2	OVEN LAMP HOUSING 8-15X3/8
2081	RCD-630N RCD-630VN RCI-635N RCI-635VN	5436528	3	OVEN LAMP RECEPTACLE SUPPORT 8-15X3/8
	SHELF-OVEN			
213	RCD-630N RCD-630VN RCI-635N RCI-635VN	631204	2	
213	RCI-645N RCI-645VN	631206	2	LEFT
213	RCI-645N RCI-645VN	631205	2	RIGHT
	SHIELD-OVEN			
216	RCI-635N RCI-635VN	631217	1	BACK
216	RCI-635N RCI-635VN	7539441	1	SIDE-LH
216	RCI-635N RCI-635VN	7539440	1	SIDE-RH
216	RCI-645N RCI-645VN	631219	1	BACK-LEFT OVEN
216	RCI-645N RCI-645VN	631218	1	BACK-RIGHT OVEN
216	RCI-645N RCI-645VN	7539442	1	SIDE-RH-LEFT OVEN
216	RCI-645N RCI-645VN	7539443	1	SIDE-LH-RIGHT OVEN
216	RCI-645N RCI-645VN	7539441	2	SIDE-LH LEFT OVEN AND RH-RIGHT OVEN
	SUPPORT-OVEN LAMP RECEPTACLE			
321	RCD-630N RCD-630VN RCI-635N RCI-635VN	7537840	1	
	GUIDE-SHELF RH			
323	RCD-630N RCD-630VN	7532707	1	
323	RCI-635N RCI-635VN	631202	1	
323	RCI-645N RCI-645VN	631202	2	
	GUIDE-SHELF LH			
3231	RCD-630N RCD-630VN	7532708	1	
3231	RCI-635N RCI-635VN	631203	1	
3231	RCI-645N RCI-645VN	631203	2	
	PAN BROILER			
336	ALL MODELS	6569846	1	

GROUP 13 ELECTRICAL PARTS

	BAFFLE-BROIL ELEMENT			
007	RCD-630N RCD-630VN	637408	1	
007	RCI-635N RCI-635VN	632339	1	
007	RCI-645N RCI-645VN	632368	1	LEFT OVEN
007	RCI-645N RCI-645VN	632348	1	RIGHT OVEN
	BASE-STARTER			
009	ALL MODELS	631867	1	
	BRACKET-LAMPHOLDER			
026	ALL MODELS	7539551	2	
	BRACKET-TERMINAL BLOCK			
0261	RCD-630N RCD-630VN	7539012	1	
0261	RCI-635N RCI-635VN RCI-645N RCI-645VN	7539004	1	

1968

GROUP 13 ELECTRICAL PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	CLIP-LEAD WIRE			
039	RCD-630VN RCI-635N RCI-635VN	6567490	3	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
039	RCI-645N RCI-645VN	6567490	2	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
039	ALL MODELS EXCEPT RCI-645VN	7527865	1	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
039	RCI-645VN	7527865	2	WIRE TYPE MOUNTING WITH SCREW 5/8 IN DIA
039	RCD-630N RCD-630VN	6569719	1	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
039	RCI-635N RCI-635VN RCI-645N RCI-645VN	6569719	2	WIRE TYPE MOUNTING WITH SCREW 3/4 IN DIA
039	ALL MODELS EXCEPT RCI-635N RCI-635VN RCD-630VN	6568051	5	WIRE TYPE MOUNTING WITH SCREW
039	RCD-630VN RCI-635N RCI-635VN	6568051	4	WIRE TYPE MOUNTING WITH SCREW
	CLIP-CONDUIT CABLE			
0391	ALL MODELS	5437814	1	
	CLIP-PILOT LAMP			
0392	RCD-630N RCD-630VN	7518092	2	
	CONDUIT			
047	ALL MODELS	-------	1	3/8 INCH FLEXIBLE PURCHASE LOCALLY
	CONNECTOR-CONDUIT			
048	ALL MODELS	5408973	1	90 DEGREE FOR 3/8 IN CONDUIT
048	ALL MODELS	-------	1	STRAIGHT FOR 3/8 INCH CONDUIT PURCHASE LOCALLY
	ELEMENT-BROIL			
080	RCD-630N RCD-630VN	632329	1	3200W 236V, 3600W 250V
080	RCI-635N RCI-635VN	632335	1	3000W 236V, 3360W 250V
080	RCI-645N RCI-645VN	632360	1	LEFT OVEN 1750W 236V
080	RCI-645N RCI-645VN	632342	1	RIGHT OVEN 2800W 236V, 3142W 250V
080	RCD-630N RCD-630VN	632330	1	3200W 208V
080	RCI-635N RCI-635VN	632336	1	30000W 208V
080	RCI-645N RCI-645VN	632361	1	LEFT OVEN 1750W 208V
080	RCI-645N RCI-645VN	632343	1	RIGHT OVEN 2800W 208V
	ELEMENT-BAKE			
0801	RCD-630N RCD-630VN RCI-635N RCI-635VN	7532552	1	2400W 236V, 2700W 250V
0801	RCI-645N RCI-645VN	7532554	1	LEFT OVEN 1600W 236V, 1800W 250V
0801	RCI-645N RCI-645VN	7532556	1	RIGHT OVEN 2200W 236V, 2475W 250V
0801	RCD-630N RCD-630VN RCI-635N RCI-635VN	633111	1	2330W 208V
0801	RCI-645N RCI-645VN	633113	1	LEFT OVEN 1600W 208V
0801	RCI-645N RCI-645VN	633115	1	RIGHT OVEN 2200W 208V
	FUSE			
098	ALL MODELS	-------	1	15 AMP-APPLIANCE RECEPTACLE-PURCHASE LOCALLY
	INSULATOR-BROIL ELEMENT TERMINAL BLOCK SPACER			
126	RCI-635N RCI-635VN	7539550	1	
	LAMP-FLUORESCENT			
132	RCD-630N RCD-630VN RCI-635N RCI-635VN	-------	1	20 WATT GE F20T12/CW-28 INCH PURCHASE LOCALLY
132	RCI-645N RCI-645VN	-------	1	30 WATT GE F30T8/CW-36 INCH PURCHASE LOCALLY
	NUT			
149	RCD-630N RCD-630VN	112432	13	TERMINAL BLOCK TERMINAL
149	RCI-635N RCI-635VN	112432	14	TERMINAL BLOCK TERMINAL
149	RCI-645N RCI-645VN	112432	15	TERMINAL BLOCK TERMINAL
1492	ALL MODELS	112432	2	TERMINAL BLOCK
	RECEPTACLE-FUSE			
185	ALL MODELS	7531141	1	APPLIANCE-MEDIUM BASE
185	ALL MODELS	634852	1	APPLIANCE-TYPE S
	RECEPTACLE-APPLIANCE			
1851	ALL MODELS	7526570	1	
	RECEPTACLE-OVEN LAMP			
1852	RCD-630N RCD-630VN RCI-635N RCI-635VN	631324	1	
1852	RCI-645N RCI-645VN	632602	1	
	RETAINER-FUSE RECEPTACLE			
192	ALL MODELS	7520171	2	USE WITH MEDIUM BASE TYPE FUSE

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 13 ELECTRICAL PARTS

	SCREW			
2081	RCD-630N RCD-630VN RCI-635N RCI-635VN	6566583	2	BAKE ELEMENT 10-12X1/2
2081	RCI-645N RCI-645VN	6566583	4	BAKE ELEMENT 10-12X1/2
2082	RCD-630N RCD-630VN RCI-635N RCI-635VN	5436528	4	BROIL ELEMENT 8-15X3/8
2082	RCI-645N RCI-645VN	5436528	8	BROIL ELEMENT 8-15X3/8
2083	ALL MODELS	6546560	2	TERMINAL BLOCK 10-12X3/4
2083	ALL MODELS	6566861	2	TERMINAL BLOCK 10-32X3/4
2084	RCD-630N RCD-630VN RCI-635N RCI-635VN	6565857	1	BROIL RECEPTACLE INSULATOR 10-12X1
2084	RCI-645N RCI-645VN	6565857	2	BROIL RECEPTACLE INSULATOR 10-12X1
2085	RCD-630N RCD-630VN RCI-635N RCI-635VN	6567391	2	FLUORESCENT LAMP BALLAST 8-32X5/16
2085	RCI-645N RCI-645VN	5436724	2	FLUORESCENT LAMP BALLAST 10-32X3/8
2086	ALL MODELS	5436724	2	CONDUIT & TERMINAL BLOCK PLATE 10-32X3/8
2087	ALL MODELS	6569059	2	FUSE RECEPTACLE TERMINAL 8-32X1/4
2088	RCD-630VN RCI-635N RCI-635VN	274920	1	GROUND 10-12X1/2
2088	RCI-645N RCI-645VN	5424117	1	GROUND 10-16X3/8
2088	RCI-645N RCI-645VN	274920	2	GROUND 10-12X1/2
2089	ALL MODELS	6567391	2	STARTER BASE 8-32X5/16
20811	ALL MODELS	5435852	4	FLUOR LAMP HOLDER 4-40X7/16
20812	RCD-630N RCD-630VN	6567391	4	TERMINAL BLOCK BRACKET 8-32X5/16
20812	RCI-635N RCI-635VN RCI-645N RCI-645VN	5885072	2	TERMINAL BLOCK BRACKET 8-18X3/8
20813	RCD-630N RCD-630VN RCI-635N RCI-635VN	7536486	2	OVEN LAMP RECEPTACLE 10-32X3/4
20814	ALL MODELS	5885072	2	FLUOR LAMP HOLDER BRACKET 8-18X3/8
20815	ALL MODELS	P7536987	1	LEAD WIRE CLAMP
	SPACER-BROIL ELEMENT			
222	RCD-630N RCD-630VN	637427	1	230 VOLT
222	RCI-635N RCI-635VN	637429	1	230 VOLT
222	RCI-645N RCI-645VN	637433	1	LEFT OVEN 230 VOLT
222	RCI-645N RCI-645VN	637431	1	RIGHT OVEN 230 VOLT
222	RCD-630N RCD-630VN	637428	1	208 VOLT
222	RCI-635N RCI-635VN	637430	1	208 VOLT
222	RCI-645N RCI-645VN	637434	1	LEFT OVEN 208 VOLT
222	RCI-645N RCI-645VN	637432	1	RIGHT OVEN 208 VOLT
	STARTER-FLUORESCENT LAMP			
230	RCD-630N RCD-630VN RCI-635N RCI-635VN	-------	1	PURCHASE LOCALLY
230	RCI-645N RCI-645VN	-------	1	PURCHASE LOCALLY
	INDICATOR-PILOT LAMP			
248	RCD-630N RCD-630VN	P7538146	2	
	WASHER			
279	ALL MODELS	5433842	4	TERMINAL-CUP
	SUPPORT-BAKE ELEMENT			
321	RCD-630N RCD-630VN RCI-635N RCI-635VN	7537048	2	U SHAPED CRIMP TYPE
321	RCI-645N RCI-645VN	7537048	4	U SHAPED CRIMP TYPE
	CLAMP-BROIL ELEMENT RETAINER			
327	RCD-630N RCD-630VN RCI-635N RCI-635VN	5436951	10	
327	RCI-645N RCI-645VN	5436951	14	
	CLAMP-LEAD WIRE			
3271	ALL MODELS	6566122	2	
	BLOCK-TERMINAL			
330	ALL MODELS	6563359	2	
	BULB-OVEN LAMP			
358	ALL MODELS	-------	1	MEDIUM BASE-40 WATT-PURCHASE LOCALLY
	HOLDER-FLUORESCENT LAMP			
363	RCD-630N RCD-630VN RCI-635N RCI-635VN	631871	1	LEFT
363	RCI-645N RCI-645VN	631874	1	LEFT
363	RCD-630N RCD-630VN	631872	1	RIGHT
363	RCI-635N RCI-635VN	631873	1	RIGHT
363	RCI-645N RCI-645VN	631875	1	RIGHT
	BALLAST-FLUORESCENT LAMP			
371	RCD-630N RCD-630VN RCI-635N RCI-635VN	7531233	1	20 WATT
371	RCI-645N RCI-645VN	6599025	1	30 WATT

1968

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 13 ELECTRICAL PARTS

	PLATE-BAKE ELEMENT HINGE			
390	RCD-630N RCD-630VN RCI-635N RCI-635VN	7529639	1	
390	RCI-645N RCI-645VN	7529639	2	
	PLATE-CONDUIT AND TERMINAL BLOCK			
3901	ALL MODELS	7539571	1	
	HARNESS-ELECTRICAL			
438	RCD-630N	*631344	1	CONSOLE
438	RCD-630VN	631369	1	CONSOLE
438	RCI-635N	*631360	1	CONSOLE
438	RCI-635VN	631373	1	CONSOLE
438	RCI-645N	*631342	1	CONSOLE
438	RCI-645VN	631412	1	CONSOLE
438	RCD-630N RCD-630VN RCI-635N RCI-635VN	7530771	1	COOKING TOP
438	RCI-645N RCI-645VN	7530772	1	COOKING TOP
438	RCD-630N RCD-630VN	631343	1	OVEN
438	RCI-635N RCI-635VN	631359	1	OVEN
438	RCI-645N RCI-645N	*631241	1	OVEN
	LIGHT-SURFACE UNIT PILOT			
489	RCD-630N RCD-630VN	631345	1	
489	RCI-635N RCI-635VN RCI-645N RCI-645VN	631877	1	HEAT MINDER
489	RCI-635N RCI-635VN RCI-645N RCI-645VN	631362	3	
	LIGHT-OVEN PILOT			
4891	RCD-630N RCD-630VN	7526157	1	
4891	RCI-635N RCI-635VN	7534401	1	
4891	RCI-645N RCI-645VN	7534401	2	LEFT AND RIGHT OVEN
4891	RCI-635N RCI-635VN RCI-645N RCI-645VN	631435	1	MOTORIZED THERMOSTAT

* NO LONGER AVAILABLE - USE BULK WIRE

GROUP 14 ACCESSORIES AND PARTS

	BRACKET-NON VENT TYPE FILTER			
026	ALL MODELS	7539561	2	PART OF NON VENT TYPE FILTER KITS
	FILTER-AIR			
0881	RCD-630VN RCI-635VN	631290	1	CARBON-PART OF 6597846 NON VENT
0881	RCI-645VN	631291	1	CARBON-PART OF 6597847 NON VENT TYPE KIT
0882	RCD-630VN RCI-635VN	631292	1	SMOKE-PART OF 6597846 NON VENT TYPE KIT
0882	RCI-645VN	631293	1	SMOKE-PART OF 6597847 NON VENT TYPE KIT
	GEAR-SPROCKET			
101	RCI-635N RCI-635VN RCI-645N RCI-645VN	6592135	2	PART OF 6597885 ROTISSERIE
	GRILL-BROILER PAN			
108	ALL MODELS	7532503	1	PART OF SPATTER FREE BRL PAN
	HANDLE-BROILER PAN			
110	ALL MODELS	5437919	4	PART OF SPATTER FREE BRL PAN
	MOTOR-ROTISSERIE			
143	RCI-635N RCI-635VN RCI-645N RCI-645VN	7524935	1	PART OF ROTISSERIE KIT
	PANEL-TOP			
156	RCD-630VN RCI-635VN	7539075	1	PART OF 6597846 NON VENT. TYPE FILTER KIT
156	RCI-645VN	7539076	1	PART OF 6597847 NON VENT TYPE FILTER KIT
	RACK-ROTISSERIE			
182	RCI-635N RCI-635VN RCI-645N RCI-645VN	7520920	1	PART OF ROTISSERIE KIT
	RACK-ROASTER SIDE			
1821	ALL MODELS	6597531	1	FOR SPATTER FREE BROILER PAN

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 14 ACCESSORIES AND PARTS

	SCREW			
208	RCI-635N RCI-635VN RCI-645N RCI-645VN	5435817	2	THUMB-ROTISSERIE FORK-PART OF ROTISSERIE KIT
2081	RCI-635N	6562048	5	ROTISSERIE-PART OF ROTISSERIE KIT 10-12X1/2
2082	RCI-635N RCI-635VN RCI-645N RCI-645VN	161857		ROTISSERIE COVER
2083	RCI-635N RCI-635VN RCI-645N RCI-645VN	P5430929	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT 8-32X3/8
2084	RCI-635N RCI-635VN RCI-645N RCI-645VN	5879944	2	SWITCH INSULATOR-PART OF ROTISSERIE KIT 6-32X1/4
2085	RCI-635N RCI-635VN RCI-645N RCI-645VN	6592138	2	SWITCH-PART OF ROTISSERIE KIT 2-56X1-3/8
2086	ALL MODELS	5435261	4	FILTER BRACKET AND SPRING-PART OF NON VENT TYPE FILTER KITS 6-20X1/4
2087	ALL MODELS	5899587	4	AIR DUCT-PART OF NON VENT TYPE FILTER KITS 8-32X3/8
2088	ALL MODELS	5438261	8	HANDLE-PART OF SPATTER FREE BROILER PAN
	SPRING-LINK WIRE			
226	RCI-635N RCI-635VN RCI-645N RCI-645VN	6592136	1	PART OF ROTISSERIE KIT
	SPRING-FILTER			
2261	RCD-630VN RCI-635VN RCI-645VN	7539529	1	PART OF NON VENT TYPE FILTER KITS
	WASHER			
279	RCI-635N RCI-635VN RCI-645N RCI-645VN	5879591	4	GEARS AND MOTOR-PART OF ROTISSERIE KIT
	DUCT-AIR			
311	RCD-630VN RCI-635VN RCI-645VN	7539645	1	PART OF NON VENT TYPE FILTER KITS
	PAN BROILER			
336	ALL MODELS	5561567	1	SPATTER FREE-COMPLETE
336	RCI-645N RCI-645VN	535931	1	SMALL FOR LEFT OVEN-COMPLETE
	LINK-TRIGGER TO SPRING			
348	RCI-635N RCI-635VN RCI-645N RCI-645VN	6592132	1	PART OF ROTISSERIE KIT
	LINK-ACTUATING ARM TO PLATE			
3481	RCI-635N RCI-635VN RCI-645N RCI-645VN	6592134	1	PART OF ROTISSERIE KIT
	CHAIN-DRIVE			
351	RCI-635N RCI-635VN RCI-645N RCI-645VN	6592133	1	PART OF ROTISSERIE KIT
	PIN-GEAR			
364	RCI-635N RCI-635VN RCI-645N RCI-645VN	6592137	2	PART OF ROTISSERIE KIT
	COVER-ROTISSERIE			
378	RCI-635N RCI-635VN RCI-645N RCI-645VN	7539531	1	LOWER
	SWITCH-ROTISSERIE			
396	RCI-635N RCI-635VN RCI-645N RCI-645VN	7520919	1	PART OF ROTISSERIE KIT
	ROTISSERIE KIT			
428	RCI-635N RCI-635VN RCI-645N RCI-645VN	6597885	1	
	SPIT-ROTISSERIE			
430	RCI-635N RCI-635VN RCI-645N RCI-645VN	7520921	1	PART OF ROTISSERIE KIT
	FORK-ROTISSERIE TURNING			
431	RCI-635N RCI-635VN RCI-645N RCI-645VN	5432586	2	PART OF ROTISSERIE KIT
	GRIDDLE-KANT SLIDE			
485	ALL MODELS	630794	1	USE ON 8 INCH SURFACE UNITS
	VENT-DUCTLESS			
520	RCD-630VN RCI-635VN	6597846	1	COMPLETE KIT
520	RCI-645VN	6597847	1	COMPLETE KIT

1968

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION

GROUP 15 INSULATION

	INSULATION-BULK			
124	ALL MODELS	5873771	AR	1X18X30 INCHES
124	ALL MODELS	5873772	AR	2X24X90 INCHES
124	ALL MODELS	5873773	AR	2-1/2X42X90 INCHES
124	ALL MODELS	5873774	AR	3X38X90 INCHES
1241	RCD-630N RCD-630VN RCI-635N RCI-635VN	*-------	1	OVEN SIDES AND BOTTOM 2X15X59 INCHES
1241	RCI-645N RCI-645VN	*-------	1	LEFT OVEN SIDES AND BOTTOM 2X15X49 INCHES
1241	RCI-645N RCI-645VN	*-------	1	RIGHT OVEN SIDES AND BOTTOM 2X15X57 INCHES
1242	RCD-630N RCD-630VN RCI-635N RCI-635VN	*-------	1	OVEN TOP 3X16X28 INCHES
1242	RCI-645N RCI-645VN	*-------	1	LEFT OVEN TOP 3X14X16 INCHES
1242	RCI-645N RCI-645VN	*-------	1	RIGHT OVEN TOP 3X16X22 INCHES
1243	RCD-630N RCD-630VN RCI-635N RCI-635VN	*-------	1	OVEN BACK 2X16X28 INCHES
1243	RCI-645N RCI-645VN	*-------	1	LEFT OVEN BACK 2X14X16 INCHES
1243	RCI-645N RCI-645VN	*-------	1	RIGHT OVEN BACK 2X16X22 IN
	INSULATION-COOKING TOP COVER			
1244	ALL MODELS	6567916	1	SCOND 8-7/16X18 INCHES-CUT TO SIZE REQUIRED-ASBESTOS

* CUT TO SIZE FROM BULK PIECES

GROUP 16 BASE CABINETS AND PARTS

	BRACKET-HINGE PIVOT			
026	ALL MODELS	6567649	4	PART OF B-30&B-40 BASE CABINETS
	BUMPER-DOOR			
029	ALL MODELS	6568980	4	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUMPER-SHELF			
0291	ALL MODELS	6569025	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUMPER-SHELF SLEEVE			
0292	RCD-630N RCD-630VN RCI-635N RCI-635VN	6569022	2	PART OF B-30 BASE CABINET MODEL NO 6560105
0292	RCI-645N RCI-645VN	6569022	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	DOOR-BASE CABINET LH			
070	RCD-630N RCD-630VN RCI-635N RCI-635VN	7521951	1	WH-WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
070	RCD-630N RCD-630VN RCI-635N RCI-635VN	7521972	1	YW-YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
070	RCD-630N RCD-630VN RCI-635N RCI-635VN	630946	1	CC-TWO TONE COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105-DARK EDGES
070	RCD-630N RCD-630VN RCI-635N RCI-635VN	634407	1	CO-TWO TONE COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105-MEDIUM EDGES
070	RCD-630N RCD-630VN RCI-635N RCI-635VN	634320	1	HG-HARVEST GOLD-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
070	RCD-630N RCD-630VN RCI-635N RCI-635VN	632963	1	GN-AVOCADO GREEN-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
070	RCI-645N RCI-645VN	7521978	1	WH-WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
070	RCI-645N RCI-645VN	7521999	1	YW-YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
070	RCI-645N RCI-645VN	630960	1	CC-TWO TONE COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106-DARK EDGES
070	RCI-645N RCI-645VN	634414	1	CO-TWO TONE COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106-MEDIUM EDGES
070	RCI-645N RCI-645VN	634326	1	HG-HARVEST GOLD-PART OF B-40 BASE CABINET MODEL NUMBER 6560106

GROUP 16 BASE CABINETS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	DOOR-BASE CABINET LH - CONTINUED			
070	RCI-645N RCI-645VN	632974	1	GN-AVOCADO GREEN-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	DOOR-BASE CABINET RH			
0701	RCD-630N RCD-630VN RCI-635N RCI-635VN	7521950	1	WH-WHITE-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
0701	RCD-630N RCD-630VN RCI-635N RCI-635VN	7521964	1	YW-YELLOW-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
0701	RCD-630N RCD-630VN RCI-635N RCI-635VN	630942	1	CC-TWO TONE COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105-DARK EDGES
0701	RCD-630N RCD-630VN RCI-635N RCI-635VN	634405	1	CO-TWO TONE COPPER-PART OF B-30 BASE CABINET MODEL NUMBER 6560105-MEDIUM EDGES
0701	RCD-630N RCD-630VN RCI-635N RCI-635VN	634318	1	HG-HARVEST GOLD-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
0701	RCD-630N RCD-630VN RCI-635N RCI-635VN	632966	1	GN-AVOCADO GREEN-PART OF B-30 BASE CABINET MODEL NUMBER 6560105
0701	RCI-645N RCI-645VN	7521977	1	WH-WHITE-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
0701	RCI-645N RCI-645VN	7521991	1	YW-YELLOW-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
0701	RCI-645N RCI-645VN	630956	1	CC-TWO TONE COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106-DARK EDGES
0701	RCI-645N RCI-645VN	634412	1	CO-TWO TONE COPPER-PART OF B-40 BASE CABINET MODEL NUMBER 6560106-MEDIUM EDGES
0701	RCI-645N RCI-645VN	634324	1	HG-HARVEST GOLD-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
0701	RCI-645N RCI-645VN	632972	1	GN-AVOCADO GREEN-PART OF B-40 BASE CABINET MODEL NUMBER 6560106
	FRAME-BASE CABINET			
096	RCD-630N RCD-630VN RCI-635N RCI-635VN	-------	1	PART OF B-30 BASE CABINET NOT AVAILABLE
096	RCI-645N RCI-645VN	-------	1	PART OF B-40 BASE CABINET NOT AVAILABLE
	HANDLE-BASE CABINET DOOR			
110	RCD-630N RCD-630VN RCI-635N RCI-635VN	6568979	2	PART OF B-30 BASE CABINET MODEL NO 6560105
110	RCI-645N RCI-645VN	6568996	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	NUT			
149	ALL MODELS	5439337	2	DOOR STRIKE-PART OF B-30& B-40 BASE CABINETS
1492	ALL MODELS	447014	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
1493	RCD-630N RCD-630VN RCI-635N RCI-635VN	7524744	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105
1493	RCI-645N RCI-645VN	7524744	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106
	SCREW			
208	ALL MODELS	5887109	8	HINGE PIVOT BRACKET-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
2081	ALL MODELS	5909850	8	DOOR HINGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-32X1/2
2082	ALL MODELS	6568999	6	DOOR HANDLE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 8-18X3/8
2085	RCD-630N RCD-630VN RCI-635N RCI-635VN	5909850	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-32X1/2
2085	RCD-630N RCD-630VN RCI-635N RCI-635VN	P7536987	2	SHELF GUIDE-PART OF B-30 BASE CABINET MODEL NO 6560105 8-15X1/2
2085	RCI-645N RCI-645VN	5909850	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-32X1/2

1968

GROUP 16 BASE CABINETS AND PARTS

CODE	MODELS	PIECE NO.	QUAN.	DESCRIPTION
	SCREW - CONTINUED			
2085	RCI-645N RCI-645VN	P7536987	4	SHELF GUIDE-PART OF B-40 BASE CABINET MODEL NO 6560106 8-15X1/2
2086	ALL MODELS	5415118	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 3/8-16X5/8
2087	ALL MODELS	455508	4	UPPER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
2089	ALL MODELS	455508	4	LOWER SIDE TRIM-PART OF B-30& B-40 BASE CABINETS MODEL NOS 6560105 AND 6560106 6-18X3/8
20811	ALL MODELS	6569714	2	LOWER TRIM CAP-PART OF B-30& B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106 6-20X3/8
20812	ALL MODELS	5427288	4	REAR ACCESS COVER-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	SHELF-CABINET			
213	RCD-630N RCD-630VN RCI-635N RCI-635VN	7521343	1	PART OF B-30 BASE CABINET MODEL NO 6560105
213	RCI-645N RCI-645VN	7521344	2	PART OF B-40 BASE CABINET MODEL NO 6560106
	TRIM-UPPER SIDE			
253	ALL MODELS	7539970	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	TRIM-LOWER SIDE			
2531	ALL MODELS	7539971	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	WASHER			
2791	ALL MODELS	640152	4	FLAIR RANGE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	WRENCH-GLIDER BUTTON ADJUSTING			
282	ALL MODELS	6568988	1	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUSHING-HINGE PIVOT			
316	ALL MODELS	6567650	4	PART OF B-30&B-40 BASE CABINETS
	GUIDE-SHELF			
323	RCD-630N RCD-630VN RCI-635N RCI-635VN	6569021	2	PART OF B-30 BASE CABINET MODEL NO 6560105
323	RCI-645N RCI-645VN	6569021	4	PART OF B-40 BASE CABINET MODEL NO 6560106
	CATCH-DOOR SPRING			
328	ALL MODELS	6567662	2	PART OF B-30&B-40 BASE CABINETS
	HINGE-DOOR RH TOP AND LH BOTTOM			
346	ALL MODELS	6564643	2	PART OF B-30&B-40 BASE CABINETS
	HINGE-DOOR LH TOP AND RH BOTTOM			
3461	ALL MODELS	6564644	2	PART OF B-30&B-40 BASE CABINETS
	STRIKE-DOOR			
349	ALL MODELS	6568984	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	CAP-LOWER TRIM			
376	ALL MODELS	6569067	2	PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	COVER-REAR ACCESS			
378	ALL MODELS	7522003	2	WH-WHITE-PART OF B-30&B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
378	ALL MODELS	7522004	2	YW-YELLOW-PART OF B-30 & B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106

GROUP 16 BASE CABINETS AND PARTS

	COVER-REAR ACCESS - CONTINUED			
373	ALL MODELS	630948	2	CC-TWO TONE COPPER-PART OF B-30 & B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106-DARK EDGES
378	ALL MODELS	634409	2	CO-TWO TONE COPPER-PART OF B-30 & B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106-MEDIUM EDGES
378	ALL MODELS	634309	2	HG-HARVEST GOLD-PART OF B-30 & B-40 BASE CABINETS MODEL NUMBERS 6560105 & 6560106
378	ALL MODELS	632964	2	GN-AVOCADO GREEN-PART OF B-30 & B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUTTON-CABINET GLIDER			
380	ALL MODELS	6568985	4	PART OF B-30 &B-40 BASE CABINETS MODEL NUMBERS 6560105 AND 6560106
	BUTTON-DOOR PLUG			
3801	ALL MODELS	6567527	4	PART OF B-30&B-40 BASE CABINETS

1968